AUSTIN-HEALEY



MK. I

WORKSHOP MANUAL

NOTE

Refer to the Section Contents page for the latest instructions when carrying out work on the vehicle.

Additional copies of this publication can only be obtained from an Austin Distributor. Part No. 97H1585C should be quoted.

Issued by

B . M . C . S E R V I C E L I M I T E D

Proprietors: The British Motor Corporation Limited

Telephone – – Oxford 77777 *Telex* – BMCSERV, Oxford 83145 and 83146

Telegrams BMCSERV, Telex, Oxford *Overseas Cables* BMCSERV, Telex, Oxford, England

C O W L E Y · O X F O R D · E N G L A N D


 World Copyright Printed in England

Introduction

THIS Manual has been compiled for the purpose of assisting Austin Distributors and Dealers to service and maintain the Austin-Healey Sprite Mk.1.

Each assembly of the major components is described in detail. In addition, instructions are given for dismantling, assembling and adjusting these assemblies. Use of the correct Service Tools contributes to an efficient, economic and profitable repair. References have, therefore, been made to such tools throughout the Manual.

When ordering spares it is imperative that operators use the 'Service Parts List' of the appropriate model and not the Manual. It is emphasised that only B.M.C. Genuine Parts should be used as replacements for components found unfit for further service.

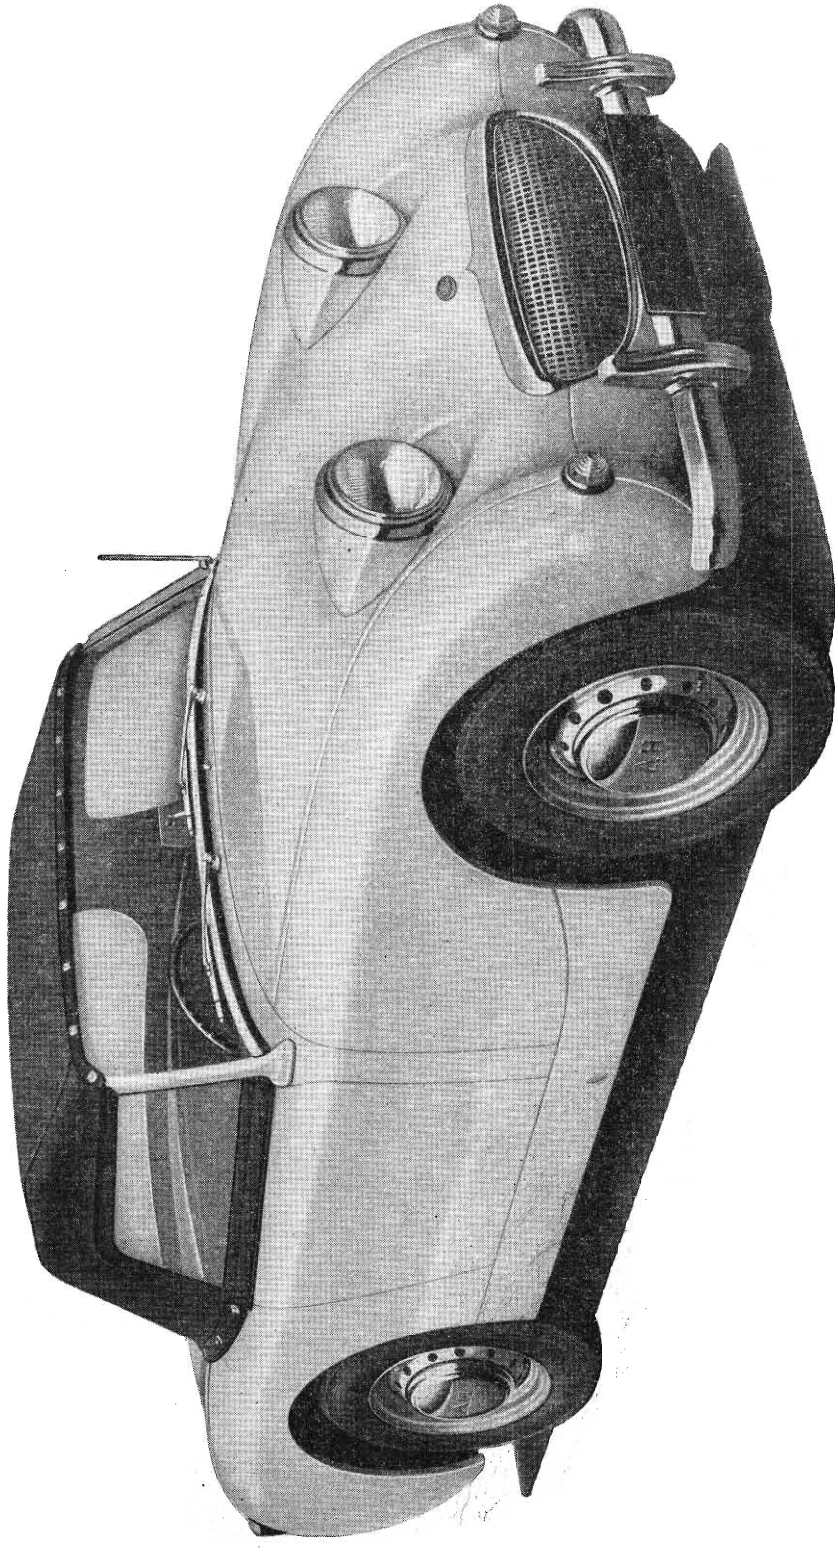

THE AUSTIN-HEALEY SPRITE.

CONTENTS

Introduction

General Data

General Information

Maintenance Attention

Engine .. .. Section A

Ignition .. .. „ B

Cooling System .. .. „ C

Fuel System .. .. „ D

Clutch .. .. „ E

Gearbox .. .. „ F

Propeller Shaft .. .. „ G

Rear Axle and Suspension .. .. „ H

Steering .. .. „ J

Front Suspension and Front Hubs .. .. „ K

Brakes .. .. „ L

Electrical System .. .. „ M

Wheels and Tyres .. .. „ N

Bodywork .. .. „ O

Lubrication .. .. „ P

Lubrication Chart .. .. End of Manual