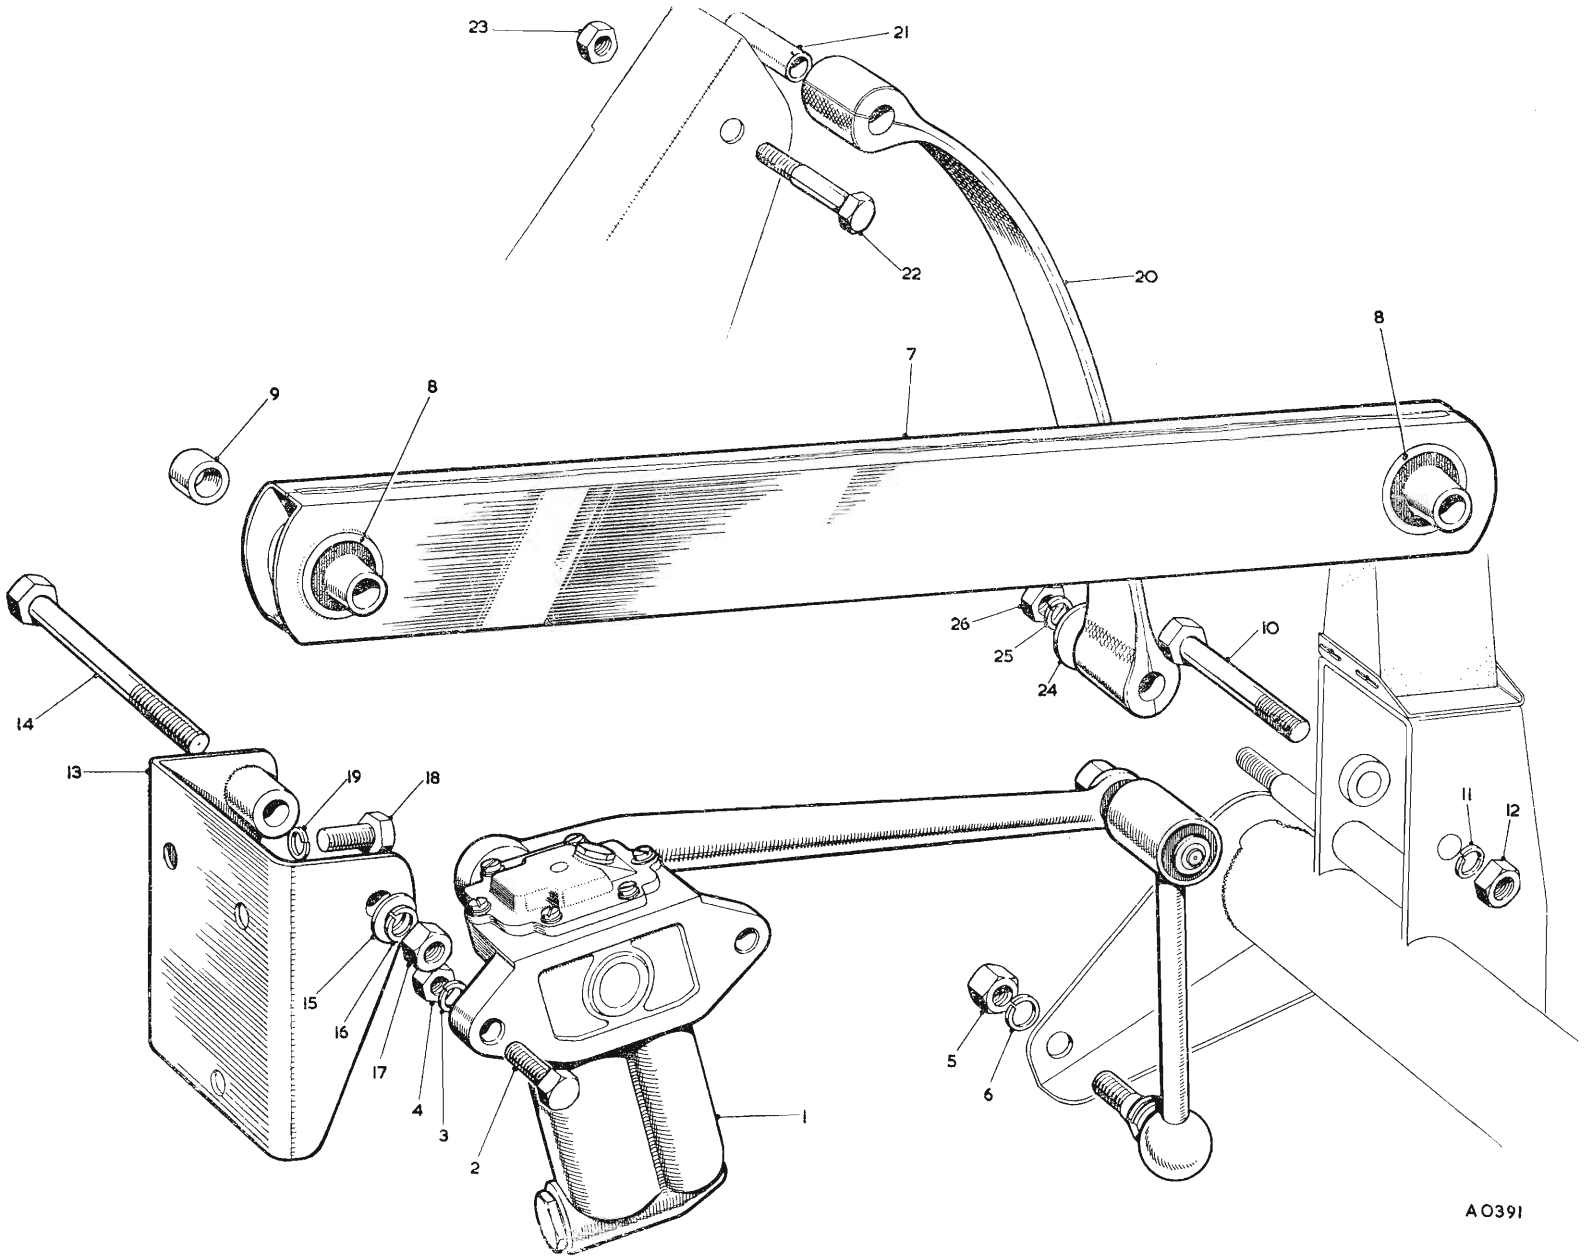


To face page L.1

REAR SHOCK ABSORBERS

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	Change Point	PAU No.	REMARKS
1	**Absorber assembly (R/H—rear)**	**2A7298**		**1**	**1**			**AHA5312**	**Com. (C) 4333 except**		
2	**Absorber assembly (L/H—rear)**	**2A7299**	**1**	**1**	**1**			**AHA5311**	**4471, 4622, 4680, 4684**		
3	Link—shock absorber	2A7303		2	2			AHA5313			
4	Rubber for shock absorber link (top)	97H222		2	2						
5	Screw—absorber body to frame	HZS0609	2	4	4				Fin. (C) 4332		
6	Washer for screw (spring)	LWZ306	3	4	4				Except 4471, 4622,		
7	Nut for screw	FNZ106	4	4	4				4680, 4684		
8	Bolt—absorber to bracket ($3\frac{3}{4}$")			2	2			HBZ0630			
9	Bolt—absorber to bracket ($1\frac{1}{2}$")			2	2			HBZ0612	Com. (C) 4333 except		
10	Nut for bolt			4	4			LNZ106	4471, 4622, 4680, 4684		
11	Washer for nut (plain)			4	4			PWZ106			
12	Washer for nut (spring)			4	4			LWZ306			
13	Nut—absorber link to axle bracket	FNZ107	5	2	2						
14	Washer for nut (spring)	LWZ307	6	2	2						
15	**Link—top**	**2A7310**	**7**	**2**	**2**						
16	Bush (rubber)	2A7278	8	4	4						
17	Distance piece—bush—top link	AHA5224	9	4	4						
18	Pin—top link to axle bracket	2A7279	10	2	2						
19	Washer for pin (spring)	LWZ307	11	2	2						
20	Nut for pin	FNZ107	12	2	2						
21	Bracket—mounting—link (R/H)	2A7314		1	1				Fin. (C) 4332		
22	Bracket—mounting—link (L/H)	2A7315	13	1	1				except 4471, 4622,		
									4680, 4684		
23	Bracket—mounting—link and absorber (R/H)			1	1			AHA5305	Com. (C) 4333 except		
24	Bracket—mounting—link and absorber (L/H)			1	1			AHA5306	4471, 4622, 4680, 4684		
25	Bolt—top link to mounting bracket	HBZ0732	14	2	2						
26	Washer for bracket bolt (plain)	PWZ107	15	2	2						
27	Washer for bracket bolt (spring)	LWZ307	16	2	2						
28	Nut for bolt	FNZ107	17	2	2						
29	Screw—mounting bracket to rear cross-member	HZS0610	18	6	6						
30	Washer for bracket screw (spring)	LWZ206	19	6	6						
31	**Check strap—axle**	**AHH5081**	**20**	**2**	**2**						
32	Distance tube—strap	2A7306	21	2	2						
33	Bolt—strap to floor bracket	HBZ0618	22	2	2						
34	Nut for bolt	LNZ206	23	2	2						
35	Washer—strap to axle spindle (plain)	PWZ206	24	2	2						
36	Washer—strap to axle spindle (spring)	LWZ206	25	2	2						
37	Nut—strap to axle spindle	FNZ106	26	2	2						