

BRAKE CONTROLS

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Pedal (with bush)**	**2A5559**	**1**	**1**	**1**						
2	Bush	2A5564	2	1	1						
3	**Pad for pedal (rubber)**	**AHA5326**	**3**	**1**	**1**						
4	Screw—pedal adjustment	HZS0408	4	1	1						
5	Locknut for screw	FNZ204	5	2	2						
6	**Spring—pedal return**	**2A5574**	**6**	**1**	**1**						
7	Retainer—return spring	2A5573	7	1	1						
8	Washer for brake and clutch pedal (distance)	2A5565	8	1	1						
9	**Master cylinder and supply tank assembly (R)**	**AJH5128**		**1**	**1**			~~AUH5564~~		115V	
10	Body	N.S.P.	9	1	1						
11	Cover—body	AJH5085	10	1	1						
12	Gasket for cover	AJH5086	11	1	1						
13	Screw—cover to body	301551	12	5	5						
14	Washer for cover screw (shakeproof)	LWZ404	13	5	5						
15	Spring—piston return	AJH5083	14	2	2						
16	Retainer—spring	7H7487	15	2	2						
17	Piston	7H7925	16	2	2						
18	Cup—primary—piston	7H7485	17	2	2	12					
19	Cup—secondary—piston	17H7109	18	2	2						
20	Washer—primary cup to piston	7H7484	19	2	2						
21	Boot—push-rod	AJH5084	20	2	2						
22	Gasket—boot fixing plate	301550	21	1	1						
23	Plate—boot fixing	301549	22	1	1						
24	Screw for plate	301551	23	2	2						
25	Washer for plate screw (shakeproof)	LWZ404	24	2	2						
26	**Cap—filler**	**AJG5006**	**25**	**1**	**1**			17H 7480			
27	Seal	AJG5016	26	1	1						
28	**Valve assembly**	**39731**		**1**	**1**						
29	Body	7H7488	27	1	1						
30	Cup	7H7022	28	1	1						
31	Washer	7H7489	29	1	1						
32	**Repair kit—master cylinder**	**8G8224**		**1**	**1**						**Correction, was 17H7054**
33	Cup—primary			2	2						
34	Cup—secondary			2	2						
35	Cup—valve			1	1						
36	Washer for valve			1	1						
37	Boot—push-rod			2	2						
38	Washer for piston			2	2						



1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
966IA.

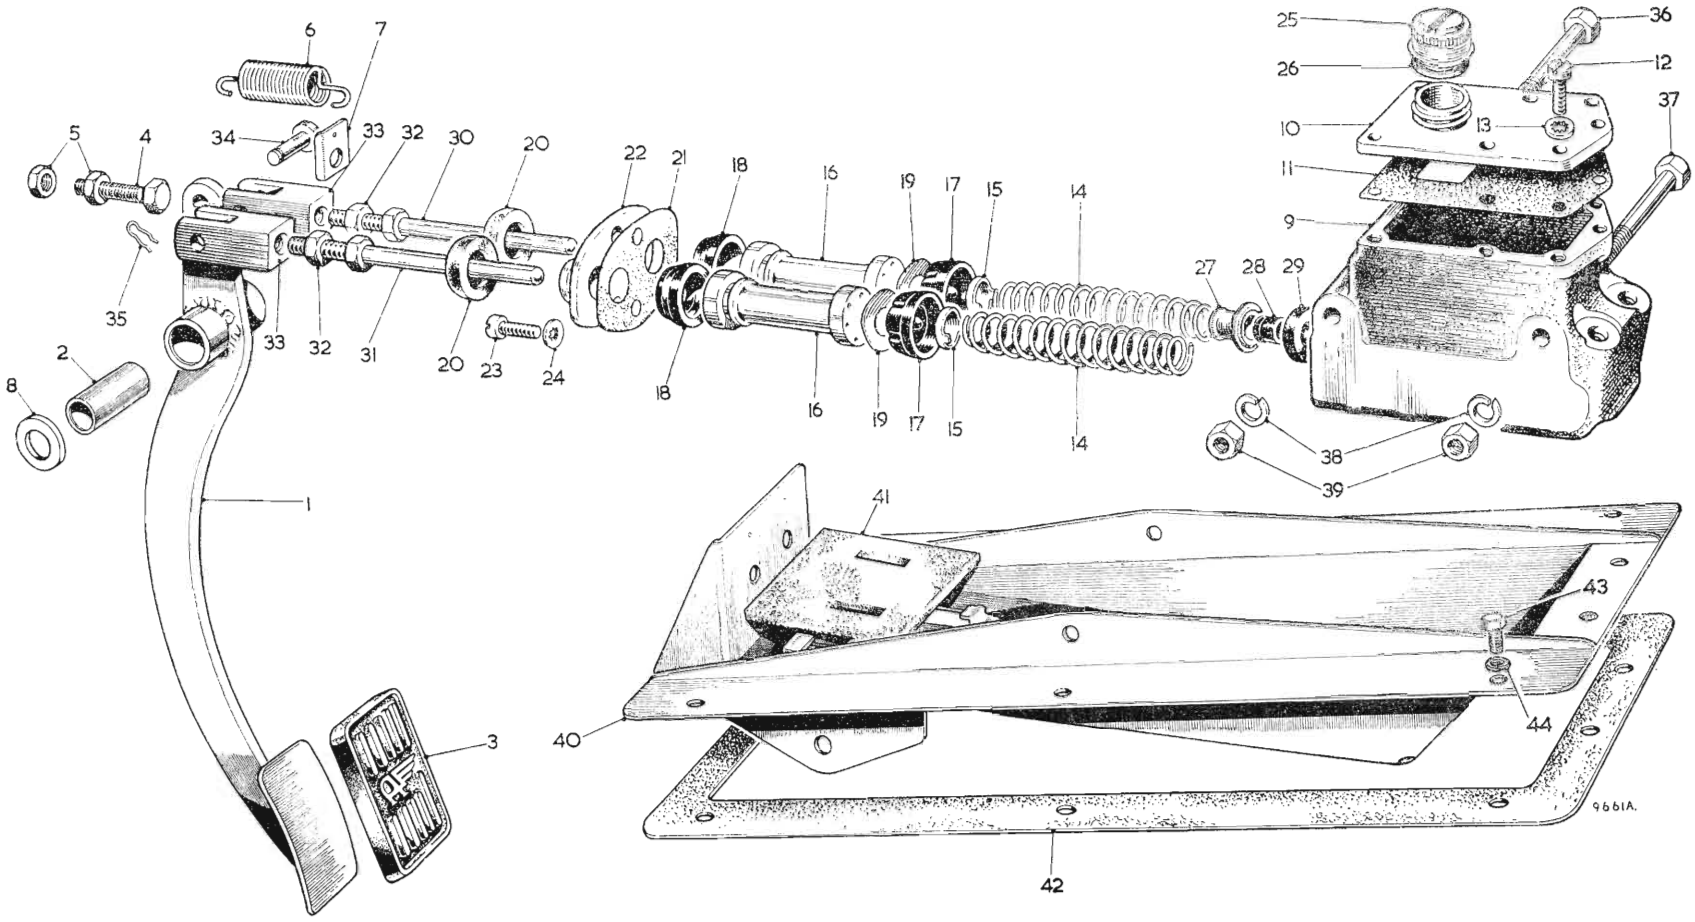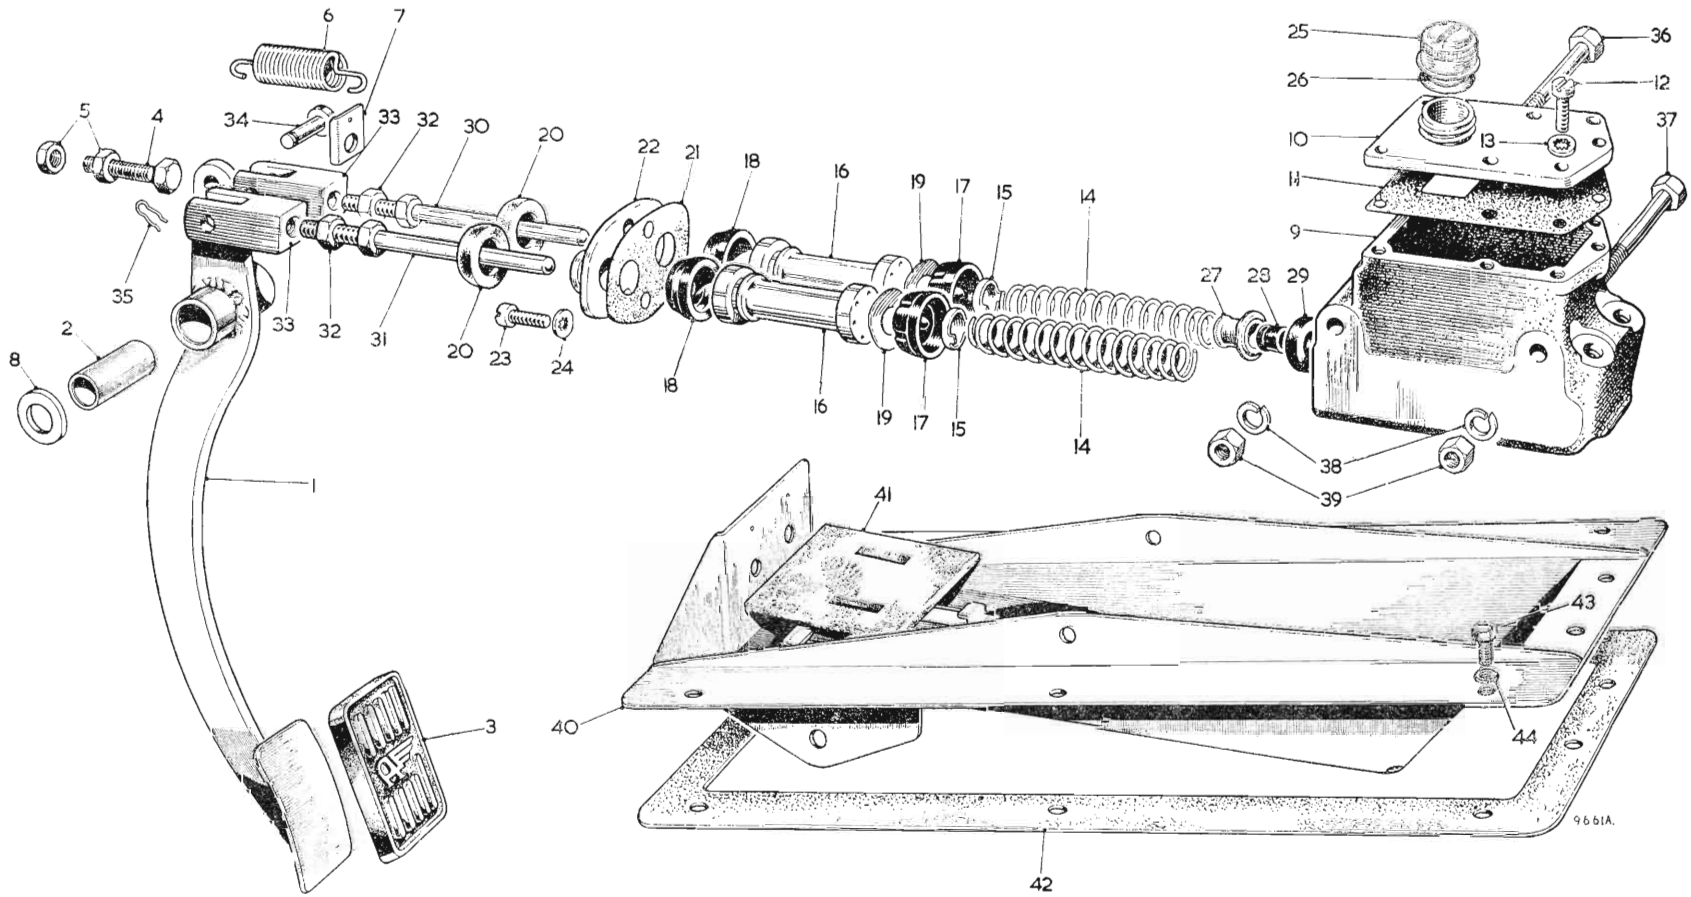


To face page M.2

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Brake Controls—*continued*										
1	**Push-rod—cylinder—brake**	**2A5587**	**30**	**1**	**1**						
2	**Push-rod—cylinder—clutch**	**2A5588**	**31**	**1**	**1**			**2A5587**	**Com. (C) 4996**		
3	Locknut for push-rod	FNZ205	32	2	2						
4	Fork end—push-rod	2A5576	33	2	2						
5	Pin—clevis (fork end to pedal)	2A5575	34	2	2						
6	Circlip—fork end to pedal	1B3498	35	2	2						
7	Bolt—master cylinder to pedal box	HBZ0624	36	1	1						
8	Bolt—master cylinder to pedal box	HBZ0626	37	1	1						
9	Washer for bolt (spring)	LWZ206	38	2	2						
10	Nut for bolt	FNZ106	39	2	2						
11	Fluid (8 fl. oz.)	17H7533		1	1						
12	Fluid (pint)	17H7534		1	1						
13	Fluid (32 fl. oz.)	17H7535		1	1						
	BRAKE AND CLUTCH PEDAL BOX										
14	**Box assembly—pedal**	**2A5538**	**40**	**1**	**1**						
15	**Draught excluder—pedal box**	**2A5572**	**41**	**1**	**1**						
16	Washer—joint (pedal box to foot-well)	2A5549	42	1	1						
17	Screw—pedal box to foot-well	HZS0405	43	9	9						
18	Screw—pedal box to foot-well	HZS0408		1	1						
19	Washer for pedal box screw (spring)	LWZ304	44	10	10						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BRAKE AND CLUTCH PIPES										
1	**Pipe—master cylinder to 4-way connection**	**2A5605**	**1**	**1**							
2	Pipe—master cylinder to 4-way connection	2A5619			1						
3	Pipe—4-way connection to R/H front brake hose	2A5607	2	1	1						
4	Pipe—4-way connection to L/H front brake hose	2A5609	3	1	1						
5	Pipe—4-way connection to rear brake hose	2A5611	4	1	1						
6	Pipe—master cylinder to clutch cylinder	2A5615	5	1							
7	Pipe—master cylinder to clutch cylinder	2A5617			1						
8	Pipe—bridge—front cylinder	AHA5198	6	2	2						
9	**Pipe—3-way to R/H brake (rear)**	**17H7531**	**7**	**1**	**1**						
10	**Pipe—3-way to L/H brake (rear)**	**2A2181**	**8**	**1**	**1**						**Correction, was 17H7532**
11	Strap for pipe	ACA5375	9	2	2						
12	Connection—3-way	3H2424	10	1	1						
13	Bolt—3-way connection to gear carrier	HBZ0409	11	1	1						
14	Nut for bolt	FNZ104	12	1	1						
15	Washer for nut (spring)	LWZ204	13	1	1						
16	**Connection—banjo**	**AHH5634**	**14**	**2**	**2**						
17	Bolt for banjo connection	7H7847	15	2	2						
18	Screw—bleeder	3H2428	16	2	2						
19	Gasket for bolt (small)	3H2287	17	2	2						
20	Gasket for bolt (large)	3H550	18	2	2						
21	Connection—4-way	AHH5283	19	1	1						
22	Screw—connection to wheel arch	HBZ0408	20	1	1						
23	Washer for connection screw (spring)	LWZ204	21	1	1						
24	**Hose—front brake**	**13H83**	**22**	**2**	**2**						
25	**Hose—rear brake**	**BCA4031**	**23**	**1**	**1**						
26	Gasket for brake hoses	3H2287	24	3	3						
27	Locking plate for brake hoses	1G9198	25	3	3						
28	Locknut—hose to frame bracket	FNZ106	26	3	3						
29	Washer for hose locknut (shakeproof)	LWN606	27	3	3						Correction, was 2K7131
30	Clip—pipe to frame	6K35	28	5	5						
31	Clip—pipes to foot-well panel	2H400	29	1							
32	Clip—pipes to dash	CHR0307			4						
33	Screw for clip	PMZ0305			4						
34	Nut for screw	FNZ103			4						
35	Washer for nut (spring)	LWZ203			4						
36	Clip—pipes to cover-plate	PCR0311			3						
37	Screw—pipes to foot-well clip	PMZ0305	30	1	1						
38	Washer for clip screw (spring)	LWZ203	31	1	1						
39	**Switch—stop light**	**3H1894**	**32**	**1**	**1**						

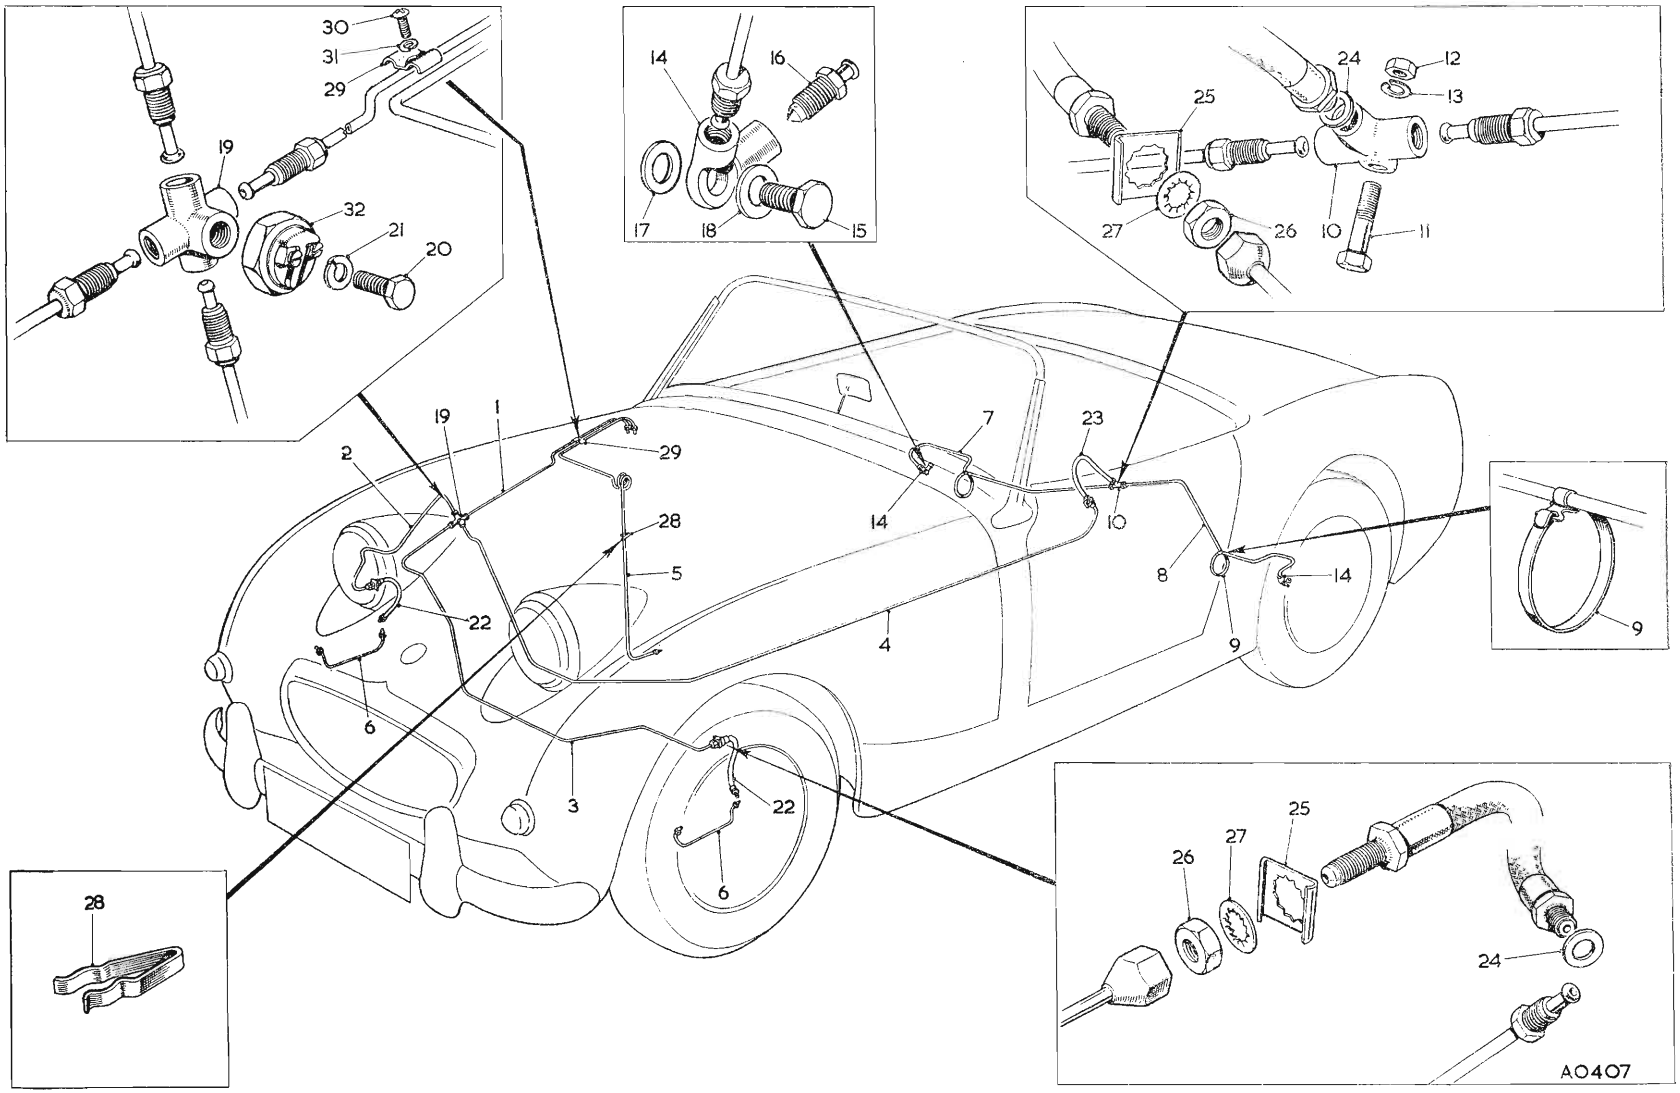

To face page M.3

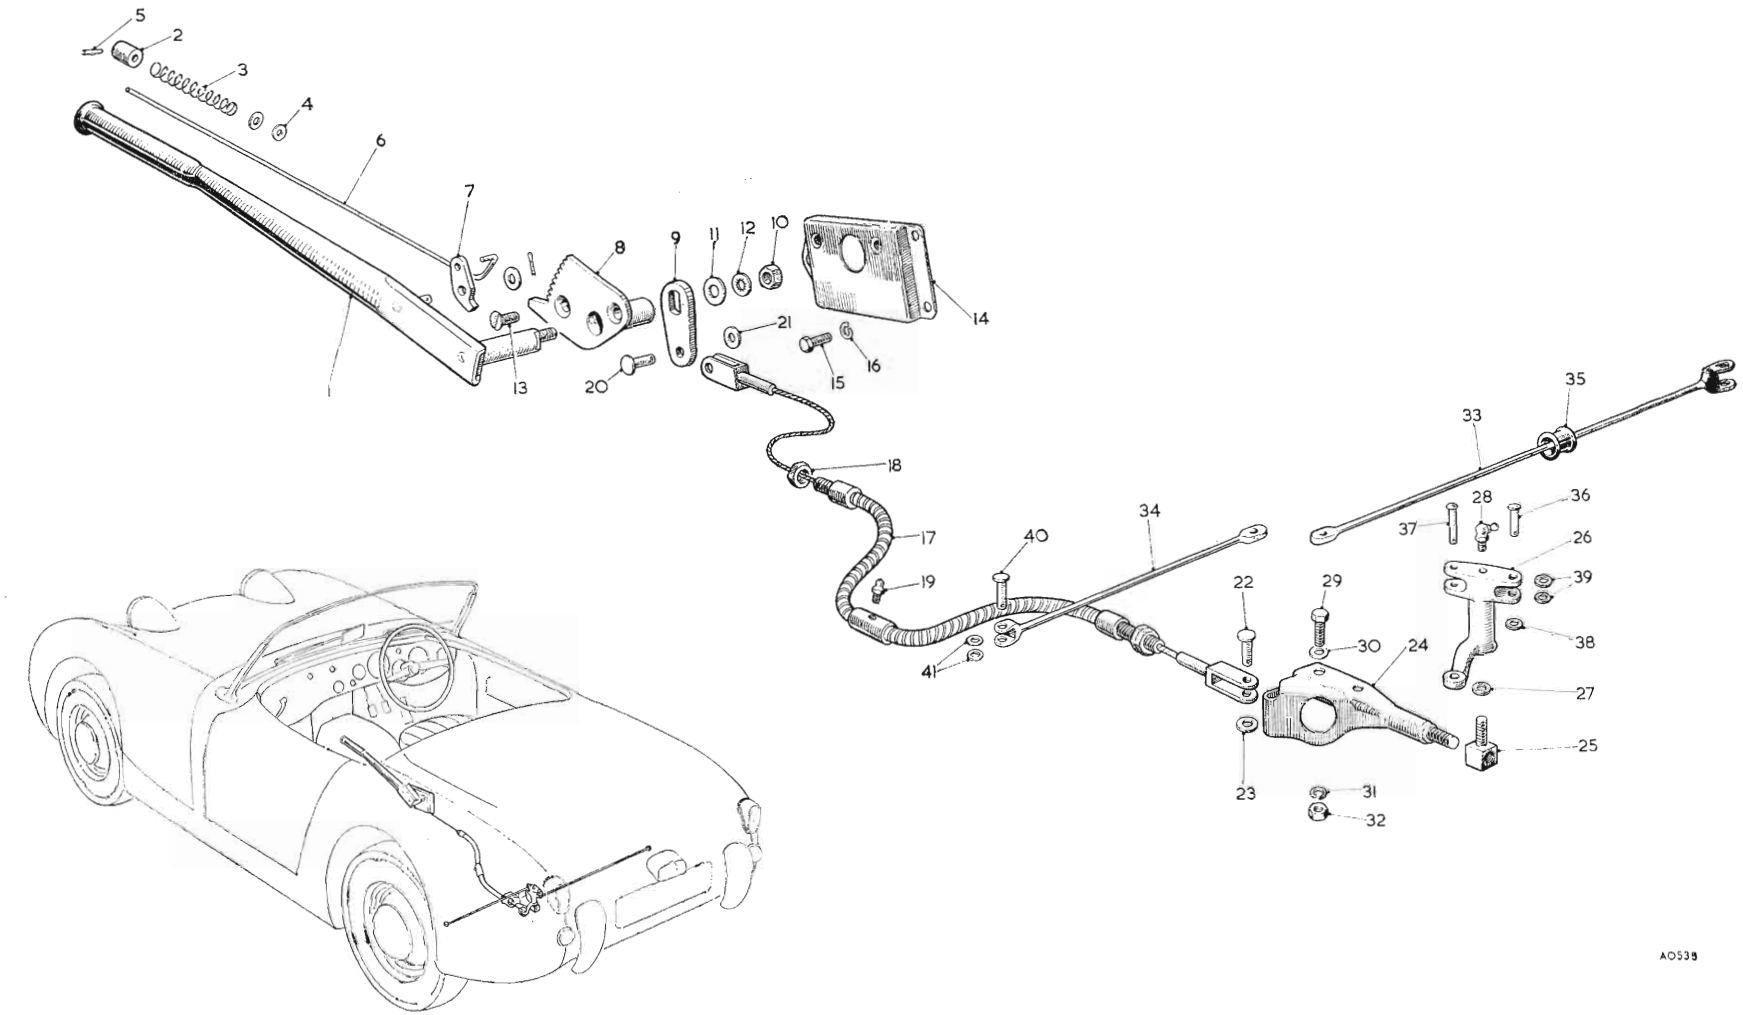

To face page M.4

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HAND BRAKE MECHANISM										
1	**Hand brake assembly**	**2A7290**		1	1						
2	Handle assembly	7H5944	1	1	1						
3	Plunger—thumb	7H5948	2	1	1						
4	Spring for plunger	7H5950	3	1	1						
5	Washer for plunger (rubber)	7H5951	4	1	1						
6	Pin for plunger	7H5952	5	1	1						
7	Rod—pawl	7H5945	6	1	1						
8	Pawl	7H5946	7	1	1						
9	Ratchet and tube	7H5947	8	1	1						
10	Link for main spindle	7H5949	9	1	1						
11	Nut for main spindle	FNZ106	10	1	1						
12	Washer for nut (plain)	PWZ106	11	1	1						
13	Washer for nut (shakeproof)	LWZ406	12	1	1						
14	Screw—hand brake to bracket	1B8859	13	2	2						
15	Bracket—hand brake	2A7291	14	1	1						
16	Screw—hand brake and bracket to tunnel	HZS0505	15	3	3						
17	Washer for screw (spring)	LWZ205	16	3	3	24					
18	**Cable assembly—hand brake**	**2A7308**	**17**	1	1						
19	Locknut for cable	1B7364	18	3	3						
20	Lubricator—cable	UHN105	19	1	1						
21	Pin—clevis (cable to hand brake lever)	CLZ0515	20	1	1						
22	Washer for clevis pin	PWZ105	21	1	1						
23	Pin—clevis (cable to balance lever)	CLZ0414	22	1	1						
24	Washer for clevis pin	PWZ104	23	1	1	12					
25	Support—balance lever	ATA7320	24	1	1						
26	Carrier—lever	2A7058	25	1	1						
27	Lever—balance	2A7057	26	1	1						
28	Washer (felt)	2K5820	27	1	1						
29	Lubricator	3H2192	28	1	1						
30	Bolt—balance lever support to axle	HZS0506	29	2	2						
31	Washer for bolt (plain)	PWZ105	30	2	2						
32	Washer for bolt (spring)	LWZ205	31	2	2	24					
33	Nut for bolt	FNZ105	32	2	2						
34	**Rod—cross—R/H (long)**	**ATA7458**	**33**	1	1						
35	**Rod—cross—L/H (short)**	**ATA7459**	**34**	1	1						
36	Ferrule—rod steady	1B5329	35	1	1						
37	Pin—rod to lever (short)	6K689	36	1	1						
38	Pin—rod to lever (long)	6K870	37	1	1						
39	Washer for pin (plain)	6K9695	38	1	1						
40	Washer (felt)	6K690	39	4	4						
41	Pin—rod to brake	CLZ0514	40	2	2						
42	Washer (felt)	ATA7187	41	4	4						