
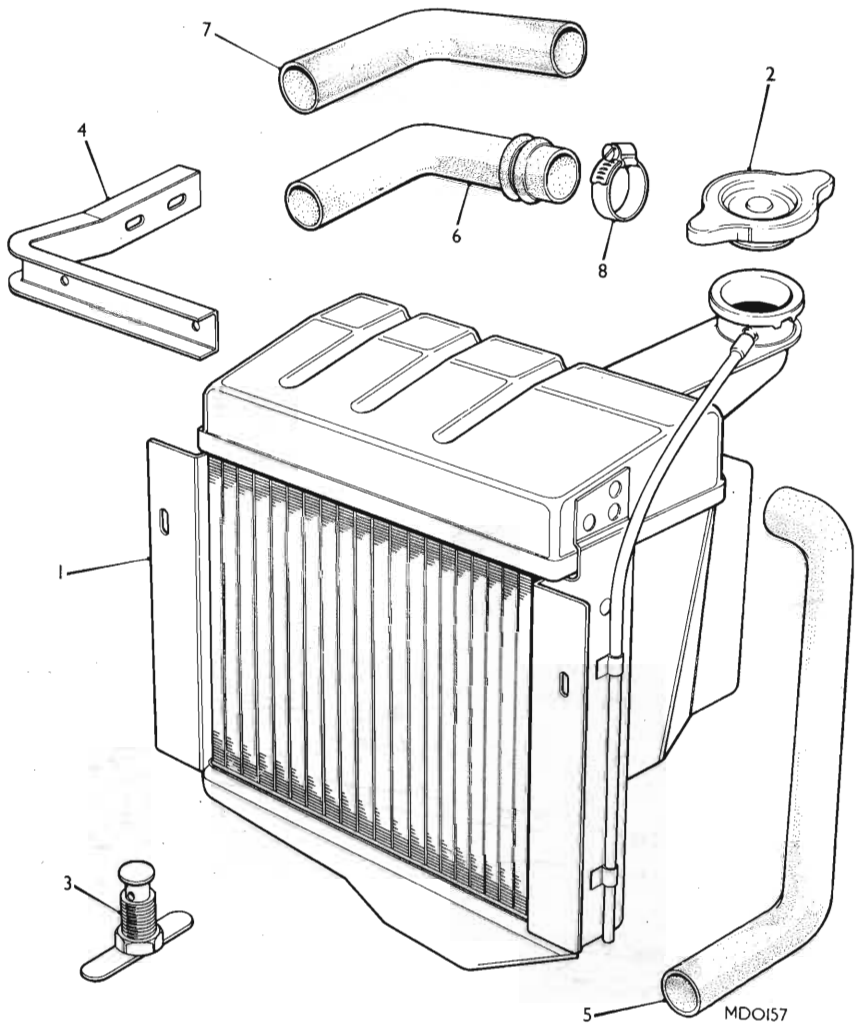


RADIATOR-VERTICAL FLOW-AND FITTINGS

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	ARA 241	Radiator	1		Use prior to cross-flow radiator
2	GRC 101	Cap-filler	1		
3	88G 291	Tap-drain	1		
4	2A 5591	Bracket-radiator mounting-RH	1		
	2A 5592	Bracket-radiator mounting-LH	1		
	SH 604061	Screw-radiator to bracket	4		
	PWZ 104	Washer-plain	4		
	LWZ 304	Washer-spring	4		
	HZS 405	Screw-bracket to wheelarch	4		
	PWZ 204	Washer-plain	4		
	LWZ 204	Washer-spring	4		
5	AHA 8728	Hose-radiator to water pump	NLA	Use prior to AHA 8750 and GRH 508	Use when heater IS NOT FITTED.
5	GRH 315	Hose-radiator to water pump	1		Use with heater
5	AHA 8750	Hose-radiator to water pump	NLA	(E)12CE/Da/H874 TO(+)	Use when heater IS NOT FItted.
5	GRH 508	Hose-radiator to water pump	1		Use with heater
6	GRH 313	Hose-radiator to outlet hose	1		1098CC
7	AHA 8726	Hose-radiator to outlet hose	1		1275CC
8	GHC 913	Clip-hose	A/R		
8	GHC 1217	Clip-hose	1		

(+) Change point not available.


107-D 2

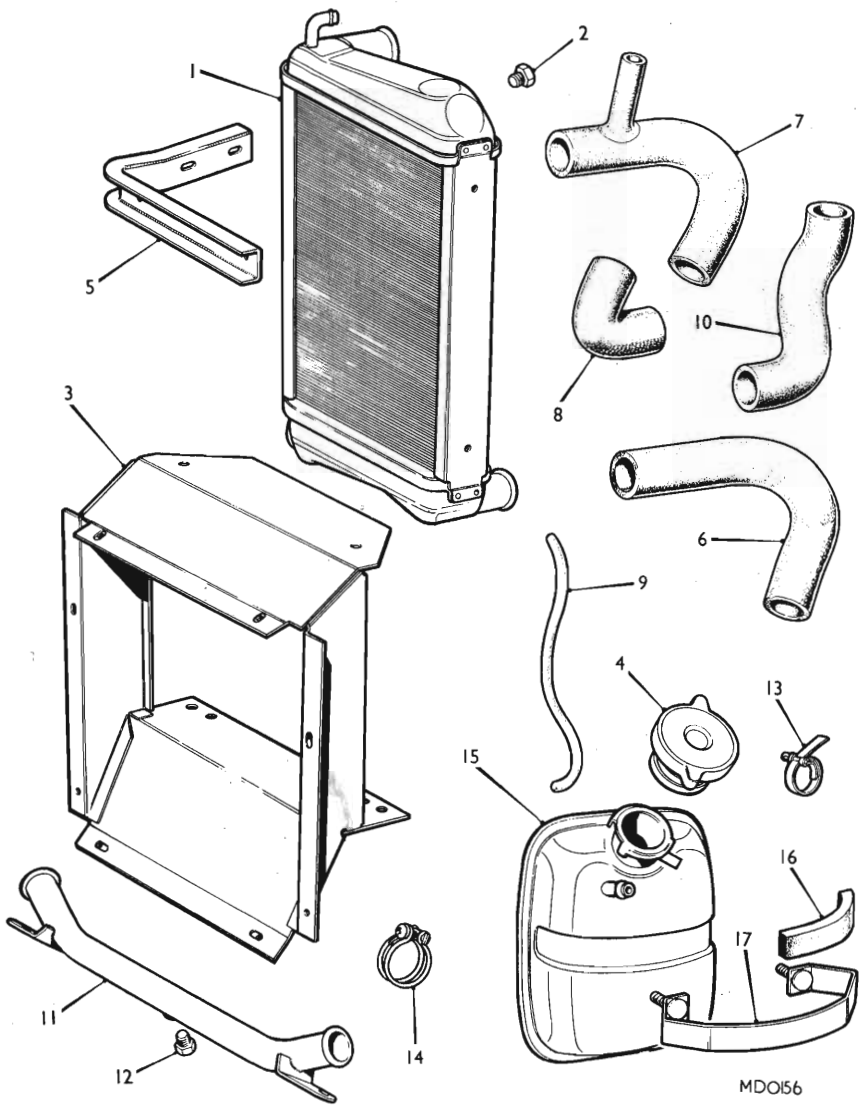

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		RADIATOR-CROSS-FLOW AND FITTINGS-EXCEPT 1500			
1	ARA 318	RADIATOR ASSEMBLY	1		
2	ARA 2404	Plug-filler	1		
3	AHA 8732	Cowl-radiator	1		
	HZS 504	Screw	4		
	LWZ 205	Washer	4		
	PMZ 308	Screw	4		
	PWZ 203	Washer-plain	4		
	LWZ 203	Washer-spring	4		
	HBZ 406	Screw	4		
	LWZ 204	Washer-spring	4		
	PWZ 104	Washer-plain	4		
4	GRC 110	Cap-filler	1		
5	2A 5591	Bracket-radiator mounting-RH	1		
	2A 5592	Bracket-radiator mounting-LH	1		
	SH 604061	Screw-radiator to bracket	2		
	PWZ 104	Washer-plain	2		
	LWZ 304	Washer-spring	2		
	HZS 405	Screw	4		
	PWZ 204	Washer-spring	4		
	LWZ 204	Washer-plain	4		
7	AHA 8742	Hose-radiator to water pump	1	Use prior to AHA 8749	
7	GRH 510	Hose-radiator to water pump	1	(E)12CD/-/H1745 TO(+) (E)12CE/-/(+)TO(+) (E)12CJ/Da/H21201 TO(+) (E)12V/-/101 ON	Was AHA 8749 Use when heater Is fitted.
8	AHA 8730	Hose-radiator to lower tube	1		
9	GRH 1002 M	Hose-radiator to expansion tank 8"(21cm)	A/R		Supplied in 6 metre(19'8") lengths Was AHA 8738
10	GRH 509	Hose-radiator top	1		
11	AHA 8731	Tube-lower-radiator	1		
12	ARA 1618	Plug-drain	1		
13	21K 8341	Clip-hose-expansion tank to radiator	2		
14	GHC 709	Clip-hose-lower tube	1		
14	HCS 122	Clip-hose-water pump to radiator	A/R		
14	GHC 1217	Clip-hose-water pump to radiator	1		
15	ARH 250	Tank-expansion	1		
16	ACA 9872	Pad(rubber)	2		
17	AHA 8739	Strap-expansion tank	1		
	WL 600051	Washer-spring	2		
	PWZ 105	Washer-plain	2		
	NH 605041	Nut	2		

(+) Change point not available.


107-D 4

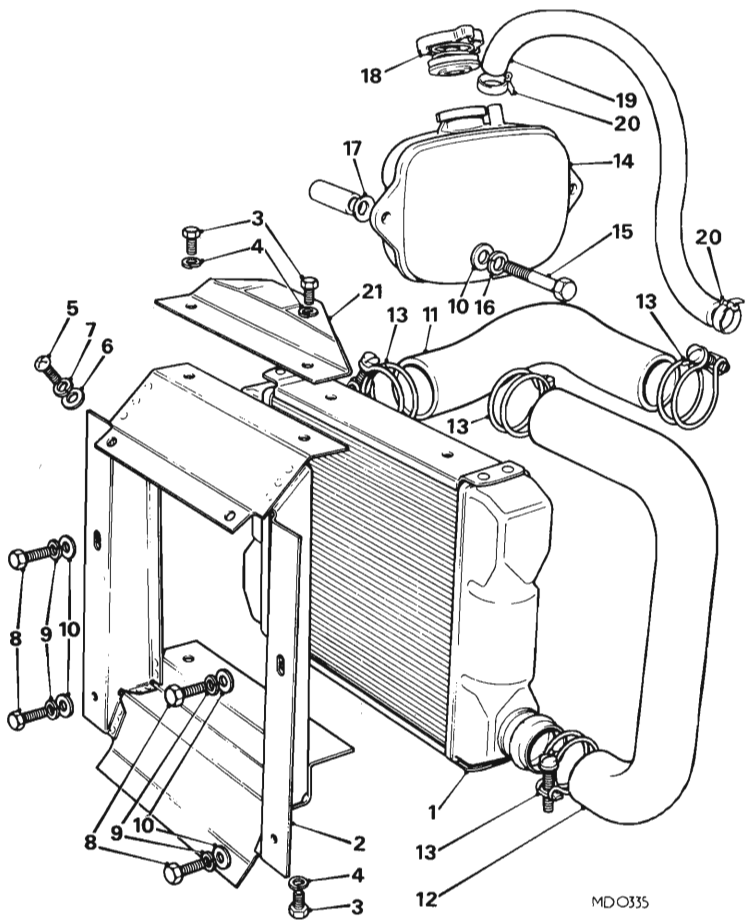

RADIATOR-CROSS-FLOW AND FITTINGS-1500.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	NRP 1028	Radiator	1		
2	CHA 281	Cowl-radiator	1		
3	SH 605041	Screw-radiator to cowl	4		
4	LWZ 205	Washer-spring	4		
5	PMZ 308	Screw-cowl fixing	2		
6	PWZ 203	Washer-plain	2		
7	WL 700100	Washer-spring	2		
8	SH 604061	Screw-cowl fixing	4		
9	WL 600401	Washer-spring	4		
10	WA 106041	Washer-plain	4	(C)G-AN6-154101 ON (EXCEPT USA and Canada)	
11	GRH 525	Hose-radiator-top	1		
12	GRH 534	Hose-radiator-lower	1		
13	GHC 1217	Clip-radiator hose	A/R	(C)G-AN6-154101 TO 166350 (USA and Canada ONLY)	
14	ARA 326	Tank-expansion	1		
15	BH 604201	Bolt-expansion-tank fixing	2		
16	WL 600041	Washer-spring	2		
10	WA 106041	Washer-plain	2		
17	ACA 5374	Washer-countersunk	2		
18	GRC 110	Cap-filler	1		
19	GRH 1002 M	Hose-radiator to expansion tank 11"(279mm)long	A/R		Supplied in multiples of metres.
20	21K 8341	Clip-hose	2		
21	CHA 420	Guard-fan	1		


107-D 4.02

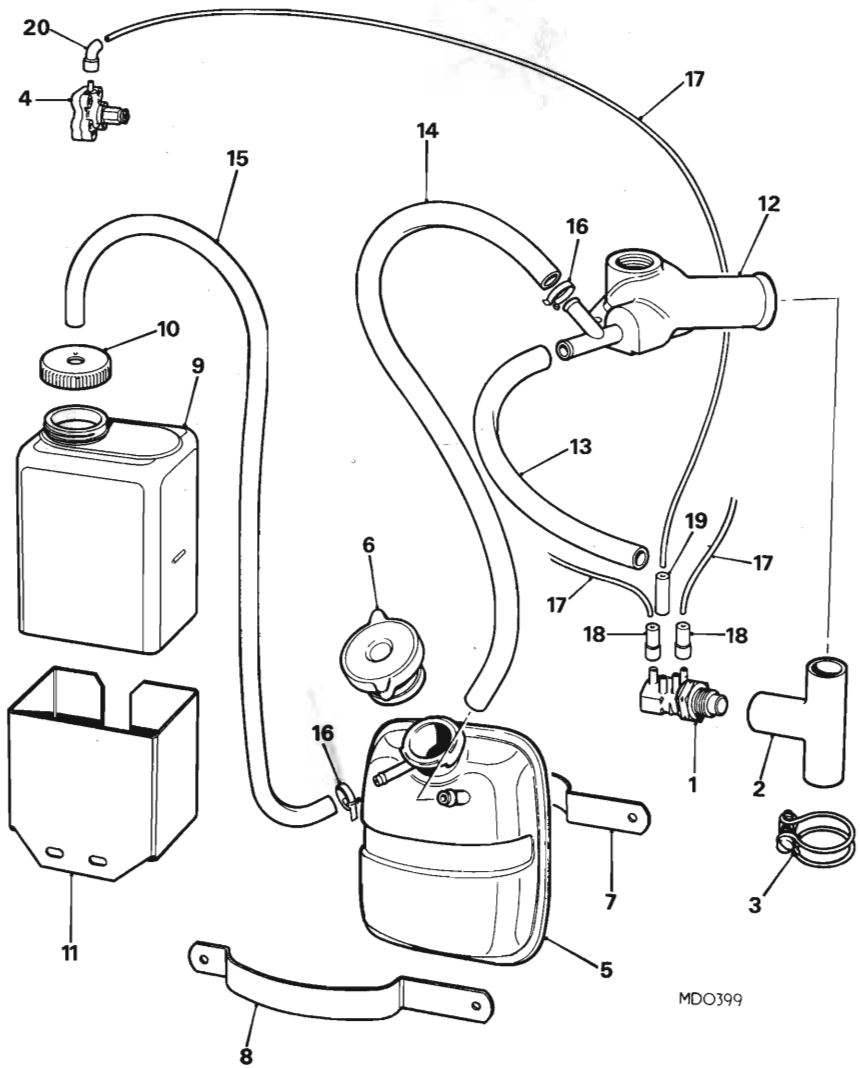

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		RADIATOR-CROSS FLOW AND FITTINGS-1500-Continued.			
		THE FOLLOWING PARTS REFER TO USA AND CANADA ONLY AND SHOULD BE USED IN ACCORDANCE WITH TSB 75-A-6.			
1	C 37430	Switch-thermo-vac	1		
2	158308	Adaptor 'T' piece	1		
3	CA 600254	Clip-adaptor	2		
4	AAU 2346	Valve-vented-carburetter	1		
5	URP 1148	Tank-expansion	1		
6	URP 1145	Cap-expansion tank	1		
7	CHA 590	Bracket-tank	1		Fitted in pairs.
8	CHA 591	Bracket-tank	1		Fitted in pairs.
9	BHA 5239	Tank-spill	1		
10	CHA 582	Cap-spill tank	1		
11	CHA 585	Bracket	1		
12	CHA 595	Housing-thermostat	1	(C)G-AN6-154101 TO 166303 (USA and CANADA ONLY)	
		HOSE-WATER			
13	GRH 1002 M	Housing to radiator 11"long	1		
14	GRH 1002 M	Housing to expansion tank 23" long.	1		
15	GRH 1001 M	Expansion tank to spill tank 23" long	1		
16	21K 8341	Clip-water hose	A/R		
		HOSE-VACUUM			
17	37H 4229 M	Thermo-vac to carburetter 44.5" long	1		
17	37H 4229 M	Thermo-vac to distributor 22" long	1		
17	37H 4229 M	Thermo-vac to vapour trap 40.5 long	1		
18	131211	Sleeve-straight	NLA		Use 12B 2095
18	12B 2095	Sleeve-straight	2		
19	117400	Sleeve-straight	1		
20	128262	Sleeve-right angle	1		
	AAU 2641	Gauge-temperature	1		

NOTE:-Part numbers listed with the suffix 'M'are supplied in mutiples of metres (39.37").

107-D 4.04

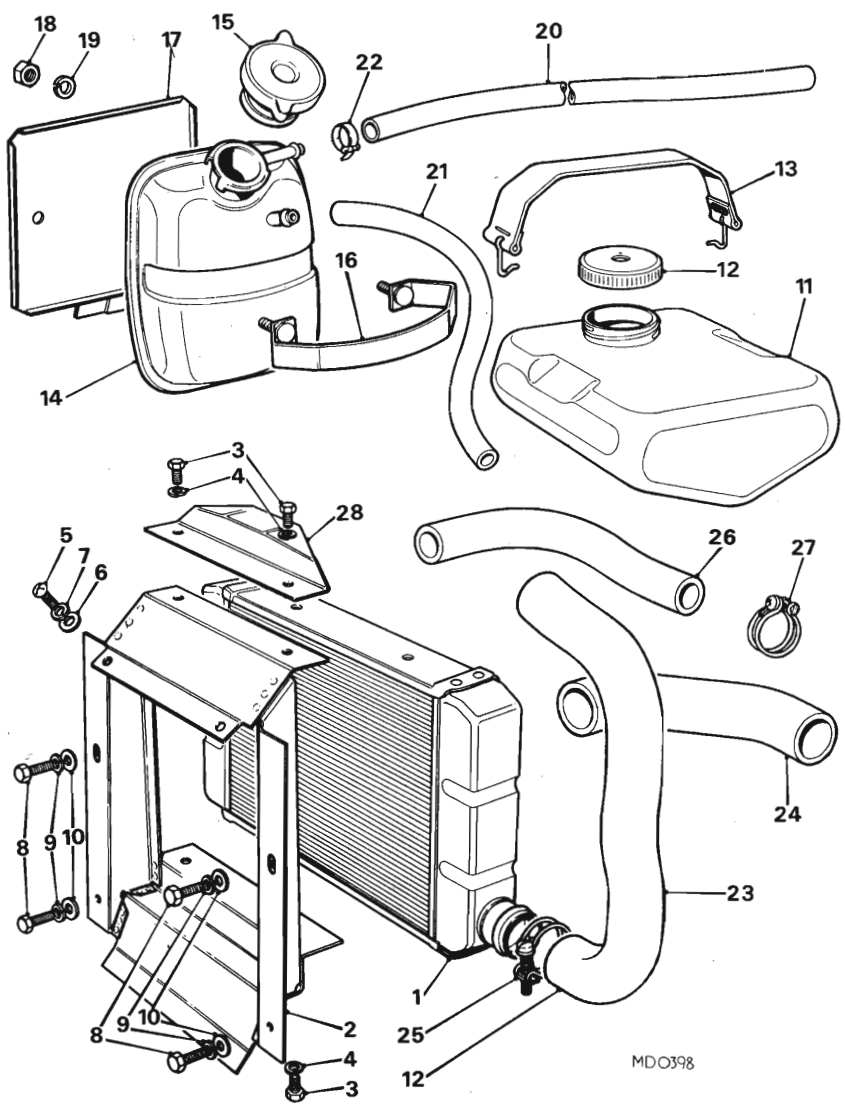


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS

RADIATOR-CROSS-FLOW AND FITTINGS-1500-continued.

1	NRP 1141	Radiator	1		
2	CHA 281	Cowl-radiator	1		
3	SH 605041	Screw-radiator to cowl	4		
4	LWZ 205	Washer-spring	4		
5	PMZ 308	Screw-cowl-top	2		
6	PWZ 203	Washer-plain	2		
7	WL 700100	Washer-spring	2		
8	SH 604061	Screw-cowl fixing	4		
9	WL 600040	Washer-spring	4		
10	WA 106041	Washer-plain	4		
11	CHA 434	Container-spill tank	1		
12	CHA 582	Cap-container	1		
13	CHA 458	Strap-container	1		
14	URP 1159	Tank-expansion	1		(C)G-AN6-166304 ON (USA and Canada ONLY)
15	URP 1145	Cap-expansion tank	1		
16	AHA 8739	Clip-expansion tank to bracket	1		
17	CHA 609	Bracket-expansion tank	1		
18	NH 605041	Nut-bracket	2		
19	WL 600051	Washer-spring	2		
20	GRH 1001 M	Tube-overflow-23"long	1		
21	GRH 1002 M	Tube-housing to expansion tank 13"long	1		
22	21K 8341	CLIP-TUBE	A/R		
23	GRH 525	Hose-radiator-top	1		
24	CHA 603	Hose-radiator-lower	1		
25	GHC 1217	Clip-hoses	A/R		
26	CHA 616	Hose-outlet elbow to tank	1		
27	GHC 709	Clip-hose	2		
28	CHA 420	Guard-fan	1		

NOTE:
Part Nos.with the suffix letter'M'are supplied in multiples of metres(39.37").


107-D 4.06

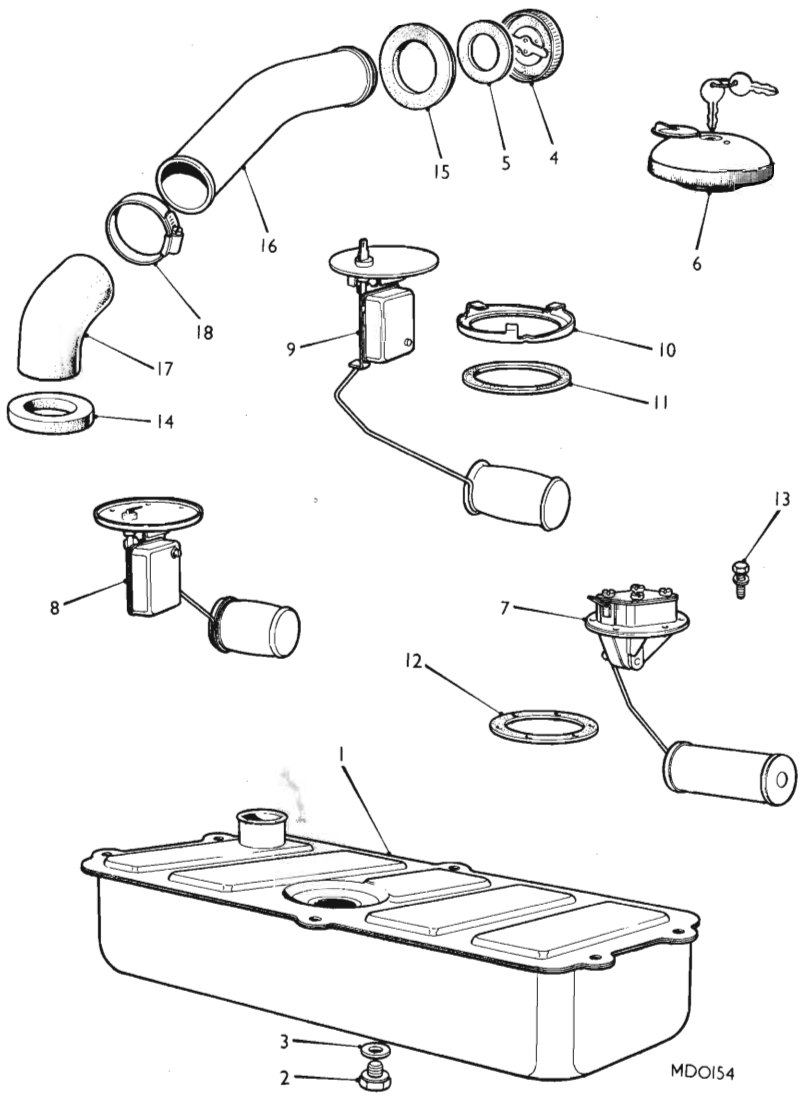

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FUEL TANK AND FITTINGS-NOT EVAPORATIVE LOSS CONTROL.			
1	NRP 9	TANK ASSEMBLY-FUEL $	1	Use prior to NRP 8	Was ARA 114
2	ARH 672	Plug-drain	1		
3	ARA 967	Washer	1		
1	NRP 8	Tank-fuel(less gauge unit)$	1	(C)G-AN5-105501 TO 154100	Was ARC 84
2	ARH 672	Plug-drain	1		Use with ARC 84
3	ARA 967	Washer	1	(C)G-AN6-154101 TO 182000	
	NRP 1199	Tank-fuel	1	(C)G-AN6-182001 ON	
4	18G 8601	CAP ASSEMBLY-FILLER $	1		
5	27H 3573	Seal-filler cap $	1		
6	GSS 127	Cap-filler(locking)$	1		Optional extra.
7	21A 168	Unit-fuel gauge	NLA	Use prior to BHA 4711	
8	BHA 4711	Unit-fuel gauge	1	(C)H-AN9-72041 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60460 TO 74885 (C)G-AN5-74886 TO 105500	
9	BRA 960	Unit-fuel gauge	1	(C)G-AN5-105501 TO 154100	
10	ARA 1501	Ring-locking	1		
11	ARA 1502	Ring-sealing	1	(C)G-AN6-154101 ON	
12	2H 1082	Gasket	1		Use with unit 21A 168.
13	ARG 923	Screw-unit to tank(with washer)	6		
14	2A 2069	Ring-sealing-tank to floor	1		
	NH 605041	Nut	6		
	PWZ 105	Washer-plain	6		
	LWZ 405	Washer-shakeproof	6		
15	AHA 5445	Grommet-tank filler	1		
16	AHA 5662	Tube-filler $	1		Except 1500
17	AHA 5663	Hose-filler tube neck(rubber)$	1		
16	CHA 444	Tube-filler	1		1500
17	CHA 452	Tube-filler neck(rubber)	1		
18	GHC 1622	Clip	2		

$ This item is subject to safety regulations.

107-D 6

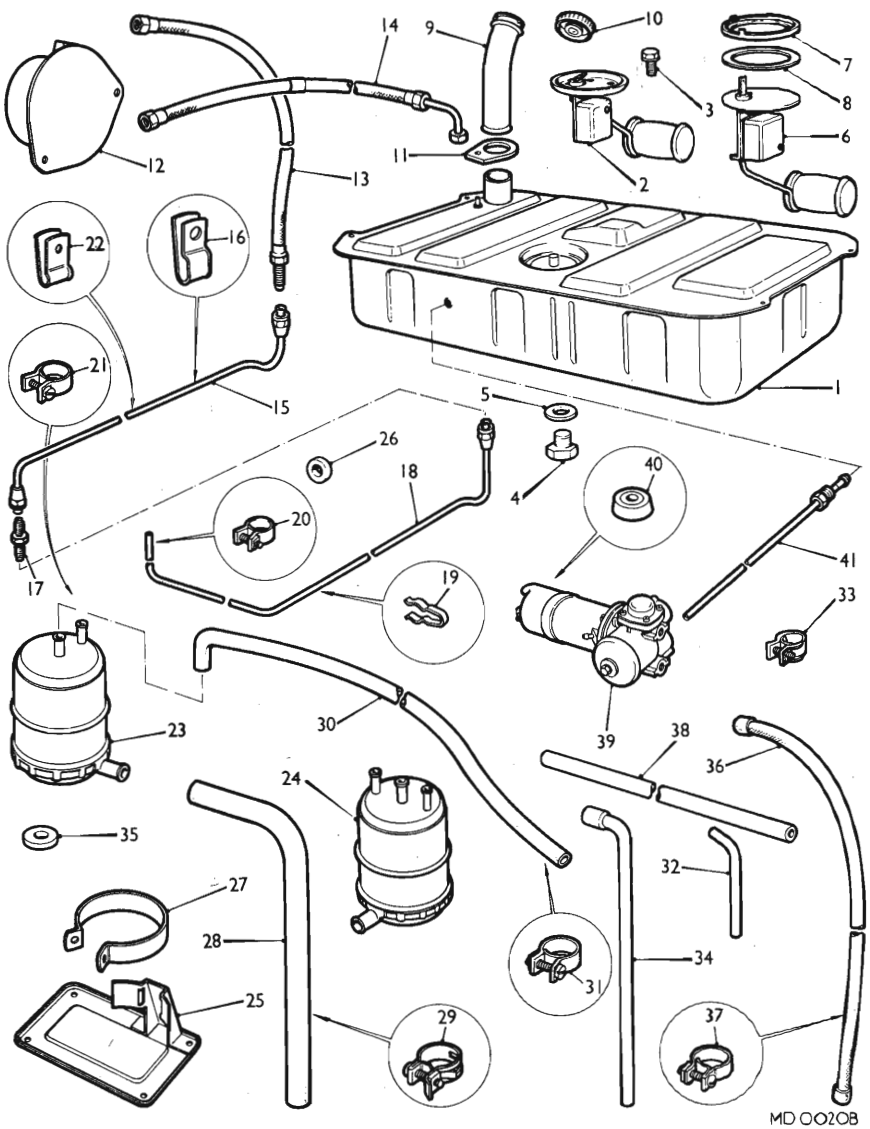


FUEL TANK AND FITTINGS-EVAPORATIVE LOSS CONTROL EQUIPMENT.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	ARA 373	Tank fuel-$	1	(C)G-AN5-74886 TO 105500	
2	BHA 4711	Unit-fuel gauge	1		
3	ARG 923	Screw	6		
1	NRP 6	Tank-fuel $	1	(C)G-AN5-105501 To 154100	Was ARC 86
4	ARH 672	Plug-drain	1		Use with
5	ARA 969	Washer	1	(C)G-AN6-105501 TO 182000	ARC 86 and ARA 373
	NRP 1201	Tank-fuel	1	(C)G-AN6-182001 ON	
6	BRA 960	Unit-fuel gauge	1	(C)G-AN5-105501 TO 154100	
7	ARA 1501	Ring-locking	1		
8	ARA 1502	Ring-sealing	1	(C)G-AN6-154101 ON	
	AHA 5663	Filler neck(rubber)$	1	(C)G-AN5-74886	
9	AHA 9652	Tube-filler $	1	TO 113625	
	AHA 9941	Filler neck $	1	(C)G-AN5-113626 TO 154100	
	CHA 452	Filler-neck $	1	(C)G-AN6-154101 ON	
10	BHH 178	Cap-filler $	1	(C)G-AN6-154101 TO 166300	Except 1500. California
9	CHA 453	Tube-filler $	1	(C)G-AN6-160160 TO 166300 (California only)	
10	BHH 1663	Cap-filler $	1		
9	BHH 1883	Tube-filler	1	(C)G-AN6-166304 ON	Unleaded fuel
10	BHH 178	Cap-filler	1		
11	AHA 9653	Seal-vent pipe through floor	NLA		
12	ARH 302	Tank-vapour seperating $	1	Use prior to BHH 1626	
12	BHH 1626	Tank-vapour-separating $	1	(C)G-AN6-154101 ON	
	HZS 405	Screw-tank to wing valance	1		
	LWZ 204	Washer-spring	1		
	NH 604041	Nut	1		
	PWZ 204	Washer-plain	1		
13	BHH 196	Hose-vapour-separator tank to rear vapour pipe $	1	Use prior to BHH 1625	
13	BHH 1625	Hose-vapour-separator tank to rear vapour pipe $	1	(C)G-AN6-154101 TO 182000	
	LWZ 607	Washer-lock	1		
14	BHH 197	Hose-vapour-separator tank to petrol tank $	1	Use prior to CHA 378	
14	CHA 378	Pipe-vapour-separator tank to petrol tank $	1	(C)G-AN6-154101 TO 182000	
15	AHA 9668	Pipe-vapour-connection to separator tank connector	1		
	37H 7148 M	Pipe-vapour-intermediate-25"long	1		
	37H 7148 M	Pipe-vapour-intermediate pipe To seperator tank flex-25"long	1		
	WF 600071	Washer-lock	1	(C)G-AN6-182001 ON	
	NT 607041	Nut-pipe to floor	1		
	37H 6844 M	Hose-petrol tank to seperator tank 19"long	1		
	37H 6844 M	Hose-seperator tank to pipe 15"long	1		
	RFR 208	Ferrule(in boot floor)	1		

$ This item is subject to safety regulations.


107-D 8

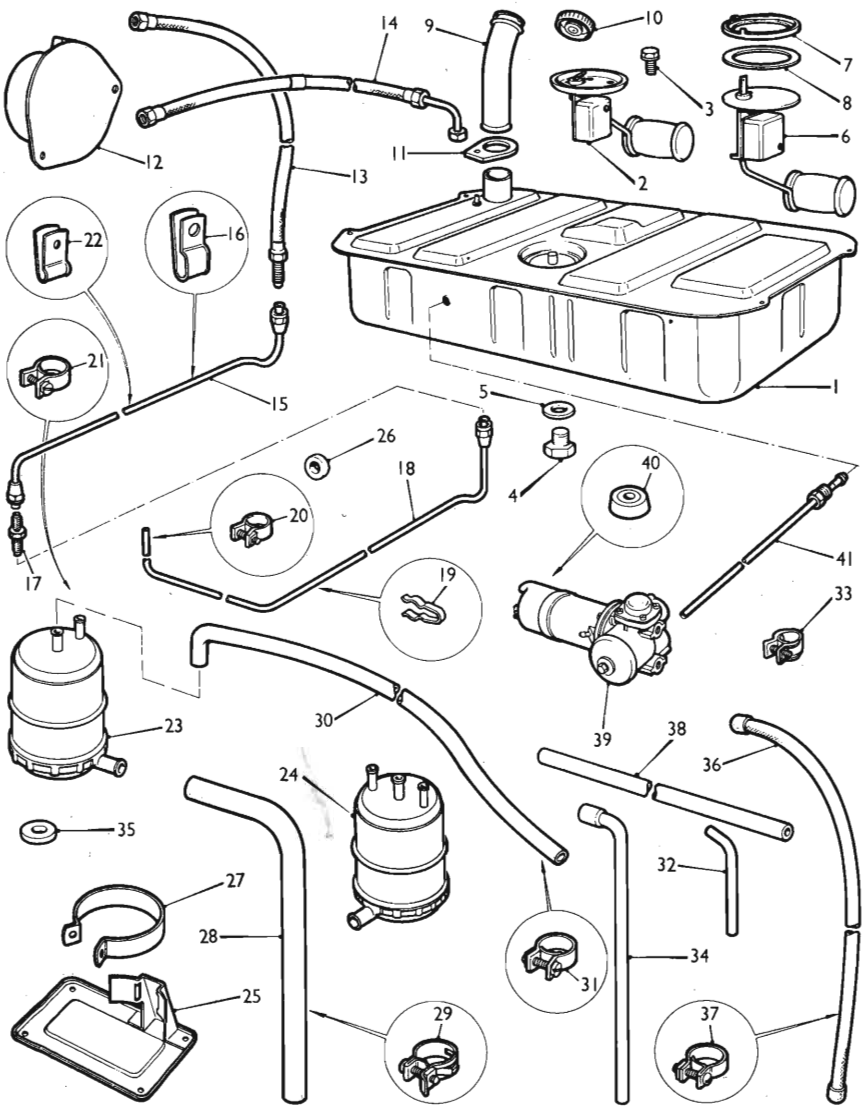

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FUEL TANK AND FITTINGS-EVAPORATIVE LOSS CONTROL EQUIPMENT-continued.			
16	AHH 7355	Clip-pipe to tank	1		
	PCR 407	Clip-pipe	3		
	LWZ 203	Washer-spring	1		
17	AHH 9662	Connector	1		
18	AHA 9666	Pipe-vapour-connector to elbow on canister	1		
19	6K 35	Clip	2		
	PMZ 310	Screw	1		
	PCR 407	Clip-vapour and brake pipe	2		
	PWZ 103	Washer-plain	1		
	LWZ 203	Washer-spring	1		
20	BHH 185	Clip-vapour pipe to elbow	1		
21	88G 308	Clip-elbow to canister	1		
22	AHA 8161	Clip-vapour pipe to canister support	1	Finished at (C)G-AN5-154100	
23	13H 6199	CANISTER ASSEMBLY-CARBON	1	(C)G-AN5-74886 TO 105500	
24	13H 5994	CANISTER ASSEMBLY-CARBON	1	(C)G-AN5-105501 TO 154100	
	37H 6101	Pad-filter	1		
24	13H 8511	Cannister-carbon	1	(C)G-AN6-154101 ON	
	BHH 102	Elbow-carbon cannister	1		
25	AHA 9333	Bracket-support-canister	NLA	Finished at (C)G-AN5-154100	
	PMZ 412	Screw-canister bracket bottom	1		
	PCR 409	Clip-pipe to bracket	1		
27	AHH 9658	Strap-canister	1		
	PMZ 316	Screw-strap	1		
	LNZ 103	Nut	1		
28	AHA 9670	Tube-breather-canister	1	Finished at (C)G-AN5-154100	
29	AHC 190	Clip-tube	1		
30	AHA 9607	Hose-canister to head cover	1		
31	AHC 234	Clip-hose	NLA		
32	AHA 9606	Pipe-overflow-carburetter	2	(C)G-AN5-74886 TO 105500	
33	BHH 185	Clip-pipe	2		
34	AHA 9608	Pipe-overflow	NLA		
21	88G 308	Clip-canister	1		
20	BHH 185	Clip-bundy pipe end	1	(C)G-AN5-105501 TO 154100	
	PCR 607	Clip-pipe to heater control screw	1		
35	AHH 8899	Washer-distance	1		
	37H 4760 M	PIPE-FUEL(FLEXIBLE)	A/R		
37	ACH 5854	Clip-flexible pipe	2		
38	AHA 7383	Pipe-carburetter to flexible pipe(straight)-244cm	NLA	Finished at (C)G-AN5-154100	Use 37H 7148 M
38	37H 7148 M	Pipe-carburetter to flexible pipe-244cm	1		
39	AUF 305	Pump-fuel	1		
40	AHH 6939	Spacer-pump bracket	1		

NOTE:-Part numbers with suffix 'm' are supplied in Multiples of Metres(39.37")

107-D 10

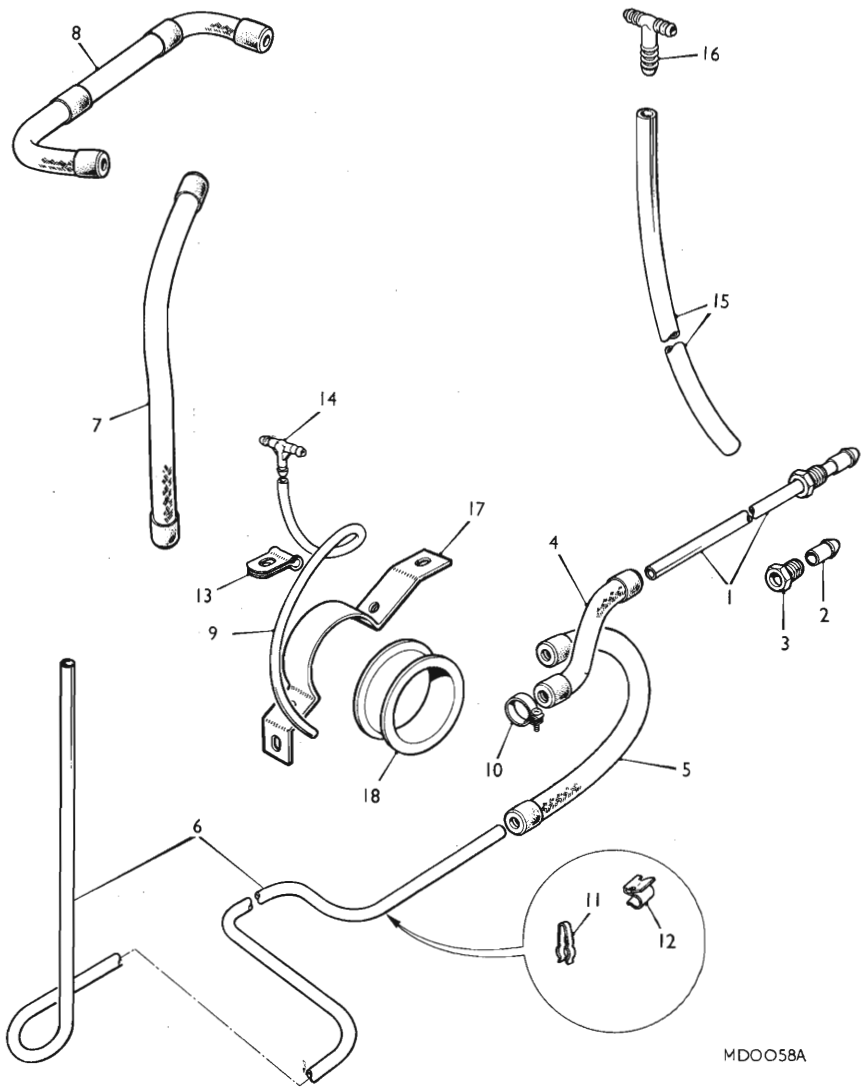


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FUEL PIPES AND FITTINGS			
1	AHA 7381	PIPE ASSEMBLY-TANK TO PUMP INLET FLEXIBLE PIPE $	1		Except USA and Canada
1	AHA 9556	PIPE ASSEMBLY-TANK TO PUMP INLET FLEXIBLE $	1		USA and Canada
2	ACA 5129	Nipple $	1		
3	ACA 5128	Nut $	1		
	37H 4760 M	PIPE-FUEL(FLEXIBLE) $	A/R		
4	37H 4760 M	Pump inlet 5"(13cm)	1		
5	37H 4760 M	Pump outlet 9"(23cm)	1		
7	37H 4760 M	Pipe to carburetter 10.5"(27cm)	1		
	37H 4760 M	Main feed filter to carburetter-7.5"(19cm)	1		
6	AHA 7383	Pipe-pump outlet to carburetter-244cm $	NLA		Use 37H 7148 M
8	12G 2409	Pipe-front to rear carburetter	1	Finished at (C)G-AN5-154100	
9	17H 8579 M	Pipe-pump breather-22"(56cm)	A/R		
10	ACH 5854	Clip-pump flexible pipes $	A/R		
11	6K 35	Clip-pipe to frame	2		
12	17H 9603	Clip-pipe to frame	3		
13	PCR 409	Clip-pump breather pipe to body	1		
	13H 320	Clip-vent pipe on pump	1		
14	BHA 4361	'T'piece-pump breather pipe	1		
15	AHH 8790	Tube-pump breather-22"(56cm)	NLA		Use with double-VENTED FUEL pump
16	BHA 4752	'T'piece	1		
15	47H 9545	Sleeve(PVC)-5"(12.7cm)	A/R		
17	AHA 7384	Bracket-pump mounting	1		
	NH 604041	Nut	2		
	PWZ 104	Washer-plain	2		
	LWZ 204	Washer-spring	2		
18	AHH 6708	Mounting-fuel pump(rubber)	1		
	HZS 405	Screw	2		
	LWZ 204	Washer-spring	2		
	NH 604041	Nut	2		
1	37H 7148 M	PIPE ASSEMBLY-TANK TO INTERMEDIATE HOSE-81.5" (207.07cm)$	1		
2	ACA 5129	Nipple $	1		
3	ACA 5128	Nut $	1	(C)G-AN6-154101 ON	
4	37H 7615 M	Hose-intermediate-10"(254mm)	1		Alternatives
4	37H 6844 M	Hose-intermediate-8"(203mm)	1		
6	CHA 397	Pipe-intermediate hose to pump hose	1		
	BRT 2805	Hose-pump inlet	1		

NOTE:
Part Nos.with the suffix letter 'M' are supplied in multiples of metres(39.37")

$ This item is subject to safety regulations

107-D 12

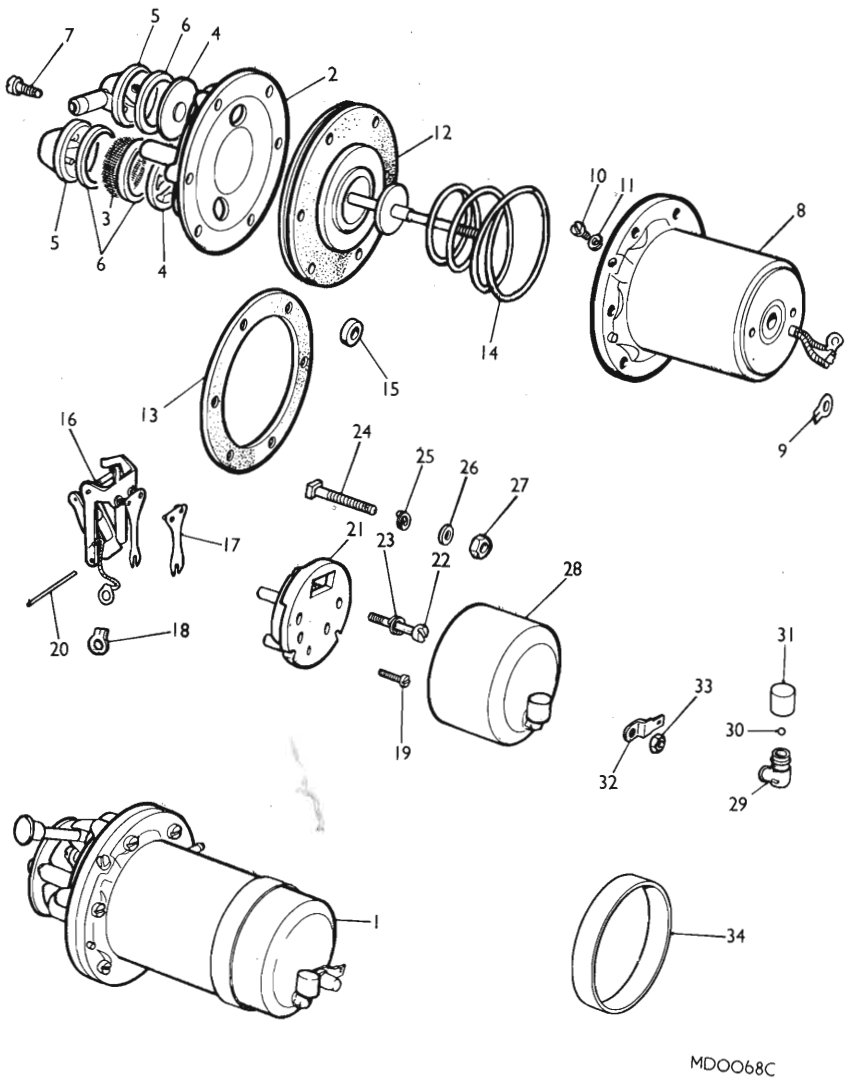


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS

FUEL PUMP-EXCEPT MIDGET 1500.


1	AUF 214	PUMP ASSEMBLY-FUEL	1
2	AUB 613	Body	NLA
3	AUB 617	Filter	1
4	AUB 6062	Valve	2
5	AUB 663	Banjo	2
6	AUB 676	Washer-sealing	3
7	AUA 1453	Screw-plate	2
8	AUB 6080	Housing-coil	1
10	AUA 699	Screw-earth	1
11	AUA 585	Washer-spring	1
12	AUB 6097	Diaphragm	1
13	AUB 809	Washer-joint	1
	LWZ 303	Washer-spring	1
14	AUB 758	Spring-armature	NLA
15	AUA 1433	Roller	1
16	AUB 6106	ROCKER AND BLADE ASSEMBLY	1
17	AUA 6036	Blade	1
19	AUC 5047	Screw-blade	1
20	AUA 1435	Spindle-contact breaker	1
21	88G 534	Pedestal	1
22	AUA 1459	Screw-pedestal to coil housing	2
23	AUA 1863	Washer-spring	NLA
24	AUA 1468	Screw-terminal	1
25	AUA 1863	Washer-spring	NLA
26	AUA 1662	Washer(lead)	1
27	AUA 1661	Nut	1
28	AUE 399	Cover and valve	1
	LWZ 403	Washer-shakeproof	1
32	AUA 692	Connector-Lucar	1
33	AUA 878	Nut-cover	1
34	AUB 716	Ring-sealing	1

107-D 14

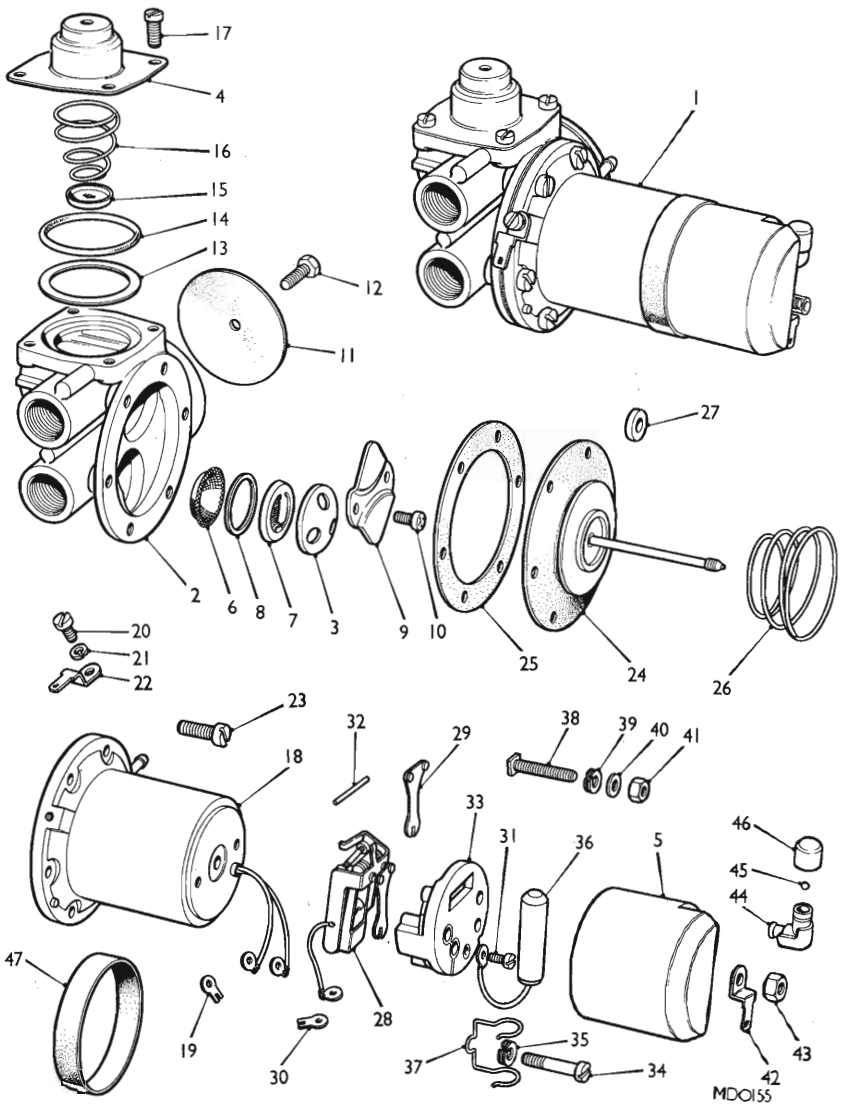


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FUEL PUMP-RAC HOMOLOGATED			
1	AUF 305	PUMP ASSEMBLY-FUEL	1		
2	AUB 662	Body	NLA		
3	AUB 652	Cover-valve	NLA		
4	AUB 651	Cover-air bottle	NLA		
	AUB 656	Diaphragm(nylon)	1		
	AUB 657	Ring-sealing	1		
5	AUB 707	Cover-end	1		
6	AUB 617	Filter	1		
7	AUB 6062	Valve	2		
8	AUB 676	Washer-sealing	3		
9	AUB 653	Plate-valve cover clamp	1		
10	AUB 597	Screw-plate	NLA		
11	AUA 573	Gasket-side cover	1		
12	AJD 1042	Bolt-side cover	1		
	LWZ 303	Washer-spring	1		
13	AUB 795	Gasket-plate	1		
17	AJD 3803 Z	Screw-air bottle cover	4		
18	AUB 6080	Housing-coil	1		
20	AUA 699	Screw-earth	1		
21	AUA 585	Washer-spring	1		
22	AUA 692	Connector-Lucar	1		
23	AUB 660	Screw-oil housing to body	6		
24	AUB 6097	DIAPHRAGM ASSEMBLY	1		
25	AUB 849	Gasket	NLA		
26	AUB 759	Spring-armature	1		
27	AUB 794	Roller	11		
28	AUB 106	ROCKER AND BLADE ASSEMBLY	1		
29	AUA 6036	Blade	1		
31	AUC 5047	Screw-blade	1		
32	AUA 1435	Spindle-contact breaker	1		
33	88G 534	Pedestal	1		
34	AUA 1459	Screw-pedestal to coil housing	2		
35	AUA 1863	Washer-spring	NLA		
36	AUB 6079	Condenser	1		
37	AUA 5059	Clip-condenser	NLA		
38	AUA 1468	Screw-terminal	1		
39	AUA 1863	Washer-spring	NLA		
40	AUA 1662	Washer(lead)	1		
41	AUA 1661	Nut	1		
	LWZ 403	Washer-shakeproof	1		
42	AUA 692	Connector-Lucar	1		
43	AUA 878	Nut-end cover	1		
47	AUB 716	Ring-sealing	1		

107-D 16

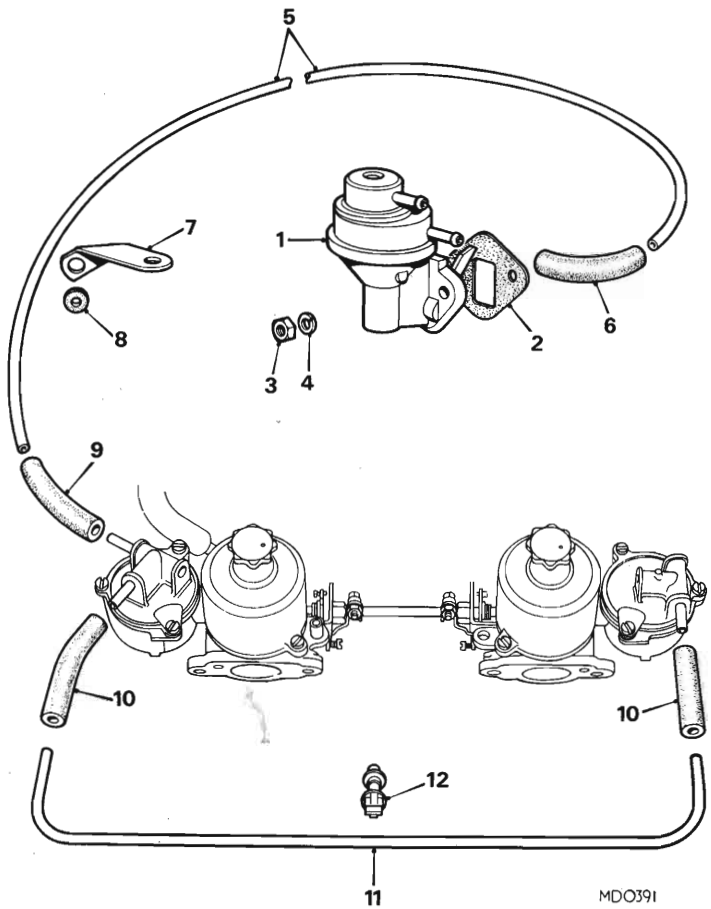

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FUEL PUMP AND FIXINGS-MIDGET 1500.			
1	RKC 1624	Pump-fuel(AC Delco)	1		
1		Pump-fuel (AC Delco)	1		USA and Canada 1977 ON
2	138791	Gasket-fuel pump	1		
3	NH 605041	Nut	2		
4	WL 605091	Washer	2		
5	310221	Pipe-fuel pump to carburetter	1		
6	153300	Connector-pipe to pump	1		
7	155959	Bracket-pipe support	1		
8	630661	Grommet-bracket	1		
9	125170	Connector-pipe to carburetter	1		
10	120331	Connector-front and rear-fuel pipe	2		
11	UKC 4962	Pipe-fuel-front to rear carburetter	1		
12	UKC 3793	Clamp-pipe	1		
5	215997	Pipe-fuel-pump to carburetter	1		USA and Canada. TO 1977.
9	144938	Connector-fuel pipe	2		
5	TKC 3222	Pipe-fuel-pump to carburettor	1		USA and Canada 1977 ON
9	156952	Connector-fuel pipe	2		


107-D 16.02

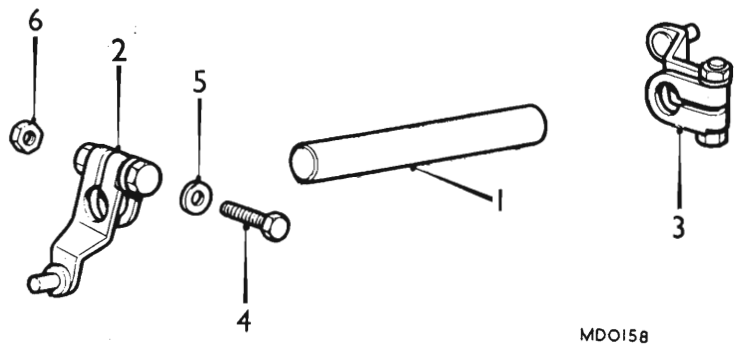

MD0158


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-NON VENTILATED TYPE-NOT USA AND CANADA			
	AUD 136	CARBURETTER INSTALLATION	NLA		Use front carburetter CUD 9029 with rear carburetter CUD 9030
1	AUC 1457	Rod-jet connecting	1	(E)10CC/Da/H101 TO 16300	
2	AUE 586	LEVER AND PIN ASSEMBLY-FRONT	2	(E)12CC/Da/H101 TO 16300	
3	AUE 587	LEVER AND PIN ASSEMBLY-REAR	2		
4	AJD 1042	Bolt	4		
5	AUC 8396	Washer-plain	4		
6	AJD 8012 Z	Nut	4		

107-D 18

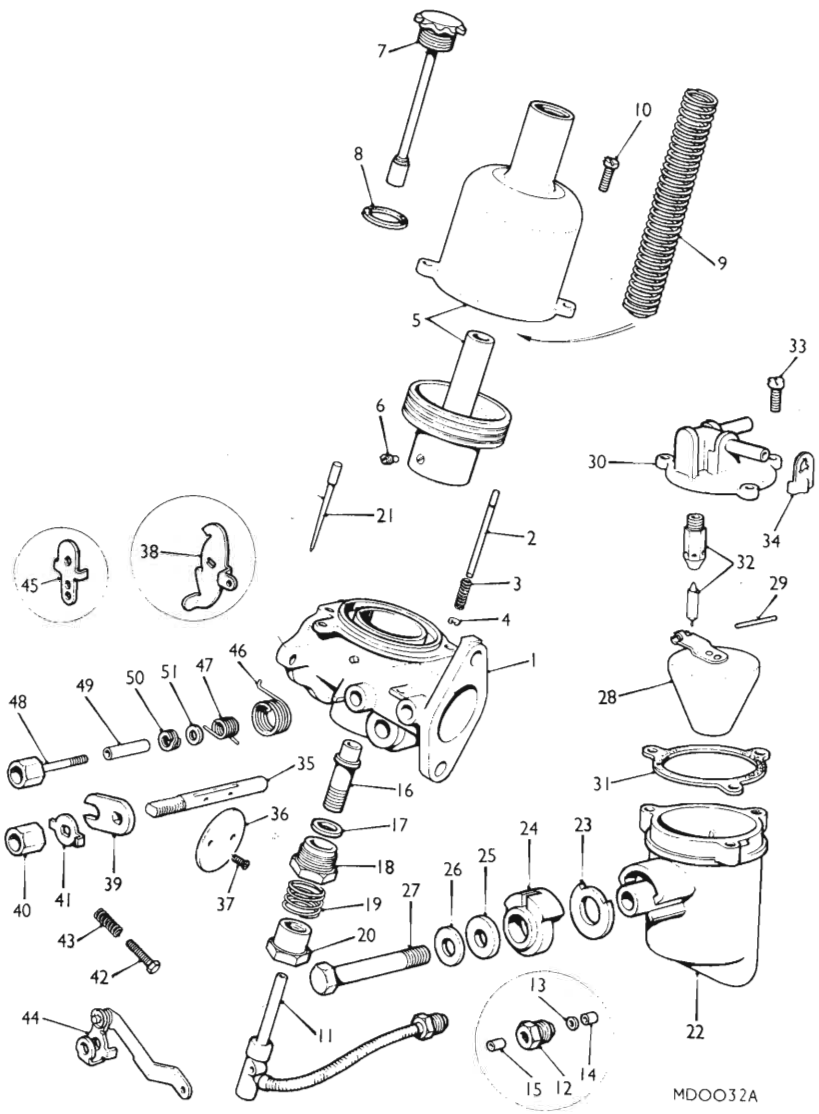


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-NON VENTILATED TYPE-NOT USA AND CANADA-continued			
	AUC 9268	CARBURETTER ASSEMBLY-FRONT	NLA		Use CUD 9029
1	AUC 8700	Body	1		
2	AUC 8464	Pin-piston lifting	1		
3	AUC 1151	Spring-pin	1		
4	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
4	AUD 4150	Circlip-pin	2		
5	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
6	AUC 2057	Screw-needle locking	1		
7	AUC 8114	Cap and damper	1		
8	AUC 4900	Washer(fibre)	1		
9	AUC 4587	Spring-piston-Blue	1		
10	AUC 5156	Screw-chamber to body	2		
11	AUD 9141	JET ASSEMBLY	1		
12	AUD 2129	Nut	1		
13	AUD 2193	Washer	1		
14	AUD 2194	Gland	1		
15	AUD 2195	Ferrule	1		
16	AUC 8460	Bearing-jet	1		
17	AUC 8478	Washer-jet bearing(brass)	1		
18	AUC 2002	Screw-jet locking	1		
19	AUC 2114	Spring-jet locking	1		
20	AUC 8461	Screw-jet adjusting	1		
21	AUD 1242	NEEDLE-JET-Rich(H6)	1		
21	AUD 1478	NEEDLE-JET-Standard(AN)	1	(E)10CC/Da/H101	
21	AUD 1211	NEEDLE-JET-Weak(GG)	1	TO 16300	
22	AUC 1310	Chamber-float	1	(E)12CC/Da/H101	
23	AUC 1329	Washer-support	1	TO 16300	
24	AUD 2677	Grommet(rubber)	1		
25	AUC 1318	Washer(rubber)	1		
26	AUC 1317	Washer-plain	1		
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9255	Lid-float chamber	1		
31	AUC 8459	Gasket-lid	1		
32	AUD 9096	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		
34	AUC 1215	Plate-baffle	1		
35	AUC 8469	Spindle-throttle	1		
36	AUC 2169	Disc-throttle	1		
37	AUC 1358	Screw-disc	2		
38	AUC 1145	Lever-throttle return	1		
39	AUC 1400	Lever-lost motion	1		
40	AUC 1424	Nut-lever	1		
41	AUC 1206	Washer-tab	1		
42	AUC 8483	Screw-throttle stop	2		
43	AUC 2451	Spring-screw	2		
44	AUD 9004	Lever-and link-pick-up	1		
	PJZ 604	Screw-link to jet	1		
45	AUC 8456	Lever-cam	1		
46	AUC 8462	Spring-pick-up lever	1		
47	AUC 8463	Spring-cam lever	1		
48	AUC 1426	Bolt-pivot	1		
49	AUC 8473	Tube-pivot bolt	1		
50	AUC 8474	Washer-spring	1		
51	AUC 5032	Washer-distance	1		

107-D 20

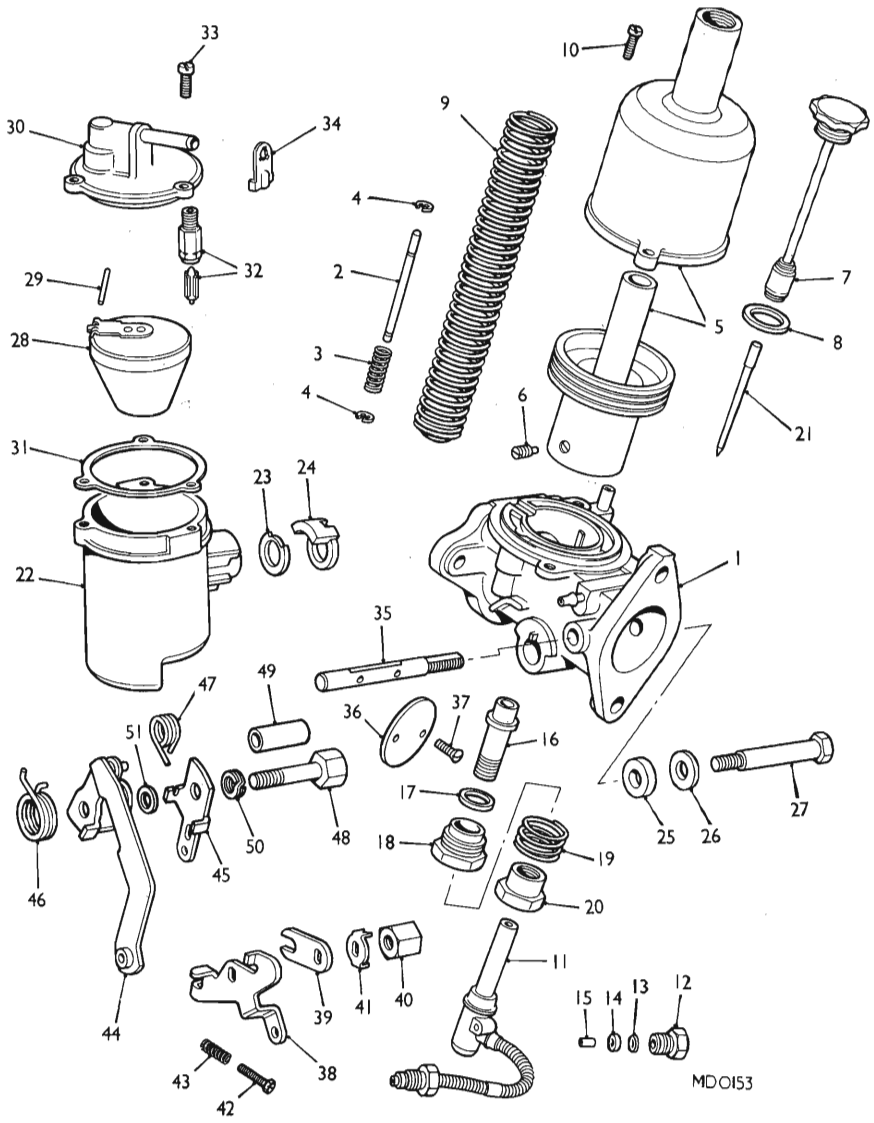

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-NON VENTILATED TYPE-NOT USA AND CANADA-continued			
	AUC 9269	CARBURETTER ASSEMBLY-REAR	NLA		Use CUD 9030
1	AUC 8713	Body	NLA		
2	AUC 8464	Pin-piston lifting	1		
3	AUC 1151	Spring-pin	1		
4	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
4	AUD 4150	Circlip-pin	2		
5	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
6	AUC 2057	Screw-needle locking	1		
7	AUC 8114	Cap and damper	1		
8	AUC 4900	Washer(fibre)	1		
9	AUC 4587	Spring-piston-Blue	1		
10	AUC 5156	Screw-chamber to body	2		
11	AUD 9142	JET ASSEMBLY	1		
12	AUD 2120	Nut	1		
13	AUD 2193	Washer	1		
14	AUD 2194	Gland	1		
15	AUD 2195	Ferrule	1		
16	AUC 8460	Bearing-jet	1		
17	AUC 8478	Washer-jet bearing(brass)	1		
18	AUC 2002	Screw-jet locking	1		
19	AUC 2114	Spring-jet locking	1		
20	AUC 8461	Screw-jet adjusting	1		
21	AUD 1242	Needle-jet-rich(H6)	1		
21	AUD 1478	Needle-jet-standard(AN)	1	(E)10CC/Da/H101	
21	AUD 1211	Needle-jet-weak(GG)	1	TO 16300	
22	AUC 1310	Chamber-float	1	(E)12CC/Da/H101	
23	AUC 1329	Washer-support	1	TO 16300	
24	AUD 2676	Grommet(rubber)	1		
25	AUC 1318	Washer(rubber)	1		
26	AUC 1317	Washer-plain	1		
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9203	Lid-float chamber	1		
31	AUC 8459	Washer-lid	1		
32	AUD 9096	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		
34	AUC 1215	Plate-baffle	1		
35	AUC 8469	Spindle-throttle	1		
36	AUC 2169	Disc-throttle	1		
37	AUC 1358	Screw-disc	2		
38	AUD 2101	Lever-throttle return	1		
39	AUC 1400	Lever-lost motion	1		
40	AUC 1424	Nut-lever	1		
41	AUC 1206	Washer-tab	1		
42	AUC 8483	Screw-throttle stop	2		
43	AUC 2451	Spring-screw	2		
44	AUD 9005	Lever and link-pick-up	1		
	PJZ 604	Screw-link to jet	1		
45	AUC 1371	Lever-cam	1		
46	AUC 1375	Spring-pick-up lever	1		
47	AUC 1520	Spring-cam lever	1		
48	AUC 1426	Bolt-pivot	1		
49	AUC 8473	Tube-pivot bolt	1		
50	AUC 8474	Washer-spring	1		
51	AUC 5032	Washer-distance	1		

107-D 22

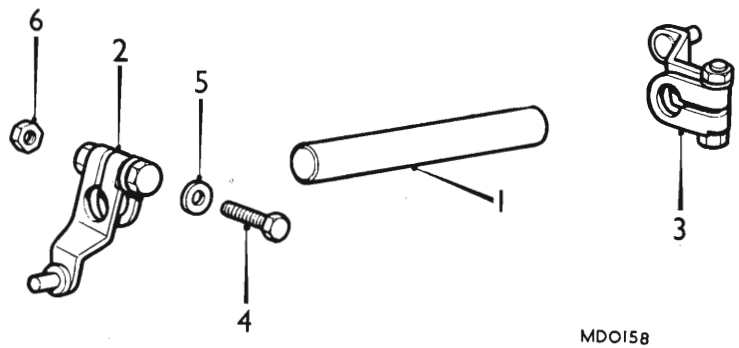


MD0158

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-NOT USA AND CANADA			
	AUD 327	CARBURETTER INSTALLATION .....NLA			Use front carburetter CUD 9029 with rear carburetter CUD 9030
1	AUC 1457	Rod-jet connecting	1	(E)12CE/Da/h101 TO(+)	
2	AUE 586	Lever and pin assembly-front	2	(E)12V/586F/101 ON	
3	AUE 587	Lever and pin assembly-rear	2	(E)12V/588F/101 ON	
4	AJD 1042	Bolt-lever	4		
5	AUC 8396	Washer-plain	4		
6	AJD 8012 Z	Nut	4		

(+) Change point not available

107-D 24

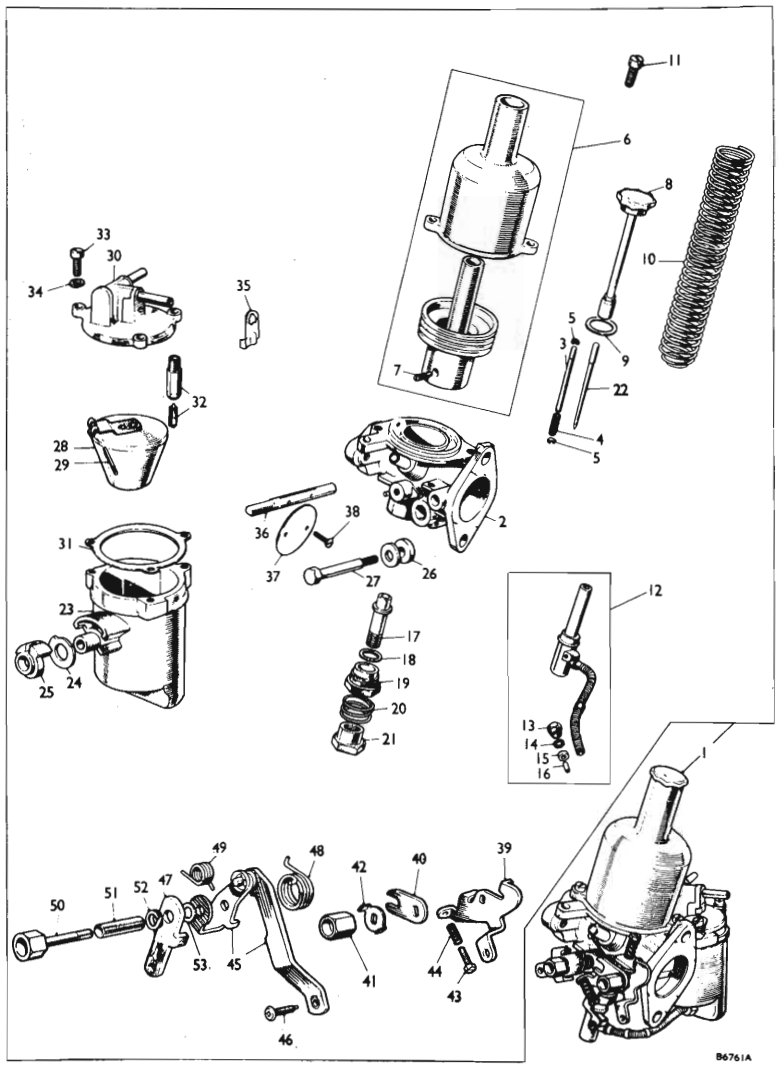


107-D25

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-NOT USA AND CANADA-CONTINUED			
1	CUD 9029	CARBURETTER ASSEMBLY-FRONT	1		
2	CUD 2316	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
7	AUC 2057	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9141	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUC 8460	Bearing-jet	1		
18	AUC 8478	Washer-jet bearing(brass)	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	AUD 1242	Needle-jet-rich(H6)	1		
22	AUD 1478	Needle-jet-standard(AN)	1		
22	AUD 1211	Needle-jet-weak(GG)	1		
23	AUC 1310	Chamber-float	1		(E)12CE/Da/H101
24	AUC 1329	Washer-support	1		TO(+)
25	AUD 2677	Grommet(rubber)	1		(E)12V/586F/101 ON
26	AUC 1318	Washer(rubber)	1		(E)12V/588F/101 ON
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9255	Lid-float chamber	1		
31	AUC 8459	Washer-lid	1		
32	AUD 9096	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
34	LWZ 303	Washer-spring	3		
35	AUC 1215	Plate-baffle	1		
36	AUC 8469	Spindle-throttle	1		
37	AUC 2169	Disc-throttle	1		
38	AUC 1358	Screw-disc	2		
39	AUC 1145	Lever-throttle return	1		
40	AUC 1400	Lever-lost motion	1		
41	AUC 1424	Nut-lever	1		
42	AUD 3323	Washer-tab	1		
43	AUC 8483	Screw-throttle stop	2		
44	AUC 2451	Spring-screw	2		
45	AUD 9004	Lever and link-pick-up	1		
46	PJZ 604	Screw-link to jet	1		
47	AUC 8456	Lever-cam	1		
48	AUC 8462	Spring-pick-up lever	1		
49	AUC 8463	Spring-cam lever	1		
50	AUC 1426	Bolt-pivot	1		
51	AUC 8473	Tube-pivot bolt	1		
52	AUC 8474	Washer-spring	1		
53	AUC 5032	Washer-distance	1		

(+) Change point not available

107-D 26

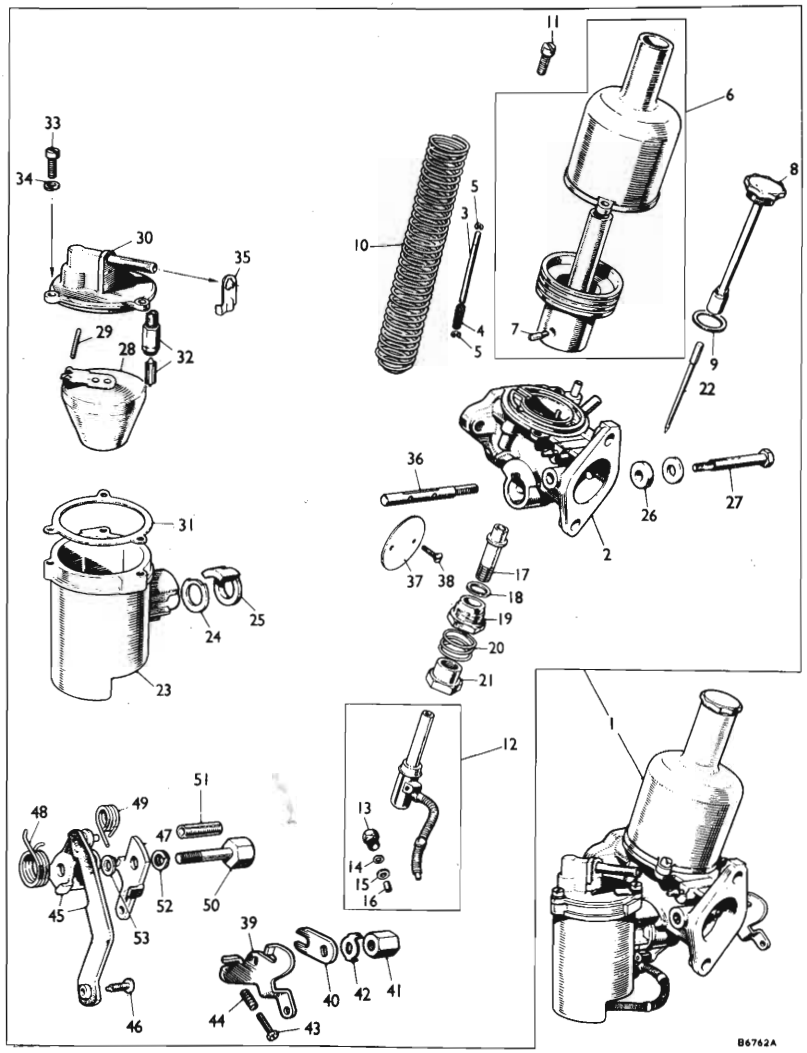


107-D27

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE.NOT USA AND CANADA-continued.			
1	CUD 9030	CARBURETTER ASSEMBLY-REAR	1		
2	AUD 9995	Body	NLA		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	1		
6	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
7	AUC 2057	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9142	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUC 8460	Bearing-jet	1		
18	AUC 8478	Washer-jet bearing(brass)	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	AUD 1242	Needle-jet-rich(H6)	1		
22	AUD 1478	Needle-jet-standard(AN)	1		
22	AUD 1211	Needle-jet-weak(GG)	1		(E)12CE/Da/H101 TO (+)
23	AUC 1310	Chamber-float	1		
24	AUC 1329	Washer-support	1		(E)12V/586F/101 ON
25	AUD 2676	Grommet(rubber)	1		(E)12V/588F/101 ON
26	AUC 1318	Washer(rubber)	1		
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9203	Lid-float chamber	1		
31	AUC 8459	Washer-lid	1		
32	AUD 9096	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
34	LWZ 303	Washer-spring	3		
35	AUC 1215	Plate-baffle	1		
36	AUC 8469	Spindle-throttle	1		
37	AUC 2169	Disc-throttle	1		
38	AUC 1358	Screw-disc	2		
39	AUD 2101	Lever-throttle return	1		
40	AUC 1400	Lever-lost motion	1		
41	AUC 1424	Nut-lever	1		
42	AUD 3323	Washer-tab	1		
43	AUC 8484	Screw-throttle stop	2		
44	AUC 2451	Spring-screw	2		
45	AUD 9005	Lever and link-pick-up	1		
46	PJZ 604	Screw-link to jet	1		
47	AUC 1371	Lever-cam	1		
48	AUC 1375	Spring-pick-up lever	1		
49	AUC 1520	Spring-cam lever	1		
50	AUC 1426	Bolt-pivot	1		
51	AUC 8473	Tube-pivot bolt	1		
52	AUC 8474	Washer-spring	1		
53	AUC 5032	Washer-distance	1		


(+)Change point not available.

107-D 28

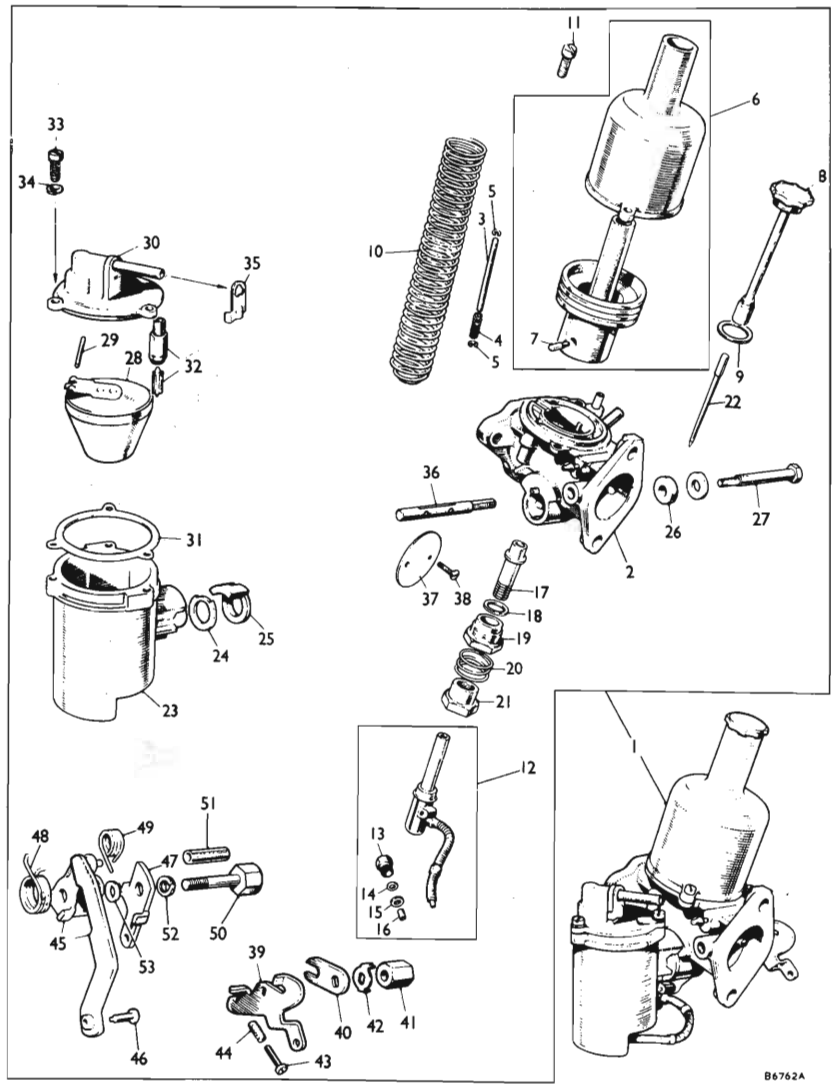


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE.NOT USA AND CANADA-continued.			
		FRONT CARBURETTER FOR 12V/778F ENGINES ONLY			
1	CUD 9296	CARBURETTER ASSEMBLY-FRONT	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4250	Screw-needle locking	1		
8	AUC 8103	Cap and damper	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9141	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	CUD 1002	Needle-jet(AAC)	1		
22	AUD 3306	Spring-needle	1		
22	AUD 4288	Guide-needle	1		
23	AUC 1310	Chamber-float	1		
24	AUC 1329	Washer-support	1		
25	AUD 2677	Grommet(rubber)	1		
26	AUC 1318	Washer(rubber)	1		(E)12V/778F/101 ON
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9255	Lid-float chamber	1		
31	AUC 8459	Washer-lid	1		
32	AUD 9095	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
34	LWZ 303	Washer-spring	3		
36	AUC 8469	Spindle-throttle	1		
37	AUC 2169	Disc-throttle	1		
38	AUC 1358	Screw-disc	2		
39	AUC 1145	Lever-throttle return	1		
40	AUC 1400	Lever-lost motion	1		
41	AUC 1424	Nut-lever	1		
42	AUD 3323	Washer-tab	1		
43	AUC 8483	Screw-throttle stop	2		
44	AUC 2451	Spring-screw	2		
45	CUD 2686	Lever and link-pick-up	1		
46	PJZ 604	Screw-link to jet	1		
47	AUD 4410	Lever-cam	1		
48	AUC 8462	Spring-pick-up lever	1		
49	AUD 2431	Spring-cam lever	1		
50	AUC 1426	Bolt-pivot	1		
51	AUC 8473	Tube-pivot bolt	1		
	AUD 2430	Tube-pivot bolt-outer	1		
52	AUD 2429	Washer-spring	1		
53	AUD 2433	Washer-distance	1		

107-D 28.02

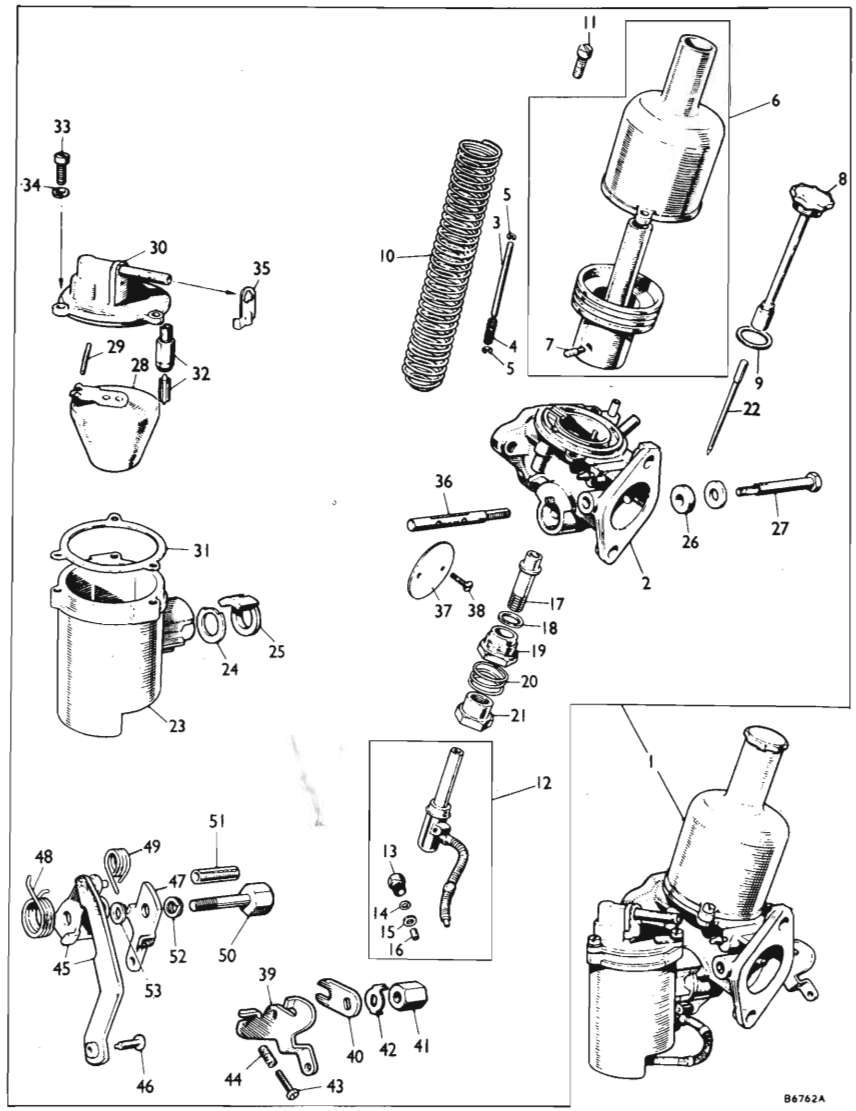

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION VENTILATED TYPE.NOT USA AND CANADA-continued.			
		REAR CARBURETTER FOR 12V/778F ENGINES ONLY			
1	CUD 9297	CARBURETTER ASSEMBLY-REAR	1		
2	AUD 9995	Body	NLA		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	1		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4250	Screw-needle locking	1		
8	AUC 8103	Cap and damper	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9142	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	CUD 1002	Needle-jet(AAC)	1		
22	AUD 3306	Spring-needle	1		
22	AUD 4288	Guide-needle	1		
23	AUC 1310	Chamber-float	1		
24	AUC 1329	Washer-support	1		
25	AUD 2676	Grommet(rubber)	1		
26	AUC 1318	Washer(rubber)	1		(E)12V/778F/101 ON
27	AUD 2891	Bolt-float chamber to body	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9203	Lid-float chamber	1		
31	AUC 8459	Washer-lid	1		
32	AUD 9095	Needle and seat	1		
33	AUC 2175	Screw-lid	3		
34	LWZ 303	Washer-spring	3		
36	AUC 8469	Spindle-throttle	1		
37	AUC 2169	Disc-throttle	1		
38	AUC 1358	Screw-disc	2		
39	AUD 2101	Lever-throttle return	1		
40	AUC 1400	Lever-lost motion	1		
41	AUC 1424	Nut-lever	1		
42	AUD 3323	Washer-tab	1		
43	AUC 8484	Screw-throttle stop	2		
44	AUC 2451	Spring-screw	2		
45	CUD 2687	Lever and link-pick-up	1		
46	PJZ 604	Screw-link to jet	1		
47	AUD 4411	Lever-cam	1		
48	AUC 1375	Spring-pick-up lever	1		
49	AUD 2432	Spring-cam lever	1		
50	AUC 1426	Bolt-pivot	1		
51	AUC 8473	Tube-pivot bolt	1		
	AUD 2430	Tube-pivot bolt-outer	1		
52	AUD 2429	Washer-spring	1		
53	AUD 2433	Washer-distance	1		


107-D 28.04

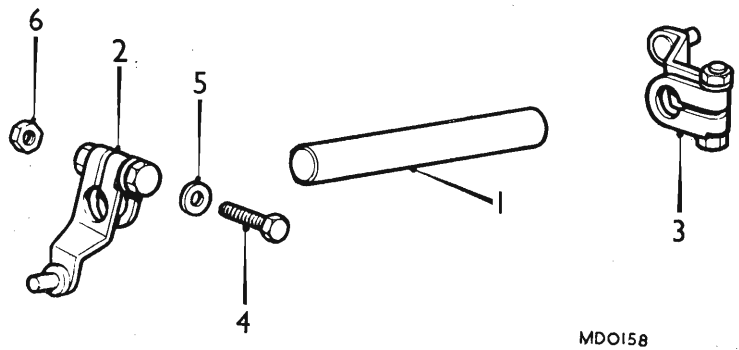

MD0158


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-NON VENTILATED TYPE.USA AND CANADA.			
	AUD 266	CARBURETTER INSTALLATION	NLA		Use front carburetter CUD 9031 with rear carburetter CUD 9032.
1	AUC 1457	Rod-jet connecting	1	(E)12CD/-/H101 TO 8700	
2	AUE 586	LEVER AND PIN ASSEMBLY-FRONT	2		
3	AUE 587	LEVER AND PIN ASSEMBLY-FRONT	2		
4	AJD 1042	Bolt	4		
5	AUC 8396	Washer-plain	4		
6	AJD 8012 Z	Nut	4		

107-D 30

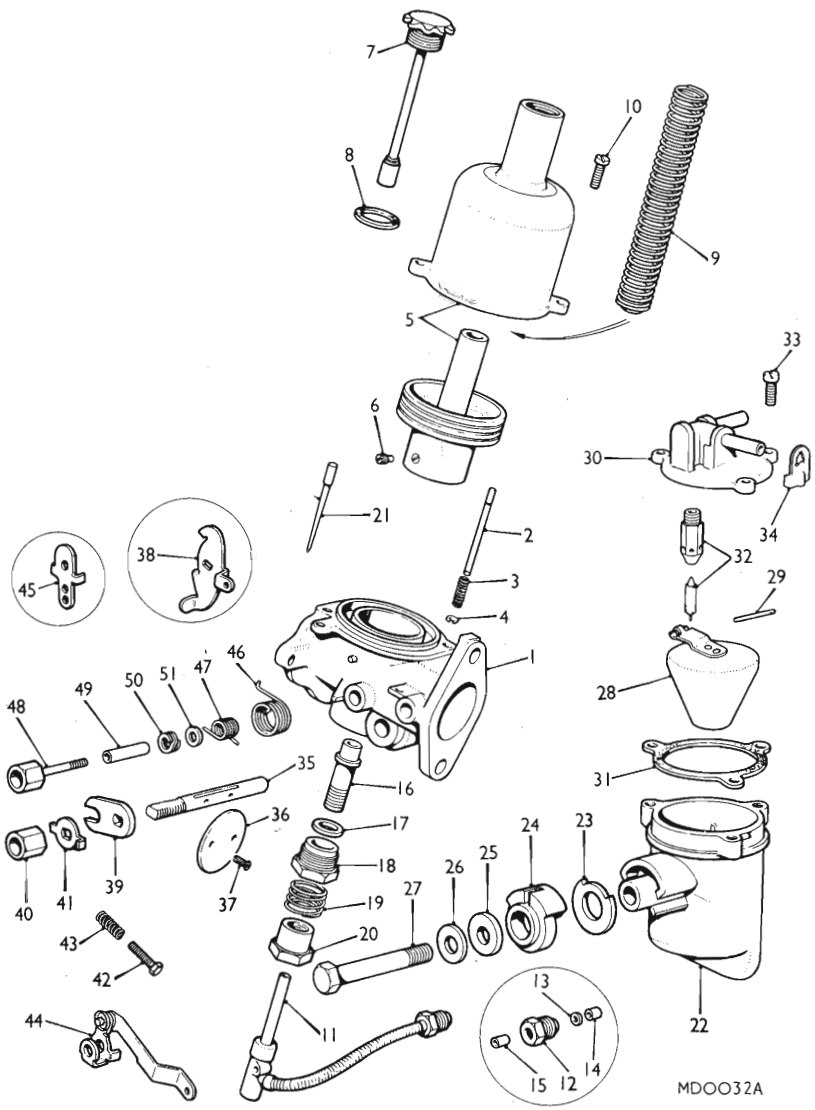


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION,NON-VENTILATED TYPE-USA AND CANADA-continued			
	AUC 9460	CARBURETTER ASSEMBLY-FRONT	NLA		Use CUD 9031.
1	AUD 9870	Body	NLA		
2	AUC 8464	Pin-piston lifting	1		
3	AUC 1151	Spring-pin	1		
4	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
4	AUD 4150	Circlip-pin	2		
5	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
6	AUC 2057	Screw-needle locking	1		
7	AUC 8114	Cap and damper	1		
8	AUC 4900	Washer(fibre)	1		
9	AUC 4587	Spring-piston-Blue	1		
10	AUC 5156	Screw-chamber to body	2		
11	AUD 9141	JET ASSEMBLY	1		
12	AUD 2129	Nut	1		
13	AUD 2193	Washer	1		
14	AUD 2194	Gland	1		
15	AUD 2195	Ferrule	1		
16	AUD 3101	Bearing-jet	1		
17	AUD 2987	Washer-jet centering	NLA		
18	AUC 2002	Screw-jet locking	1		
19	AUC 2114	Spring-jet locking	1		
	AUD 3235	Tab-locking	NLA		
20	AUD 3193	Screw-jet adjusting	NLA		
21	AUD 1242	Needle-jet-rich(h6)	1		
21	AUD 1478	Needle-jet-standard(an)	1		
21	AUD 1149	Needle-jet-weak(eb)	1	(E)12CD/-/H101 TO 8700	
22	AUC 1310	Chamber-float	1		
24	AUD 2677	Adaptor	1		
27	AUD 2891	Bolt-float chamber to body	1		
25	AUC 1318	Washer(rubber)	1		
23	AUC 1329	Washer-support	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
32	AUD 9096	Needle and seat	1		
30	AUD 9255	Lid-float chamber	1		
31	AJC 8459	Gasket-lid	1		
33	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		
34	AUC 1215	Plate-baffle	1		
35	AUC 8469	Spindle-throttle	1		
36	AUD 9876	Disc and valve-throttle	1		
37	AUC 1358	Screw-disc	2		
38	AUC 1145	Lever-throttle return	1		
39	AUC 1400	Lever-lost motion	1		
40	AUC 1424	Nut-lever	1		
41	AUC 1206	Washer-tab	1		
42	AUC 8483	Screw-fast idle	1		
43	AUC 2451	Spring-screw	1		
	AUD 3011	Screw-throttle stop	1		
44	AUD 9004	Lever and link-pick-up	1		
	PJZ 604	Screw-link to jet	1		
45	AUC 1371	Lever-cam	1		
46	AUC 8462	Spring-pick-up lever	1		
47	AUC 1520	Spring-cam lever	1		
48	AUC 1426	Bolt-pivot	1		
49	AUC 8473	Tube-pivot bolt	1		
50	AUC 8474	Washer-spring	1		
51	AUC 5032	Washer-distance	1		

107-D 32

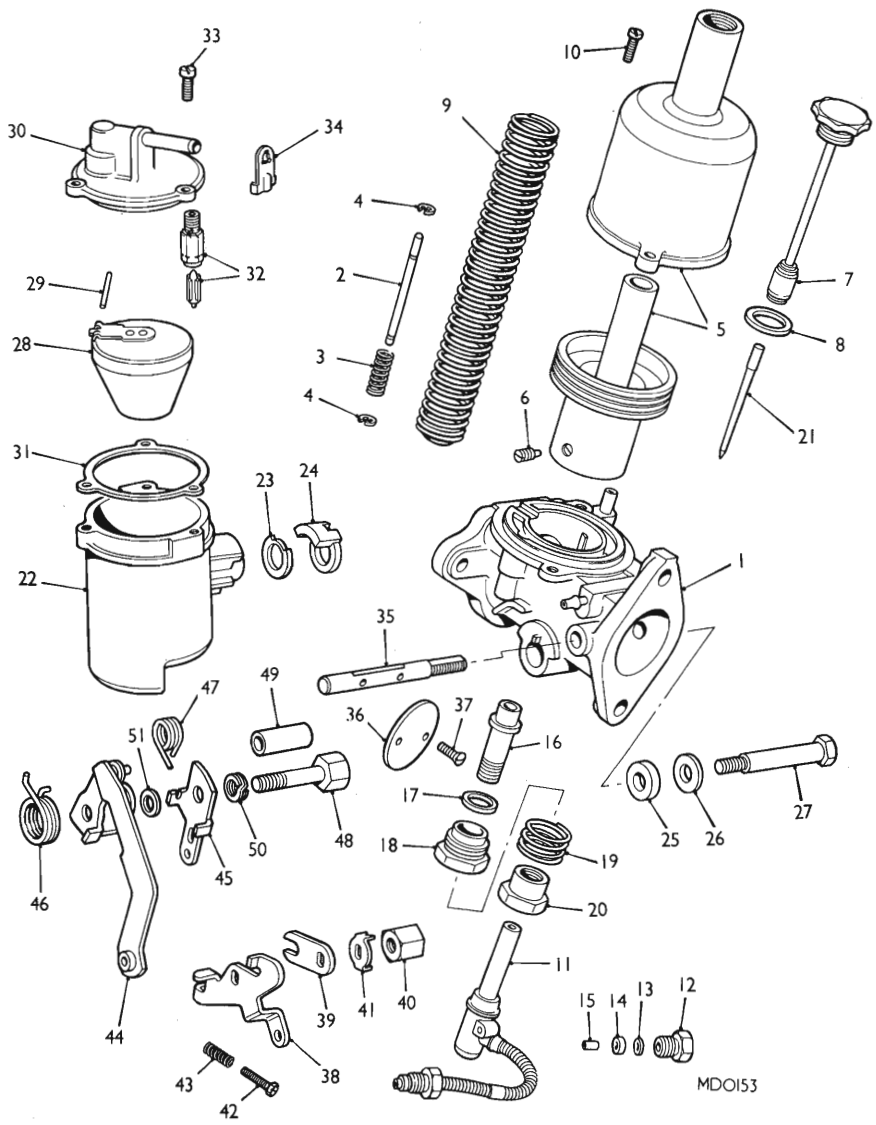

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION,NON VENTILATED TYPE-USA AND CANADA-continued			
	AUC 9461	CARBURETTER ASSEMBLY-REAR	NLA		Use CUD 9032.
1	AUD 9871	Body	NLA		
2	AUC 8464	Pin-piston lifting	1		
3	AUC 1151	Spring-pin	1		
4	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
4	AUD 4150	Circlip-pin	2		
5	AUD 9181	CHAMBER AND PISTON ASSEMBLY	1		
6	AUC 2057	Screw-needle locking	1		
7	AUC 8114	Cap and damper	1		
8	AUC 4900	Washer(fibre)	1		
9	AUC 4587	Spring-piston-Blue	1		
10	AUC 5156	Screw-chamber to body	2		
11	AUD 9861	JET ASSEMBLY	1		
12	AUD 2129	Nut	1		
13	AUD 2193	Washer	1		
14	AUD 2194	Gland	1		
15	AUD 2195	Ferrule	1		
16	AUD 3101	Bearing-jet	1		
17	AUD 2987	Washer-jet centering	NLA		
18	AUC 2002	Screw-jet locking	1		
19	AUC 2114	Spring-jet locking	1		
	AUD 3235	Tab-locking	NLA		
20	AUD 3193	Screw-jet adjusting	NLA		
21	AUD 1478	Needle-jet-standard(an)	1		
22	AUC 1310	Chamber-float	1		(E)12CD/-/H101 TO 8700
24	AUD 2676	Adaptor	1		
27	AUD 2891	Bolt-float chamber to body	1		
25	AUC 1318	Washer(rubber)	1		
23	AUC 1329	Washer-support	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
32	AUD 9096	Needle and seat	1		
30	AUD 9203	Lid-float chamber	1		
31	AUC 8459	Gasket-lid	1		
33	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		
34	AUC 1215	Plate-baffle	1		
35	AUC 8469	Spindle-throttle	1		
36	AUD 9876	Disc and valve-throttle	1		
37	AUC 1358	Screw-disc	2		
38	AUD 2101	Lever-throttle return	1		
39	AUC 1400	Lever-lost motion	1		
40	AUC 1424	Nut-lever	1		
41	AUC 1206	Washer-tab	1		
42	AUC 8483	Screw-fast idle	1		
43	AUC 2451	Spring-screw	1		
	AUD 3011	Screw-throttle stop	1		
44	AUD 9005	Lever and link-pick-up	1		
	PJZ 604	Screw-link to jet	1		
45	AUC 8456	Lever-cam	1		
46	AUC 1375	Spring-pick-up lever	1		
47	AUC 8463	Spring-cam lever	1		
48	AUC 1426	Bolt-pivot	1		
49	AUC 8473	Tube-pivot bolt	1		
50	AUC 8474	Washer-spring	1		
51	AUC 5032	Washer-distance	1		


107-D 34

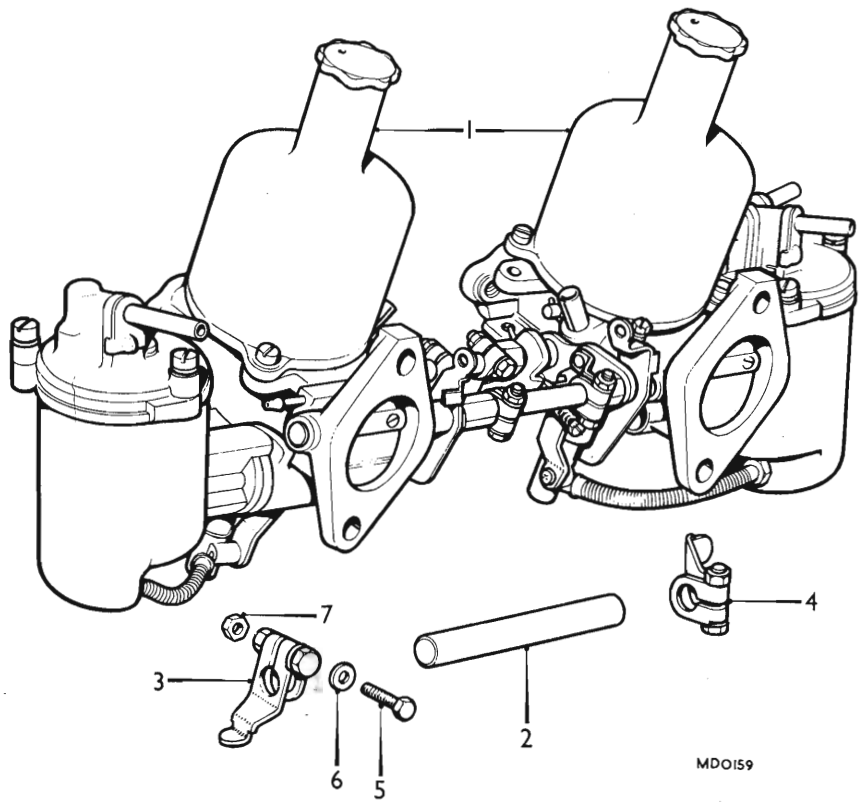

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA			
	AUD 328	CARBURETTER INSTALLATION	NLA	(E)12CD/-/H8701 TO(+) (E)12CF/-/H101 TO(+) (E)12CG/-/H101 TO(+) (E)12CH/-/H101 TO(+)	Use front carburetter CUD 9031 with rear carburetter CUD 9032
1	AUD 404	CARBURETTER INSTALLATION	1 PR	(E)12CJ/Da/H21201 TO(+)	
	AUD 502	CARBURETTER INSTALLATION	NLA	(E)12V/587Z/101 TO(+)	Use front carburetter CUD 9180 with rear carburetter CUD 9181.
2	AUC 1457	Rod-jet connecting	1		
3	AUE 586	LEVER AND PIN ASSEMBLY-FRONT	1		
4	AUE 587	LEVER AND PIN ASSEMBLY-REAR	1		
	AUE 496	LEVER AND PIN ASSEMBLY-FRONT	1		
	AUE 685	LEVER AND PIN ASSEMBLY-REAR	1		
5	AJD 1042	Bolt	4		
6	AUC 8396	Washer-plain	4		
7	AJD 8012 Z	Nut	4		

(+) Change point not available.


107-D 36

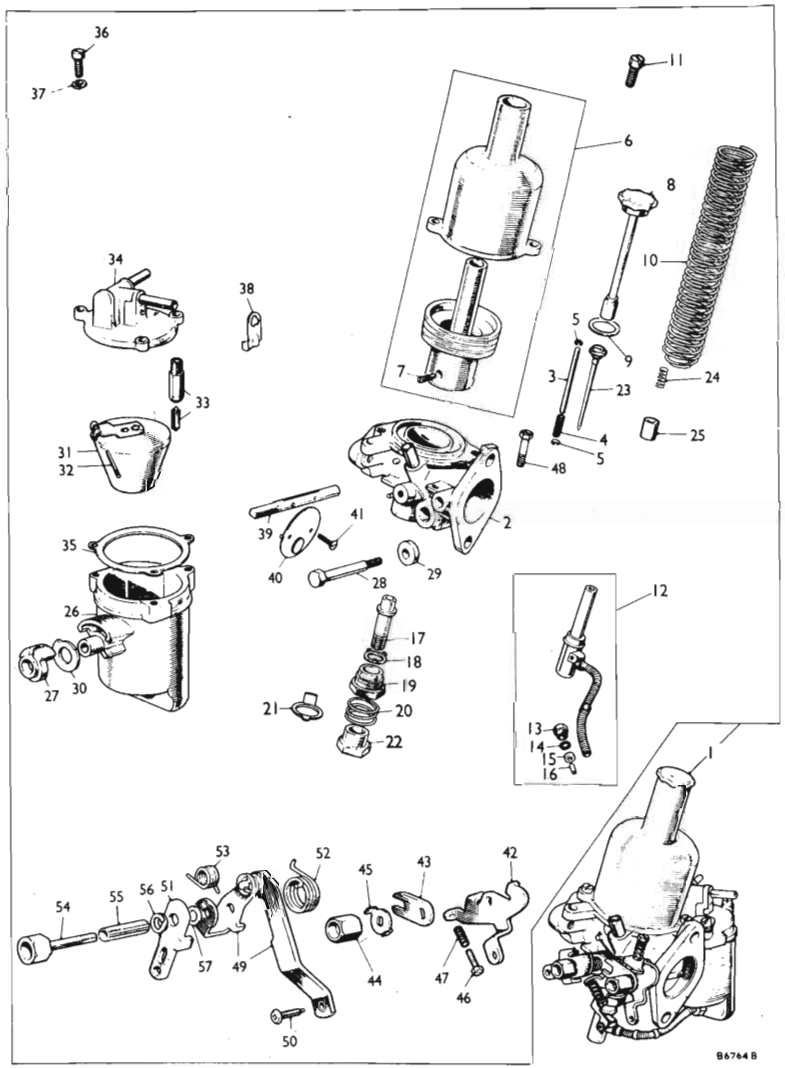

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION,VENTILATED TYPE-USA AND CANADA-continued			
1	CUD 9031	CARBURETTER ASSEMBLY-FRONT	1		
2	CUD 2316	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AID 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4007	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9141	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AJD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
18	AUD 2987	Washer-jet centering	NLA		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUD 3193	Screw-jet adjusting	NLA		
23	CUD 1002	Needle(AAC)	1		(E)12CD/-/H8701
24	AUD 3306	Spring	1		TO(+)
25	AUD 3836	Guide-needle	1		(E)12CF/-/H101 TO(+)
26	AUC 1310	Chamber-float	1		(E)12CG/-/H101 TO(+)
27	AUD 2677	Adaptor	1		(E)12CH/-/H101 TO(+)
28	AUD 2891	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9096	Needle and seat	1		
34	AUD 9255	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
38	AUC 1215	Plate-baffle	1		
39	AUC 8469	Spindle-throttle	1		
40	AUD 9876	Disc and valve-throttle	1		
41	AUC 1358	Screw-disc	2		
42	AUC 1145	Lever-throttle return	1		
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	AUD 9004	Lever and link-pick-up	1		
50	PJZ 604	Screw-link to jet	1		
51	AUC 1371	Lever-cam	1		
52	AUC 8462	Spring-pick-up lever	1		
53	AUC 1520	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	1		
55	AUC 8473	Tube-pivot bolt	1		
56	AUC 8474	Washer-spring	1		
57	AUC 5032	Washer-distance	1		

(+) Change point not available.

107-D 38

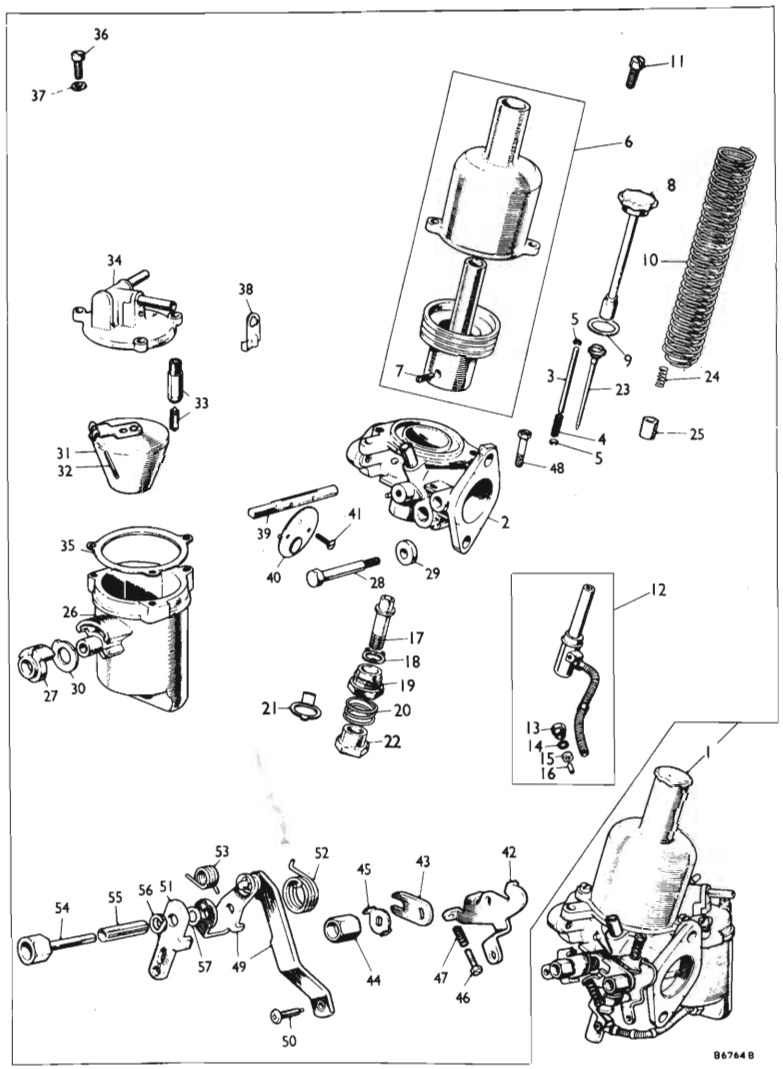


CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	CUD 9081	CARBURETTER ASSEMBLY-FRONT	1PR		
2	CUD 2316	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER/PISTON ASSEMBLY	1		
7	AUD 4007	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9860	JET ASSEMBLY	1		
13	AUD 2129	nUT	1		
14	AJD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUD 3193	Screw-jet adjusting	NLA		
23	CUD 1002	Needle(AAC)	1	(E)12CJ/Da/H21201 TO(+)	
24	AUD 3306	Spring	1		
25	AUD 3836	Guide-needle	1		
26	AUC 1310	Chamber-float	1		
27	AUD 2677	Adaptor	1		
28	AUD 2891	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9096	Needle and seat	1		
34	AUD 9207	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
38	AUC 1215	Plate-baffle	1		
39	AUC 8469	Spindle-throttle	1		
40	AUD 9876	Disc and valve-throttle	1		
41	AUC 1358	Screw-disc	2		
42	AUC 1145	Lever-throttle return	1		
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	CUD 2686	Lever and link-pick-up	1		
50	PJZ 604	Screw	1		
51	AUD 3287	Lever-cam	1		
52	AUC 8467	Spring-pick-up lever	1		
53	AUD 2431	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	2		
55	AUC 8473	Tube-pivot bolt	2		
	AUD 2430	Tube-outer	2		
57	AUD 2433	Washer-distance	2		
	AUD 2429	Washer-skid	2		

(+) Change point not available

107-D 40

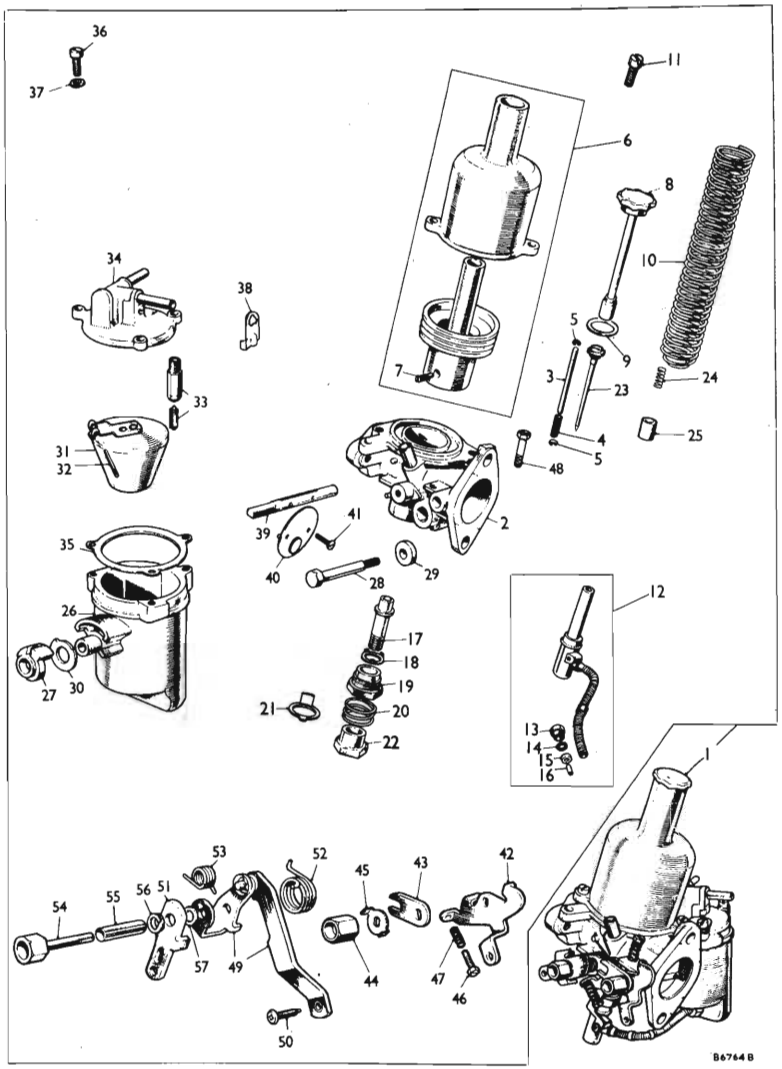


107-D41

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued			
1	CUD 9180	CARBURETTER ASSEMBLY-FRONT	1	(E)12V/587Z/101 TO(+)	
1	CUD 9236	CARBURETTER ASSEMBLY-FRONT	1	(E)12V/671Z/101 ON	
2	AUD 9990	Body	NLA		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 3308	Screrw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1	(E)12V/587Z/101 TO(+)	
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9141	JET ASSEMBLY	1		
13	AUD 2129	Nut	1	(E)12V/671Z/101 ON	
14	AJD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUC 8461	Screw-jet adjusting	1		
23	CUD 1017	Needle(AAT)	1	(E)12V/587Z/101 TO(+)	
23	CUD 1026	Needle(ABC)	1	(E)12V/587Z/101 ON	

(+) Change point not available


107-D 42

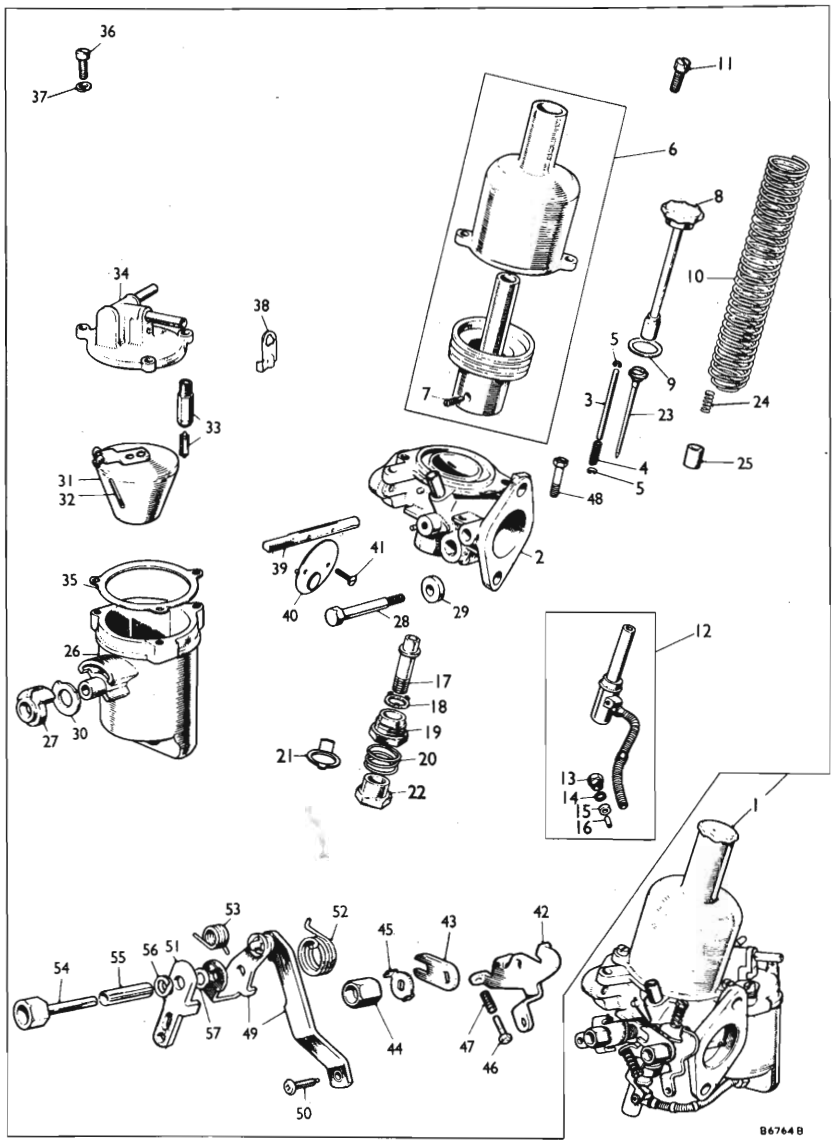

107—D42·O 1

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued			
24	AUD 3306	Spring	1		
25	AUD 3836	Guide-needle	1		
26	AUC 1310	Chamber-float	1		
27	AUD 2677	Adaptor	1		
28	AUD 2891	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9095	Needle and seat	1		
34	AUD 9207	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
39	AUC 8469	Spindle-throttle	1		
40	CUD 2799	Disc and valve-throttle	1		(E)12V/587Z/101
41	AUC 1358	Screw-disc	2		TO(+)
42	AUC 1145	Lever-throttle return	1		(E)12V/671Z/101 ON
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	CUD 2686	Lever and link-pick-up	1		
50	PJZ 604	Screw	1		
51	AUD 3287	Lever-cam	1		
52	AUC 8462	Spring-pick-up lever	1		
53	AUD 2431	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	2		
55	AUC 8473	Tube-pivot bolt	2		
	AUD 2430	Tube-outer	2		
57	AUD 2433	Washer-distance	2		
	AUD 2429	Washer-skid	2		

(+) Change point not available

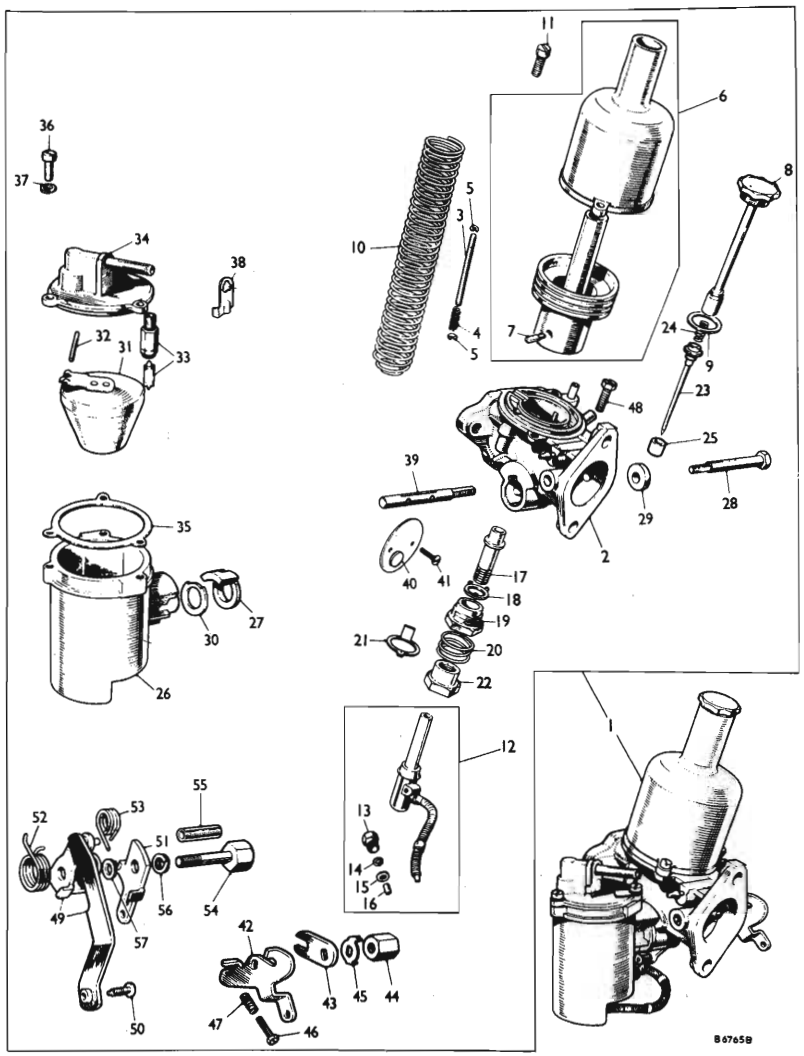


107-D43

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued			
1	CUD 9032	CARBURETTER ASSEMBLY-REAR	1		
2	CUD 2318	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4007	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9142	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing-jet	1		
18	AUD 2987	Washer-jet centering	NLA		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUD 3193	Screw-jet adjusting	NLA		(E)12CD/-/H8701
23	CUD 1002	Needle assembly(AAC)	1		TO(+)
24	AUD 3306	Spring	1		(E)12CF/-/H101 TO(+)
25	AUD 3836	Guide-needle	1		(E)12CG/-/H101 TO(+)
26	AUC 1310	Chamber-float	1		(E)12CH/-/H101 TO(+)
27	AUD 2676	Adaptor	1		
28	AUD 2891	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9096	Needle and seat	1		
34	AUD 9203	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
38	AUC 1215	Plate-baffle	1		
39	AUC 8469	Spindle-throttle	1		
40	AUD 9876	Disc and valve-throttle	1		
41	AUC 1358	Screw-disc	2		
42	AUD 2101	Lever-throttle return	1		
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	AUD 9005	Lever and link-pick-up	1		
50	PJZ 604	Screw-link to jet	1		
51	AUC 8456	Lever-cam	1		
52	AUC 1375	Spring-pick-up lever	1		
53	AUC 8463	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	1		
55	AUC 8473	Tube-pivot bolt	1		
56	AUC 8474	Washer-spring	1		
57	AUC 5032	Washer-distance	1		

(+) Change point not available


107-D 44

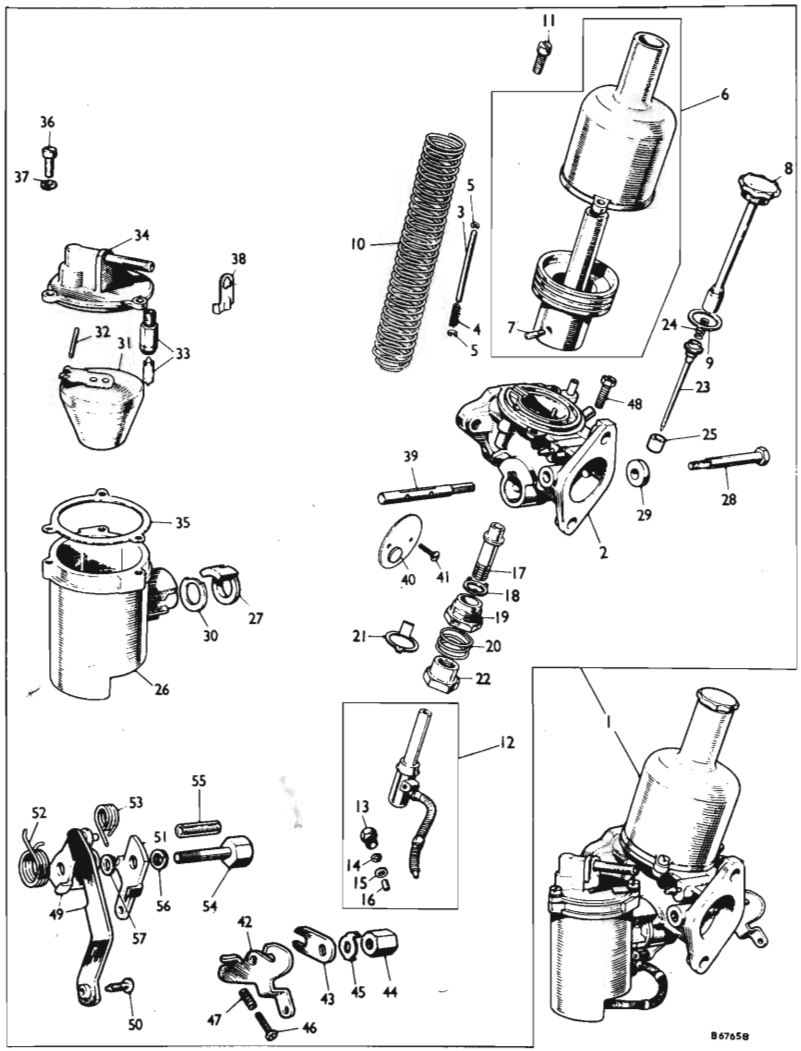

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE.USA AND CANADA-continued.			
1	CUD 9082	CARBURETTER ASSEMBLY-REAR	1		
2	CUD 2318	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4007	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1		
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9142	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUD 3193	Screw-jet adjusting	NLA		
23	CUD 1002	Needle(AAC)	1	(E)12CJ/Da/H21201 TO(+)	
24	AUD 3306	Spring	1		
25	AUD 3836	Guide-needle	1		
26	AUC 1310	Chamber-float	1		
27	AUD 2676	Adaptor	1		
28	AUD 289	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9096	Needle and seat	1		
34	AUD 9651	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
38	AUC 1215	Plate-baffle	1		
39	AUC 8469	Spindle-throttle	1		
40	AUD 9876	Disc and valve-throttle	1		
41	AUC 1358	Screw-disc	2		
42	AUD 2101	Lever-throttle return	1		
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	CUD 2687	Lever and link-pick-up	1		
50	PJZ 604	Screw	1		
51	AUC 3288	Lever-cam	1		
52	AUC 1375	Spring-pick-up lever	1		
53	AUD 2432	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	1		
55	AUC 8473	Tube-pivot bolt	1		
	AUD 2430	Tube-outer	2		
57	AUD 2433	Washer-distance	2		
	AUD 2429	Washer-skid	1		

(+)Change point not available.


107-D 46

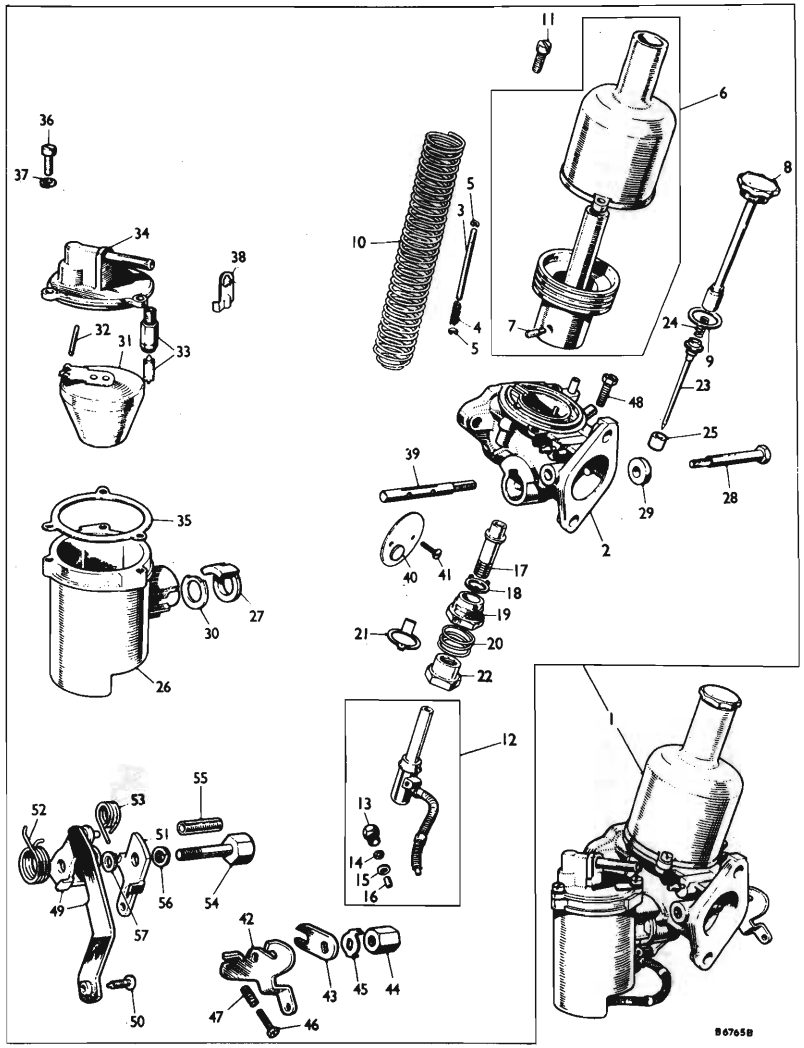

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued			
1	CUD 9181	CARBURETTER ASSEMBLY-REAR	1	(E)12V/587Z/101 TO(+)	
1	CUD 9237	CARBURETTER ASSEMBLY-REAR	1	(E)12V/671Z/101 ON	
2	CUD 2318	Body	1		
3	AUC 8464	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	2		
6	AUD 9998	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 3308	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1	(E)12V/587Z/101 TO(+)	
9	AUC 4900	Washer(fibre)	1		
10	AUC 4587	Spring-piston-Blue	1	(E)12V/671Z/101 ON	
11	AUC 5156	Screw-chamber to body	2		
12	AUD 9142	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3410	Bearing	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUD 3235	Tab-locking	NLA		
22	AUC 8461	Screw-jet adjusting	1		
23	CUD 1017	Needle(AAT)	1	(E)12V/587Z/101 TO(+)	
23	CUD 1026	Needle(ABC)	1	(E)12V/671Z/101 ON	

(+) Change point not available


107-D 48

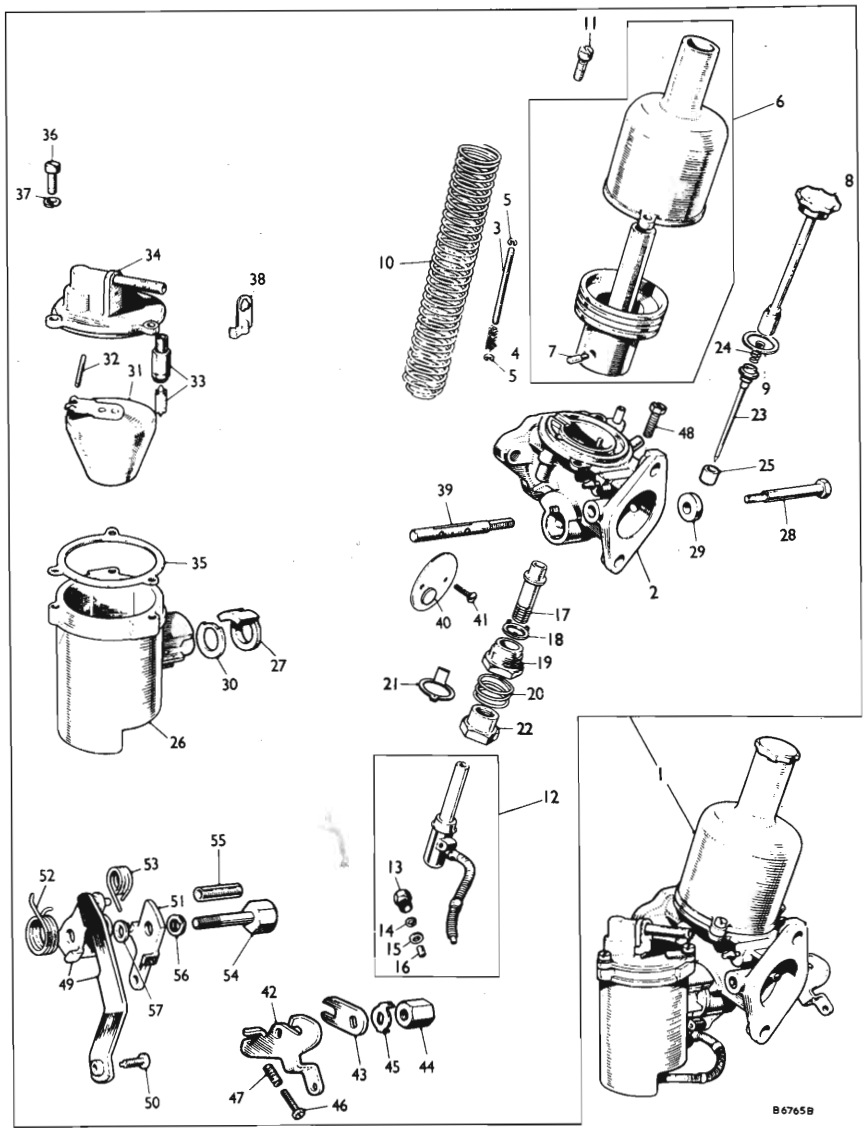

107—D48·O 1

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-VENTILATED TYPE-USA AND CANADA-continued			
24	AUD 3306	Spring	1		
25	AUD 3836	Guide-needle	1		
26	AUC 1310	Chamber-float	1		
27	AUC 2676	Adaptor	1		
28	AUD 289	Bolt-float chamber to body	1		
29	AUC 1318	Washer(rubber)	1		
30	AUC 1329	Washer-support	1		
31	AUD 9904	Float	1		
32	AUC 1152	Pin-hinge	1		
33	AUD 9095	Needle and seat	1		
34	AUD 9651	Lid-float chamber	1		
35	AUC 8459	Gasket-lid	1		
36	AUC 2175	Screw-lid	3		
37	LWZ 303	Washer-spring	3		
39	AUC 8469	Spindle-throttle	1		
40	CUD 2799	Disc and valve-throttle	1		(E)12V/587Z/101
41	AUC 1358	Screw-disc	2		TO(+)
42	AUD 2101	Lever-throttle return	1		(E)12V/671Z/101 ON
43	AUC 1400	Lever-lost motion	1		
44	AUC 1424	Nut-lever	1		
45	AUD 3323	Washer-tab	1		
46	AUC 8483	Screw-fast idle	1		
47	AUC 2451	Spring-screw	1		
48	AUD 3011	Screw-throttle stop	1		
49	CUD 2687	Lever and link-pick-up	1		
50	PJZ 604	Screw	1		
51	AUC 3288	Lever-cam	1		
52	AUC 1375	Spring-pick-up lever	1		
53	AUD 2432	Spring-cam lever	1		
54	AUC 1426	Bolt-pivot	1		
55	AUC 8473	Tube-pivot bolt	1		
	AUD 2430	Tube-outer	2		
57	AUD 2433	Washer-distance	2		
	AUD 2429	Washer-skid	1		


(+) Change point not available

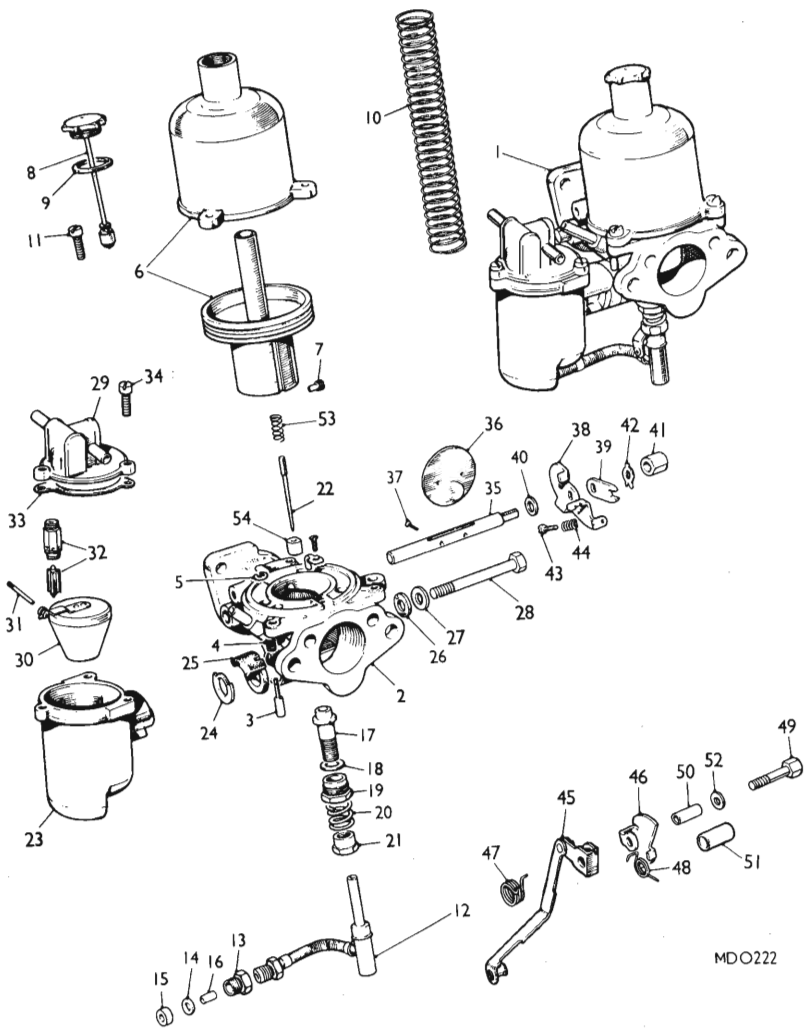

CARBURETTER INSTALLATION-MIDGET 1500,NOT USA AND CANADA.


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	CUD 9334	CARBURETTER ASSEMBLY-FRONT	1		
3	AUC 1249	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip-pin	1		
6	AUD 9988	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4252	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4387	Spring-piston-Red	1		
11	AUC 2175	Screw-chamber to body	3		
12	AUD 9451	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3414	Bearing-jet	1		
18	AUC 8478	Washer-jet bearing(brass)	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	CUD 1041	Needle-jet(ABT)	1		
53	AUD 3306	Spring-needle	1		
54	AUD 4288	Guide-needle	1		
23	AUD 2140	Chamber-float	1		
24	AUC 1329	Washer-support	1		
25	AUC 1316	Adaptor	1		
26	AUC 1318	Washer(rubber)	1		
28	AUD 3017	Bolt-float chamber fixing	1		
29	AUD 9257	Lid	1		
30	AUD 9904	Float	1		
31	AUC 1152	Pin-hinge	1		
32	AUD 9095	Needle and seat	1		
33	AUC 8459	Gasket-lid	1		
34	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		

107-D 48.04

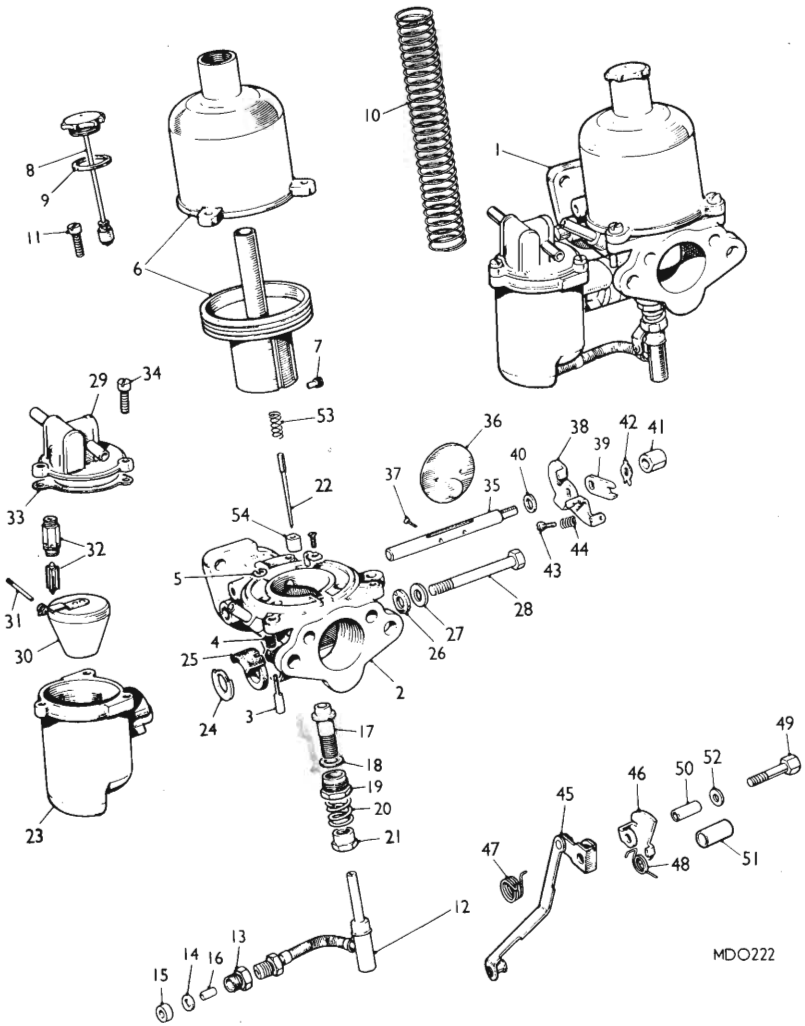


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-MIDGET 1500,NOT USA AND CANADA-continued.			
35	AUC 1302	Spindle-throttle	1		
36	CUD 3070	Disc-throttle	1		
37	AUC 1358	Screw-disc	2		
38	AUD 4862	Lever-throttle return	1		
39	AUD 4939	Lever-lost motion	1		
40	AUC 2625	Washer-spacing	1		
41	AUC 1424	Nut-lever	1		
42	AUD 3323	Washer-tab	1		
43	AUD 4886	Screw-fast-idle	1		
	NH 604041	Nut-fast-idle	1		
44	AUC 2451	Spring-screw	1		
43	AUC 8483	Screw-throttle stop	1		
	AJD 8014 Z	Nut-throttle stop	1		
45	CUD 3073	Lever and link-pick-up	1		
	PTZ 605	Screw-link to jet	1		
46	AUD 4861	Lever-cam	1		
47	AUC 1375	Spring-pick-up lever	1		
48	AUC 2432	Spring-cam lever	1		
49	AUC 1426	Bolt-pivot	1		
50	AUC 8473	Tube-pivot bolt	1		
51	AUD 2430	Tube-outer	1		
52	AUD 2433	Washer-distance	1		
52	AUD 2429	Washer-skid	2		

107-D 48.06

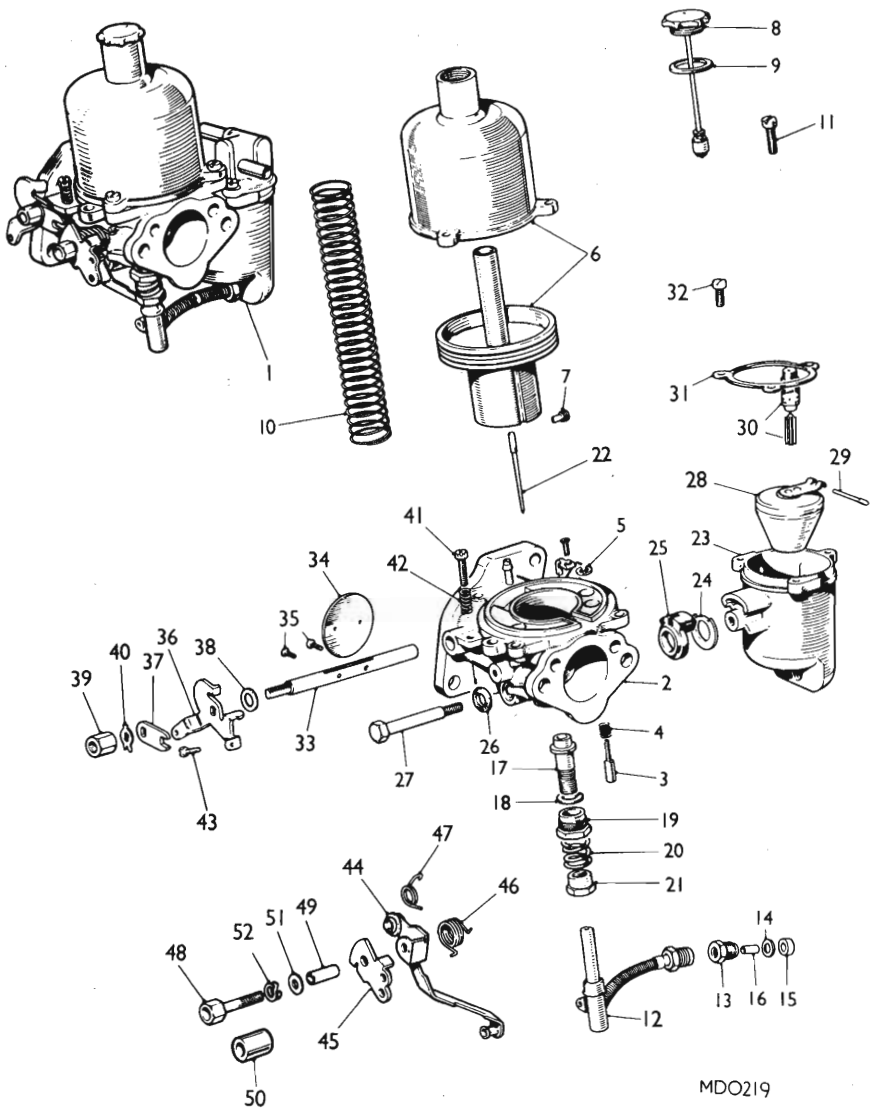


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-MIDGET 1500,NOT USA AND CANADA-continued.			
1	CUD 9335	CARBURETTER ASSEMBLY-REAR	1		
3	AUC 1249	Pin-piston lifting	1		
4	AUC 1151	Spring-pin	1		
5	AUC 1250	Circlip-pin	NLA		Use AUD 4150.
5	AUD 4150	Circlip	1		
6	AUD 9988	CHAMBER AND PISTON ASSEMBLY	1		
7	AUD 4252	Screw-needle locking	1		
8	AUC 8114	Cap and damper	1		
9	AUC 4900	Washer(fibre)	1		
10	AUC 4387	Spring-piston-Red	1		
11	AUC 2175	Screw-chamber to body	3		
12	AUD 9450	JET ASSEMBLY	1		
13	AUD 2129	Nut	1		
14	AUD 2193	Washer	1		
15	AUD 2194	Gland	1		
16	AUD 2195	Ferrule	1		
17	AUD 3414	Bearing-jet	1		
18	AUC 8478	Washer-jet bearing(brass)	1		
19	AUC 2002	Screw-jet locking	1		
20	AUC 2114	Spring-jet locking	1		
21	AUC 8461	Screw-jet adjusting	1		
22	CUD 1041	Needle-jet(ABT)	1		
53	AUD 3306	Spring-needle	1		
54	AUD 4288	Guide-needle	1		
23	AUD 2140	Chamber-float	1		
24	AUC 1329	Washer-support	1		
25	AUC 1366	Adaptor	1		
26	AUC 1318	Washer(rubber)	1		
27	AUD 3017	Bolt-float chamber fixing	1		
	AUD 9254	Lid	1		
28	AUD 9904	Float	1		
29	AUC 1152	Pin-hinge	1		
30	AUD 9095	Needle and seat	1		
31	AUC 8459	Gasket-lid	1		
32	AUC 2175	Screw-lid	3		
	LWZ 303	Washer-spring	3		

107-D 48.08

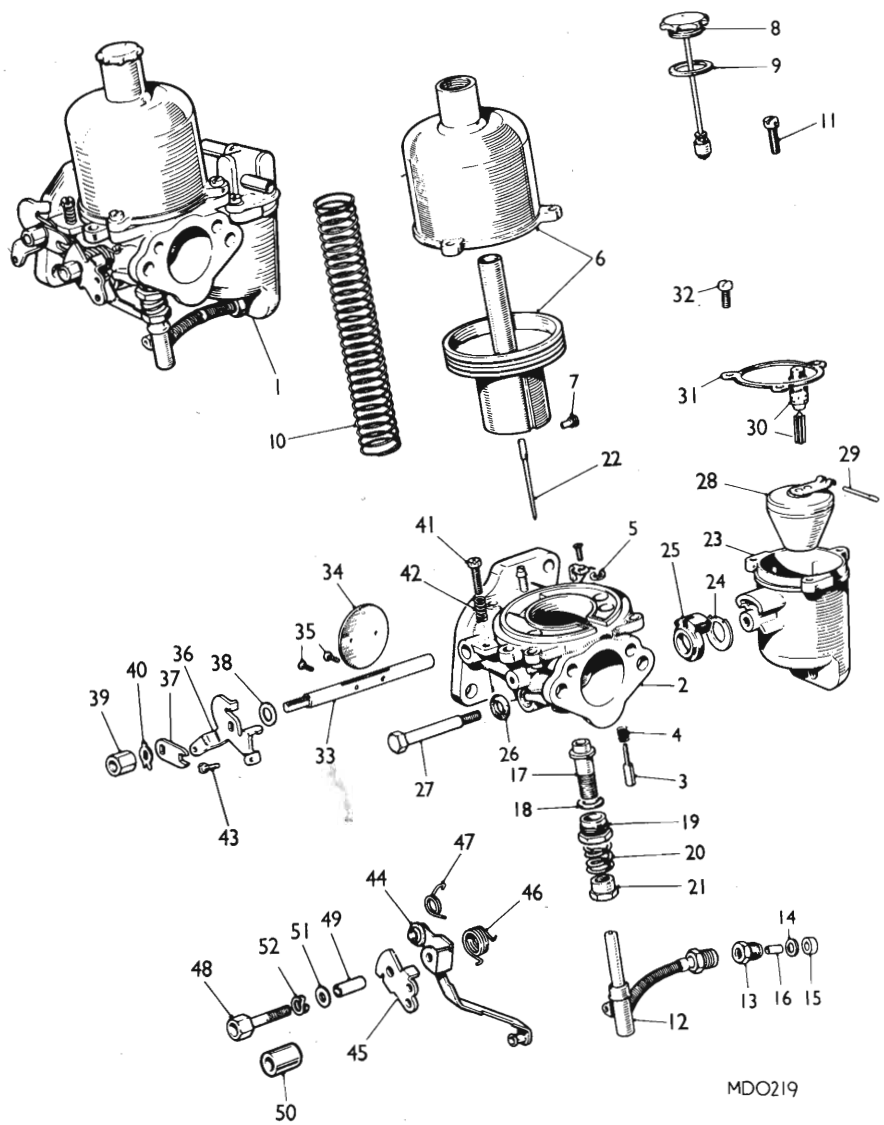


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER INSTALLATION-MIDGET 1500,NOT USA AND CANADA-continued.			
33	AUC 1302	Spindle-throttle	1		
34	CUD 3070	Disc-throttle	1		
35	AUC 1358	Screw-disc	2		
36	AUD 4863	Lever-throttle return	1		
37	AUD 4939	Lever-lost motion	1		
38	AUC 2625	Washer-spacing	1		
39	AUC 1424	Nut-lever	1		
40	AUD 3323	Washer-tab	1		
41	AUD 4886	Screw-fast-idle	1		
	NH 604041	Nut-fast-idle	1		
42	AUC 2451	Spring-screw	1		
43	AUC 8483	Screw-throttle stop	1		
	AJD 8014 Z	Nut-throttle stop	1		
44	CUD 3072	Lever and link-pick-up	1		
	PTZ 605	Screw-link to jet	1		
45	AUD 4860	Lever-cam	1		
46	AUC 8462	Spring-pick-up lever	1		
47	AUD 2431	Spring-cam lever	1		
48	AUC 1426	Bolt-pivot	1		
49	AUC 8473	Tube-pivot bolt	1		
50	AUD 2430	Tube-outer	1		
51	AUD 2433	Washer-distance	1		
52	AUD 2429	Washer-skid	2		

107-D 48.10

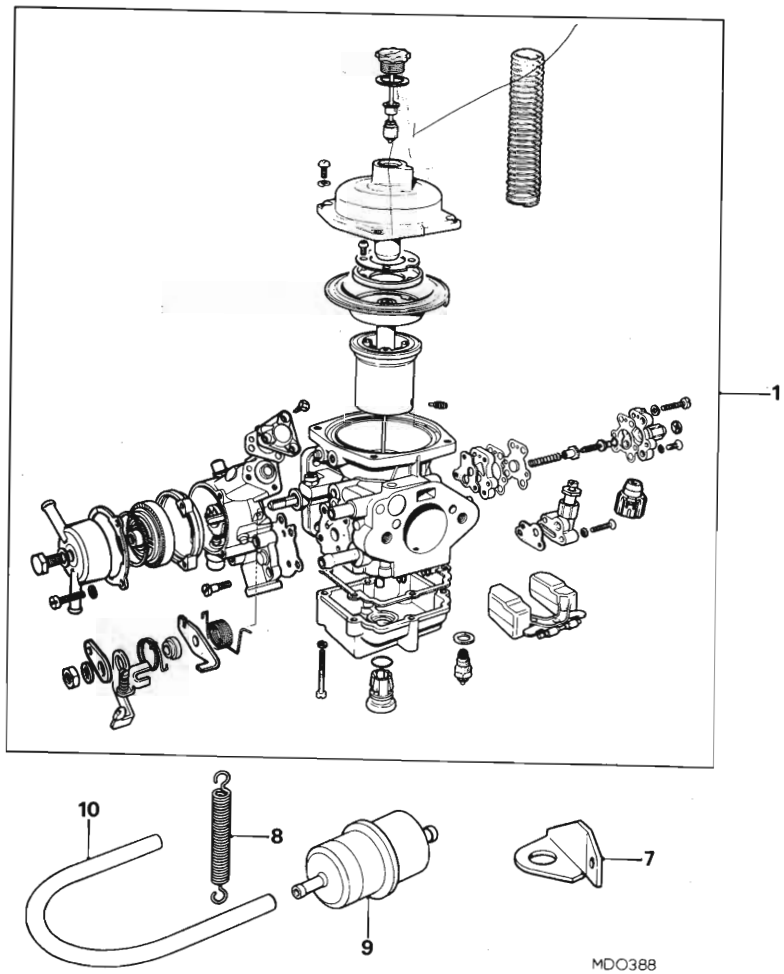

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CARBURETTER ASSEMBLY-MIDGET 1500-USA AND CANADA.			
1	CHA 327	CARBURETTER ASSEMBLY	1		Federal.TO 1977
1	CHA 511	CARBURETTER ASSEMBLY	1		California TO 1977.
1	RKC 3169	CARBURETTER ASSY	1		Federal 1977 ON
	RKC 3170	CARBURETTER ASSY	1		California 1977 ON.
		KIT-CARBURETTER			
	BHM 1075	Needle and valve washer	1		
	BHM 1076	Gasket and sealing washer	1		Federal
	BHM 1080	Gasket and sealing washer	1		California
	BHM 1081	Gasket and sealing washer			
	BHM 1077	Emission(12,000 miles serivce)	1		
	BHM 1078	Emission(24,000 miles service)	1		

107-D 48.12

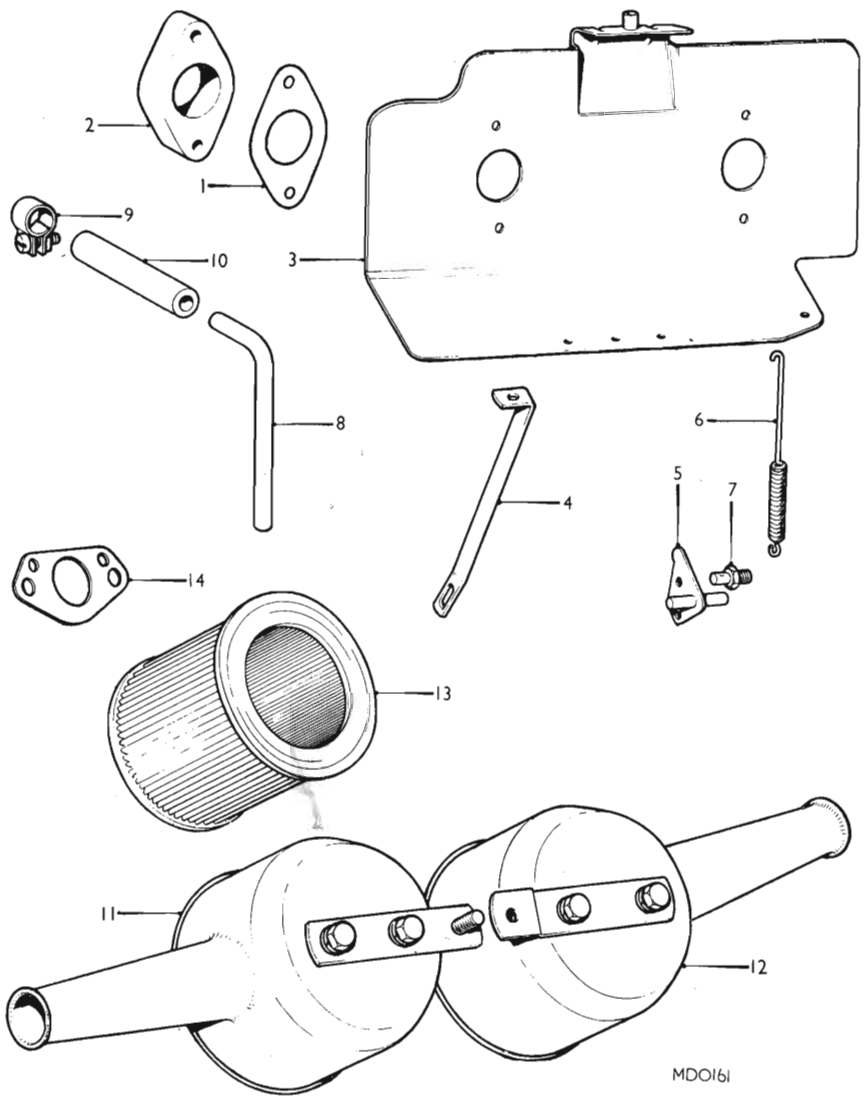


CARBURETTER FITTINGS-HEAT SHIELD-AIR CLEANER-EXCEPT MIDGET 1500.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	1G 2624	Gasket-carburetter and heat shield	6		
2	AEA 586	Piece-distance-insulating	2		
	FNZ 106	Nut	4		
	PWZ 206	Washer-plain	4		
3	12G 1460	Shield-heat	1		
4	AEG 558	Clip-rear	1		
	HZS 405	Screw-clip to shield	2		
	LWN 204	Washer-spring	2		
	NH 604041	Nut	2		
	HZS 407	Screw-clip to front cover	1		
	PWZ 104	Washer-plain	1		
	NH 604041	Nut	1		
	HZS 515	Screw-clip to rear mounting plate	1		
	PWZ 105	Washer-plain	1		
	LWZ 305	Washer-spring	1		
	LNZ 205	Nut	1		
5	AEA 597	Lever-throttle	1		
6	AEA 602	Spring-throttle return	1		
7	ACC 5062	Pin-clamp	1		
	PWZ 104	Washer-plain	1		
	NH 604041	Nut	1		
8	AHA 9606	Pipe-overflow	2		
9	88G 308	Clip-overflow pipes to carburetter	2		
10	AHH 9950	Connection-overflow pipe to carburetter	2		
9	88G 308	Clip-connection	4		(E)12CJ/Da/H21201
	PCR 407	Clip-pipe to bracket	1		TO(+)
	PMZ 308	Screw clip	1		(E)12V/587Z/101
	PWZ 203	Washer-plain	1		TO(+)
	LWZ 203	Washer-spring	1		(E)12V/671Z/101 ON
11	AHA 8419	CLEANER ASSEMBLY-AIR-FRONT	1		
12	AHA 8420	CLEANER ASSEMBLY-AIR-REAR	1		
13	GFE 1004	Element-air cleaner	2		
	HCZ 536	Bolt-cleaner to carburetter	NLA		
	PWZ 105	Washer-plain	4		
	WL 600051	Washer-spring	4		
14	ACA 8014	Gasket-cleaner to carburetter	2		
	LNZ 205	Nut-front cleaner strap to rear cleaner strap	1		
	PWZ 205	Washer-plain	1		
	WL 600051	Washer-spring	1		


(+) Change point not available.

107-D 50

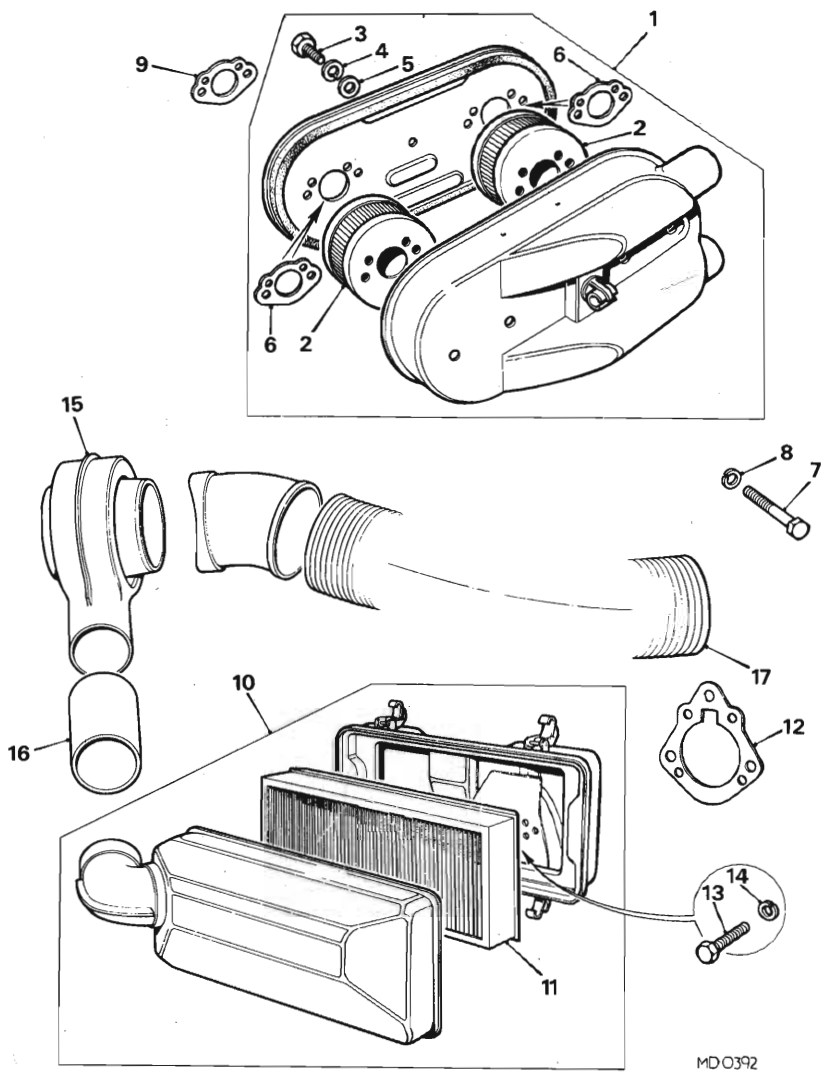

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		AIR CLEANER AND SILENCER-MIDGET 1500.			
1	TKC 1570	CLEANER ASSEMBLY-AIR	1		
2	GFE 1063	Element-air cleaner	2		
3	SH 604041	Bolt-base plate to body	1		
4	WL 600041	Washer-spring	1		
5	WA 106041	Washer-plain	1		
6	102488	Gasket-element to base plate	2		
7	HB 867	Bolt-air cleaner to carburetter	4		
8	WL 600051	Washer-spring	4		
9	102488	Gasket-air cleaner to carburetter	2		
10	CHA 295	CLEANER ASSEMBLY-AIR TO 1975	1		
10	CHA 554	CLEANER ASSEMBLY-AIR-1976 ON	1		
11	GFE 1060	Element	1		
12	148006	Gasket-air cleaner to carburetter	1		
13	SH 505071	Screw	2		
14	WL 600051	Washer	2		USA and Canada
15	BHH 1163	Compensator-air temperature	NLA		
16	CHA 379	Connection-compensator to air cleaner	1		
17	CHA 491	Connection-pre-heater to air temperature control device	1		Federal.

107-D 50.02

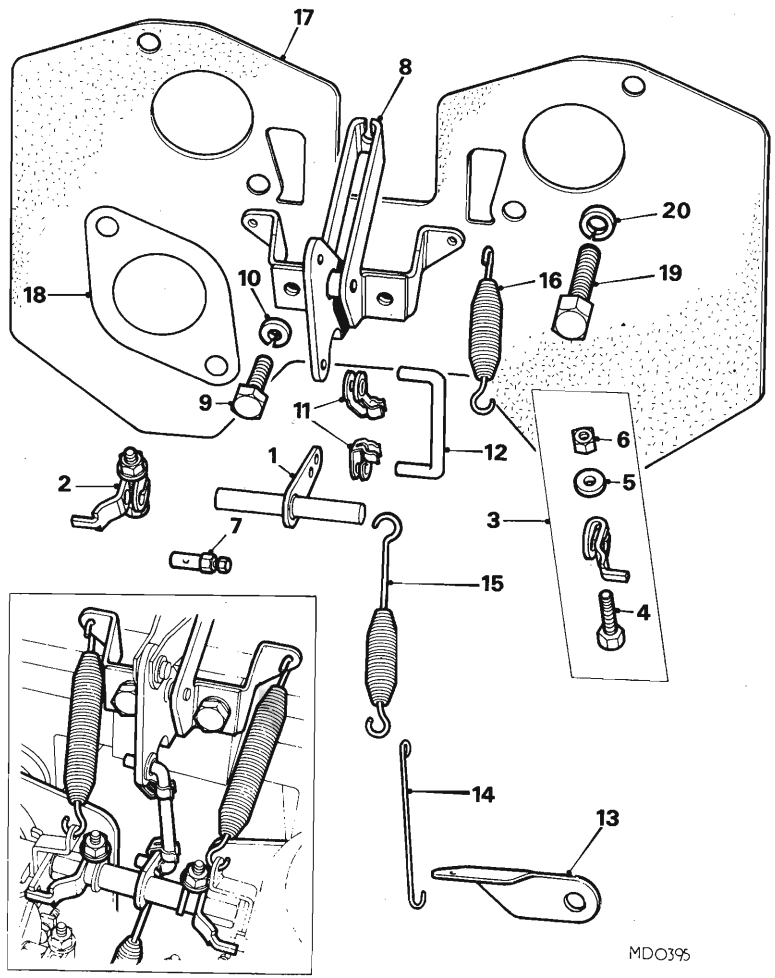



Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS

CARBURETTER FITTINGS-HEAD SHIELD-MIDGET 1500-NOT USA AND CANADA

1	UKC 3009	Rod and lever connecting	1
2	AUE 586	LEVER AND PIN ASSEMBLY-REAR	1
3	AUE 587	LEVER AND PIN ASSEMBLY-FRONT	1
4	AJD 1042	Bolt	2
5	AUC 8396	Washer-plain	2
6	AJD 8012 Z	Nut	2
7	AUE 34	Pin-pivot-choke inner cable	1
8	UKC 5374	Linkage-throttle	1
9	SH 504051	Screw	2
10	WL 600041	Washer-spring	2
11	153957	Clip-bellcrank	2
12	UKC 3272	Link-bellcrank to throttle lever	1
13	UKC 3281	Bracket-anchor-spring link	1
14	143747	Link-main throttle spring	1
15	153959	Spring-main-throttle return	1
16	145197	Spring-throttle return	2
17	CHA 501	Heatshield	1
18	UKC 2992	Gasket-carburetter	4
19	SH 505091	Screw-carburetter to manifold	4
20	WL 600051	Washer-spring	4

107-D 50.04

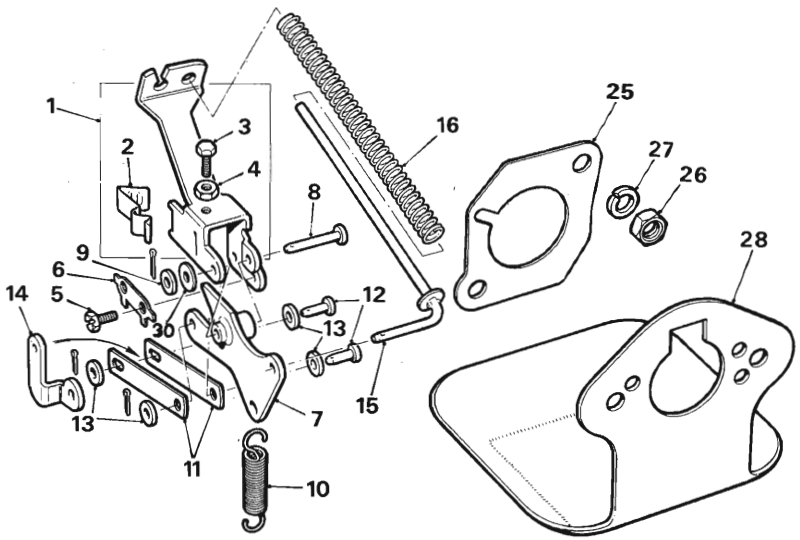

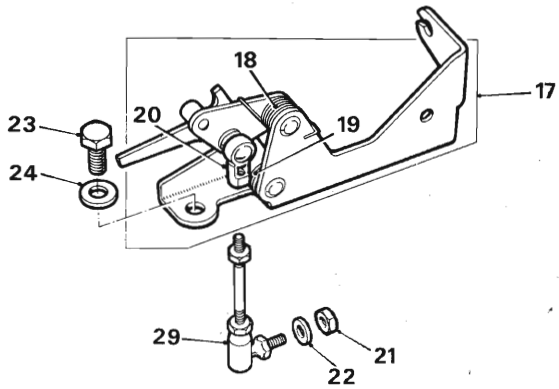


MD0397

CARBURETTER FITTINGS-MIDGET 1500 USA AND CANADA.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
1	UKC 673	BRACKET ASSEMBLY-CABLE	1		
2	12B 2492	Clip-choke cable	1		
3	HU 504	Screw-adjusting	1		
4	HN 2005	Nut	1		
5	518528	Screw-bracket to carburetter	2		
6	518529	Washer-tab	1		
7	154117	Bellcrank	1		
8	PJ 8514	Pin-pivot	1		Federal TO 1977
9	WP 5	Washer-plain	1		
10	UKC 4620	Spring-return-bellcrank	1		
11	156572	Link-bellcrank to throttle lever	2		
12	PJ 8504	Pin-pivot	2		
13	WP 5	Washer-plain	4		
14	153417	Lever-throttle	1		
15	159123	Rod-spring retaining	1		
16	131368	Spring-return	1		
17	TKC 1832	BRACKET AND THROTTLE LEVER ASSEMBLY	1		
18	UKC 4222	Spring	1		
19	UKC 4223	Spring	1		
20	UKC 4131	Ball-end	1		
21	HN 2005	Nut	1		California Federal 1977 ON.
22	WL 205	Washer	1		
23	BH 505041	Bolt	2		
29	UKC 4415	ROD ASSY-LINK	1		
24	WA 108051	Washer	2		
25	UKC 490	Gasket-carburetter	1		
26	NH 605041	Nut-carburetter to manifold	2		
27	WL 600051	Washer-spring	2		
28	TKC 1990	Heatshield	1		

107-D 50.06

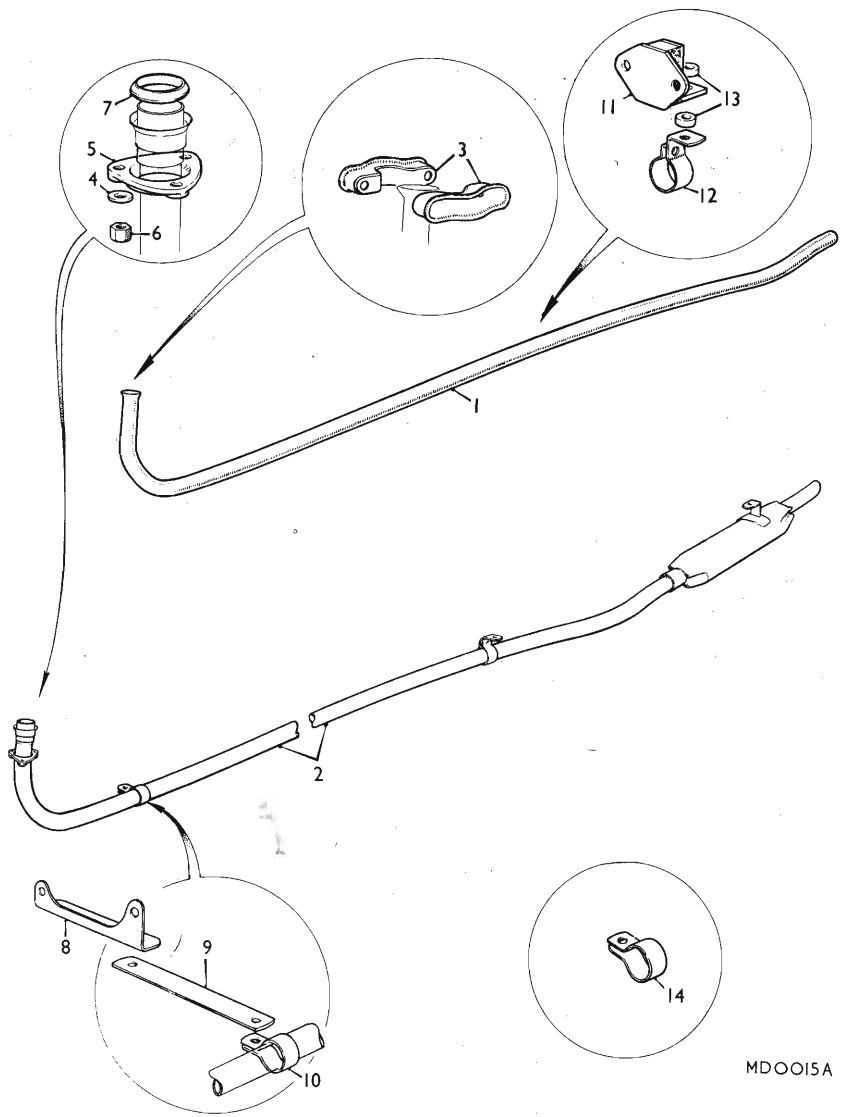


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		EXHAUST SYSTEM-EXCEPT 1500			
1	GEX 1306	Pipe-exhaust	1	Use prior to GEX 142	(E)10CC,12CC, 12CE,12V/586, 12V/588. 12CD.
	GEX 142	Exhaust system-complete	1	(C)G-AN5-139137 ON	
1	AHA 8688	Pipe-exhaust	1	Use prior to complete exhaust system ARA 333	
2	ARA 333	Exhaust system-complete	1	(E)12CD/Da/H101 TO(+)	
2	ARA 384	Exhaust system-complete (C$)	1	(E)12CJ/Da/H21201 TO(+) (E)12V/587Z/L101 TO(+)	
2	ARC 90	Exhaust system-complete (C$)	1	(E)12V/671Z/L101 TO (C)G-AN5-139772	
	GEX 142	Exhaust system-complete (C$)	1	(C)G-AN5-139773 TO 154100	
3	18G 8584	Clamp-pipe to manifold	2		Use when exhaust MANIFOLD 12G 420 IS FITTED.
	HZS 518	Screw	2		
4	2K 5806	Washer-plain	4		
	BNN 105	Nut	2		
	HBZ 510	Bolt	1		Use when exhaust MANIFOLD 12G 1581 IS FITTED.
	LWZ 305	Washer-spring	1		
4	12A 1211	Washer-special	2		
6	AHH 8382	Nut-special	3		
7	GEX 7193	Joint-exhaust down-pipe $ (C$)	1		
	WL 600051	Washer-spring	3		
8	GEX 7153	Bracket-pipe mounting	1		
9	GEX 7154	Strap-bracket to clip	1		
10	GEX 7072	Clip-pipe $	1		
	HZS 506	Screw-bracket to strap	1		
	HZS 507	Screw-strap to clip	1		
	PWZ 105	Washer-plain	1		
	LWZ 205	Washer-spring	2		
	NH 605041	Nut	2		
11	GEX 7155	Mounting-pipe $	1		
	HZS 505	Screw	2		
	WL 600051	Washer-spring	2		
12	GEX 7073	Clip-pipe $	1		
	HZS 509	Screw	1		
13	GEX 7250	Washer-insulation	2		
	LNZ 105	Locknut	1		
	HZS 407	Screw-clip to pipe	1		
	LWZ 204	Washer-spring	1		
	NH 604041	Nut	1		
14	GEX 7074	Clip-pipe to silencer	1		
	HZS 510	Screw	1		
	LWZ 305	Washer-spring	1		
4	12A 1211	Washer-special	2		
	NH 605041	Nut	1		


NOTE:-
(C$) These parts comply with Californian State regulations when fitted on vehicles to which this list applies.

$ This item is subject to safety regulations.(+)Change point not available.

107-D 52

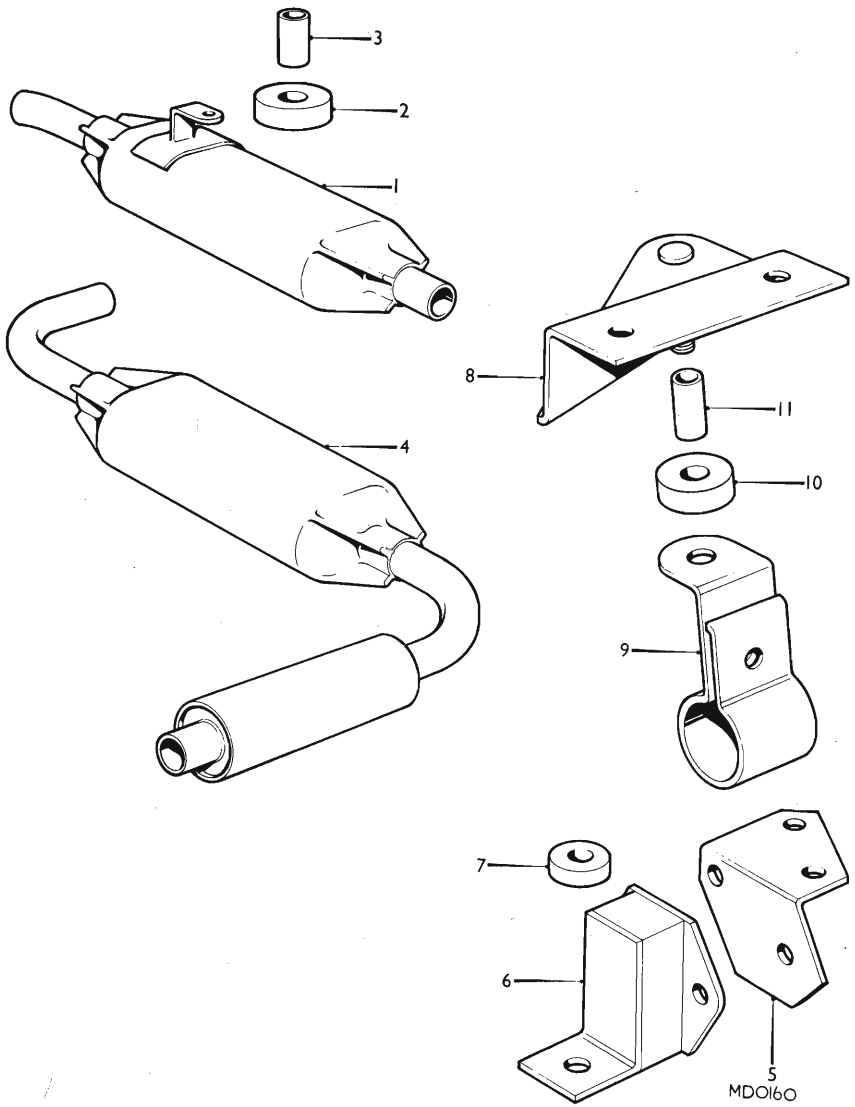


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		EXHAUST SYSTEM-EXCEPT 1500-continued.			
1	GEX 3365	Silencer	1	Use prior to GEX 3369	Except Europe.
2	GEX 7151	Bush-silencer support(rubber)	2		
3	GEX 7152	Spacer-bush	1		
	PWZ 205	Washer-plain	1		
	LNZ 205	Locknut fixing silencer	1		
4	ARA 281	Silencer	1		Europe.
	GEX 3369	Silencer	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 139136	Except USA and Canada.
	HZS 506	Screw-rear exhaust mounting	4	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 ON	
	PWZ 105	Washer-plain	4		
	WL 600051	Washer-spring	4		
5	GEX 7168	Bracket-pipe-support-LH	1	Use prior to GEX 7364 (C)G-AN5-138801 ON	
	GEX 7364	Bracket-pipe-support-LH	1		
6	GEX 7155	Mounting-pipe-LH	1		
	HZS 505	Screw	2		
	WL 600051	Washer-spring	2		
	FNZ 105	Nut	2		
	HBZ 512	Bolt-clip to mounting	1		
7	GEX 7250	Washer-insulation	2		
	WL 600051	Washer-spring	1		
	FNZ 105	Nut	1		
8	GEX 7169	Bracket-pipe-support-RH	1	Use prior to GEX 7365 (C)G-AN5-138801 ON	
	GEX 7365	Bracket-pipe-support-RH	1		
9	GEX 7170	Clip-pipe-RH	1		
	HZS 506	Screw-clip to pipe	1		
	WL 600051	Washer-spring	1		
	FNZ 105	Nut	1		
10	GEX 7151	Bush-pipe-support-RH(rubber)	2		
11	GEX 7166	Spacer-bush	1		
	LNZ 105	Locknut	1		

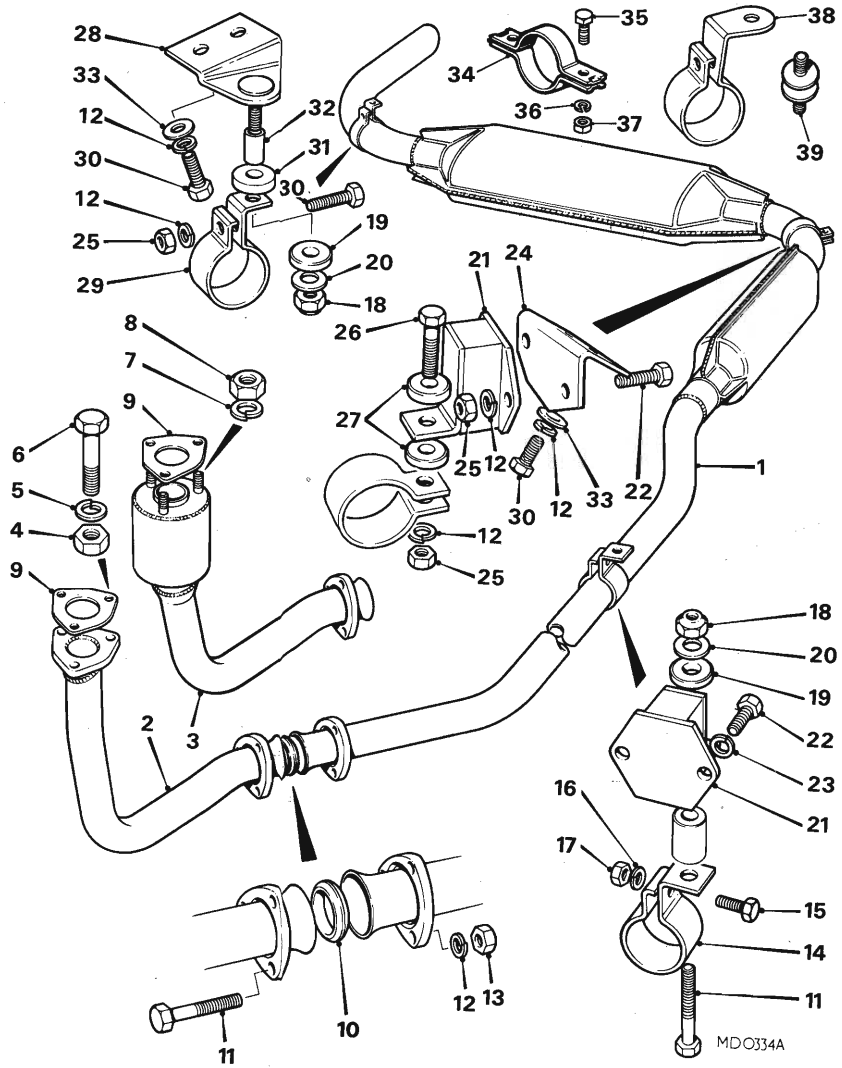

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		EXHAUST SYSTEM-1500.			
1	GEX 161	Exhaust system complete (C$)	NLA	Use prior to GEX 164 (C)G-AN6-172237 ON	Use GEX 164
1	GEX 164	Exhaust system complete (C$)	1		
2	GEX 1618	Down pipe	1		Except California
3	CHA 287	Down pipe(with Catalyst) (C$)	1		California
4	CHA 471	Nut-down pipe to manifold	3		
5	WL 600061	Washer-spring	3		Except California
6	BH 606121	Bolt	3		
7	WL 600061	Washer-spring-Catalyst to manifold	3		California
8	UKC 4960	Nut	6		
9	GEG 742	Gasket-down pipe	1		
10	GEX 7470	Olive-coupling (C$)	1		Was GEX 7352
11	BH 605151	Bolt-coupling	3		
12	WL 600051	Washer-spring	3		
13	AHH 8382	Nut	3		
34	GEX 7203	Clip-saddle-support bracket	1	(C)G-AN6-160091 ON (California only)	
34	GEX 7252	Clip-saddle-support bracket	1	(C)G-AN6-162211 ON (Except California)	
35	SH 605081	Screw	2		
36	WL 600051	Washer-spring	2		
37	NH 605041	Nut	2		
14	GEX 7073	Clip-intermediate	1		
15	HZS 407	Screw-clip to pipe	1		
16	WL 600040	Washer-spring	1		
17	NH 604041	Nut	1		
11	BH 605151	Screw-clip to mounting	1		
18	LNZ 105	Nut-lock	1		
19	GEX 7250	Washer-insulating	1		
20	WC 108051	Washer-plain	1		
21	GEX 7155	Bracket-mounting-intermediate	1		
22	HZS 505	Screw-mounting	2		
23	LWZ 205	Washer-spring	2		

NOTE:-(C$) These parts comply with Californian State regulations when fitted on vehicles to which this list applies.

107-D 56

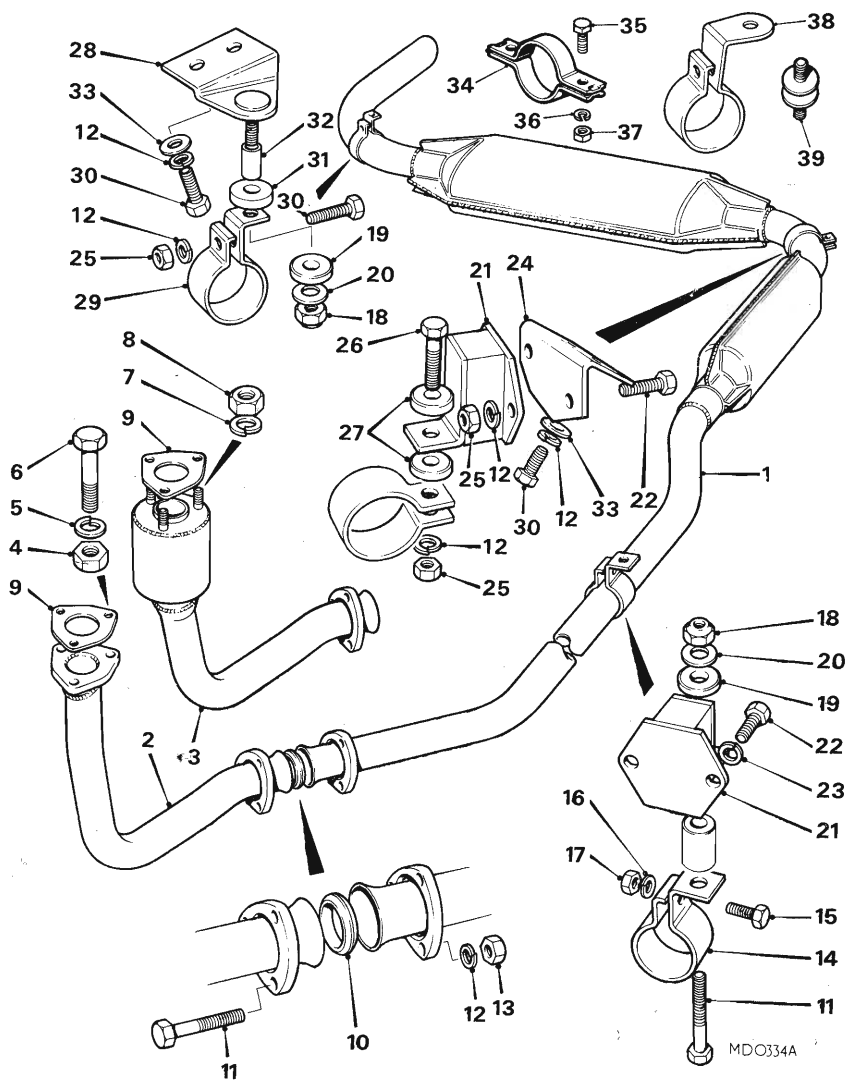

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		EXHAUST SYSTEM-1500-continued.			
24	GEX 7364	Bracket-pipe support-LH	1		
21	GEX 7155	Mounting-pipe-LH	1		
22	HZS 505	Screw-mounting	2		
12	WL 600051	Washer-spring	2		
25	FNZ 105	Nut	2		
26	HBZ 512	Bolt-clip to mounting	1		
27	GEX 7250	Washer-insulating	2		
12	WL 600051	Washer-spring	1		
25	FNZ 105	Nut	1		
28	GEX 7365	Bracket-pipe support-RH	1		(C)G-AN6-154101
29	GEX 7170	Clip-pipe-RH	1		TO 169791
38	GEX 7468	Clip-support	1		
39	GEX 7251	Mounting(rubber)	1		(C)G-AN6-169792
27	GEX 7250	Washer-insulating	2		ON
30	HZS 506	Screw-clip to pipe	1		
12	WL 600051	Washer-spring	1		
25	FNZ 105	Nut	1		
31	GEX 7151	Bush-pipe support-RH(rubber)	2		(C)G-AN6-154101
32	GEX 7166	Spacer-bush	1		To 169791
18	LNZ 105	Nut-lock	1		
30	HZS 506	Screw-rear mounting	4		
33	PWZ 105	Washer-plain	4		
12	WL 600051	Washer-spring	4		

107-D 58