
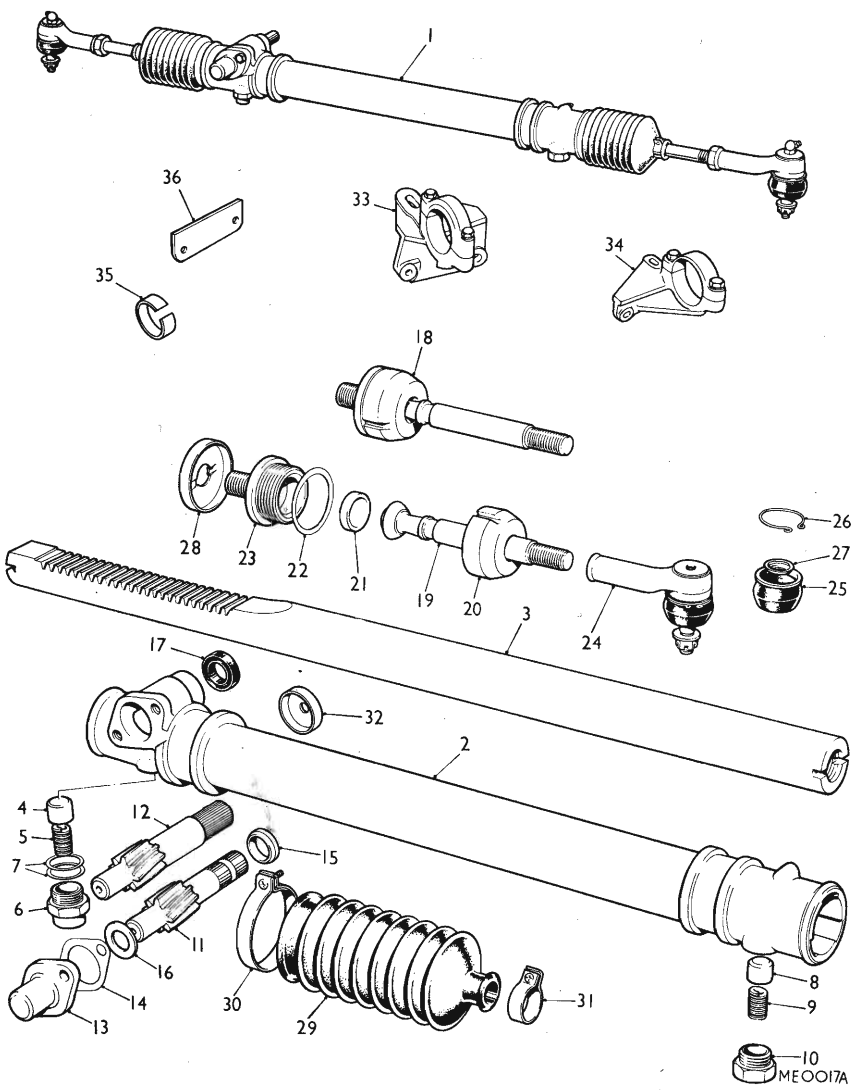


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING RACK			
1	ACG 6010	RACK ASSEMBLY-RHD	1	Use prior to BTA 1096	
	ACG 6009	RACK ASSEMBLY-LHD	1	Use prior to BTA 1097	
1	BTA 1096	RACK ASSEMBLY-RHD	NLA	(C)H-AN9-72529 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-61166 TO 74885 (C)G-AN5-74886 TO See(1)foot of page	Use AHA 9956 RHD or AHA 9957 LHD with 1 off bracket AHA 9959,1 Off bracket AHA 9960,2 Off clamp AHA 9961, 1 off lever AHA 9957 and 1 off lever AHA 9958
	BTA 1097	RACK ASSEMBLY-LHD $	NLA	(C)H-AN9-72034 USA, 72529 except USA TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60441 USA, 61166 except USA TO 74885 (C)G-AN5-74886 TO See(1)foot of page	
2	ACA 6019	Housing-LHD $	1	(C)H-AN8-38829 TO 64734 (C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803(C)A-AN10-86804 TO 87824 (C)G-AN3-25788 TO 52389 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 TO See(1)foot of page	
3	ACA 6026	Rack $	1		
4	ACA 5244	Pad-damper $	1		
5	ACA 5248	Spring-pad $	1		
6	ACA 5245	Housing-pad $	1		
7	ACA 5249	Shim-housing-.003″(.08mm) $	A/R		
7	ACA 5275	Shim-housing-.010″(.25mm) $	A/R		
8	ACA 5284	Pad-secondary damper $	1		
9	ACA 5286	Spring-secondary damper $	1		
10	ACA 5285	Housing-secondary damper	1		

CHANGE POINTS
(1) (C)G-AN5-114486 USA (LESS 114352,114473,114475 TO 114480, 114526 TO 114541,114543 AND 114580 TO 114588)
(C)G-AN5-114642 NOT USA (LESS 114244,114332,114333,114361 TO 114365, 114377,114385,114398 TO 114406,114416 TO 114419,114446 TO 114472 AND 114483 TO 114486)

$ This item is subject to safety regulations


107-E 2

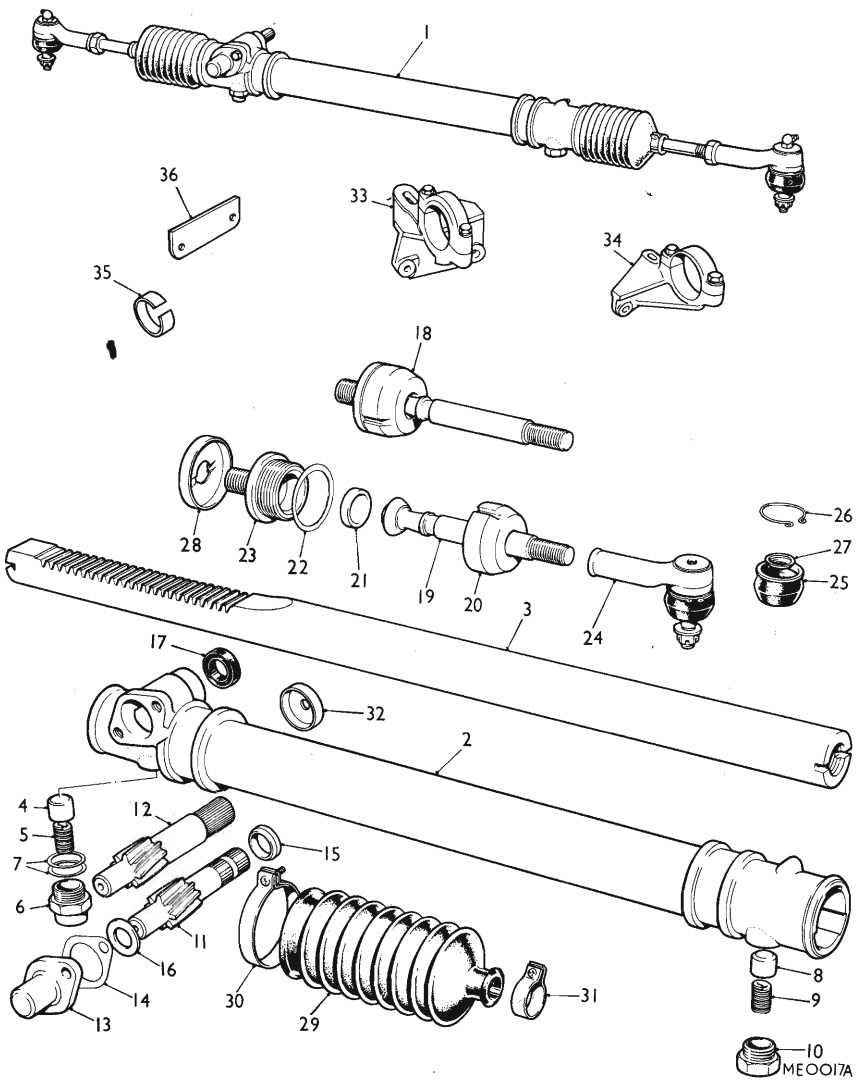

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING RACK-continued			
11	ACA 6028	Pinion-RHD	1		Use prior to BTA 942
12	BTA 942	Pinion-RHD	1		(C)H-AN9-72529 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-61166 TO 74885 (C)G-AN5-74886 TO SEE(1)foot of page
	ACA 6027	Pinion-LHD	1		Use prior to BTA 941
	BTA 941	Pinion-LHD $	1		(C)H-AN9-72034 USA, 72529 except USA TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60441 USA, 61166 except USA TO 74885 (C)G-AN5-74886 TO See(1)foot of page

CHANGE POINTS
(1).(C)G-AN5-114486 USA(LESS 114352,114473,114475 TO 114480,114526 TO 114541, 114543 AND 114580 TO 114588),(C)G-AN5-114642 Not USA(Less 114244,114332, 114333,114361 TO 114365,114377,114385,114398 TO 114406,114416 TO 114419, 114446 TO 114472 AND 114482 TO 114486)

$ This item is subject to safety regulations

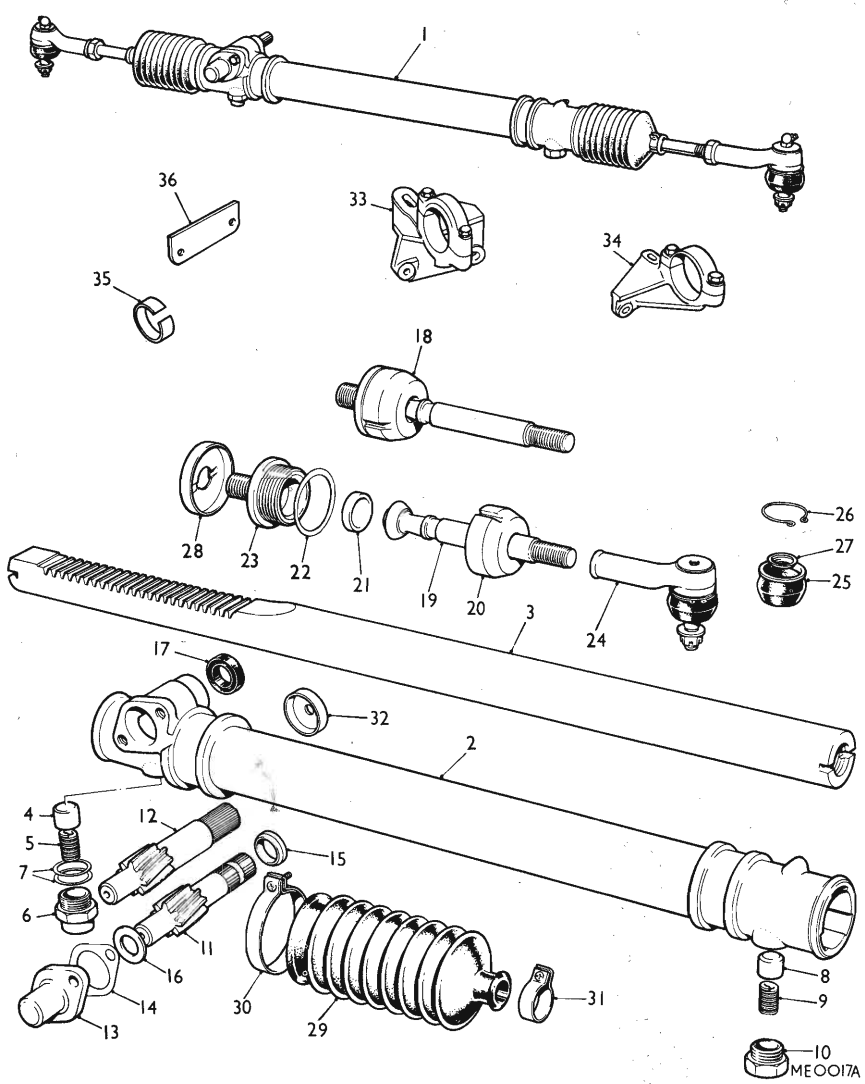


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING RACK-continued.			
13	ACA 5307	Bearing-pinion tail $	1		(C)H-AN8-38829 TO 64734
		SHIM-TAIL BEARING			
14	ACA 5259	.076mm(.003") $	A/R		(C)H-AN9-64735 TO 85286
14	ACA 5260	.127mm(.005") $	A/R		(C)H-AN10-85287 TO 86803
14	ACA 5320	.245mm(.010") $	A/R		(C)A-AN10-86804 TO 87824
	AJD 6155 Z	Screw-bearing to rack housing	2		(C)G-AN3-25788 TO 52389
	LWZ 204	Washer-spring	2		(C)G-AN4-52390 TO 74885
15	ACA 5257	Washer-thrust-pinion-top $	1		(C)G-AN5-74886 TO see(1)foot of page
16	ACA 5258	Washer-thrust-pinion-bottom $	1		
17	ACA 5261	Seal-pinion	1		Use prior to BTA 9008
	BTA 9008	Seal-pinion $	NLA		(C)H-AN9-72034 USA 72529 except USA TO 85286
					(C)H-AN10-85287 TO 86803
					(C)A-AN10-86804 TO 87824
					(C)G-AN4-60441 USA 61166 except USA TO 74885
					(C)G-AN5-74886 TO see(1)foot of page

CHANGE POINTS.
(1).(C)G-AN5-114486 USA(less 114352,114473,114475 TO 114480,114526 TO 114541, 114543 AND 114580 TO 114588).
(C)G-AN5-114642 NOT USA(less 114244,114332,114333,114361 TO 114365, 114377,114385,114398 TO 114406,114416 TO 114419,114446 TO 114472 AND 114482 TO 114486).

$ This item is subject to safety regulations.

107-E 6

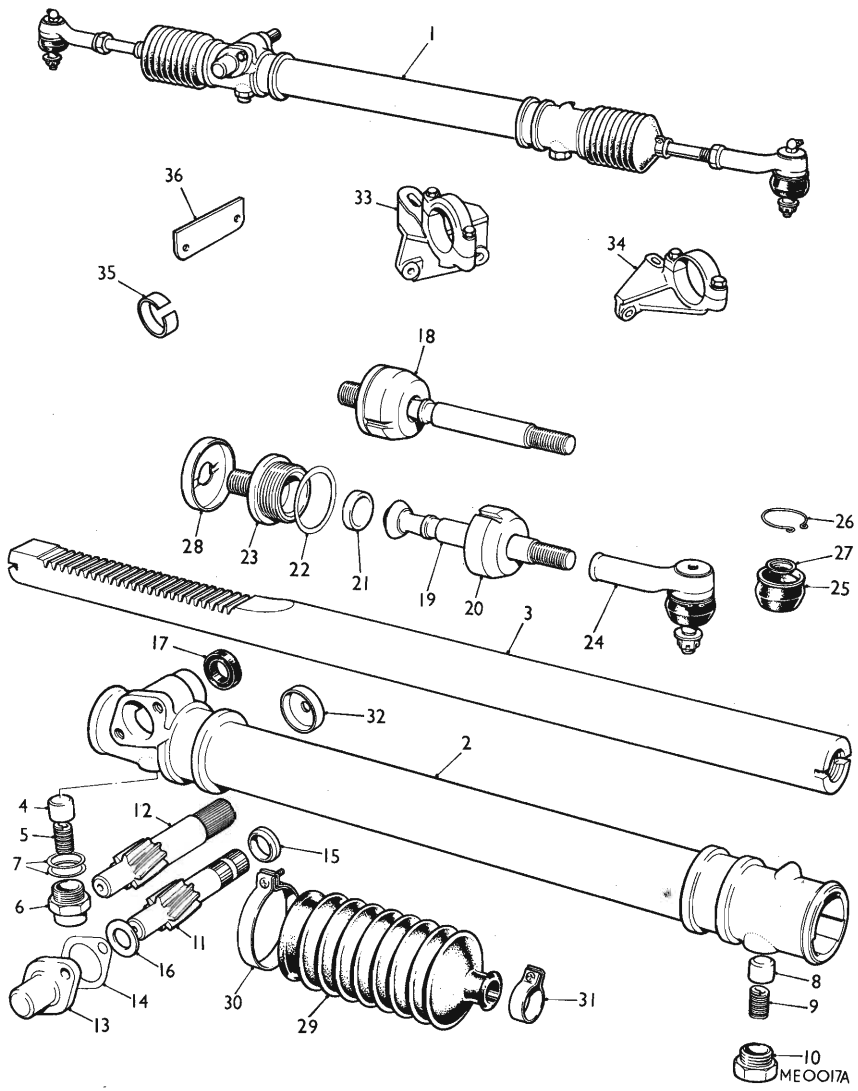


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING RACK-continued.			
18	ACA 6018	TIE-ROD ASSEMBLY $	NLA		Use component parts.
19	ACA 6015	Tie-rod $	2		
20	ACA 5304	Ball-housing-female $	2		
21	ACA 5246	Seat-ball $	2		
		SHIM			
22	ACA 6017	.002″(.061mm)$	A/R		
22	ACA 5301	.003″(.076mm) $	A/R		
22	ACA 5302	.005″(.127mm) $	A/R		
22	ACA 5303	.010″(.254mm) $	A/R		
23	ACA 6031	Ball housing-male $	2		
24	88G 414	SOCKET ASSEMBLY-BALL-OUTER $	2		
25	7H 3762	Boot $	2		
26	7H 3565	Clip-boot to body $	2	(C)H-AN8-38829 TO 64734	
27	7H 3763	Ring-boot to ball pin	2	(C)H-AN9-64735 TO 85286	
	PWZ 107	Washer-plain	2		
	FNZ 407	Nut	2		
	ACH 6173	Washer-ball socket(fibre) $	2	(C)H-AN10-85287 TO 86803	
	NT 610041	Locknut	2		
28	ACA 5247	Washer-lock-ball housing $	2	(C)A-AN10-86804 TO 87824	
29	ACA 6029	Seal-rack housing $	2		
30	BMK 924	Clip-inner seal $	2	(C)G-AN3-25788 TO 52389	
31	3H 2963	Clip-outer seal $	2		
	UHN 305	Lubricator-rack	1	(C)G-AN4-52390 TO 74885	
	UHN 305	Lubricator-ball socket	2		
32	AHA 5496	Retainer-pinion oil seal	1	(C)G-AN5-74886 TO	
33	AHA 5391	Bracket and cap-rack mounting-RH $	1	See(1)foot of page	
34	AHA 5392	Bracket and cap-rack mounting-LH $	1		
35	2A 6128	Seating-mounting bracket-rack $	2		
36	AHA 8718	Packing-mounting bracket-rack(.79mm)	A/R		
	SH 605061	Screw-.75″(19.05mm)bracket	4		
	SH 605081	Screw-1″(25.4mm)bracket	2		
	WA 108051	Washer-plain	4		
	WL 600051	Washer-spring	6		

CHANGE POINTS.
(1).(C)G-AN5-114486 USA(less 114352,114473,114475 TO 114480,114526 TO 1145411, 114543 AND 114580 TO 114588).
(C)G-AN5-114642 NOT USA(less 114244,114332,114333,114361 TO 114365, 114377,114385,114398 TO 114406,114416 TO 114419,114446 TO 114472 AND 114483 TO 114486).

$ This item is subject to safety regulations.

107-E 8

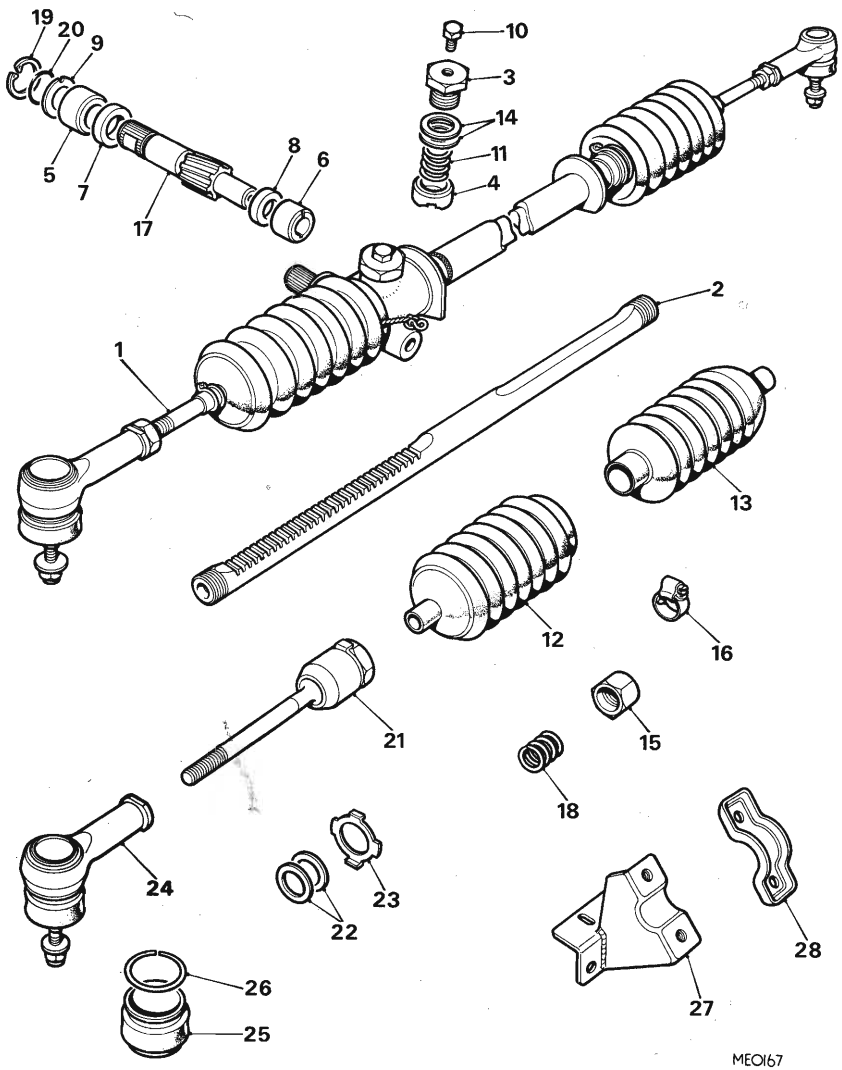


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING RACK-continued.			
1	AHA 9956	RACK ASSEMBLY-RHD $	1		
	AHA 9955	RACK ASSEMBLY-LHD $	1		
2	208375	Rack $	1		
3	37H 7336	Cap-screwed	1		
4	120946	Plunger	1		
5	37H 7560	Bush-pinion-upper	1		
6	127997	Bush-pinion-lower	1		
7	37H 7561	Washer-thrust-upper	1		
8	128000	Washer-thrust-lower	1		
9	37H 7562	Shim-pinion .005"(.127mm)	A/R		
9	37H 7341	Shim-pinion .010"(.26mm)	A/R		
10	133103	Plug-grease	1		
11	126765	Spring	1		
12	128004	Bellows-pinion side	1		
13	120948	Bellows	1		
14	120959	Shim-plunger .002"(.051mm)	A/R		
14	120949	Shim-plunger .004"(.102mm)	A/R		
14	37H 7342	Shim-plunger .010"(.26mm)	A/R		
	37H 7338	Nut-lock	1	(C)G-AN5-114487 ON USA(plus(1)foot OF PAGE)	
16	GHC 507	Clip-bellows	2		
16	GHC 811	Clip-bellows	1	(C)G-AN5-114643 ON NOT USA (plus (2)foot of page)	
17	37H 7339	Pinion-RHD	1		
	37H 7340	Pinion-LHD	1		
18	37H 7343	Spring	2		
19	37H 7344	Circlip	1		
20	37H 7345	'O'Ring $	1		
21	37H 7346	BALL JOINT ASSEMBLY-INNER $	2		
22	130031	Shim	A/R		
22	130032	Shim	A/R		
23	120957	Washer-tab	1		
24	BHA 5141	END ASSEMBLY-TIE-ROD $	2		
25	143992	Gaiter	2		
26	138869	Clip-gaiter	2		
	PWZ 106	Washer-plain	2		
	GHF 223	Nut	2		
27	AHA 9959	Bracket-rack mounting-RH $	1		
	AHA 9960	Bracket-rack mounting-LH $	1		
28	AHA 9961	Clamp-bracket $	2		
	HZS 506	Screw	4		
	SH 605081	Screw-pinion side	2		
	WL 600051	Washer-spring	6		

CHANGE POINTS.
(1).114352,114473,114475 TO 114480,114526 TO 114541,114543 AND 114580 TO 114588.
(2).114244,114332,114333,114361 TO 114365,114377,114385,114398 TO 114406, 114416 TO 114419,114446 TO 114472 AND 114483 TO 114486.

$ This item is subject to safety regulations.


107-E 10

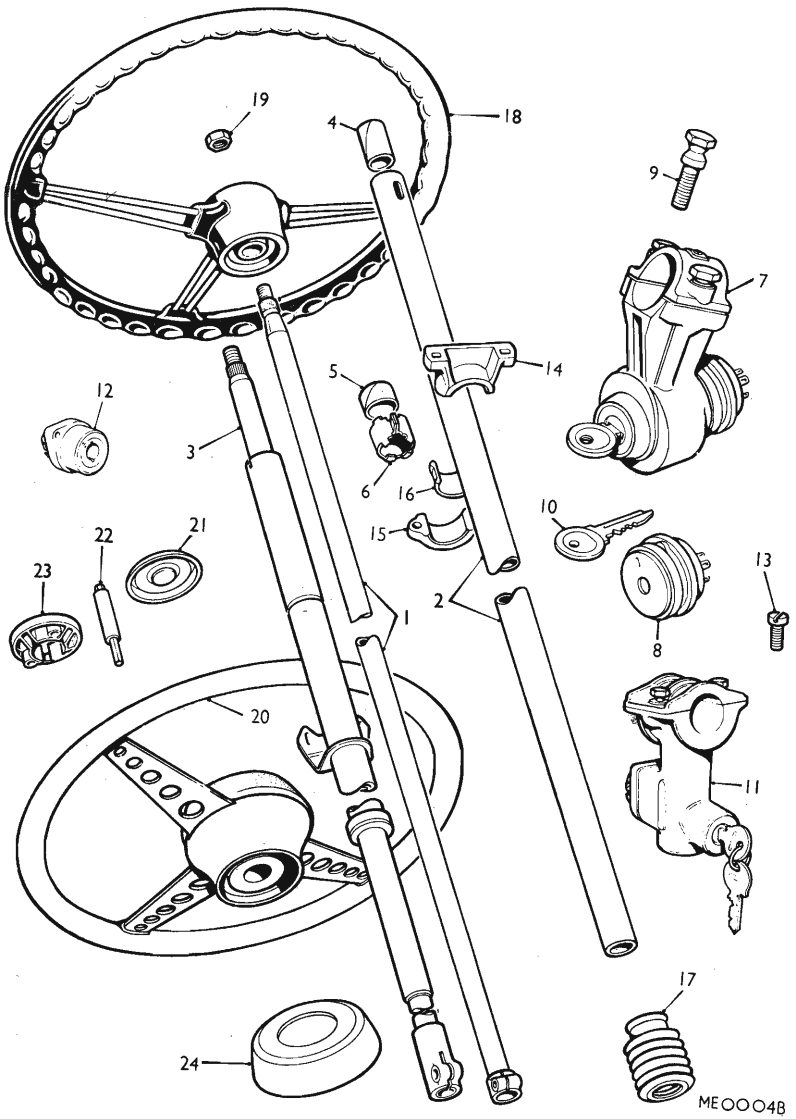

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING COLUMN AND LOCK-EXCEPT N.AMERICA			
1	17H 9185	Column-inner-RHD and LHD	1	Finished at (C)G-AN9-85286 (C)G-AN4-74885	Used when steering lock is fitted
1	27H 2359	Column-inner-RHD	1		
	27H 2361	Column-inner-LHD	1		
2	17H 9184	Tube-column-outer-RHD and LHD	1		
2	27H 2358	Tube-column-outer-RHD	1		When steering lock is fitted
1	37H 4769	Column-inner	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 86766	When steering lock is not fitted
	37H 4766	Column-outer	1		
1	37H 4770	Column-inner	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 105500	Used when steering lock is fitted.
2	37H 4771	Column-outer-RHD	NLA		
	37H 4772	Column-outer-LHD	1		
3	AHA 9792	Column complete-RHD $	1	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 TO 170989 (C)G-AN6-170990 ON	Energy absorbing
3	CHA 558	Column complete-RHD $	1		
	AHA 9882	Column complete-LHD $	1	(C)G-AN5-105501 TO 154100	
4	AHA 5893	Bush-top(felt)	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 105500	
5	13H 569	Bush-bottom(felt)	1		
6	13H 568	Clip-bush retaining	1		
7	37H 5933	LOCK ASSEMBLY(WITH IGNITION SWITCH)	NLA	Use prior to BMK 2259	
8	27H 6237	Switch	1		
9	27H 9394	Bolt-shear	2		
11	BMK 2259	LOCK ASSEMBLY-STEERING COLUMN	1	(C)H-AN10-86766 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-96273 TO 115925	
12	37H 5934	Switch	1		
13	37H 6967	Screw	1		
9	37H 5935	Bolt-shear	2		
11	BMK 2259	LOCK ASSEMBLY-STEERING COLUMN	1	(C)G-AN5-115926 ON	
	37H 7087	Switch	NLA		
	37H 7708	Switch	1		Use 37H 7708.
	51K 4001	Bolt-shear	2		

$ This item is subject to safety regulations


107-E 12

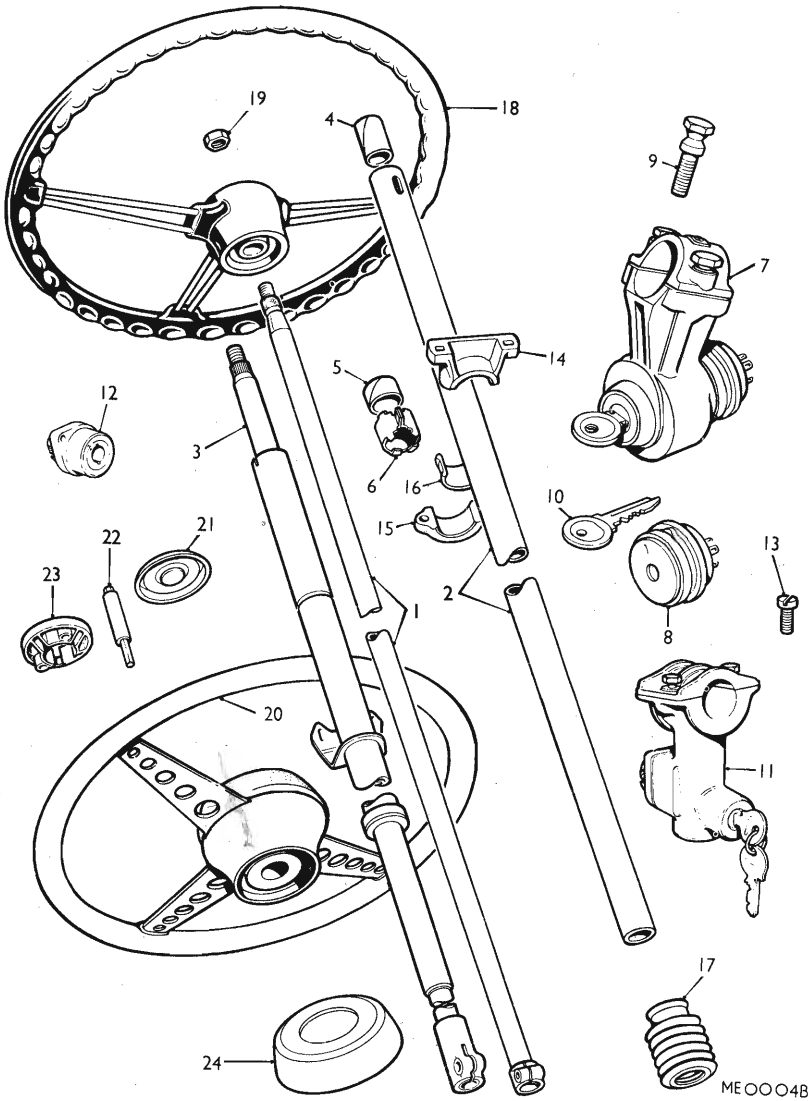

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING COLUMN AND LOCK-EXCEPT N.AMERICA-continued			
	53K 1013	Bolt-column tube to pinion clamping	1		
	LNZ 104	Nut	1		
15	2A 6133	Cap-bracket-column mounting	1		
	PWZ 104	Washer-plain	2		
	LWZ 204	Washer-spring	2		
16	37H 2966	Seating-column mounting bracket	1		
	HBZ 408	Screw	2		
	PWZ 104	Washer-plain	2		
	LWZ 204	Washer-spring	2		
17	AHA 5435	Seal-outer tube to footwell	NLA	Use prior to AHA 9801	
17	AHA 9801	Seal-column to toeboard	1	(C)G-AN5-105501 TO 154100	
	CHA 457	Seal-column to toeboard	1	(C)G-AN6-154101 TO 170989	
	CHA 559	Seal-column to toeboard	1	(C)G-AN6-170990 ON	
19	AHA 9193	Wheel-steering	1	(C)H-AN9-78731 TO 85286	
19	ACH 6001	Nut-wheel	1	(C)G-AN4-66224 TO 74885	
20	BHH 291	Wheel-steering	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 123730	Prior to (C)H-AN10-86803 and (C)G-AN5-89515 use also horn push BHA 5043 Midget or BHA 5053 Sprite
	BHH 786	Wheel-steering	1	(C)G-AN5-123731 TO 135881	
	BHH 1307	Wheel-steering $	1	(C)G-AN5-135882 ON	
19	BHH 119	Nut-wheel $	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 ON	


$ This item is subject to safety regulations

107-E 14

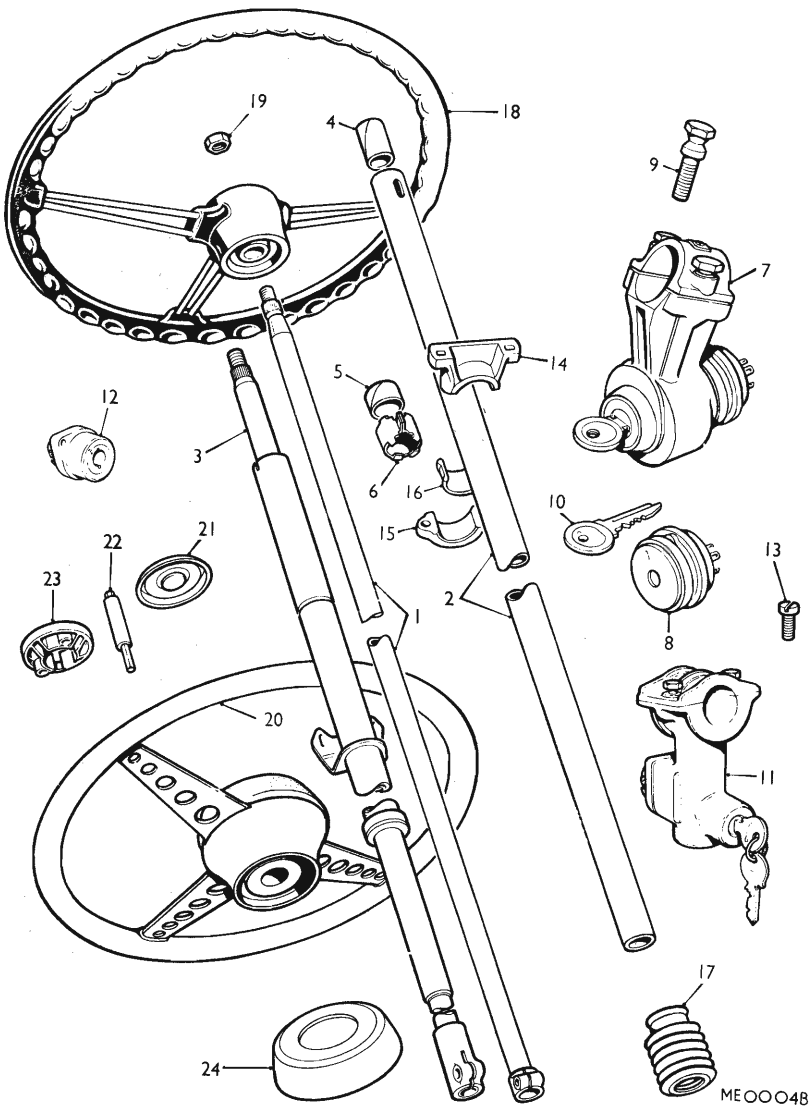

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING COLUMN AND LOCK-EXCEPT N.AMERICA-continued			
21	BHA 4979	Bezel and motif-Midget	1	(C)H-AN10-85287 TO 86302 (C)G-AN5-74886 TO 89514	
	BHA 5010	Bezel and motif-Sprite	1		
22	BHA 5041	Brush-horn push	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 ON	
23	BHA 5042	Slip-ring	1		
24	BHA 5043	Horn push-Midget	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 TO 105500	
24	BHA 5053	Horn push-Sprite	1		
24	BHA 5135	Horn push-Midget	1	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 TO 157172	
24	AAU 1161	Horn push	1	(C)G-AN6-157173 ON	


107-E16

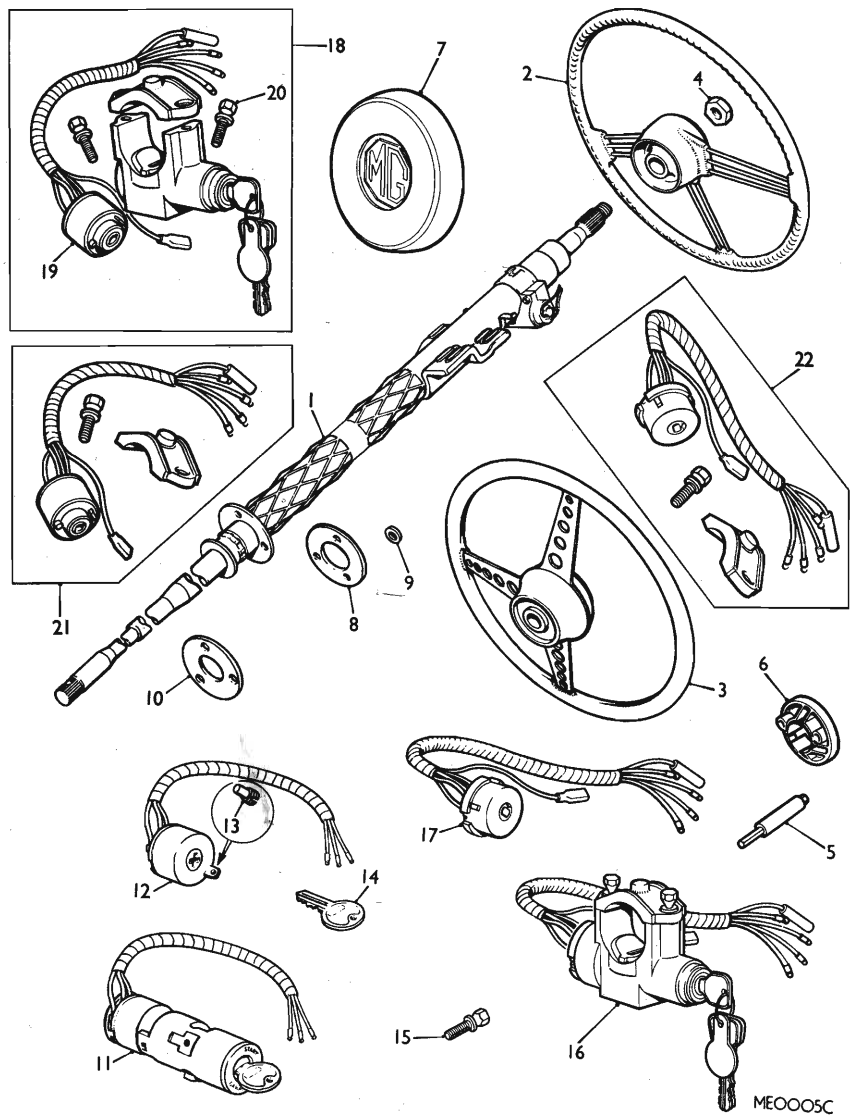

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING COLUMN-COLLAPSIBLE TYPE-AND STEERING LOCKS-N.AMERICA			
1	AHA 8496	Column-steering $	1		Use prior to AHA 9448
1	AHA 9448	Column-steering $	1		(C)G-AN5-74886 TO 154100
1	CHA 341	Column-steering $	1		(C)G-AN6-154101 ON
2	AHA 8498	Wheel-steering $	1		Use prior to AHA 9194
3	AHA 9194	Wheel-steering $	NLA		(C)H-AN9-78826 TO 85286
4	AHH 8561	Nut-steering wheel $	1		(C)G-AN4-67476 TO 74885
3	BHH 291	Wheel-steering $	1		(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 123730
	BHH 786	Wheel-steering	1		(C)G-AN5-123731 TO 135881
	BHH 1307	Wheel-steering $	1		(C)G-AN5-135882 ON
4	BHH 119	Nut-steering wheel $	1		(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 ON
5	BHA 5041	Brush-horn push	1		(C)H-AN10-86303
6	BHA 5042	Slip ring-horn push	1		TO 86803
7	BHA 5043	Horn push	1		(C)A-AN10-86804 TO 87824 (C)G-AN5-89515 TO 105500
7	BHA 5135	Horn push	1		(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 TO 157172
7	AAU 1161	Horn push	1		(C)G-AN6-157173 ON
	HZS 506	Screw-column to bulkhead	5		Finished at (C)154100
	PWZ 205	Washer-plain	5		
	PWZ 305	Washer-plain	5		
	LWZ 205	Washer-spring	5		
	FNZ 105	Nut	5		
	HZS 506	Screw-column to bulkhead	4		(C)G-AN6-154101 ON
	PWZ 305	Washer-plain	8		
	LWZ 205	Washer-spring	4		
	FNZ 105	Nut	4		

$ This item is subject to safety regulations.


107-E 18

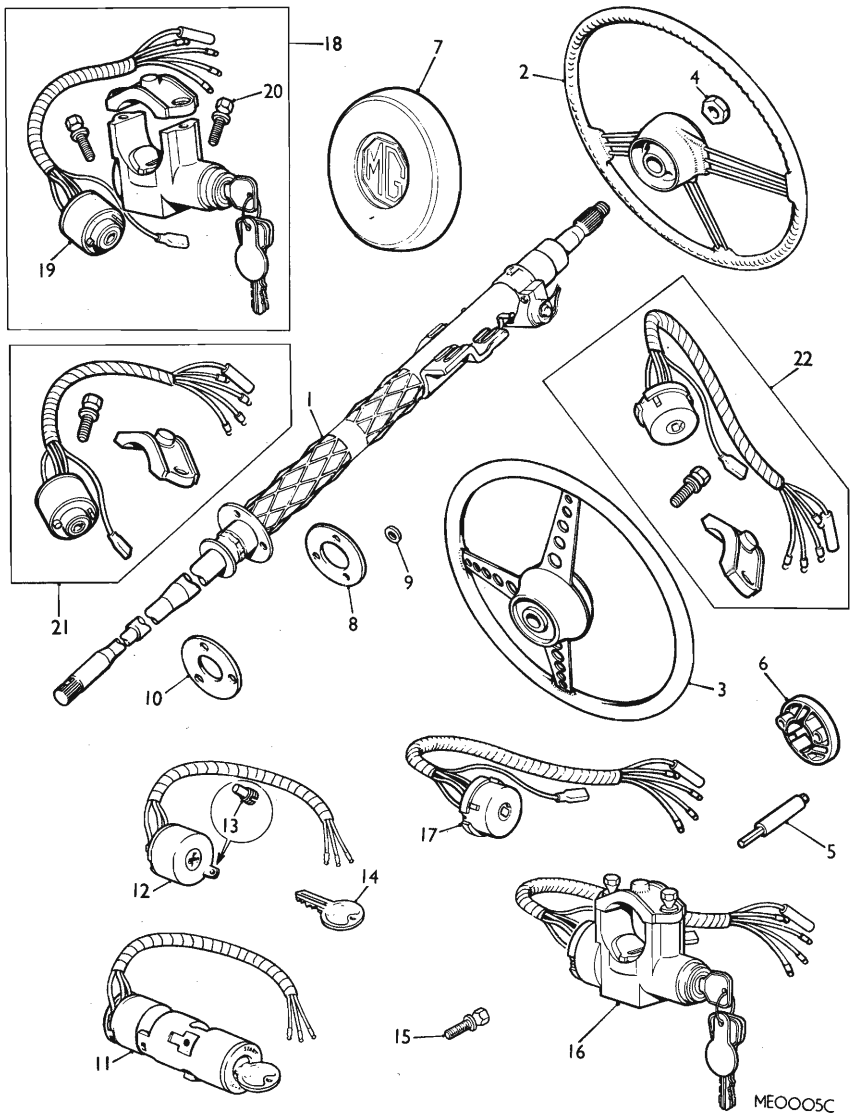

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING COLUMN-COLLAPSIBLE TYPE-AND STEERING LOCKS-N.AMERICA-continued			
	HZS 612	Screw-column to bulkhead	2		
	HZS 616	Screw-column to bulkhead	1		
	FNZ 106	Nut	3		
	LWZ 206	Washer-spring	3		
	PWZ 306	Washer-plain	6		
	HZS 507	Screw-column to floor	3		
	PWZ 205	Washer-plain	3		
	LWZ 205	Washer-spring	3		
8	AHA 8769	Ring-sealing-column flange to body	NLA		
9	53K 3159	Washer	3		
	53K 1013	Bolt-column to pinion clamp	1	Finished at	
	LNZ 104	Nut-Aerotight	1	(C)G-AN5-154100	
10	AHA 8720	Seal-steering column to toe panel	1		
11	BHA 4715	LOCK ASSEMBLY(WITH IGNITION SWITCH)-USA FOR GERMANY $	1	Use prior to BHA 5050 and 18G 8901	
12	37H 4114	Switch $	NLA		
13	37H 4113	Screw-switch retaining $	1		
	BHA 5050	LOCK ASSEMBLY(WITH IGNITION SWITCH)$	NLA		Use 18G 8906.
17	BHA 5056	Switch $	1	(C)G-AN5-74886	
	18G 8901	KIT-STEERING LOCK	NLA	TO 105500	Use 18G 8905.
19	BHA 5070	Switch-lock	1		
20	51K 4001	Bolt-shear	2		
21	18G 8906	Kit-steering lock	1	(C)G-AN5-105501	
22	18G 8905	Kit-steering lock	1	TO 138800	Alternatives
18	18G 9120	KIT-STEERING LOCK $	1	(C)G-AN5-138801	
19	BHA 5294	Switch $	1	TO 154100	
18	18G 9119	Kit-steering lock $	1	(C)G-AN6-154101 ON	
19	BHA 5292	Switch $	1		


$ This item is subject to safety regulations.

107-E 20

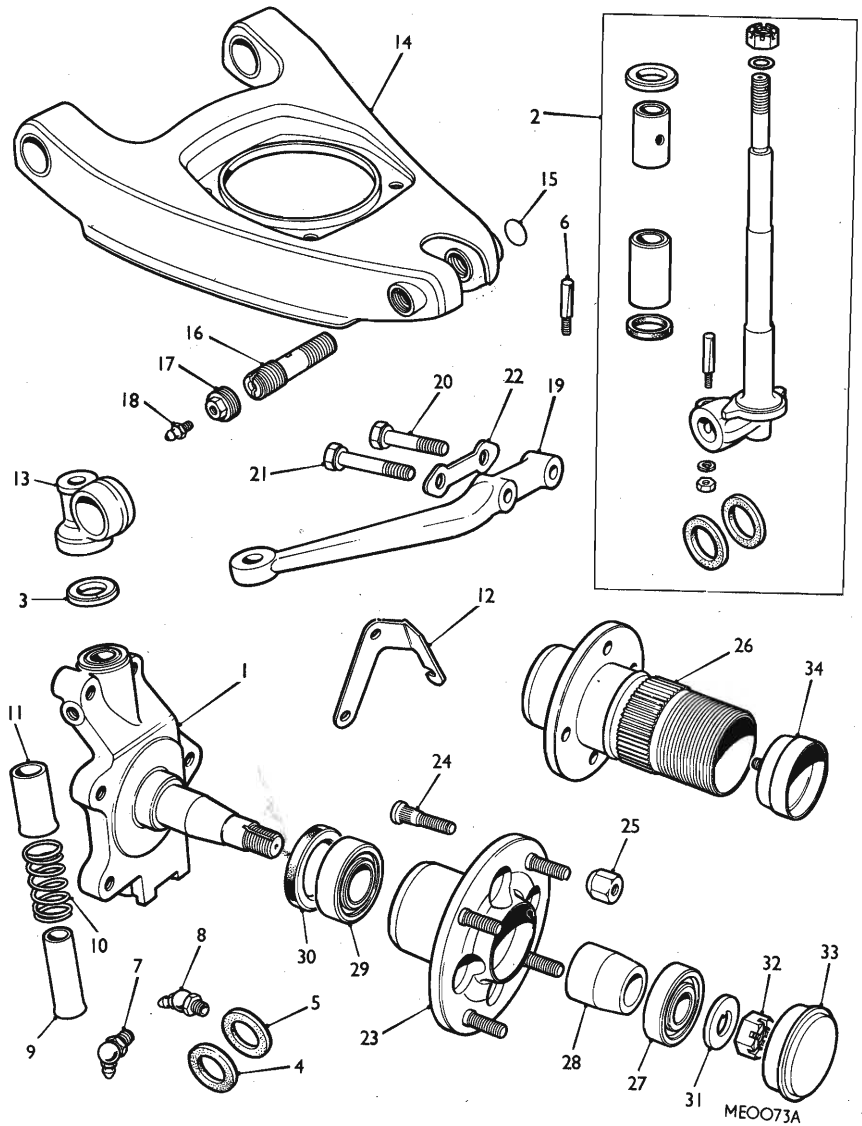

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRONT SUSPENSION			
	NSP	FRONT SUSPENSION ASSEMBLY	2		
1	BTA 744	Axle-swivel-RH $	1		
	BTA 745	Axle-swivel-LH $	1		
2	8G 4220	KIT-REPAIR-SWIVEL PIN AND BUSH $	2		
	FNZ 307	Nut-swivel pin	2		
3	2A 4006	Washer-thrust $	2		
4	2A 4206	Ring-large-fulcrum pin $	2		
5	2A 4205	Ring-small-fulcrum pin $	2		
6	51K 1769	Pin-cotter-fulcrum pin to swivel pin $	2		
	FNZ 103	Nut-cotter pin	2		
	LWZ 203	Washer-spring	2		
7	UHN 445	Lubricator-swivel axle-top	2		
8	UHN 490	Lubricator-swivel pin-bottom	2		
9	BTA 606	Tube-dust excluder-bottom $	2		
10	6K 653	Spring-dust excluder $	2		
11	2A 4010	Tube-dust excluder-top $	2		
12	BTA 792	Lockplate-brake hose-RH $	1		(C)H-AN8-62388 TO 64734 (C)H-AN9-64735 TO 85286 (C)H-AN10-85286 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN3-50463 TO 52389 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON
	BTA 793	Lockplate-brake hose-LH $	1		
13	2A 4005	Trunnion-suspension link $	2		
14	AHA 7029	LINK ASSEMBLY-LOWER $	2		
15	51K 3424	Plug-blanking-fulcrum pin small bush	2		
16	2A 4020	Pin-fulcrum $	2		
	51K 2751	Pin-cotter-fulcrum pin to swivel pin O/S $	2		
17	8G 589	Plug-screwed-fulcrum pin large bush $	2		
18	UHN 400	Lubricator	2		

$ This item is subject to safety regulations

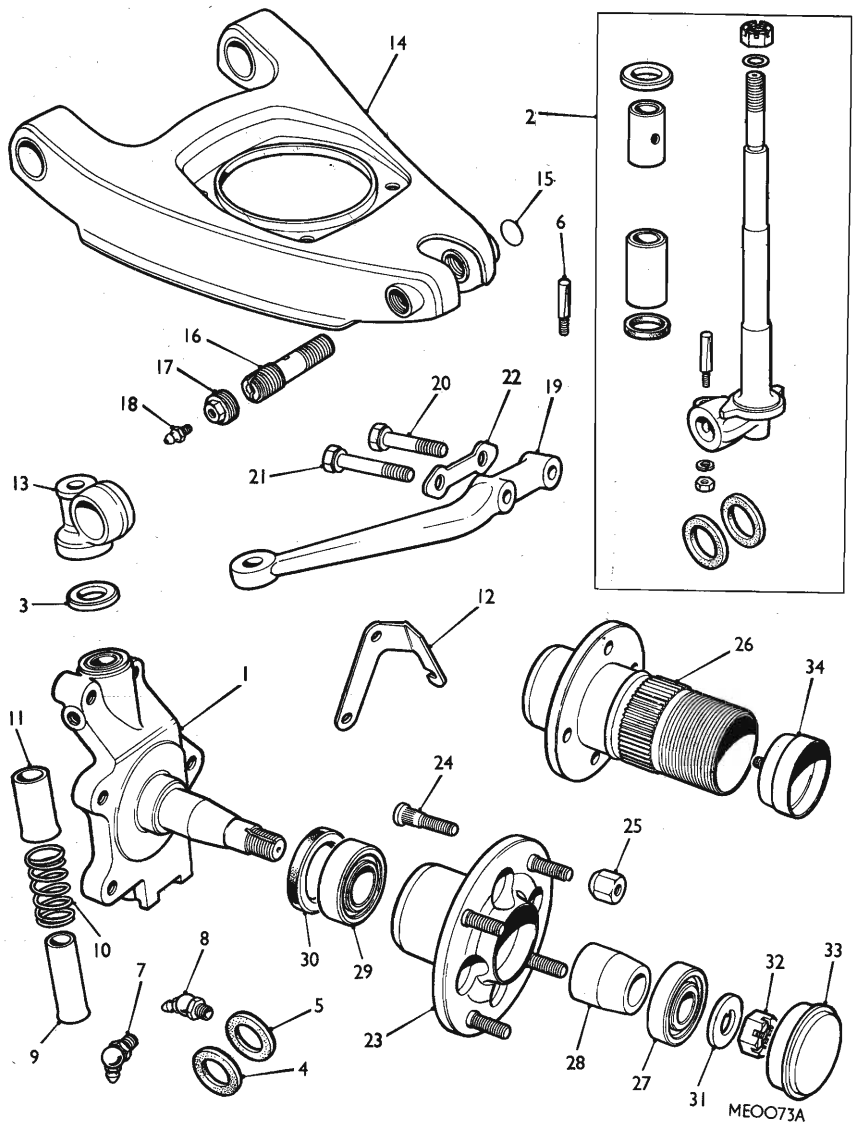


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRONT SUSPENSION-continued			
19	BTA 648	Lever-steering-RH $	1	Use prior to AHA 9957/8	
	BTA 649	Lever-steering-LH $	1	Use prior to AHA 9957/8	
19	AHA 9957	Lever-steering-RH $	1	(C)G-AN5-114487 ON USA(Plus(1)foot of page)	
	AHA 9958	Lever-steering-LH $	1	(C)G-AN5-114487 ON USA(Plus(1)foot of page)	
20	53K 1370	Screw-steering lever to swivel axle-short $	2		
21	ATA 4132	Screw-steering lever to swivel axle-long $	2		
22	2K 5377	Washer-lock $	2		
23	BTA 1254	HUB ASSEMBLY $	2		Disc wheels only
24	BTA 339	Stud-wheel $	8		
25	88G 577	Nut-wheel stud	8		
25	AHA 8785	Nut-wheel stud CP	8		
26	BTA 686	Hub-RH $	1		Wire wheels only
	BTA 687	Hub-LH $	1		Wire wheels only
27	GHB 128	Bearing-hub-outer $	2		
28	88G 321	Piece-distance-bearing $	2		
29	GHB 129	Bearing-hub-inner $	2		
30	GHS 142	Seal-oil $	2		
31	2A 4003	Washer-bearing $	NLA		
32	51K 328	Nut-swivel axle	2		
33	2A 4067	Cap-grease retaining $	2		Disc wheels only
34	BTC 392	Cap-grease retaining $	2		Wire wheels only

CHANGE POINTS.
(1).114352,114473,114475 TO 114480,114526 TO 114541,114543 AND 114580 TO 114588
(2).114244,114332,114333,114361 TO 114365,114377,114385,114398 TO 114406, 114416 TO 114419,114446 TO 114472 AND 114483 TO 114486

$ This item is subject to safety regulations


107-E 24

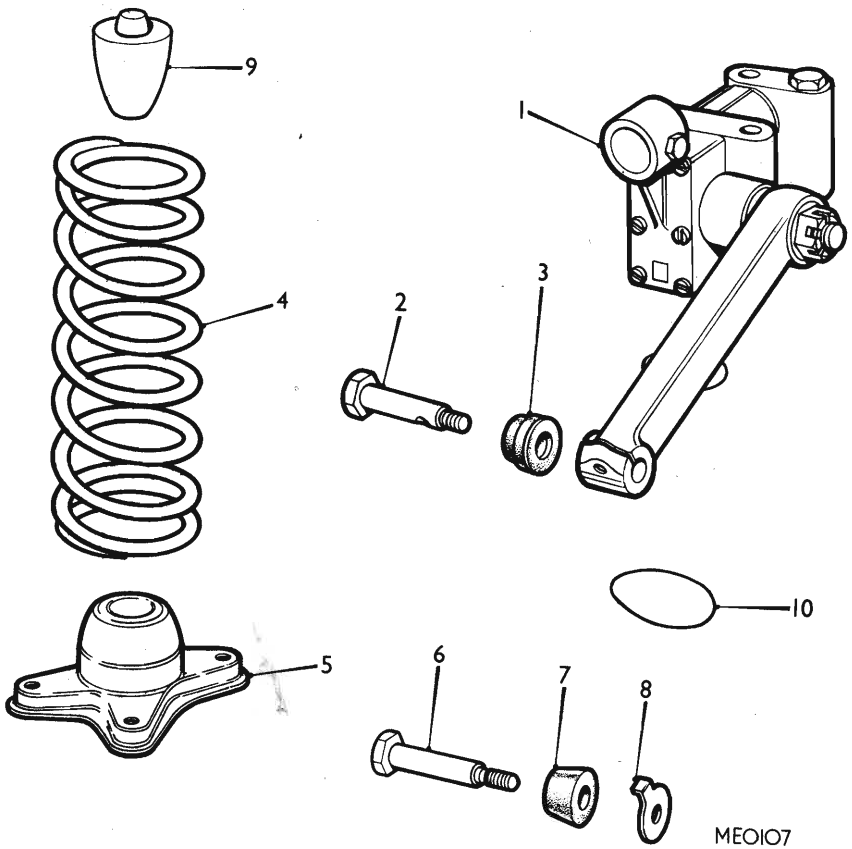

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRONT SHOCK ABSORBERS			
1	GSA 102	Absorber-shock-RH $	1		
	GSA 103	Absorber-shock-LH $	1		
	53K 1364	Screw-shock absorber to frame	6	Use prior to CHA 398	
	CHA 398	Bolt-shock absorber to frame	6	(C)G-AN6-154101 ON	
	WA 110061	Washer-plain	6		
	LWZ 306	Washer-spring	6		
2	2A 4028	Pin-fulcrum-shock absorber to trunnion $	2		
3	88G 274	Bearing $	4		
	FNZ 306	Nut-fulcrum pin	2		
	53K 1389	Bolt-clamping-fulcrum pin to shock absorber arm $	2		
	LWN 405	Washer-shakeproof	2		
4	2A 4214	Spring-road-coil	2	Use prior to CHA 129	
4	CHA 129	Spring-road-coil	2	(C)H-AN8-58381 N.America 60260 Not N.America TO 64734 (C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN3-46042 N.America 47527 Not N.America TO 52389 (C)G-AN4-52390 TO 74885 (C)G-AN5-74885 TO 154100 (C)G-AN6-154101 TO 171477 (C)G-AN6-171478 ON	
4	CHA 570	Spring-road-coil $	2		
5	21A 137	Seat-spring $	2		
	53K 1368	Bolt-spring seat to lower link $	8		
	LNZ 205	Nut	8		] Alternatives
	LNZ 105	Nut	8		
	LWN 405	Washer-shakeproof	8		
6	2A 4272	Pin-fulcrum-lower link to frame $	4		
7	8G 621	Bearing-lower link $	8		
8	2A 4024	Washer-special-fulcrum pin $	4		
	GHF 223	Nut-fulcrum pin	4		] Alternatives
	LNZ 106	Nut-fulcrum pin	4		
9	AHA 6378	Buffer suspension	2		
10	2A 4082	Buffer rebound	2		

$ This item is subject to safety regulations


107-E 26

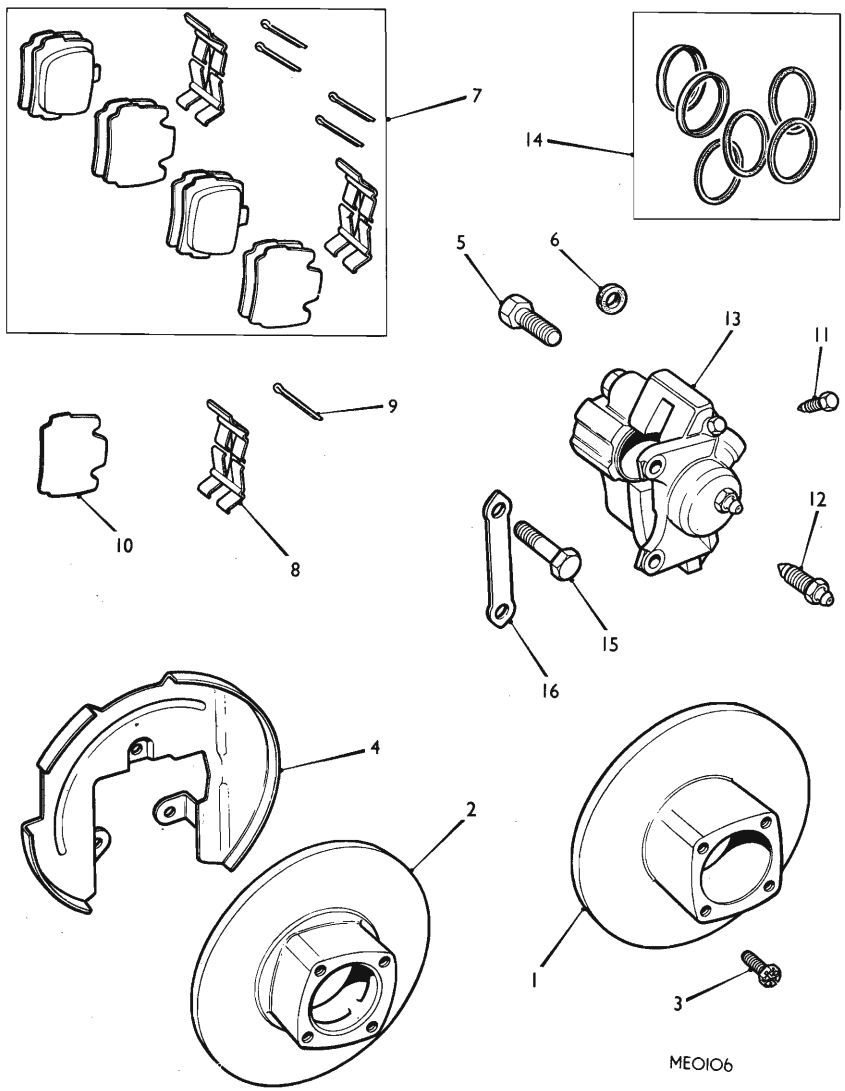

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRONT BRAKES			
1	BTA 383	Disc-brake $	2		Disc wheels only
2	BTA 469	Disc-brake $	2		Wire wheels only
3	BTA 370	Bolt-disc to hub $	8		
4	BTA 472	Cover-dust-brake disc-RH $	1		
	BTA 473	Cover-dust-brake-disc-LH $	1		
	HZS 503	Bolt	2		
	LWZ 505	Washer-shakeproof	2		
	BTA 653	UNIT ASSEMBLY-CALLIPER-LH	NLA		Use 17H 9438 with pad GBP 108 and shim 17H 2460
	BTA 652	UNIT ASSEMBLY-CALLIPER-RH	NLA		Use 17H 9439 with pad GBP 108 and shim 17H 2460
5	17H 8250	Bolt-bridge	4		
6	17H 7679	Seal-fluid channel $	2		
7	GBP 108	PAD ASSEMBLY	1SET		
8	17H 7963	Spring-pad retainer	2		
9	ZPS 524	Pin-split cotter	4		
10	17H 2460	Shim-pad	4		
11	17H 7917	Plug	2		
12	3H 2428	Screw-bleed	2		

$ This item is subject to safery regulations


107-E 28

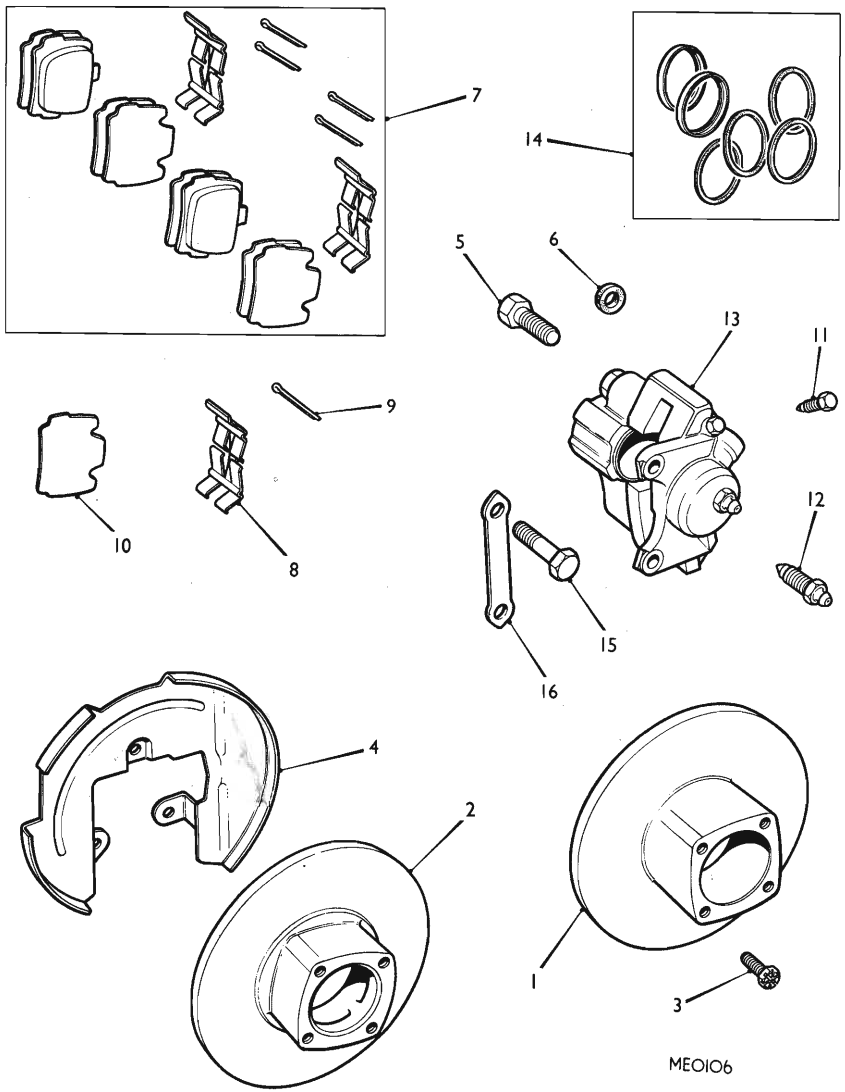

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRONT BRAKES-continued			
	17H 9438	UNIT ASSEMBLY-CALLIPER(LESS PADS AND SHIMS)-LH $	1		
13	17H 9439	UNIT ASSEMBLY-CALLIPER(LESS PADS AND SHIMS)-RH $	1		
5	17H 8250	Bolt-bridge $	4		
6	17H 7679	Seal-fluid channel	2		
14	8G 8668	KIT-REPAIR-CALLIPER UNIT $	2		
7	GBP 108	PAD ASSEMBLY $	1SET		
8	17H 7963	Spring-pad retainer $	2		
9	ZPS 524	Pin-split cotter	4		
10	17H 2460	Shim-anti-squeal $	4		
	BTA 444	Bolt-calliper mounting	NLA		Use BTA 789 and BTC 114 together with 1 off lock plate BTA 792 RH or BTA 793 LH
15	BTA 789	Bolt-calliper mounting $	4	(C)H-AN8-62388 TO 64734 (C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN3-50463 TO 52389 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON	
16	BTC 114	Washer-tab $	2		

$ This item is subject to safety regulations

107-E 28.02

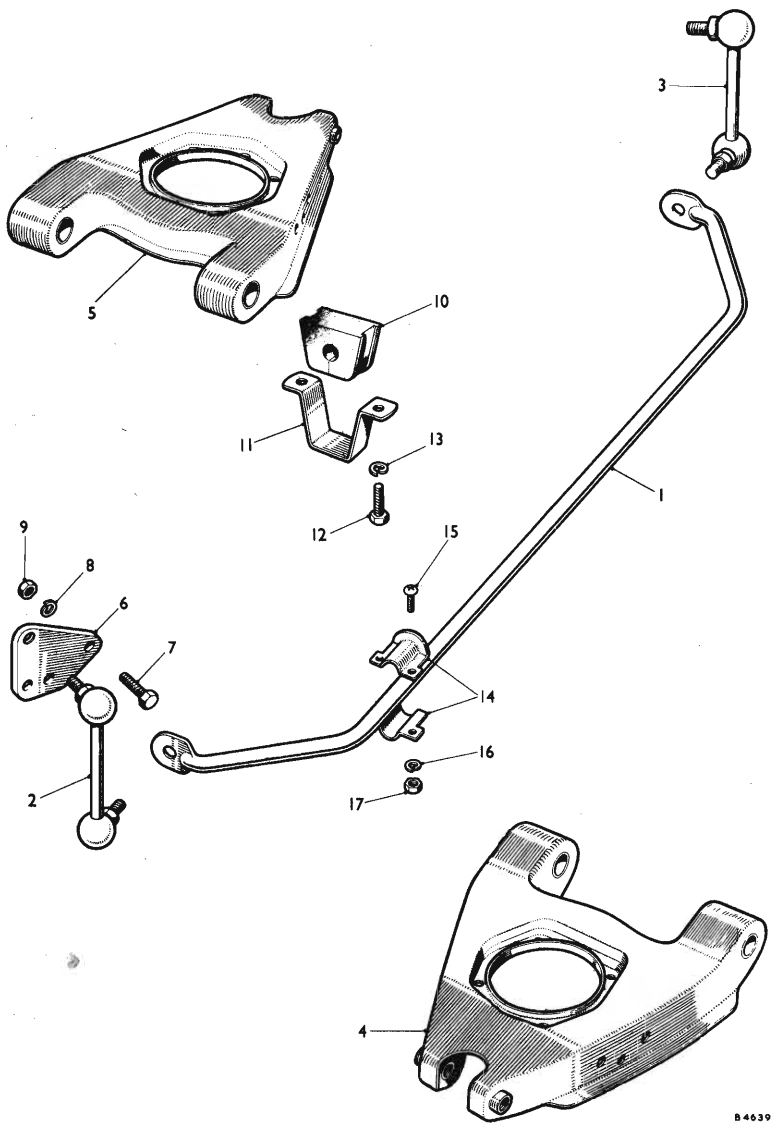

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		ANTI-ROLL BAR			
1	AHA 7013	Bar-anti-roll $	1		
2	AHA 7011	Link-anti-roll bar-RH $	1		
3	AHA 7012	Link-anti-roll bar-LH $	1		
4	AHA 7029	Link-lower $	2		
6	AHA 7028	Bracket-anti-roll bar link $	2		Optional extra, STANDARD FITMENT FOR UK FROM (C)G-AN5-138801 ON
7	HZS 506	Screw-bracket to lower link	6		
8	WL 600051	Washer-spring	6		
9	NH 605041	Nut	6		
10	AHH 6541	Bearing-anti-roll bar $	2		
11	1B 7356	Strap-bearing $	2		
12	HZS 505	Screw-strap to frame	4		
13	WL 600051	Washer-spring	4		
14	AHH 6546	Stop-end $	4		
15	PMZ 307	Screw-clamping-end stop	4		
16	LWZ 203	Washer-spring	4		
17	FNZ 103	Nut	4		

$ This item is subject to safety regulations