
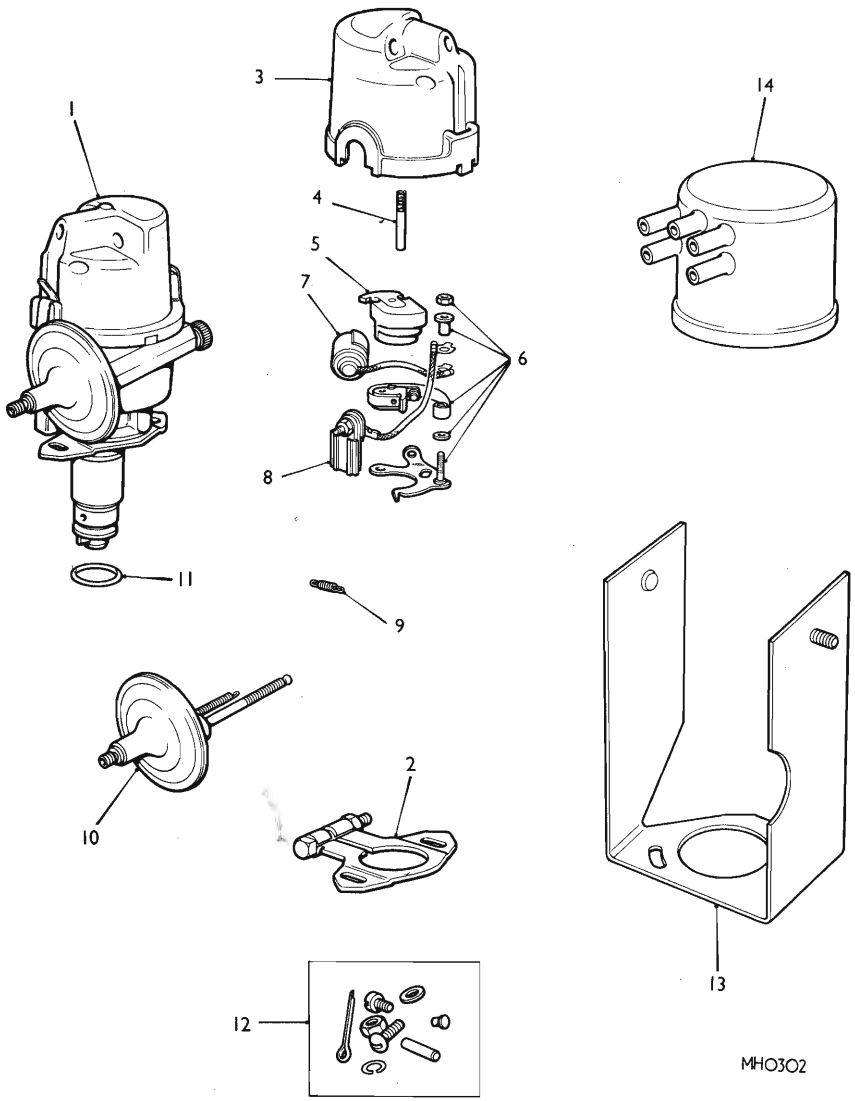



Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DISTRIBUTOR-10CC-1098cc.			
1	12G 811	DISTRIBUTOR ASSEMBLY	NLA		
2	3H 2138	Plate-clamping	1		
3	GDC 102	COVER ASSEMBLY	1		
4	17H 5065	Brush and spring	1		
5	GRA 101	Arm-rotor	1		
6	GCS 101	Contacts	1SET		
7	GSC 101	Condenser	1		
8	37H 2981	Terminal-bush and lead	1		
9	17H 6657	Spring-automatic advance	1SET		
10	17H 8622	Vacuum unit	1		
11	27H 6547	'O'ring-oil seal	1		
12	17H 5106	Sundry parts	1SET		
	HZS 404	Screw-distributor to housing	2		
	LWZ 404	Washer-shakeproof-screw	2		
13	12G 395	Body-suppression screen	1		
	LNZ 203	Nut	2		France.
	PWZ 203	Washer	2		
14	8G 726	Cover-waterproof	1		Canada.

107-H 2

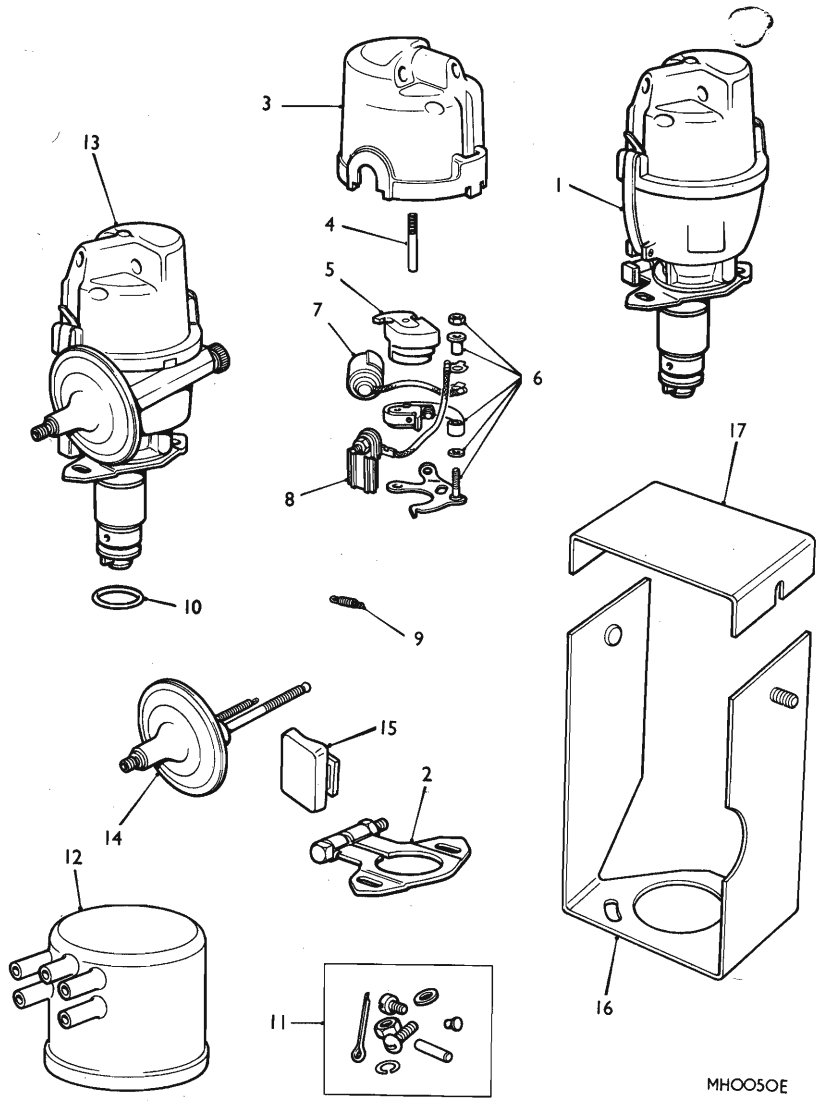

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DISTRIBUTOR-1275cc,12CC,12CD,12CE,12CJ AND 12V.			
1	12G 815	DISTRIBUTOR ASSEMBLY	1	Use prior to 12G 2055/7	
2	3H 2138	Plate-clamping	1		
3	GDC 102	COVER ASSEMBLY-MOULDED	1		
4	17H 5065	Brush and spring	1		
5	GRA 101	Arm-rotor	1		
6	GCS 111	Contacts	1SET		
7	GSC 101	Condenser	1		
8	37H 2981	Terminal-bush and lead	1		
9	7H 6950	Spring-automatic advance	1SET		
10	27H 6547	'O'ring-oil seal	1		
11	57H 5135	Sundry parts	1SET		
	HZS 404	Screw-distributor to housing	2		
	LWZ 404	Washer-shakeproof-screw	2		
12	8G 726	Cover-waterproof	1		
13	12G 2055	DISTRIBUTOR ASSEMBLY	1		(E)12CC/Da/H11639 TO 16300 (E)12CE/Da/101 TO(+) (E)12V/586F/101 TO(+) (E)12V/588F/101 TO(+) (E)12V/778F/101 ON
13	12G 2057	DISTRIBUTOR ASSEMBLY	1		(E)12CD/Da/101 TO (+) (E)12CJ/Da/H21201 TO(+)
2	3H 2138	Plate-clamping	1		
10	27H 6547	'O'ring-oil seal	1		(E)12CC/Da/H11639
14	27H 7645	Unit-vacuum	1		TO 16300
9	37H 2260	Spring-automatic advance	1SET		(E)12CE/Da/101 TO
7	GSC 101	Condenser	1		(+)
6	GCS 101	Contact set	1		(E)12V/586F/101 ON
8	37H 2981	Terminal-bush and lead	1		(E)12V/588F/101 ON
5	GRA 101	Arm-rotor	1		(E)12V/778F/101 ON
3	GDC 102	COVER ASSEMBLY	1		(E)12CD/DA/101 TO(+)
4	17H 5065	Brush and spring	1		(E)12CJ/DA/H21201
11	17H 5106	Sundry parts	1SET		TO(+)


(+) Change point not available.

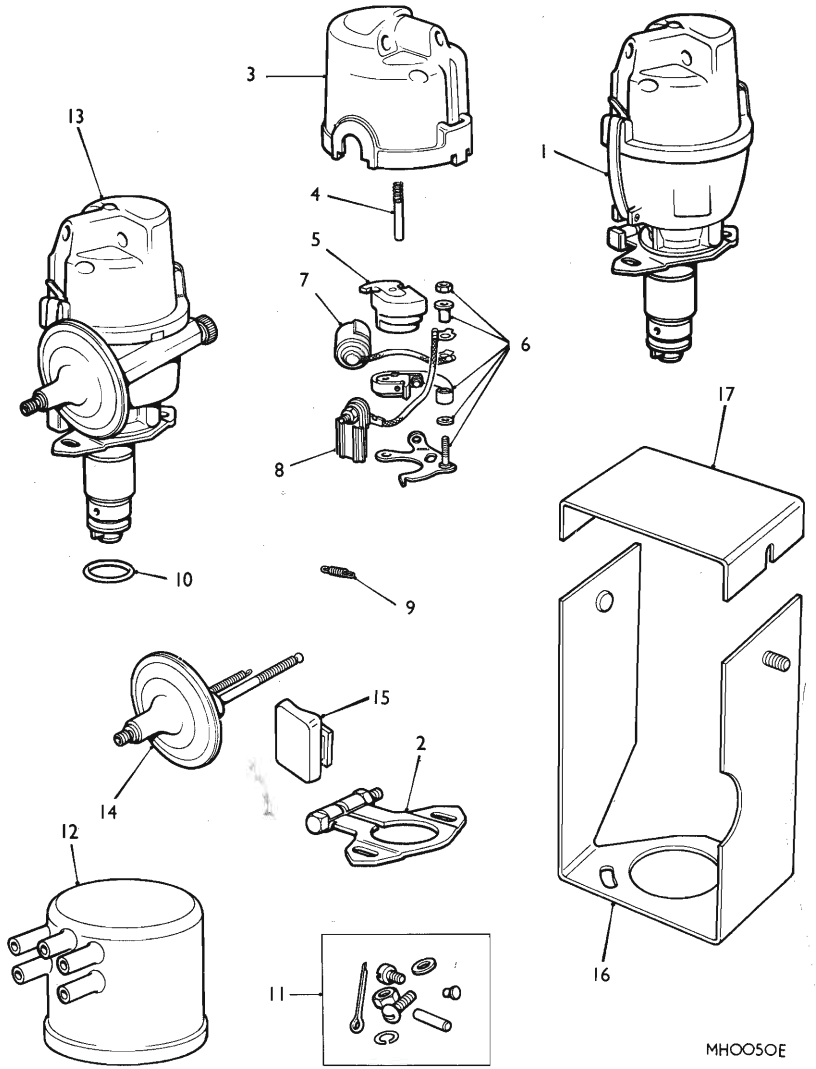

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DISTRIBUTOR-1275cc 12CC,12CD,12CE,12CJ AND 12V-continued.			
13	12G 3159	DISTRIBUTOR ASSEMBLY-LC	1		
2	3H 2138	Plate-clamping	1		
10	27H 6547	'O'ring-oil seal	1		
14	37H 7110	Unit-vacuum	1		
9	37H 7109	Spring-automatic advance	1		
7	GSC 101	Condenser	1	(E)12V/587Z/101 TO	
6	GCS 101	Contact set	1SET	(+)	
8	37H 2981	Terminal-bush and lead	1		
5	GRA 101	Arm-rotor	1		
3	GDC 102	COVER ASSEMBLY	1		
4	17H 5065	Brush and spring	1		
11	17H 5106	Sundry parts	1SET		
13	13H 8433	DISTRIBUTOR ASSEMBLY-LC	1		
2	3H 2138	Plate-clamping	1		
3	GDC 102	COVER ASSEMBLY	1		
4	17H 5065	Brush and spring	1		
5	GRA 101	Arm-rotor	1		
6	GCS 101	Set-contact	1SET	(E)12V/671Z/101 ON	
7	GSC 101	Condenser	1		
8	37H 2981	Terminal-bush and lead	1		
14	37H 7837	Unit-vacuum	1		
10	27H 65 .7	Ring-'O'-oil seal	1		
15	BMK 1989	Seal(rubber)-distributor	2		
16	12G 335	Body-suppression screen	1		France.
17	12G 337	Cover-suppression screen	1		
	WNZ 103	Nut-wing	1		


(+) Change point not available.

107-H06

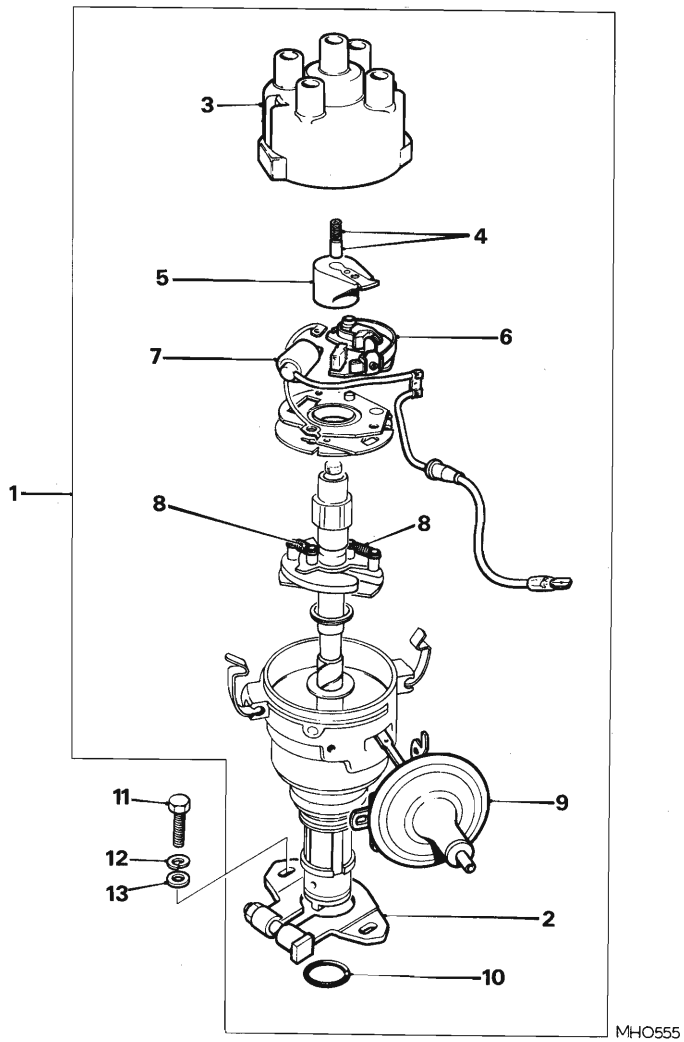


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DISTRIBUTOR-MIDGET 1500-NOT USA.			
1	RKC 638	DISTRIBUTOR ASSEMBLY	1		
2	RTC 1773	Plate-clamping	NLA		
3	GDC 132	Cover moulded	1		
4	37H 8230	Brush and spring	1		
5	GRA 114	Arm-rotor	1		
6	GCS 118	Contact set	1		
7	GSC 110	Condenser(with lead)	1		
8	RTC 1776	Spring-Automatic advance	1SET		
9	RTC 1775	Vacuum unit	1		
10	27H 6547	'O'ring	1		

107-H 6.02

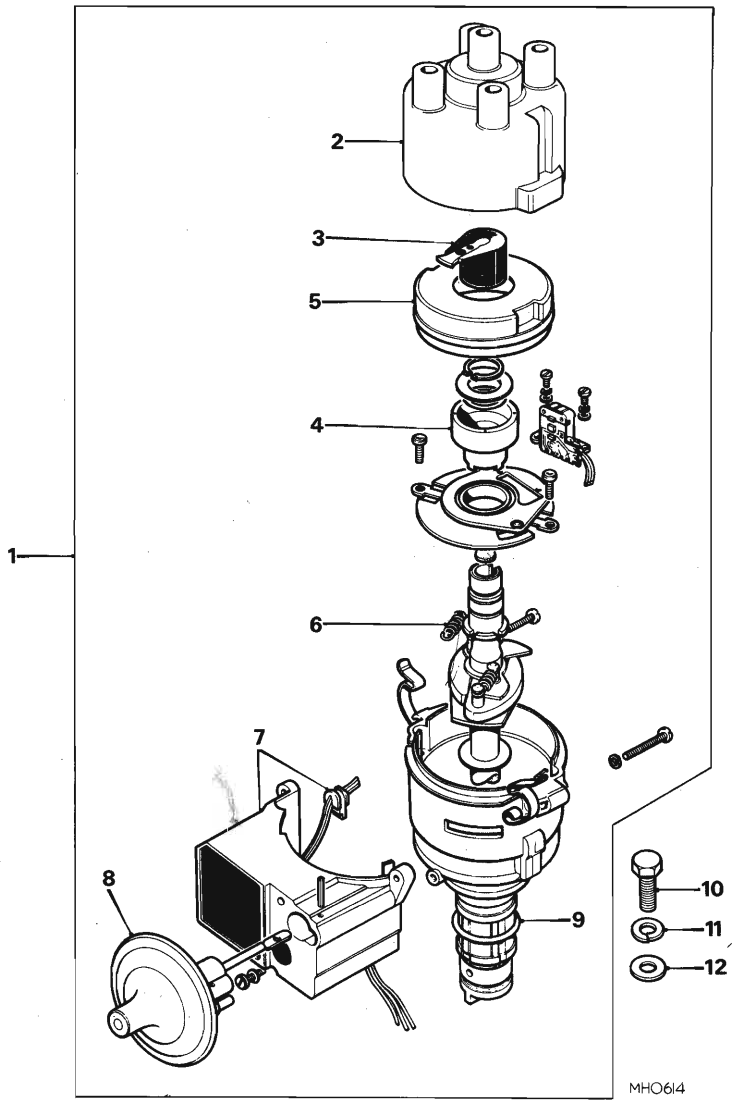

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DISTRIBUTOR-MIDGET 1500-USA AND CANADA			
1	TKC 1224	DISTRIBUTOR ASSEMBLY	1		
	RTC 1773	Plate-clamping	NLA		
2	GDC 132	Cover-moulded	1		
	37H 8230	Brush and spring	1		
3	GRA 114	Arm-rotor	1		
4	RTC 1739	ROTOR ASSEMBLY TIMING	1		USA and Canada
5	RTC 1738	Cover-anti-flash	1		TO 1976
6	RTC 1780	Spring-automatic advance	1SET		California
7	RTC 1781	Module-electronic	1		1976 TO 1977
8	RTC 1782	Vacuum unit(with roll pin)	1		
9	27H 6547	'O'ring oil seal	1		
1	TKC 2755	DISTRIBUTOR ASSEMBLY	1		
	RTC 1773	Plate-clamping	NLA		
2	GDC 136	Cover-moulded	1		
	37H 8230	Brush and spring	1		Federal
3	GRA 114	Arm-rotor	1		1976 TO 1977.
4	RTC 1739	Rotor-timing	1		
5	RTC 1738	Cover-anti-flash	1		
7	37H 8829	Module-electronic	1		
8	RTC 1733	Vacuum unit	1		
9	27H 6547	'O'ring	1		
1	TKC 3289	DISTRIBUTOR ASSEMBLY	1		Federal 1977 ON
7	AAU 6313	AMPLIFIER AND VACUUM UNIT ASSEMBLY	1		
8	AAU 6312	Vacuum unit	1		
1	TKC 3287	DISTRIBUTOR ASSEMBLY	1		California
7	AAU 4365	AMPLIFIER AND VACUUM UNIT ASSEMBLY	1		1977 ON.
8	AAU 6311	Vacuum unit	1		

107-H 6.04

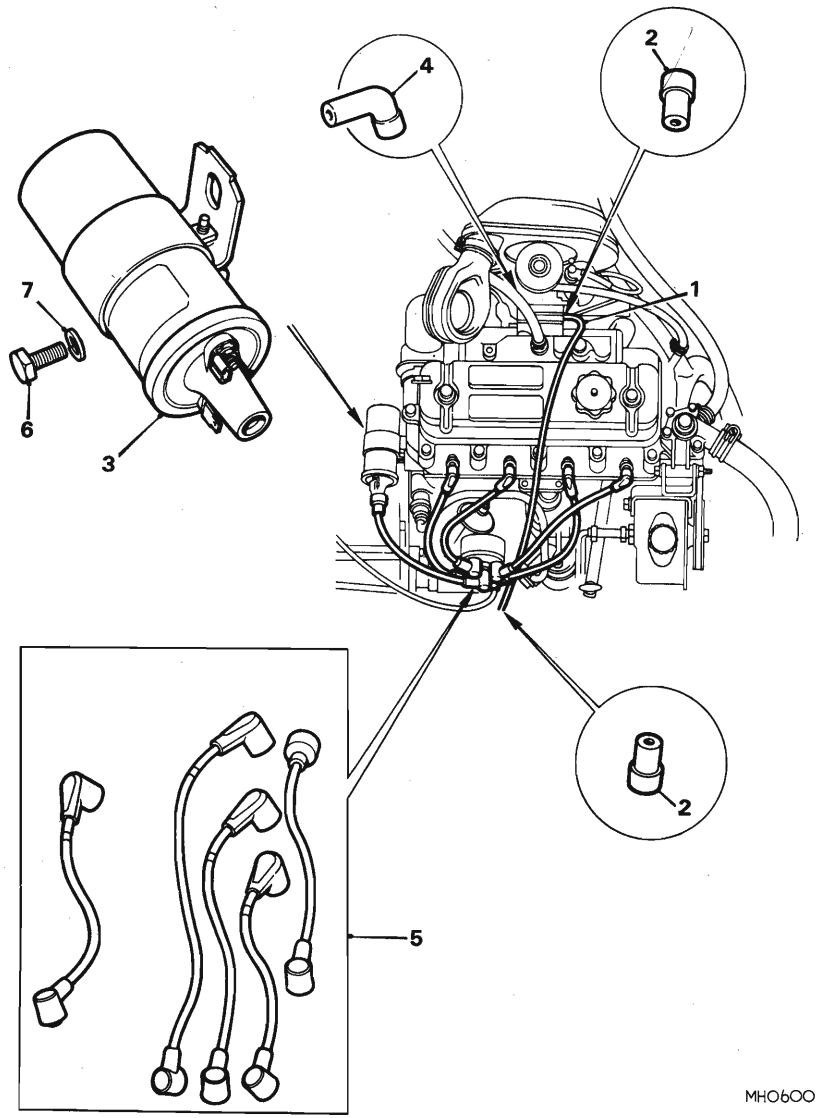


MH0600

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS

IGNITION COIL LEAD KIT AND VACUUM PIPE-MIDGET 1500

1	151103	Pipe-suction-distributor to carburetter	1
4	128262	Connection-pipe to distributor	1
2	131211	Connection-pipe to carburetter	1
5	GHT 152	Kit-ignition lead	1
3	GCL 111	Coil-ignition	1
7	WL 600051	Washer-spring	2
	NT 605041	Nut	2


107-H 6.06

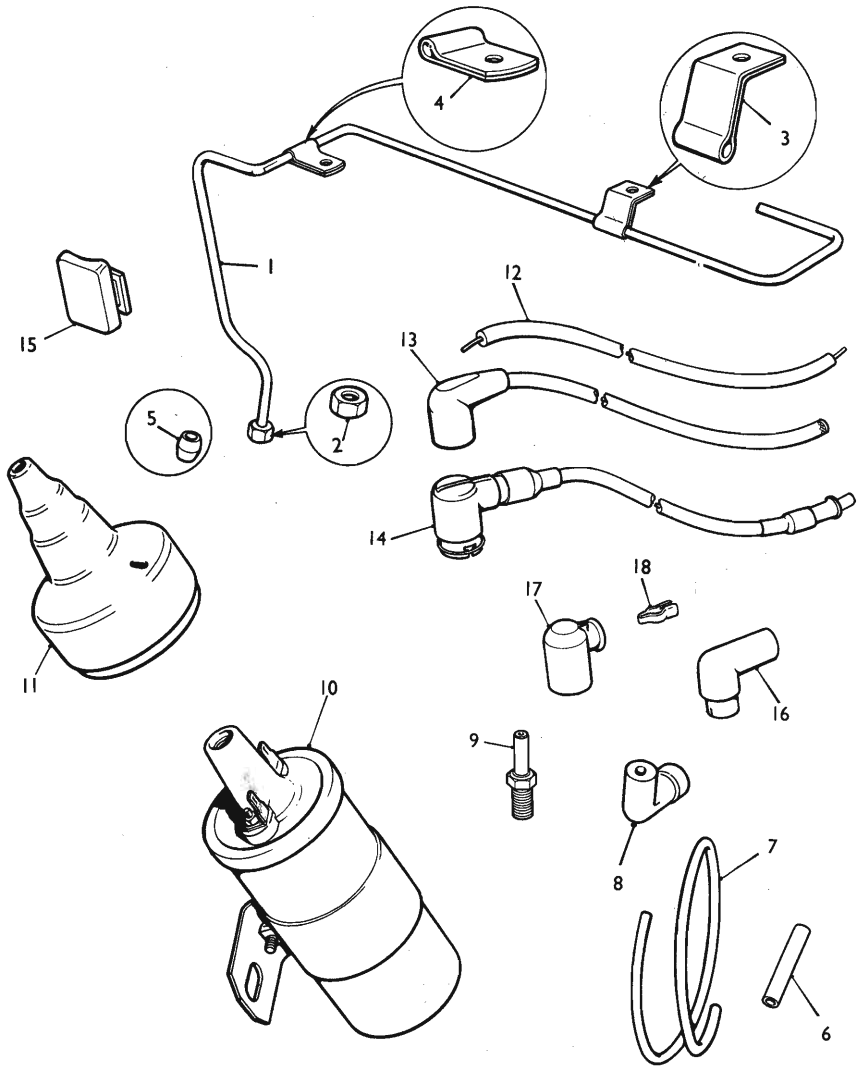

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		VACUUM CONTROL PIPE-IGNITION COIL-NOT 1500			
1	AEA 579	PIPE ASSEMBLY-VACUUM CONTROL	1		10CC,12CC,12CE, 12V/586,12V/588.
2	6K 650	Nut-distributor end	1		
4	ACH 9009	Clip-pipe to cylinder head	1		
1	12G 1652	PIPE ASSEMBLY-VACUUM CONTROL	1		12CD,12CJ,12V/ 587.
2	6K 650	Nut-distributor end	1		
5	6K 649	Olive	1		
3	PCR 209	Clip-pipe to gulp valve	1		
4	PCR 211	Clip-pipe to water outlet elbow	1		
6	ACH 9041	Connection-pipe to carburetter (rubber)	1		
7	37H 4229 M	Pipe-vacuum control(plastic)-20"(51cm)long	A/R		Supplied in 30 metre(100')rolls.
8	12B 2062	Connection-pipe	2		
9	12H 2461	Adaptor-vacuum ignition	1		
	PWZ 105	Washer-plain	2	(E)12V/587Z/101 TO(+) (E)12V/671Z/101 ON	
	LWZ 305	Washer-spring	2		
	NH 605041	Nut	2		
8	12B 2062	Connection-pipe	2		
10	GCL 110	Coil-ignition	1	Use prior to GCL 111	
10	GCL 111	Coil-ignition(ballast)	1		Midget 1500
	13H 9440	Resistor-electronic ignition driver-Ballast $	1		Midget 1500 USA and Canada
	HZS 405	Screw-coil to bracket on body	2		
	PWZ 204	Washer-plain	2		
	LWZ 204	Washer-spring	2		
	NH 604041	Nut	2		
11	8G 727	Cover-waterproof	1		Canada and Denmark.

(+) Change point not available.


107-H 8

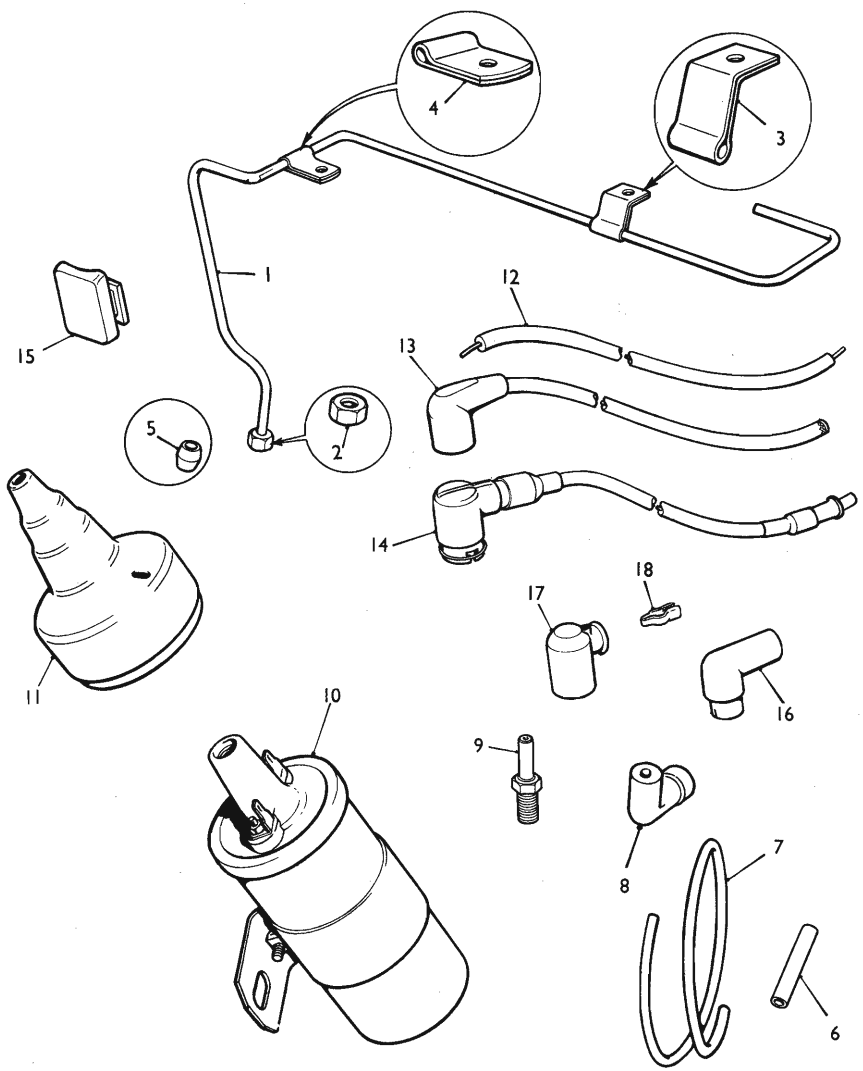

MHO223A


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		IGNITION CABLES-1098cc			
12	AAA 5981	CABLE-IGNITION	A/R		Supplied only in 110'(30 MeTRES) ROLLS
	AAA 5981	No.1 plug lead-12"(305mm)	1		
	AAA 5981	No.2 plug lead-11"(279mm)	1		
	AAA 5981	No.3 plug lead-8.5"(216mm)	1		
	AAA 5981	No.4 plug lead-9"(229mm)	1		
12	AAA 5981	Cable-coil to distributor-9"(229mm)	A/R		
		CABLE-IGNITION COMPLETE			
13	8G 2630	No.1 plug lead-14"(356mm)	1		Use with side ENTRY Distributor cap
13	8G 2630	No.2 plug lead-14"(356mm)	1		
13	8G 2629	No.3 plug lead-8.5"(216mm)	1		
13	8G 2629	No.4 plug lead-11"(279mm)	1		
		CABLE-IGNITION(WITH CONNECTORS)			
14	12G 346	No.1 plug lead-12"(305mm)	1		France
	12G 347	No.2 plug lead-12"(305mm)	1		
	12G 348	No.3 plug lead-9.5"(241mm)	1		
	12G 349	No.4 plug lead-9.5"(241mm)	1		
14	12G 350	Cable-coil to distributor (with connectors)-10.5"(267mm)	1		
15	BMK 1989	Seal(rubber)-distributor	2		
	2H 4245	Sleeve-identification-No.3 plug lead	1		
16	3H 1422	Suppressor-sparking plug	4		
17	8G 576	CONNECTOR ASSEMBLY-SPARKING PLUG	4		
18	7H 6894	Clip-cable end	4		

107-H 10

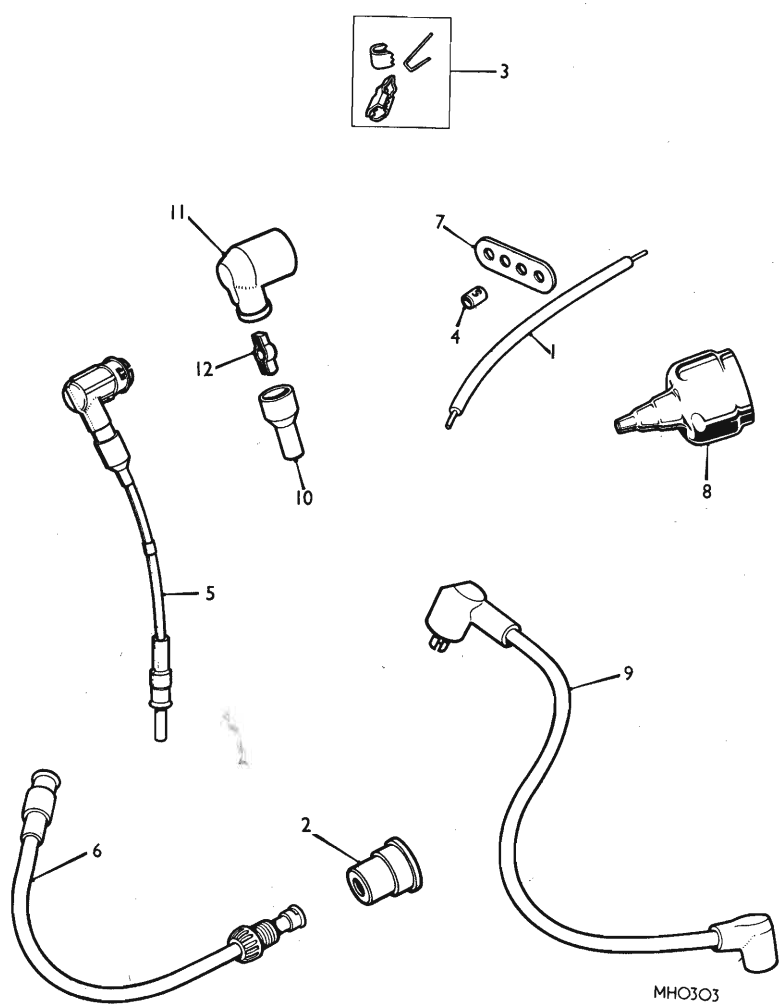


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		IGNITION CABLES-1275cc-POSITIVE EARTH ELECTRICAL SYSTEM			
1	AAA 5981 M	CABLE IGNITION-12CC	A/R		
	AAA 5981 M	No.1 plug-311mm(12.25″)	1		
	AAA 5981 M	No.2 plug-298mm(11.75″)	1		
	AAA 5981 M	No.3 plug-254mm(10″)	1		Supplied in 30 METRE(100′)ROLLS
	AAA 5981 M	No.4 plug-298mm(11.75″)	1		
1	AAA 5981 M	Cable-coil to distributor-298mm(11.75″)12CC	1		
		CABLE-IGNITION-COMPLETE			
9	8G 2630	No.1 and 2 plug-356mm(14″)	2		Use with side ENTRY DISTRIBUTOR
	8G 2628	No.3 plug-216mm(8.5″)	1		
	8G 2629	No.4 plug-279mm(11″)	1		
1	AAA 5981	Cable-coil to distributor-298mm(11.75″)	1		Supplied in 30 metre(100′)rolls
10	8G 728	Sleeve-sealing	4		12CC-Denmark
11	WC 200	CAP-SPARKING PLUG	4		Canada only
12	7H 6894	Clip-cable end	4		
4	2H 4245	Sleeve-identification-plug lead-No.3	1		
		CABLE IGNITION(WITH CONNECTORS)			
5	12G 346	No.1 plug	1		12CC French MARKET
	12G 347	No.2 plug	1		
	12G 348	No.3 plug	1		
	12G 349	No.4 plug	1		
6	12G 350	Cable-coil to distributor	1		
		CABLE-IGNITION(WITH CONNECTORS)-12CC			French market Use with DISTRIBUTOR 12G 2057
5	12G 2145	No.1 plug-305mm(12″)	1		
	12G 2146	No.2 plug-305mm(12″)	1		
	12G 2147	No.3 plug-241mm(9.5″)	1		
	12G 2148	No.4 plug-241mm(9.5″)	1		
6	12G 2149	Cable-coil to distributor-267mm(10.5″)	1		
7	1G 2673	Spacer-ignition cable	NLA		

107-H 12

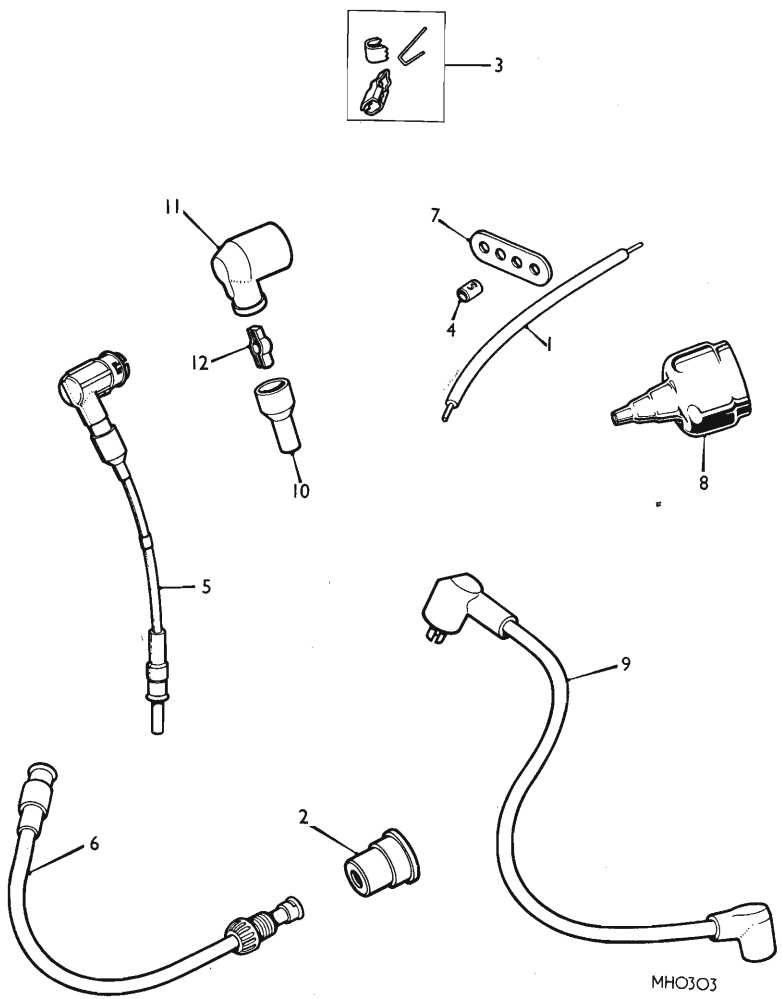


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		IGNITION CABLES-1275cc-NEGATIVE EARTH ELECTRICAL SYSTEM-12CD,12CE,12CJ AND 12V			
1	AAA 5981 M	CABLE-IGNITION	A/R		Supplied in 30 METRE(100')ROLLS
	AAA 5981 M	No.1 plug-12.25"(311mm)	1		
	AAA 5981 M	No.2 plug-11.75"(298mm)	1		
	AAA 5981 M	No.3 plug-10"(254mm)	1		
	AAA 5981 M	No.4 plug-11.75"(298mm)	1		
	AAA 5981 M	Cable-coil to distributor-9"(229mm)	A/R		
		CABLE-IGNITION-COMPLETE			
	12H 3348	No.1 and 2 plug-11.5"(292mm)	2		Use with vertical ENTRY DISTRIBUTOR
	32H 352	Cable-coil to distributor-11.5"(292mm)	1		
	12G 2514	Cover-coil-vented	1		
4	2H 4245	Sleeve-identification-plug lead-No.3	1		
		CABLE-IGNITION(WITH CONNECTORS)			
5	12G 346	No.1 plug	1		French market
	12G 347	No.2 plug	1		
	12G 348	No.3 plug	1		
	12G 349	No.4 plug	1		
		CABLE-IGNITION(WITH CONNECTORS)12CD,12CE,12V			
5	12G 2145	No.1 plug-12"(305mm)	1		French market. Use with DISTRIBUTOR 12G 2057
	12G 2146	No.2 plug-12"(305mm)	1		
	12G 2147	No.3 plug-9.5"(241mm)	1		
	12G 2148	No.4 plug-9.5"(241mm)	1		
6	12G 2149	Coil to distributor-10.5"(267mm)	1		
7	12G 2673	Spacer-ignition cable	1		
8	12G 1980	Cover-ignition coil	1		

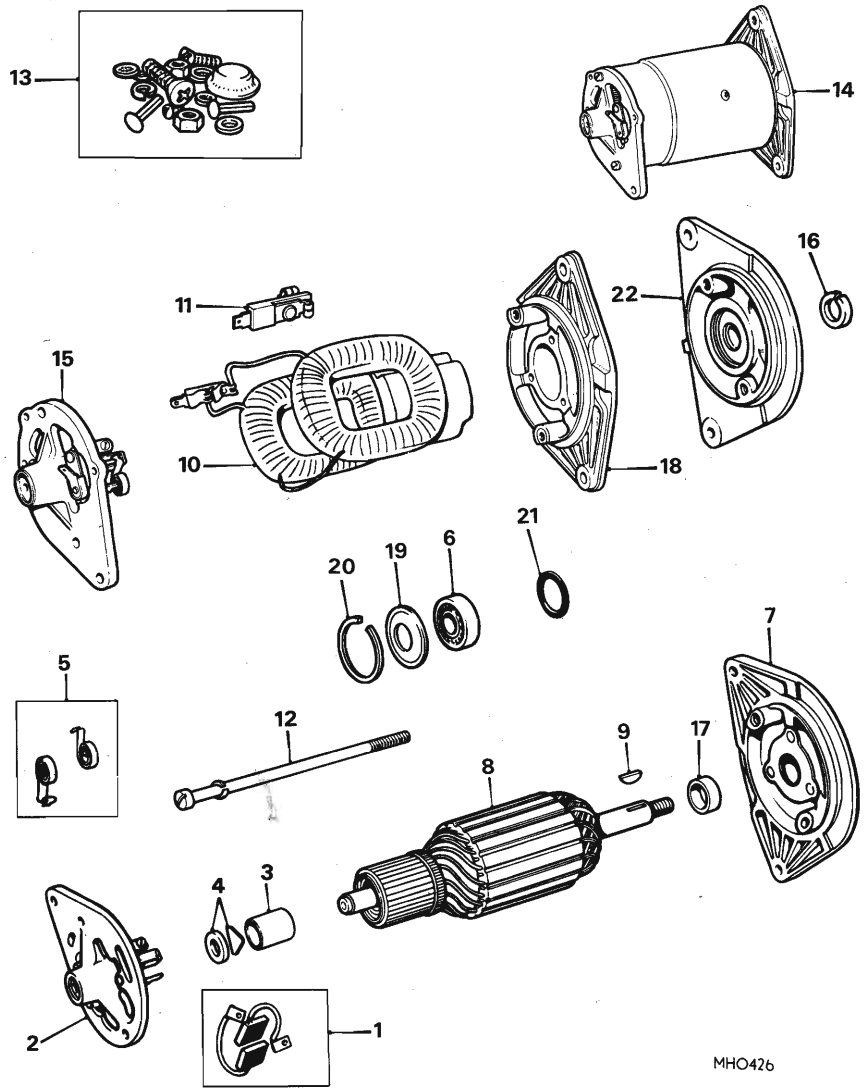


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DYNAMO-POSITIVE EARTH ELECTRICAL SYSTEM			
	13H 826	DYNAMO ASSEMBLY(22742)	NLA		Use BMK 1241
1	GGB 102	Brush	1SET		
2	17H 6821	BRACKET ASSEMBLY-COMMUTATOR END	1		
3	7H 5390	Bush	1		
4	47H 5394	Oiler	1		
5	47H 5389	Spring-brush tension	1SET		
6	97H 626	Bearing-drive end	1		
7	17H 6822	Bracket-drive end	1		
	FNN 207	Nut-shaft	1		
	LWZ 207	Washer-spring	1		
8	37H 4310	Armature	1		
9	WKN 404	Key-armature	1		
10	37H 6787	COIL ASSEMBLY-FIELD	1SET		
11	37H 3752	Terminal-coil	1		
12	17H 5217	Bolt-bracket fixing	2		
13	57H 5085	Sundry parts	1SET		
	13H 219	DYNAMO ASSEMBLY(22700 A to M)	NLA		Use BMK 1241
1	GGB 102	Brushes	1SET		
15	47H 5395	BRACKET ASSEMBLY-COMMUTATOR END	1		
4	47H 5394	Oiler	1		
3	7H 5390	Bushing	1		
5	47H 5389	Spring-brush tension	1		
6	97H 626	Bearing-drive end	1		
16	27H 3548	Collar-bearing	1		
17	27H 3798	Retainer	1		
18	27H 7647	BRACKET ASSEMBLY-DRIVE END	1		
19	27H 3831	Plate-retaining	1		
20	37H 1878	Circlip	1		
21	27H 3832	'O'ring	1		
	FNZ 207	Nut	1		
	LWN 207	Washer-shakeproof	1		
8	37H 4310	Armature	1		
9	WKN 404	Key	1		
10	37H 6787	COIL ASSEMBLY-FIELD	1		
11	37H 3752	Terminal	1		
12	17H 5217	Bolt-fixing	2		
13	37H 6836	Sundry parts	1		

107-H 16

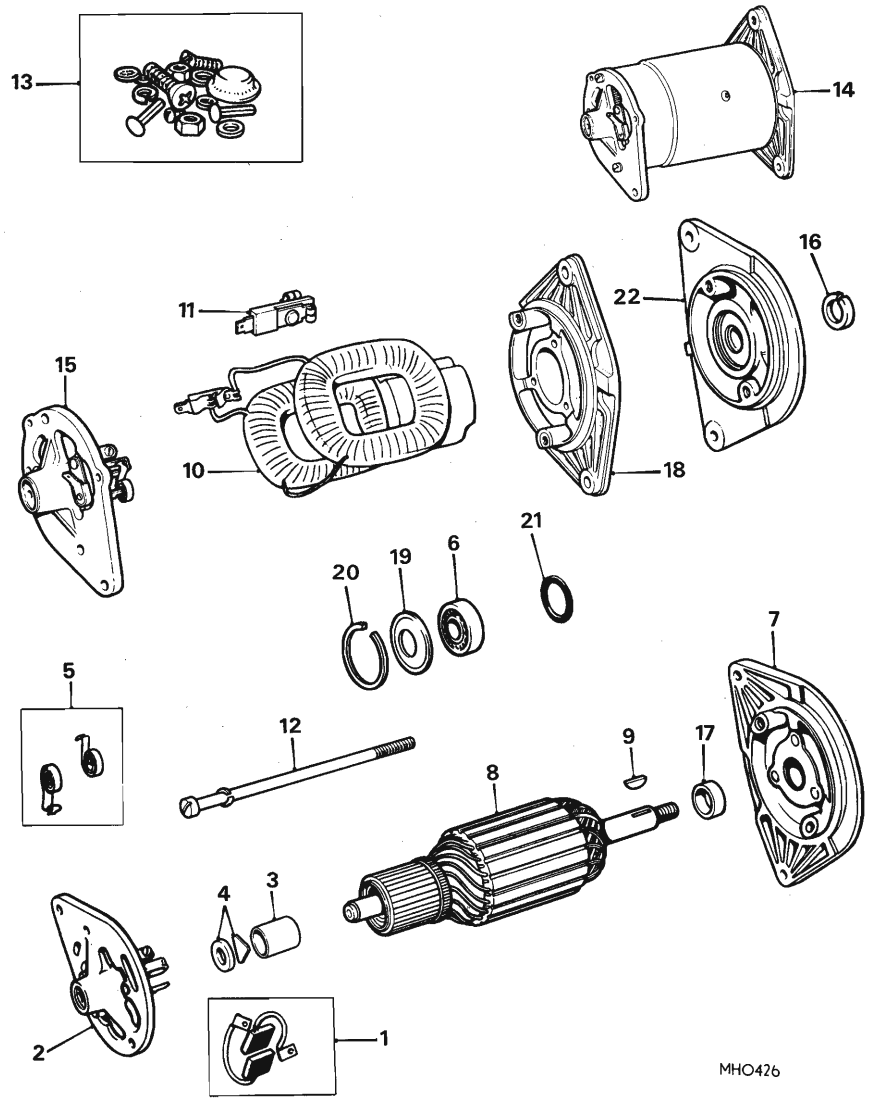


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		DYNAMO-POSITIVE EARTH ELECTRICAL SYSTEM-continued			
	13H 4813	DYNAMO ASSEMBLY(22775)-12CD, 12CE ..... NLA			Use BMK 1241 See TIB 1B 90 for repolarisation instructions.
1	GGB 102	Brush	1SET		
2	17H 6821	BRACKET ASSEMBLY-COMMUTATOR END	1		
3	7H 5390	Bush	1		
4	47H 5394	Oiler	1		
5	47H 5389	Spring-brush tension	1SET		
6	97H 626	Bearing-drive end	1		
22	37H 3348	BRACKET ASSEMBLY-DRIVE END	1		
19	27H 3831	Plate-bearing retainer	1		
20	37H 1878	Circlip	1		
21	27H 3832	'O'ring-oil seal(rubber)	1		
16	27H 3548	Collar-drive end bearing	1		
17	27H 3798	Retainer-bearing ring	1		
8	37H 4310	Armature	1		
9	WKN 404	Key	1		
	FNN 207	Nut-shaft	1		
	LWN 207	Washer-spring	1		
10	37H 6787	COIL ASSEMBLY-FIELD	1SET		
11	37H 3752	Terminal	1		
12	17H 5217	Bolt-through-fixing	2		
13	57H 5085	Sundry parts	1SET		
	BMK 1241	DYNAMO ASSEMBLY(22715)	1		
18	27H 7647	Bracket-drive end	1		
	37H 6834	Kit-bearing retention	1		
	97H 626	Bearing-drive end	1		
8	37H 4310	Armature	1		
	37H 6787	Kit-field coil	1		
	37H 3752	Kit-terminal	1		
15	47H 5395	BRACKET ASSEMBLY-COMMUTATOR END	1		
4	47H 5394	Oiler	1		
3	7H 5390	Bearing-bush	1		
5	47H 5389	Spring-bush	1		
1	GGB 102	Brush set	1SET		
12	17H 5217	Bolt-through-fixing	2		
13	37H 6836	Kit-sundry parts	1SET		

107-H 18

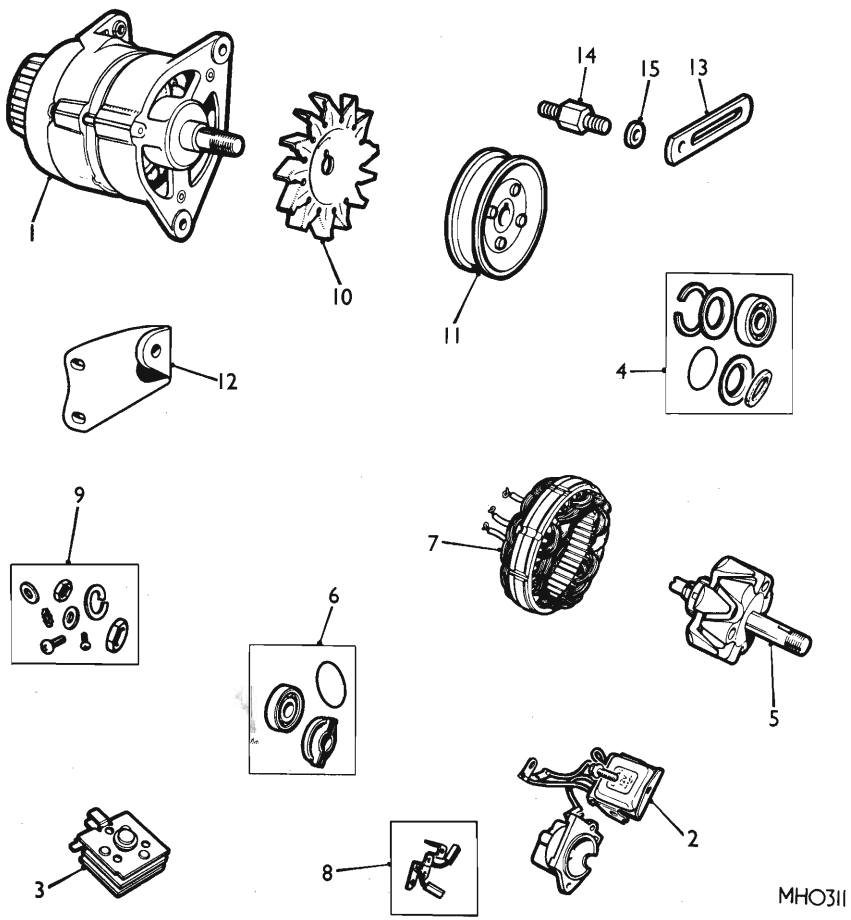

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		ALTERNATOR AND FITTINGS-1275cc-12V-OPTIONAL EXTRA			
1	37H 7331	ALTERNATOR ASSEMBLY-16ACR (23606,23685A)	NLA	Use prior to 37H 8208	Use 37H 8314
1	37H 8314	ALTERNATOR ASSEMBLY-16ACR	1		
	37H 8208	ALTERNATOR ASSEMBLY-(17ACR)	1	(E)12V/588F/2551 ON (E)12V/671Z/9570 ON (E)12V/778F/101 ON	
2	37H 6911	Regulator	1		Use with 37H 7331.
3	37H 6913	Rectifier	1		
2	37H 7964	Regulator	1		Use with 37H 8314 and 37H 8208.
3	37H 7965	Rectifier	1		
4	18G 8619	Kit-drive end bracket	1		
5	37H 4196	Rotor	1		Use with 37H 7331 and 37H 8314.
5	37H 6024	Rotor	1		Use with 37H 8208.
6	18G 8620	Kit-bearing-slip ring end	1		
7	37H 2257	Stator	1		Use with 37H 7331 and 37H 8314.
7	37H 6023	Stator	1		Use with 37H 8208.
	37H 6915	Brush box	1		
8	37H 4199	Brush	1SET		
9	37H 2258	Kit-sundry parts	1		
	37H 7517	Device-surge protection	1		Use with 37H 8314 and 37H 8208.
	37H 7963	Capacitor-suppression	1		

107-H 20

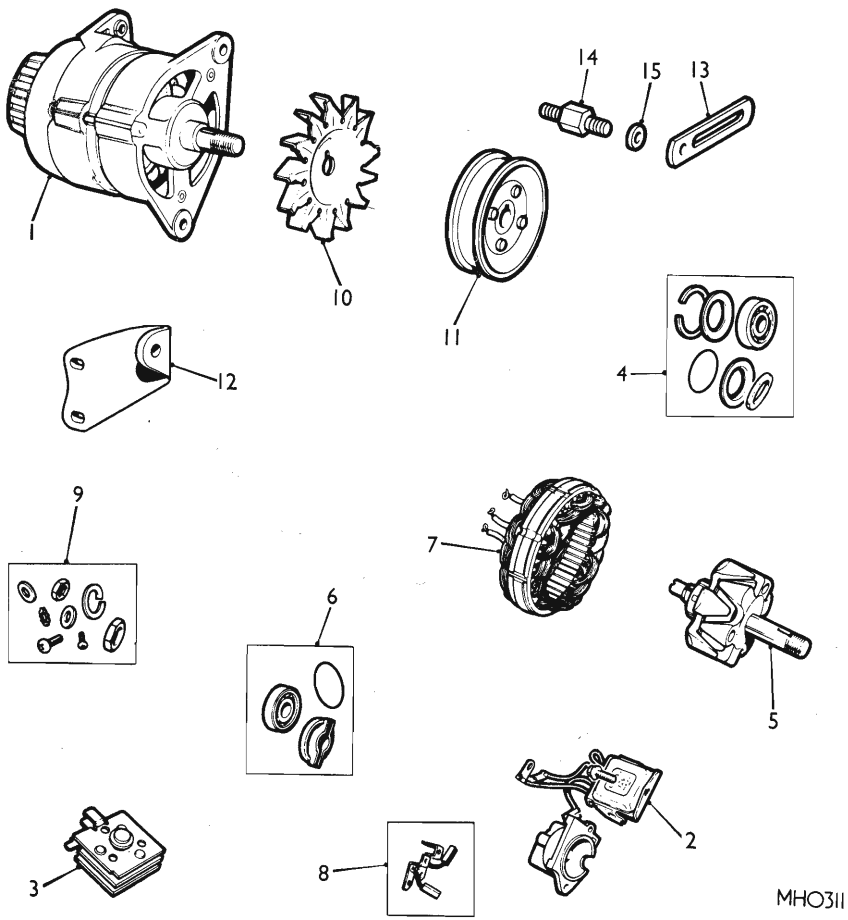


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		ALTERNATOR AND FITTINGS-1275CC-12V-OPTIONAL EXTRA-Continued.			
10	12H 2515	Fan	NLA		Use 13H 9551.
10	13H 9551	Fan	1		
11	12G 1054	Pulley	1	Use prior to 37H 7061.	
11	13H 7061	Pulley	1	(E)12V/588F/3193 ON. (E)12V/671Z/12846 ON. (E)12V/778F/101 ON.	
12	12G 1053	Bracket-rear	1		
13	2A 497	Link-adjusting	1		
14	12G 3037	Pillar-adjusting link	1		
	LNZ 206	Nut-link to pillar	1		
15	1B 8806	Washer	1		
	SH 605131	Bolt-alternator to bracket	1		
	LWN 305	Washer-spring	1		
	WC 108051	Washer-plain	1		
	LNZ 205	Nut	1		
	BH 605151	Bolt-alternator to water pump	1		
	LWZ 305	Washer-spring	1		
	GHF 301	Washer-plain	1		
	LNZ 205	Nut	1		
	SH 605071	Screw-alternator to crankcase	2		
	LWZ 305	Washer-spring	2		
	SH 505051	Screw-link to alternator	1		
	LWZ 305	Washer-spring	1		
	NT 606041	Nut-alternator adjusting link	1		
	WL 600061	Washer-spring			

107-H 20.02

ILLUSTRATION TO FOLLOW

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		ALTERNATOR AND FIXINGS-MIDGET 1500.			
	37H 8314	ALTERNATOR ASSEMBLY-BATTERY SENSED-16ACR	1		
	37H 7964	Regulator	1		
	37H 7965	Rectifier	1		
	18G 8619	Kit-bearing-drive end	1		
	37H 4196	Rotor	1		
	18G 8620	Kit-bearing-slip ring end	1		
	37H 2257	Stator	1		
	37H 4199	Brush-set	1		
	37H 2258	Sundry parts-set	1		
	37H 7517	Device-surge protection	1		
	37H 7963	Capacitor-suppression	1		
	147990	Fan-alternator	1		
	154334	Pulley-alternator	1		
	147899	Bracket-mounting	1		
	CHA 304	Bracket-mounting	1		USA and Canada.
	WL 600051	Washer-lock	2		
	GHF 103	Setscrew	2		
	HB 839	Bolt-pivot	1		Not USA and Canada.
	147483	Spacer-pivot bolt	1		
	WP 139	Washer-plain	1		
	143802	Nut	1		
	UKC 3128	Tube-distance	1		USA and Canada.
	HB 841	Bolt	1		
	156464	Link-adjusting and lifting eye-front	1		
	HU 858	Screw-link to alternator	1		
	WP 17	Washer	2		
	JN 2158	Nut	1		
	GFB 105	Belt-fan	1		
	CHA 328	Belt-fan	1		USA and Canada.

107-H 20.04

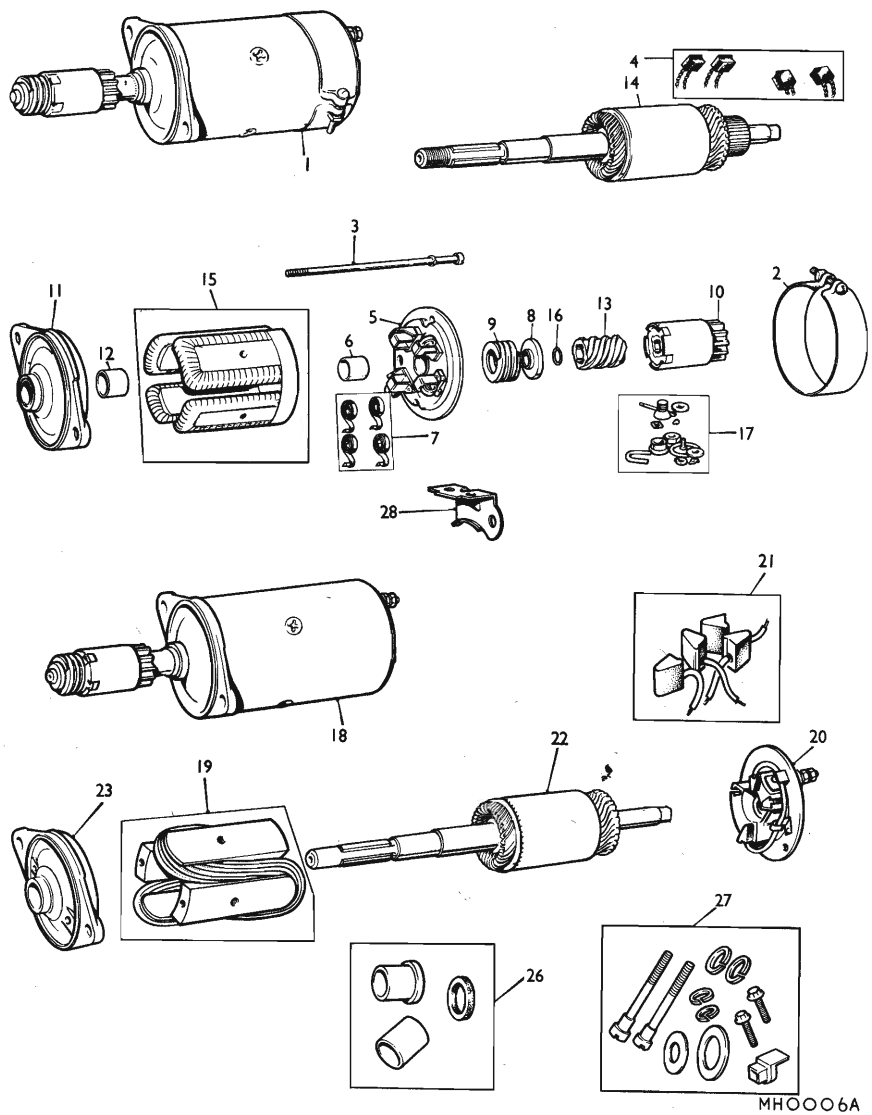


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STARTER-EXCEPT MIDGET 1500.			
	13H 559	STARTER ASSEMBLY (25079 A to H)	NLA		Use 13H 5798.
2	7H 5038	Band-cover	1		
3	7H 5040	Brush	1SET		
4	27H 6768	BRACKET ASSEMBLY-COMMUTATOR END	1		
5	47H 5340	Bush	1		
6	47H 5341	Spring-brush tension	1SET		
7	27H 3755	Cap-shaft	1		
8	67H 5014	BRACKET ASSEMBLY-DRIVE END	1		
9	47H 5346	Bush	1		
10	67H 5012	Armature	1		
11	7H 5051	Coil-field	1SET		
12	7H 5045	Spring-main	1		
13	67H 5010	Pinion and barrel	1		
14	7H 6887	Ring-spring and pinion retaining	1		
15	67H 5013	Sleeve-screwed	1		
16	17H 5444	Bolt-bracket fixing	2		
17	7H 5156	Sundry parts	1SET		
18	13H 5798	STARTER ASSEMBLY-TYPE M35J (25149)	1		
19	37H 4670	Coil-field	1SET		
20	37H 4672	Bracket-commutator end	1		
21	37H 4673	Brushes	NLA		Use GSB 105.
21	GSB 105	Brushes	1SET		
22	37H 4674	Armature	1		
23	37H 4675	Bracket-drive end	1		
14	7H 6887	Ring-jump	1		
7	27H 3755	Cup-shaft	1		
12	7H 5045	Spring-main	1		
13	67H 5010	Pinion and barrel	1		
15	67H 5013	Sleeve-screwed	1		
25	37H 4678	Kit-bush	1		
	BH 606141	Bolt-starter to rear mounting plate	2		
	WL 600061	Washer-spring	2		
	NH 606041	Nut	2		
	13H 4044	Relay-starter motor solenoid	1	(C)G-AN5-138801 ON	N.America

107-H22

ILLUSTRATION TO FOLLOW


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STARTER AND FIXINGS-MIDGET 1500.			
	13H 5798	STARTER ASSEMBLY-TYPE M35J	1		
	37H 4670	Coil-field-set	1		
	37H 4672	Bracket-commutator end	1		
	GSB 105	Brush-set	1		
	37H 4674	Armature	1		
	37H 4675	Bracket-drive end	1		
	7H 6887	Ring-jump	1		
	27H 3755	Cup-shaft	1		
	7H 5045	Spring-main	1		
	67H 5010	Pinion and barrel	1		
	67H 5013	Sleeve-screwed	1		
	37H 4678	Kit-bush	1		
	131570	Piece-packing	1		
	104549	Shim	1		
	BH 606071	Bolt	2		
	WE 600061	Washer	2		
	WL 600061	Washer-lock	2		
	NH 606041	Nut	2		

107-H 22.02

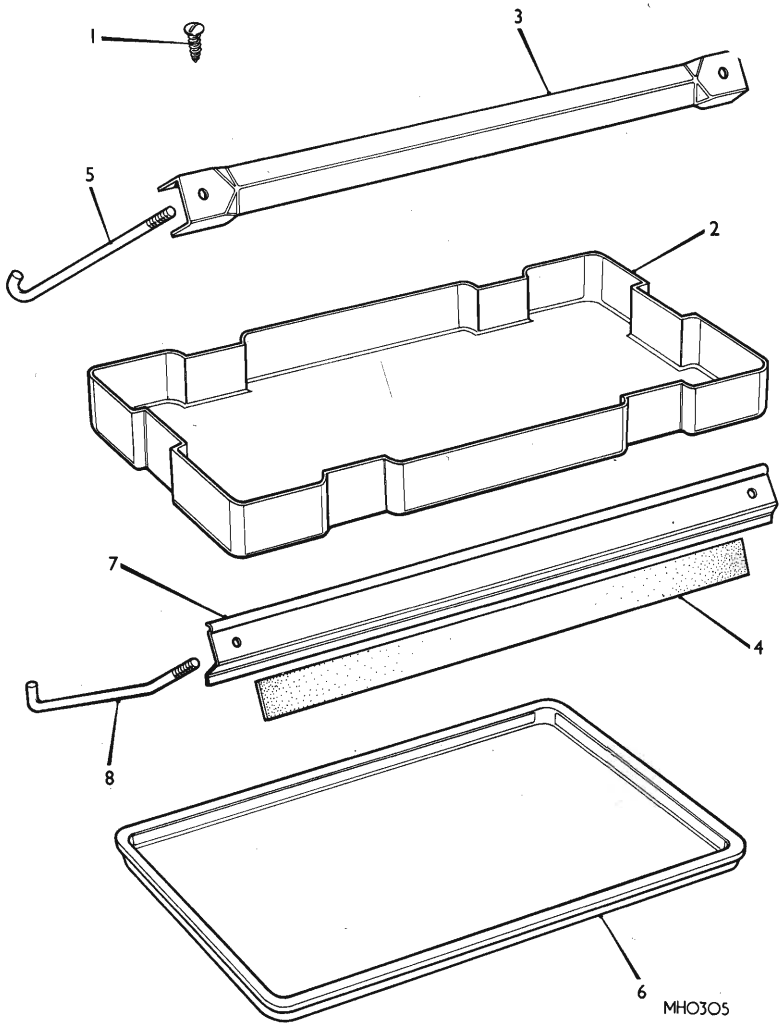


BATTERY AND FIXINGS.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
	NSP	Battery	1		
1	2K 8645	Screw-terminal	2		
2	AHA 6305	Tray-battery	1	(C)H-AN8-38829 TO 64734	
3	AHA 6934	Bar-battery fixing	1		
4	37H 3743	Packing-bar to battery	A/R	(C)H-AN9-64735 TO 72040	Supplied in multiples of feet.
5	AHA 7769	Rod-battery fixing	2	(C)G-AN3-25788 TO 52389 (C)G-AN4-52390 TO 60459	
6	ACA 9673	Tray-battery	1	(C)H-AN9-72041 TO 85286	
7	34G 2065	Bar-battery	1		
4	37H 3743	Packing-bar to battery	A/R	(C)H-AN10-85287 TO 86803	Supplied in multiples of feet
8	AHA 8674	Rod-battery	1	(C)A-AN10-86804 TO 87824 (C)G-AN4-60460 TO 74885 (C)G-AN5-74886 ON	
	LWZ 204	Washer-spring	2		
	NH 604041	Nut	2		

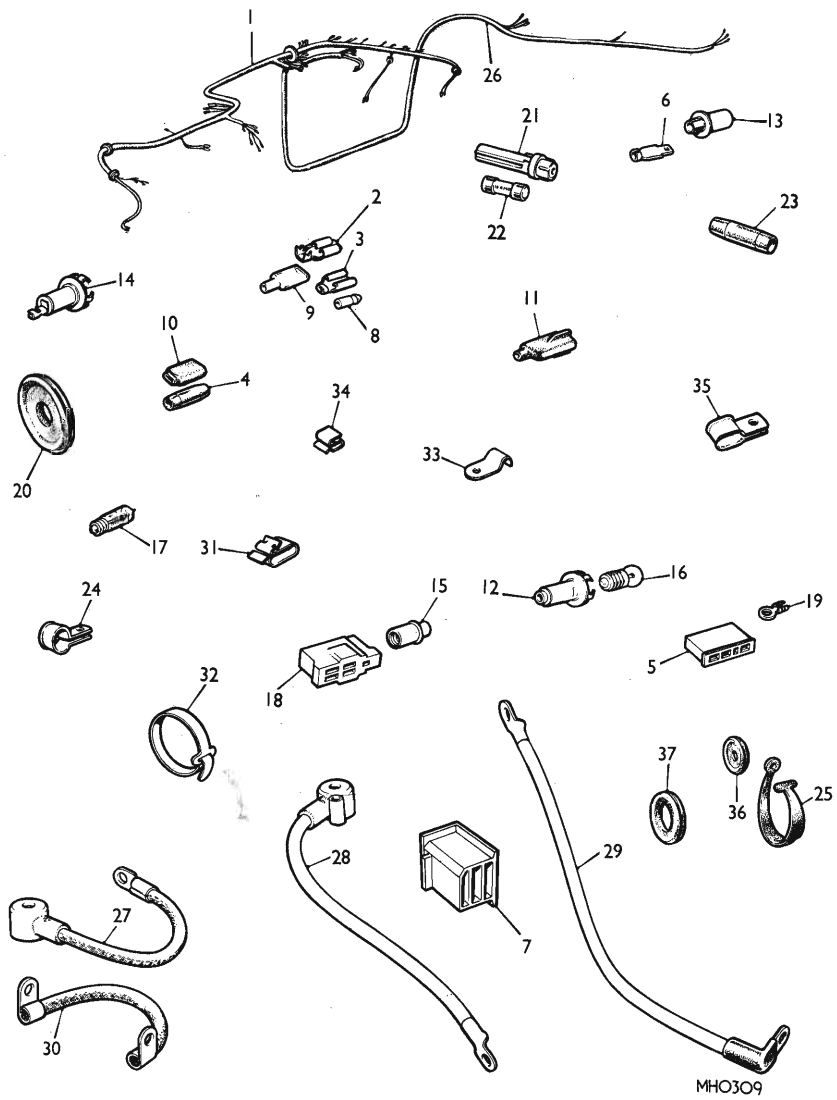

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WIRING CABLES AND FITTINGS CONNECTORS,AND BULB HOLDERS.			
1	AHA 7780	CABLE ASSEMBLY-MAIN HARNESS .....NLA		(C)H-AN8-38829 TO 64734 (C)G-AN3-25788 TO 52389	
1	AHA 8694	CABLE ASSEMBLY-MAIN HARNESS-EXCEPT N.AMERICA .....NLA		Use prior to AHA 9612	
1	AHA 9612	CABLE ASSEMBLY-MAIN HARNESS 1		(C)H-AN10-85287 TO 86302 (C)G-AN5-74886 TO 89514	Except USA, Canada and Sweden.
1	AHA 9763	CABLE ASSEMBLY-MAIN HARNESS .....NLA		(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 TO 105500	Except USA and Canada.
1	AHA 9923	CABLE ASSEMBLY-MAIN HARNESS 1		(C)G-AN5-105501 TO 128262	
1	CHA 46	CABLE ASSEMBLY-MAIN HARNESS 1		(C)G-AN5-128263 TO 138800	
1	CHA 214	CABLE ASSEMBLY-MAIN HARNESS 1		(C)G-AN5-138801 TO 154100	
1	CHA 455	CABLE ASSEMBLY-MAIN HARNESS 1		(C)G-AN6-154101 ON	

107-H 26

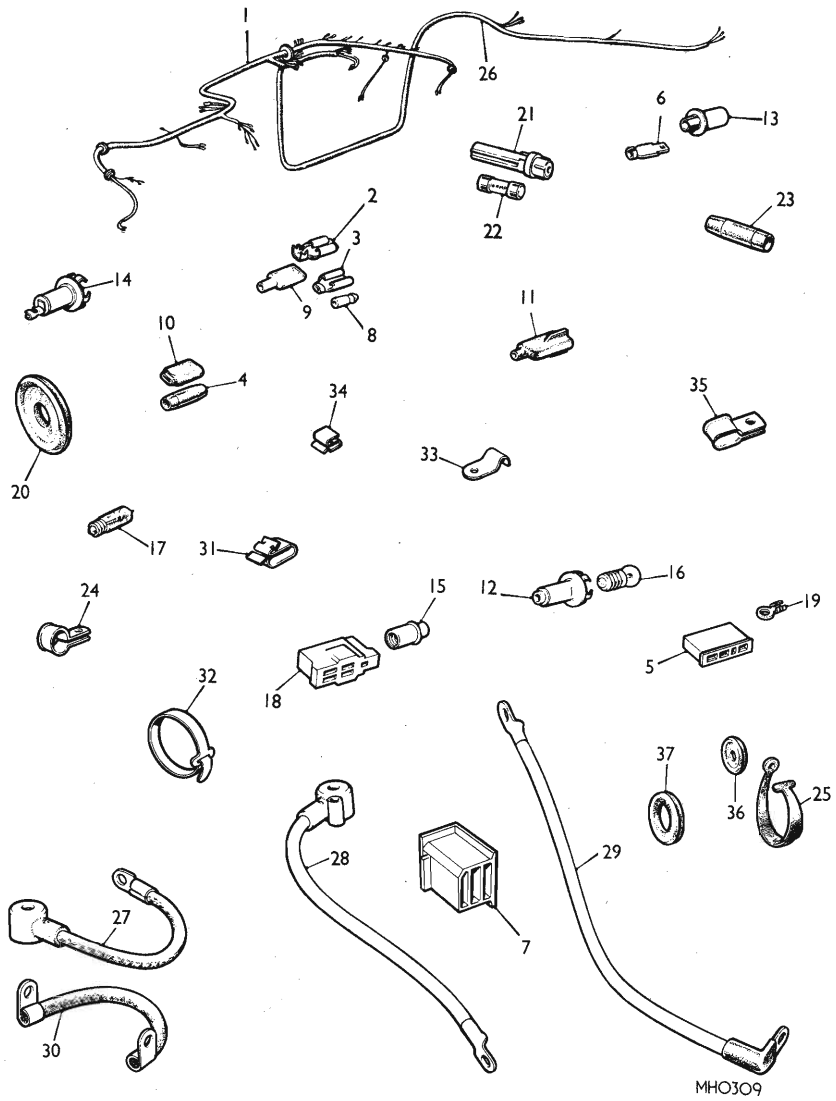


107— H26 · O 1

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WIRING CABLES AND FITTINGS CONNECTORS,AND BULB HOLDERS-continued			
1	AHA 8692	CABLE ASSEMBLY-MAIN HARNESS-N.AMERICA	1		Used with rocker type switches with two blade wiper system.
1	AHA 8953	CABLE ASSEMBLY-MAIN HARNESS-N.AMERICA	1	Use prior to AHA 9611	Used with rocker type switches with three blade wiper system.
1	AHA 9611	CABLE ASSEMBLY-MAIN HARNESS	1	(C)H-AN10-85287 TO 86302 (C)G-AN5-74886 TO 89514	USA,Canada and Sweden.
1	AHA 9730	CABLE ASSEMBLY-MAIN HARNESS	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 TO 105500	
1	AHA 9922	CABLE ASSEMBLY-MAIN HARNESS	1	(C)G-AN5-105501 TO 112275	
1	AHA 9962	CABLE ASSEMBLY-MAIN HARNESS	1	(C)G-AN5-112276 TO 123730	
1	CHA 142	CABLE ASSEMBLY-MAIN HARNESS	1	(C)G-AN5-123731 TO 138000	USA and Canada
1	CHA 213	CABLE ASSEMBLY-MAIN HARNESS	1	(C)G-AN5-138801 TO 154100	
1	CHA 454	CABLE ASSEMBLY-MAIN HARNESS $	1	(C)G-AN6-154101 TO 159053	
1	CHA 524	CABLE ASSEMBLY-MAIN HARNESS $	1	(C)G-AN6-159054 TO 166300	
1	CHA 569	CABLE ASSEMBLY-MAIN HARNESS $	1	(C)G-AN6-166304 ON	


$ This item is subject to safety regulations

107-H 26.02

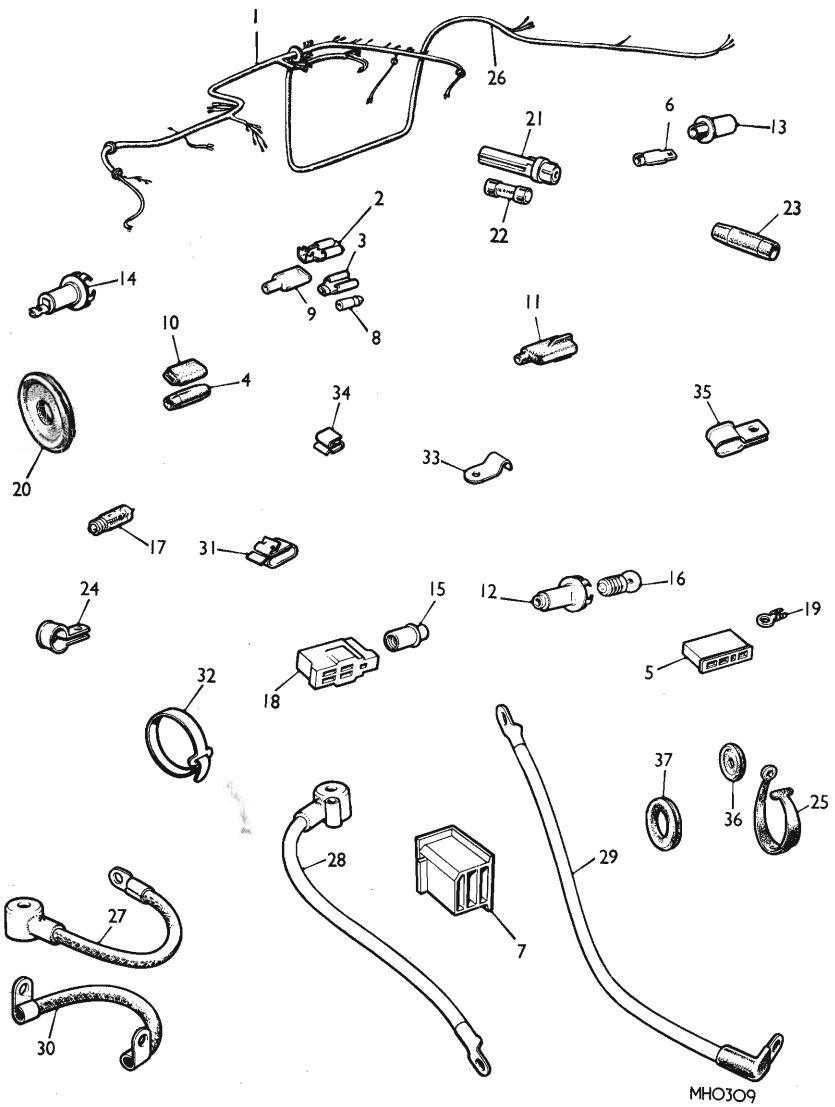


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WIRING CABLES AND FITTINGS,CONNECTORS AND BULB HOLDERS-continued			
		CONNECTOR			
2	47H 5419	Socket-single(35amp)	A/R		
2	47H 5496	Socket-single(17.5amp)	A/R		
3	RTC 220	Socket-double(17.5amp)	A/R		
4	104618	Snap-single-2-way	A/R		
	RTC 603	Snap-single-4-way	A/R		
	BHA 4460	Snap-single-6-way	A/R		
5	BMK 1398	Blade	A/R		
6	BHA 4552	Blade(6amp)	A/R		Use with main harness AHA 8692
2	13H 2055	Socket	A/R		Use with main harnesses AHA 9730 and AHA 9763
2	13H 2050	Socket-single	A/R		
8	3632	Plug-snap connector	A/R		
		SLEEVE-INSULATOR			
9	515399	35amp connector	A/R		
9	511269	17.5amp connector	A/R		
10	5L 287	17.5 amp double connector	A/R		
11	27H 8849	Main harness	A/R		Use with main harness AHA 8692
11	BMK 449	(14amp)	NLA		
12	13H 1923	Bulb holder(screw type)-instrument illumination	A/R		
13	13H 1926	Bulb holder(screw type)-instrument illumination and warning lamp	A/R		
14	13H 1925	Bulb holder(bayonet type)-ignition,main beam and oil filter warning light	A/R		
16	GLB 987	Bulb(screw type)	A/R		
17	GLB 281	Bulb(bayonet type)	A/R		
18	BMK 1409	Socket-moulded-5-way	A/R		Use with main harness AHA 8694
19	17H 5287	Eyelet-.75″	NLA		
19	2H 4528	Eyelet-.25″ earthing	A/R		
20	2H 2065	Grommet	A/R		

107-H 28

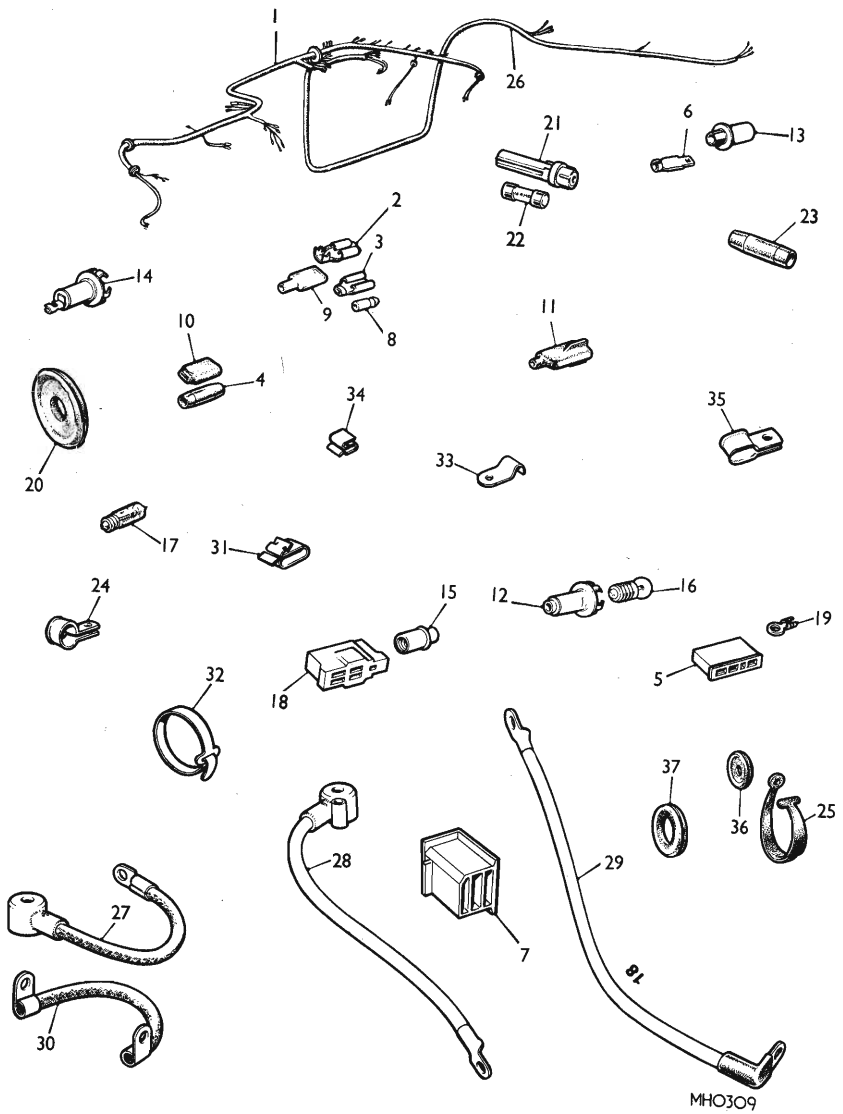


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WIRING CABLES AND FITTINGS,CONNECTORS AND BULB HOLDERS-continued			
21	7H 6978	Holder-fuse	2		
22	27H 5903	Fuse-10amp	NLA		Use GFS 410
22	GFS 410	Fuse-10amp	A/R		
23	104618	Connector-snap	2		
8	3632	Plug	4		USA and Canada
24	PCR 709	Clip	NLA		
	LWZ 204	Washer-spring	1		
	NH 604041	Nut	1		
25	13H 6107	Strap-cable	1/2		Quantity increased when optional extra indicator switch is fitted.
26	AHA 8421	CABLE ASSEMBLY-BODY HARNESS	NLA	Use prior to AHA 9614	
26	AHA 9614	CABLE ASSEMBLY-BODY HARNESS	1	(C)H-AN10-85287 TO 86302	Except USA and Canada
26	AHA 9613	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN5-74886 TO 89514	USA and Canada
26	AHA 9765	CABLE ASSEMBLY-BODY HARNESS	1	Use prior to CHA 432	Except USA and Canada
26	CHA 432	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN6-154101 ON	
26	AHA 9764	CABLE ASSEMBLY-BODY HARNESS	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 TO 105500	USA and Canada
26	AHA 9952	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN5-105501 TO 112275	
26	AHA 9963	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN5-112276 TO 138800	
26	CHA 215	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN5-138801 TO 154100	
26	CHA 407	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN6-154101 TO 159053	
26	CHA 525	CABLE ASSEMBLY-BODY HARNESS	1	(C)G-AN6-159054 ON	
2	BMK 1398	Connector-socket-single	A/R		Use with body harnesses AHA 9765 and AHA 9764
4	104618	Connector-snap-single	A/R		
	RTC 603	Connector-snap-double	A/R		
2	47H 5496	Connector-socket-single(14amp)	2		
8	3632	Nipple-snap connector	A/R		
9	511269	Insulator-socket connector	2		
	CHA 429	CABLE ASSEMBLY-FASCIA HARNESS-RHD	1	(C)G-AN6-154101 ON	

107-H 30

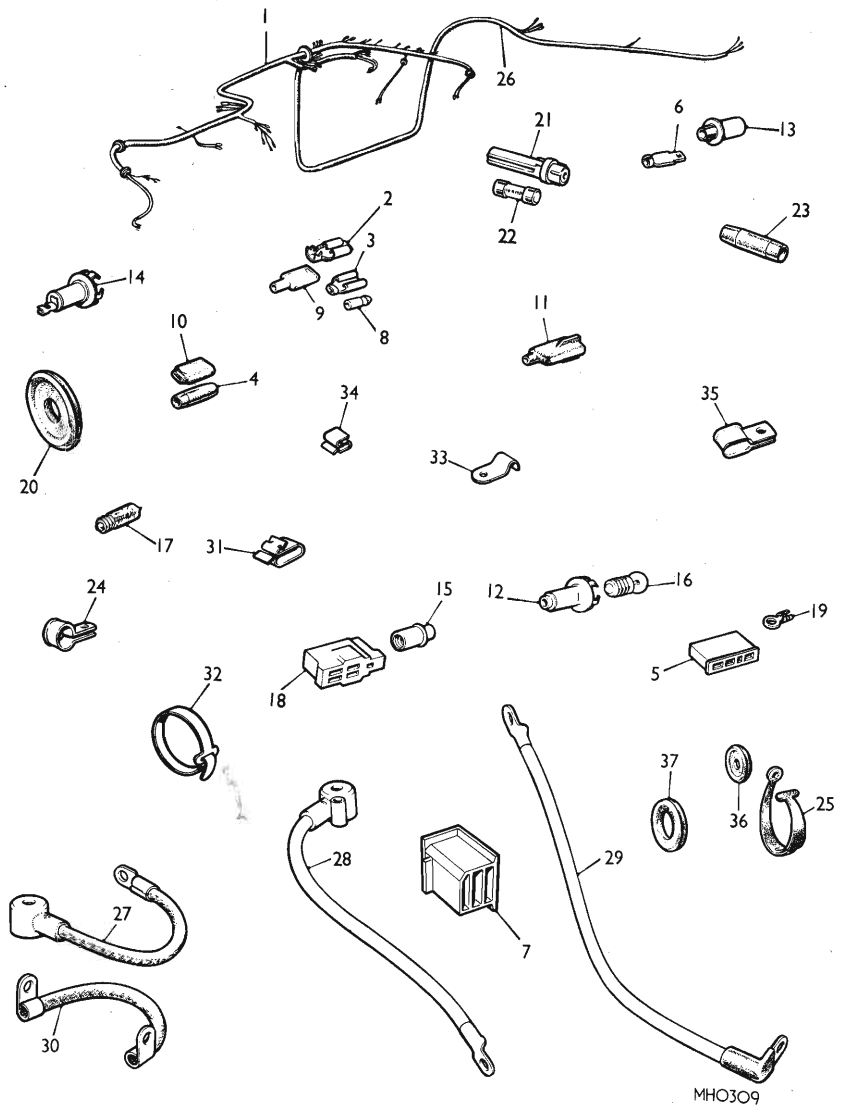

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WIRING CABLES AND FITTINGS,CONNECTORS AND BULB HOLDERS-continued			
		CABLE-BATTERY			
27	1B 2802	Positive to earth	1		(C)H-AN8-38829 TO 64734
28	BHA 4257	Negative to starter switch	1		(C)H-AN9-64735 TO 72040 (C)G-AN3-25788 TO 52389 (C)G-AN4-52390 TO 60459
28	BHA 5062	Positive to solenoid	1		(C)H-AN9-72041 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60460 TO 74885 (C)G-AN5-74886 ON
27	AHA 8697	Negative to earth	1		
29	AHA 7776	Cable-starter switch to starter	1		Use prior to CHA 390
29	CHA 390	Cable-starter switch to starter	1		(C)G-AN6-154101 ON
30	2K 6167	Cable-engine to earth	1		Use prior to AHH 5452.
	AHH 5452	Cable-engine to earth	1		(C)G-AN6-154101 ON
	HZS 504	Screw	1		
	LWZ 305	Washer-spring	1		
	LWZ 306	Washer-spring	1		
24	PCR 607	Clip-harness to wheelarch	1		
31	BHA 4473	Clip-harness to bonnet locking platform	1		
31	BHA 4473	Clip-harness to bonnet locking platform	2		
24	PCR 607	Clip-headlamp and sidelamp harness	2		
32	AHH 7108	Clip-cables to column	A/R		
33	CHR 405	Clip-harness to sill	2		
24	PCR 507	Clip-harness to tail lamp fixing stud	2		
34	BMK 385	Clip-fuel pump and tank unit cables to tank	4		
24	PCR 807	Clip-negative cable to foot-well	1		
	PTZ 603	Screw	2		
	FNZ 103	Nut	2		
	LWZ 203	Washer-spring	2		
	PMZ 308	Screw	1		
	LWZ 203	Washer-spring	1		
	PMZ 412	Screw-harness-earth to dash	1		
	LWZ 204	Washer-spring	1		
36	RFR 305	Grommet-harness	2		
37	RFR 110	Grommet-harness	NLA		
36	RFR 305	Grommet-wiper motor cable through dash	1		


107-H 32

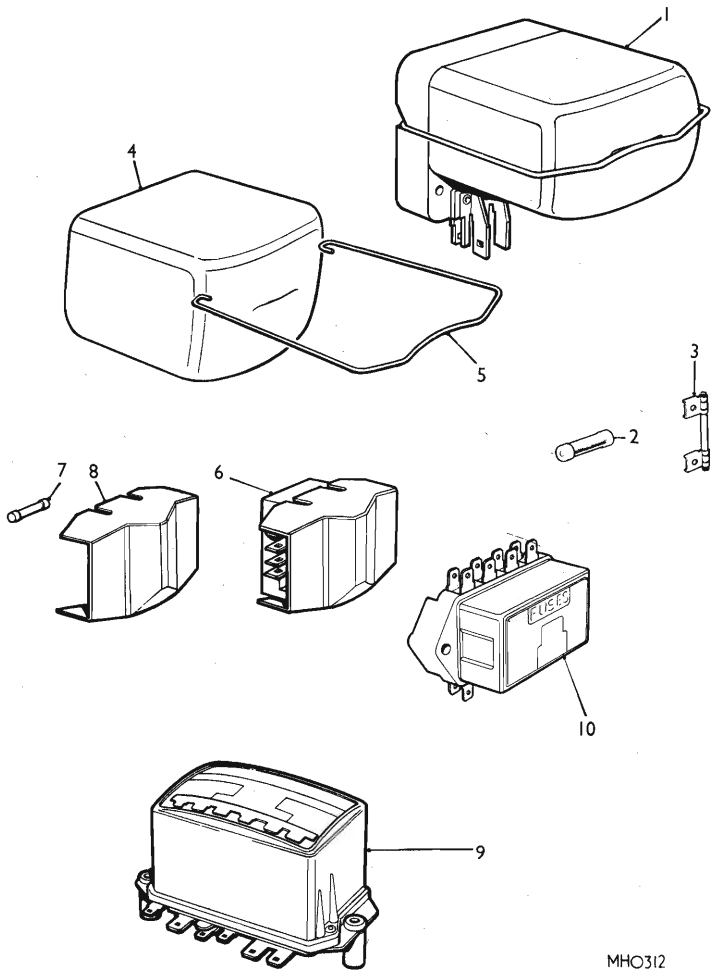

MHO312

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CONTROL BOX AND FUSE BOX			
1	BCA 4308	CONTROL BOX ASSEMBLY	1		
2	7H 5066	Resistance(63 ohms)-carbon type	NLA		
3	47H 5589	Resistance(60 ohms)-wire wound	1	Use prior to 37H 6902 and	
4	7H 5522	Cover	1	37H 4727	
	PMZ 320	Screw	2		
	LWZ 203	Washer-spring	2		
6	37H 3373	FUSEBOX ASSEMBLY	1		
7	GFS 35	Fuse(35-amp)	1 PK		Pack consists of ten fuses
8	505158	Cover	1		
	PMZ 310	Screw	1		
	LWZ 203	Washer-spring	1		
9	37H 6902	Control box	NLA	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 105500 USA and Canada,128262-except USA and Canada	Use GEU 605
	PMZ 318	Screw	3		
	LWZ 203	Washer-spring	3		
10	37H 4727	BOX ASSEMBLY-FUSE	1		
7	GFS 35	Fuse(35-amp)	1 PK	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 ON	Pack consists of ten fuses
	PMZ 316	Screw	2		
	LWZ 203	Washer-spring	2		
	563417	Relay-starter motor solenoid	1	(C)G-AN5-138801 TO 154100 (C)G-AN6-154101 TO 159053	N.America
	13H 9475	Relay-battery cut-off	1	(C)G-AN6-166304 ON	N.America

107-H 34

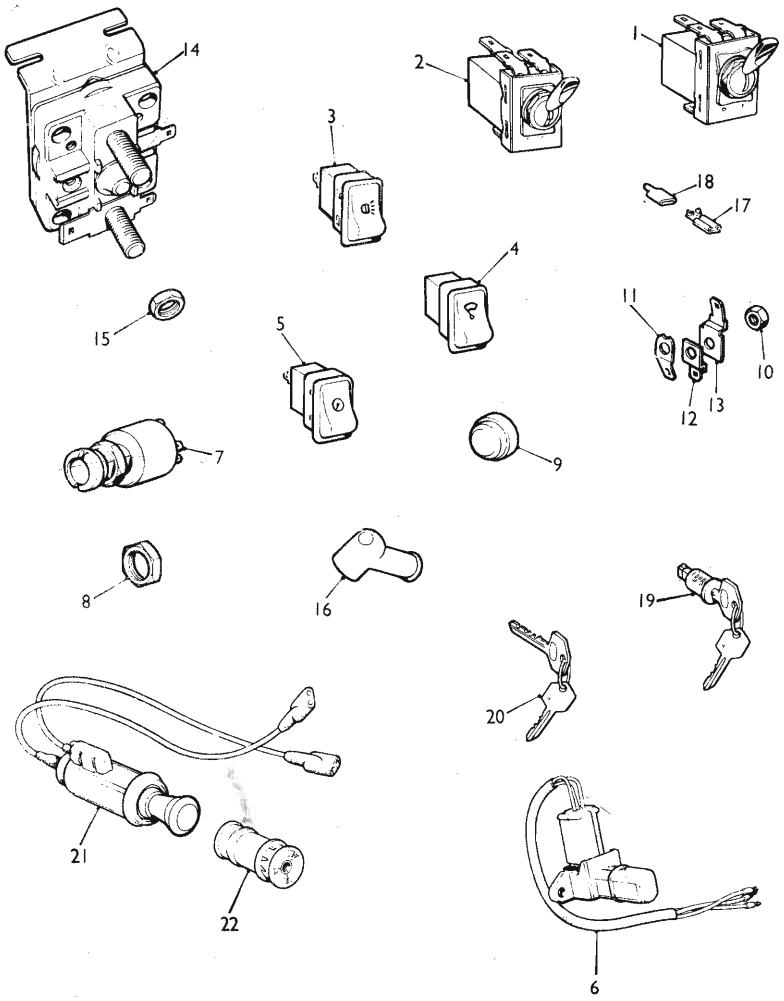


MH0310

SWITCHES-TOGGLE/ROCKER TYPE SYSTEM

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCH			
1	BCA 4294	Lighting and fog lamp	2	Use prior to BHA 5109,BHA 5111 AND BHA 5112	
2	149011	Panel light and windscreen wiper	2		
3	BHA 5111	Lighting	1	(C)G-AN5-105501 ON	Rocker type SWITCH.Not N.America
4	BHA 5109	Windscreen wiper	1		
5	BHA 5112	Panel light	1		
	BHA 5267	Hazard warning	1	(C)G-AN5-138801 ON	
6	RTC 432	Headlamp dipper	1		
7	13H 337	SWITCH ASSEMBLY-IGNITION	1	Use prior to 13H 926	
8	47H 5481	Nut-locking	NLA		
7	13H 926	SWITCH ASSEMBLY-IGNITION	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 ON	
8	47H 5481	Nut-locking	NLA		
	BCA 4501	SWITCH ASSEMBLY-STARTER SOLENOID	NLA		Use BMK 1727
	AJD 8019 Z	Nut	2		
	LWZ 203	Washer-spring	2		
9	27H 5576	Cap(rubber)	1		
10	13H 4485	Nut-contact screw	NLA	Use prior to BMK 1727	
	WL 600051	Washer-spring	4		
11	47H 5160	Connector-Lucar-starter push	NLA		
12	47H 5158	Connector-Lucar-fuse box	1		
13	21K 9068	Connector-Lucar-control box	1		
	PMZ 306	Screw	2		
	LWZ 203	Washer-spring	2		


107-H 36

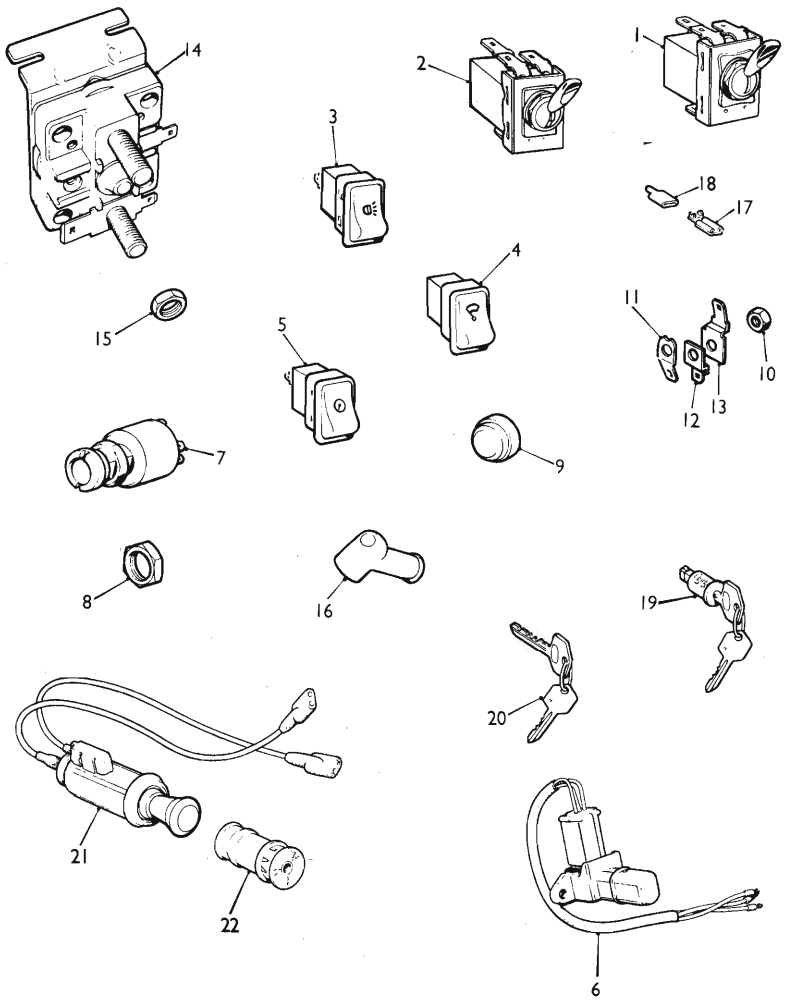

MH0310


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-TOGGLE/ROCKER TYPE SYSTEM-continued			
14	BMK 1727	Switch-starter solenoid	1	(C)H-AN9-71624	
15	13H 4485	Nut	NLA	TO 85286	
	PMZ 308	Screw	2	(C)H-AN10-85287	
	PWZ 103	Washer-plain	2	TO 86803	
				(C)A-AN10-86804	
				TO 87824	
				(C)G-AN4-59608	
				TO 74885	
				(C)G-AN5-74886 TO	
				154100	
	13H 5952	Switch-starter solenoid	1		
	PJZ 1005	Screw	2	(C)G-AN6-154101 ON	
	PWZ 103	Washer-plain	2		
16	8G 548	Bootee-terminal insulating-starter switch	2		
	PMZ 308	Screw	2		
	LWZ 203	Washer-spring	2		
	FNZ 103	Nut	2		
17	47H 5496	Connector-socket-panel light switch	1		Use when cigar-LIGHTER IS NOT FITTED
18	511269	Insulator-connector	1		
	PMZ 310	Screw	2		
	LWZ 203	Washer-spring	2		
	PMZ 416	Screw-RHD	NLA		
	PMZ 408	Screw-LHD	2		
	LWZ 204	Washer-spring	2		
19	24G 1345	Barrel-lock-ignition switch	1		Use when steering lock is not fitted.
21	AHH 7010	CIGAR-LIGHTER ASSEMBLY	NLA		Optional extra
22	27H 9735	Heating unit	1		

107-H 36.02

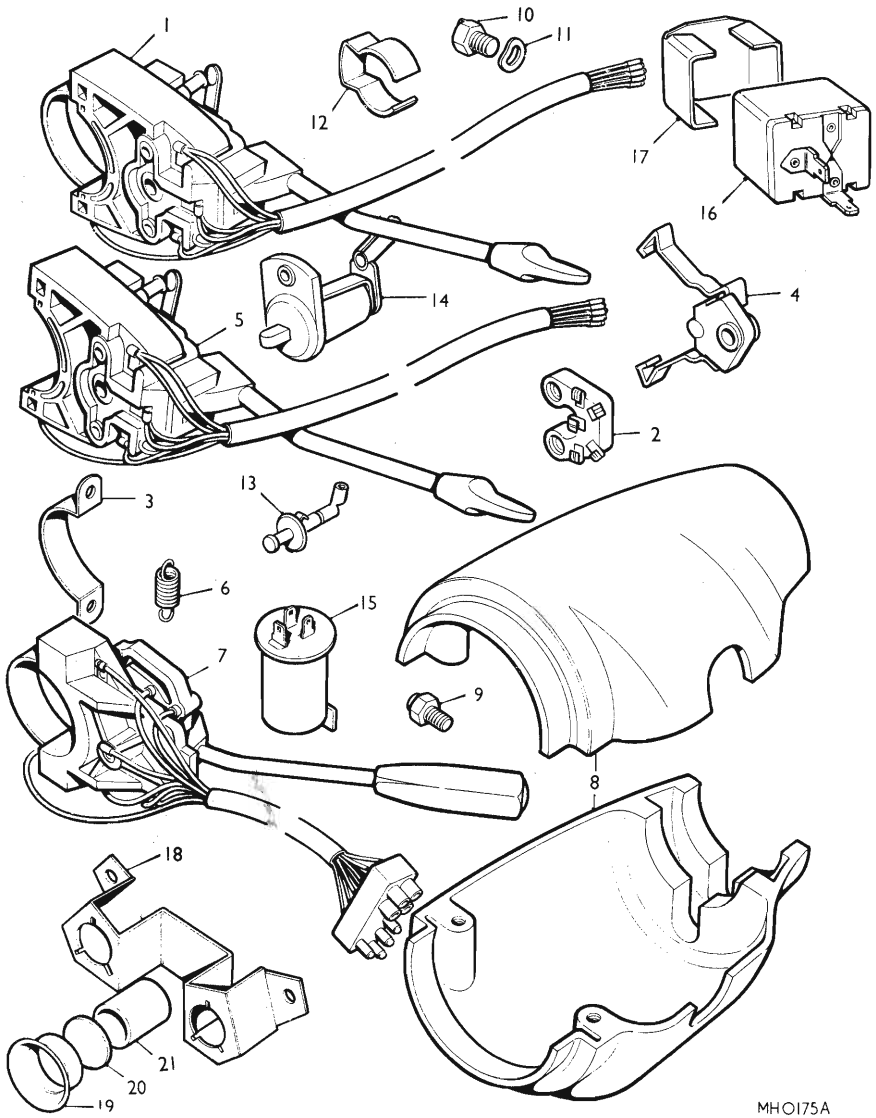


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-TOGGLE/ROCKER TYPE SYSTEM-continued.			
1	BHA 4627	SWITCH ASSEMBLY-DIRECTION INDICATOR	1	Use prior to BHA 4895	
1	BHA 4895	SWITCH ASSEMBLY-DIRECTION INDICATOR	1	(C)H-AN9-84674 TO 85286 (C)G-AN4-73974 TO 74885	
1	BHA 4628	SWITCH ASSEMBLY-DIRECTION INDICATOR AND HEADLAMP FLASHER	1	Use prior to BHA 4896	optional extra
	BHA 4896	SWITCH ASSEMBLY-DIRECTION INDICATOR AND HEADLAMP FLASHER	NLA	(C)H-AN9-84674 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86803 TO 87824 (C)G-AN4-73974 TO 74885 (C)G-AN5-74886 ON	optional extra
2	67H 5021	Contact	1	(C)H-AN8-38829 TO 56902 (C)G-AN3-25788 TO 44164	
4	18G 8786	Kit-spring and bush	1	(C)H-AN8-56903 TO 64734 (C)H-AN9-64735 TO 85856 (C)A-AN10-86804 TO 87824 (C)G-AN3-44165 TO 52389 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON	See TIB.1B 16.
5	27H 6787	Lever	1		
6	27H 5386	Spring-pawl	2		

107-H 38

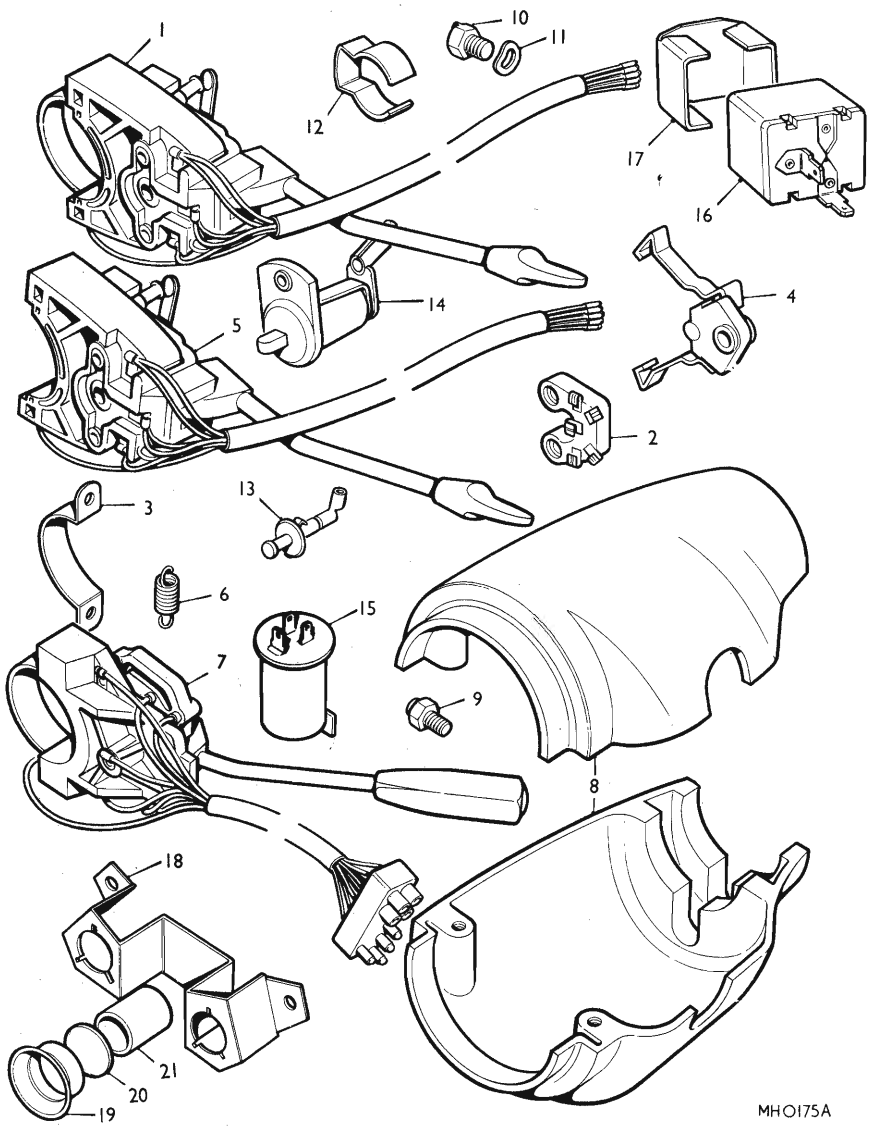


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-TOGGLE/ROCKER TYPE SYSTEM-continued.			
1	BHA 4948	Switch-direction indicator/ horn/headlamp flasher	1	(C)H-AN10-85287 TO 86302 (C)G-AN5-74886 TO 89514	
7	37H 8050	Switch-direction indicator/ headlamp flasher	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 ON	
	37H 8051	Clip-direction indicator switch(with horn contact)	1		
8	18G 8387	Cowling-indicator switch-to top and bottom-RHD	1PR	Use prior to 18G 8713 and 18G 8714	
8	18G 8388	Cowling-indicator switch-to top and bottom-LHD	1PR		
8	18G 8713	Cowling-indicator switch-RHD	1PR	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 ON	
	18G 8714	Cowling-indicator switch-LHD	1PR		
10	AHA 8752	Stud-trip flasher	1	(C)H-AN8-56903 TO 64734 (C)H-AN9-64735 TO 72528 (C)G-AN3-44165 TO 52389 (C)G-AN4-52390 TO 61165	
12	AHA 8752	Striker-direction indicator trip	1	(C)H-AN9-72529 TO 85286 (C)G-AN4-61166 TO 74885	
12	BHH 254	Striker-direction indicator trip	1	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 134124	
12	BHH 1301	Striker-direction indicator trip	1	(C)G-AN5-134125 ON	
13	13H 391	Switch-courtesy light-trunk	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 ON	
14	BHA 5058	Switch-courtesy light-interior	2		
	PTZ 604	Screw	2		

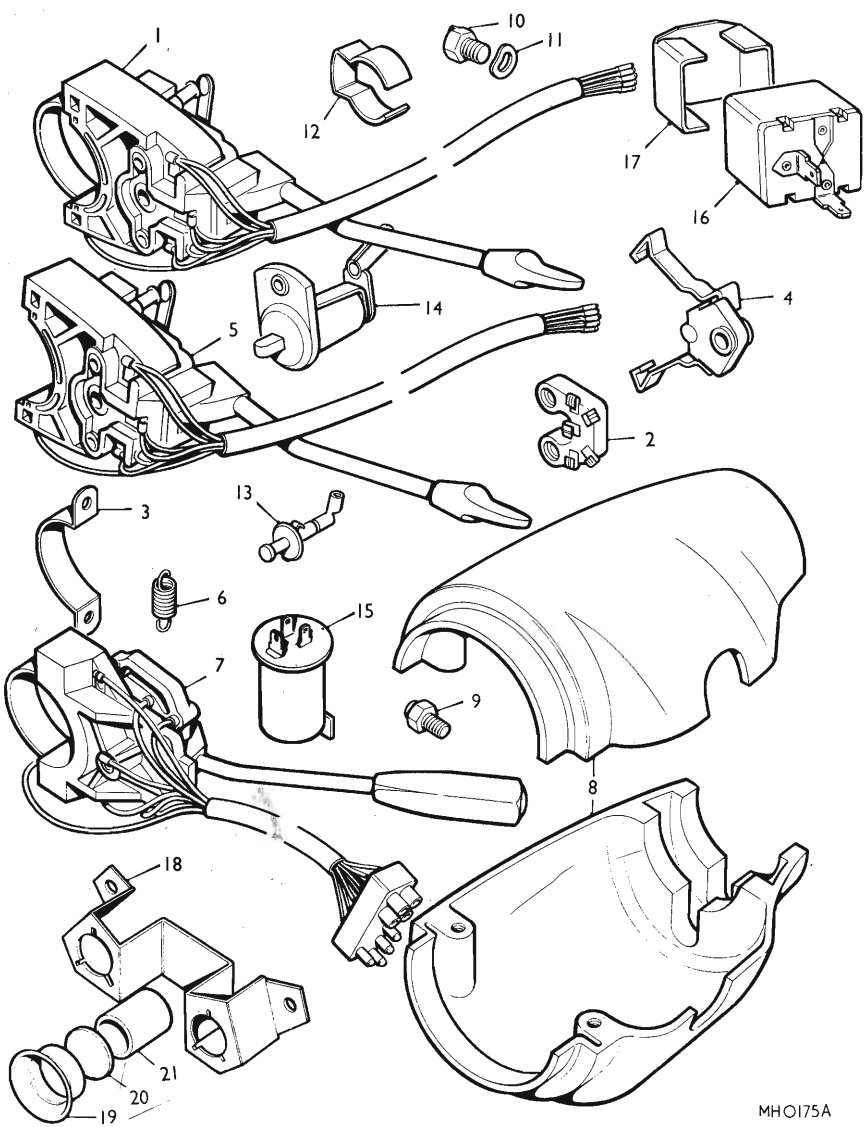

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-TOGGLE/ROCKER TYPE SYSTEM-continued.			
15	GFU 103	Unit-flasher	1	Use prior to GFU 107	
16	GFU 107	Unit-flasher $	1	(C)H-AN9-72041 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60460 TO 74885 (C)G-AN5-74886 ON	
	PMZ 408	Screw-flasher unit	1	Use prior to BHA 4780	
	LWZ 204	Washer	1		
17	BHA 4780	Clip-flasher unit	1	(C)H-AN9-72041 TO 85286 (C)G-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60460 TO 74885 (C)G-AN5-74886 ON	
	PTZ 1004	Screw	1		
	LWZ 203	Washer-spring	2		
	FNZ 103	Nut	2		
20	AHH 6334	Window-flasher warning light	NLA		
16	ATJ 8880	Unit-flasher-hazard warning $	1	(C)G-AN5-138801 ON	
17	BHA 4780	Clip-unit	1		


$ This item is subject to safety regulations.

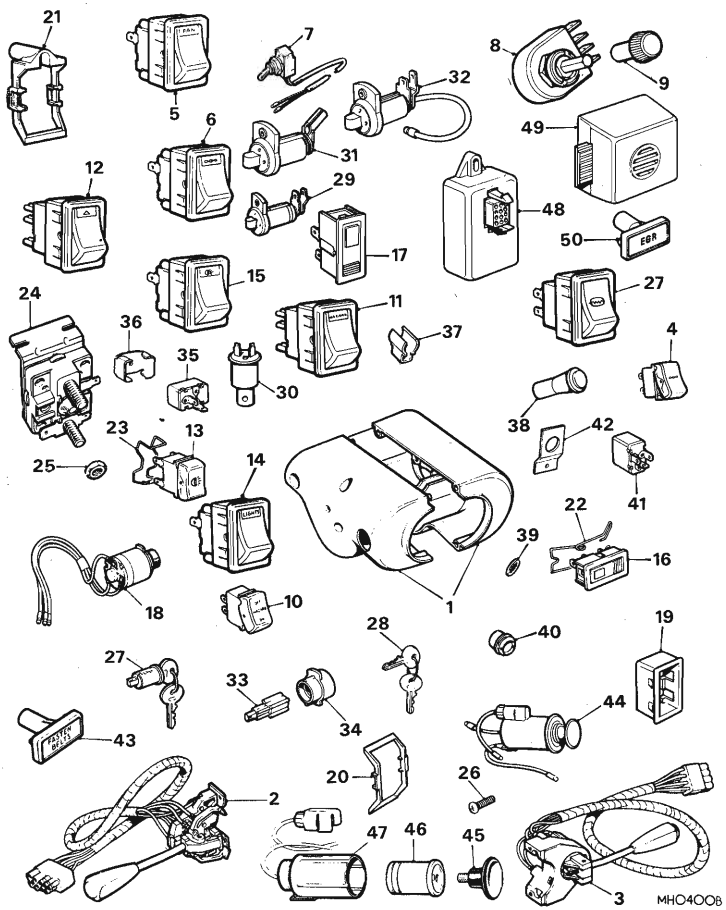

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-(USA TYPES).			
1	18G 8548	Cowl-switch $	1PR	Use prior to 18G 9012	Use with alternative steering lock kit 18G 8901.
1	18G 8841	Cowl-switch $	1PR		
	18G 9012	Cowl-switch	1PR	(C)G-AN5-123731 TO 154150 (C)G-AN6-154101 TO 183082	
	BHM 7090	Cowl-switch	1	(C)G-AN6-183083 ON	
	AAM 222	Plug-blanking	2		
	PMZ 316	Screw	2		
	ZPT 1003	Screw	2		
2	BHA 4696	Switch-direction indicator, horn,headlamp dipper and flasher	1	Use prior to 37H 6022	USA and CANADA.
2	37H 6022	Switch-direction indicator, headlamp dipper and flasher	1	(C)G-AN5-89515 TO 112999	
2	37H 7424	Switch-direction indicator, headlamp dipper and flasher	1	(C)G-AN5-113000 TO 138800	USA.
2	37H 8521	Switch-direction indicator, headlamp dipper and flasher $	1	(C)G-AN5-138801 ON	
2	37H 6022	Switch-direction indicator, headlamp dipper and flasher	1	(C)G-AN5-89515 TO 138800	Canada,Sweden and Germany.
2	37H 8523	Switch-direction indicator, headlamp dipper and flasher $	1	(C)G-AN5-138801 ON	
	37H 8566	Clip-direction indicator switch(with horn contact) $	1		USA,Canada, Sweden and Germany.
3	37H 2678	Switch-windscreen wiper washer,overdrive $	1	Use prior to 37H 7425	
3	37H 7425	Switch-windscreen wiper washer,overdrive $	1	(C)G-AN5-113000 TO 138800	USA.
3	37H 8522	Switch-windscreen wiper, washer,overdrive $	1	(C)G-AN5-138801 ON	
3	37H 2678	Switch-windscreen wiper washer,overdrive $	1	(C)G-AN4-60441 TO 74885 (C)G-AN5-74886 TO 138800	Canada,Sweden and Germany.
3	37H 8524	Switch-windscreen wiper, washer,overdrive $	1	(C)G-AN5-138801 ON	

$ This item is subject to safety regulations.


107-H 44

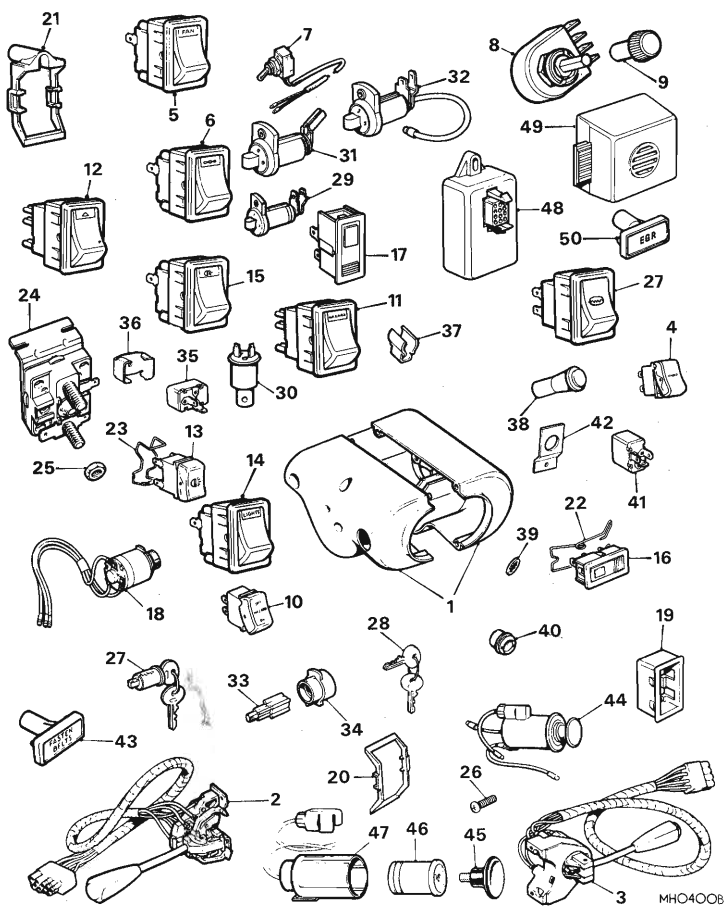

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-USA TYPE-continued.			
4	BHA 4831	Switch-heater $	1	(C)G-AN4-60441 TO 74885 (C)G-AN5-74886 ON	Sweden and Germany.
4	BHA 4831	Switch-heater $	1	Use prior to BHA 5150 and 13H 6952	USA and CANADA.
4	BHA 5150	Switch-heater $	1	(C)G-AN5-113000	USA.
4	13H 6952	Switch-heater $	1	TO 123750	Canada.
5	BHA 5184	Switch-heater(illuminated)	1	(C)G-AN5-123751	USA.
6	BHA 5192	Switch-heater(illuminated)	1	ON	Canada.
7	BHA 4805	Switch-panel light $	NLA	Use prior to 37H 7970	
8	37H 7970	Switch-rheostat(illuminated)	1	(C)G-AN5-123751 ON	USA,Canada, Sweden and Germany.
9	37H 7971	Knob-rheostat switch	1		
10	37H 2679	Switch-hazard warning $	1	Use prior to 37H 7422	USA and Canada.
10	37H 7422	Switch-hazard warning $	1	(C)G-AN5-112276 TO 123750	
11	BHA 5185	Switch-hazard warning (illuminated)	1	(C)G-AN5-123751 ON	USA.
12	BHA 5193	Switch-hazard warning (illuminated)	1		Canada.
10	37H 2679	Switch-hazard warning	1		Sweden and Germany.
13	13H 6322	Switch-lighting $	1	Use prior to BHA 5149	
13	BHA 5149	Switch-lighting $	1	(C)G-AN5-113000 TO 123750	USA.
14	BHA 5183	Switch-lighting(illuminated)	1	(C)G-AN5-123751 ON	
13	13H 6322	Switch-lighting $	1	Use prior to BHA 5191	Canada.
15	BHA 5191	Switch-lighting(illuminated)	1	(C)G-AN5-123751 ON	
13	13H 6322	Switch-lighting $	1	(C)G-AN4-60441 TO 74885 (C)G-AN5-74886 ON	Sweden and Germany.
16	BHA 4742	Switch-brake check light (3 terminal) $	1		USA and Canada.
17	BHA 4933	Switch-brake check light (4 terminal) $	1	Use prior to BHA 4990.	
17	BHA 4990	Switch-brake check light (4 terminal)	1	(C)G-AN5-74886 TO 154100 (C)G-AN6-154101 TO 166300	USA,Canada and Sweden.
18	BHA 4732	Switch-ignition	1		USA,Canada, Sweden and Germany.


$ This item is subject to safety regulations.

107-H 46

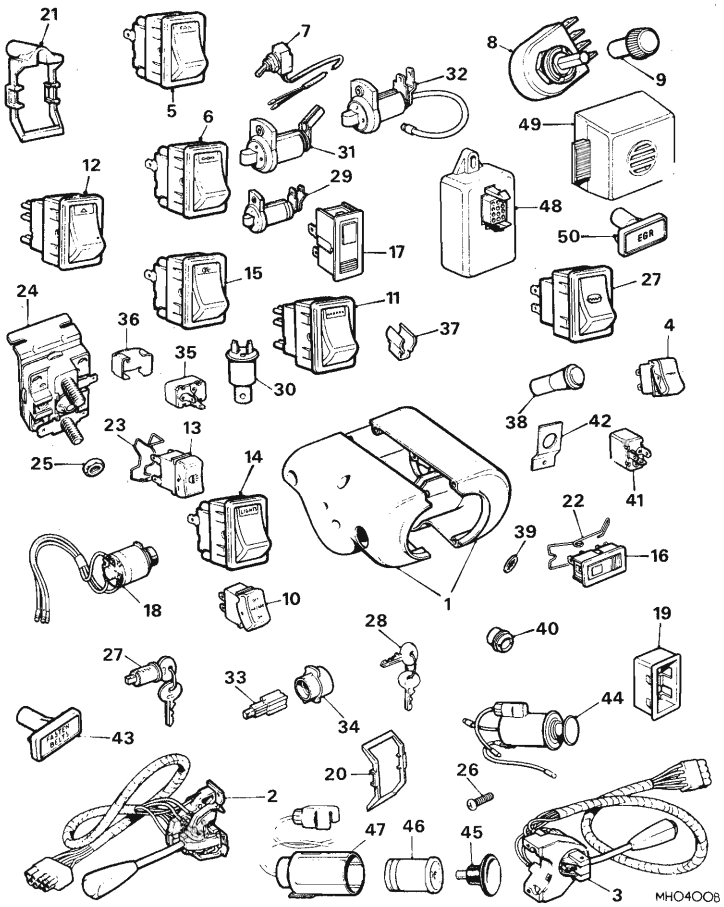

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-USA TYPE-continued.			
19	BHA 4832	Bezel-switch(heater and Hazard warning)	2	Use prior to BHA 4993 and 37H 4495.	
19	37H 4495	Bezel-switch(lighting)	1		
19	BHA 4993	Bezel-awitch(heater and lighting)	2	(C)G-AN5-74886 TO 112999	USA.
19	37H 4495	Bezel-switch(hazard warning)	1	(C)G-AN5-74886 TO 99454.	
19	37H 4497	Bezel-switch(hazard warning)	1	(C)G-AN5-99455 TO 112275.	
20	BHA 5153	Clip-switch(heater and lighting)	2	(C)G-AN5-113000 TO 123750.	
21	BHH 1085	Clip-illuminated switch	6	(C)G-AN5-123751 ON.	
19	BHA 4832	Bezel-switch(heater and hazard warning)	2	Use prior to BHA 4993 and 37H 4495	
19	37H 4495	Bezel-switch(lighting)	1		
19	BHA 4993	Bezel-switch(heater)	1	(C)G-AN5-74886 TO 123750	
19	BHA 4993	Bezel-switch(lighting)	1	(C)G-AN5-74886 TO 112999	
20	BHA 5153	Clip-switch(lighting)	1	(C)G-AN5-113000 TO 123750	Canada.
19	37H 4495	Bezel-switch(Hazard warning)	1	(C)G-AN5-74886 TO 99454	
19	37H 4497	Bezel-switch(hazard warning)	1	(C)G-AN5-99455 TO 112275	
21	BHH 1085	Clip-illuminated switch	6	(C)G-AN5-123751 ON	
19	BHA 4832	Bezel-switch(heater and hazard warning)	2	Use prior to BHA 4993 and 37H 4495	Sweden.
19	37H 4495	Bezel-switch(lighting)	1		
19	BHA 4993	Bezel-switch(heater and lighting)	2	(C)G-AN5-74886 ON	
19	37H 4495	Bezel-switch(hazard warning)	1	(C)G-AN5-74886 TO 99454	Sweden and Germany.
19	37H 4497	Bezel-switch(hazard warning)	1	(C)G-AN5-99455 ON	
22	AHH 8920	Clip-spring-brake check light switch	1		
23	AHH 8921	Clip-spring-brake check light switch	NLA		
24	BMK 1727	Switch-starter solenoid	1		USA,Canada, Sweden and Germany.
25	13H 4485	Nut	NLA	Use prior to 13H 5952	
	PMZ 308	Screw	2		
	PWZ 103	Washer-plain	2		
	13H 5952	Switch-starter solenoid	1		
	PJZ 1005	Screw	2	(C)G-AN6-154101 ON	
	PWZ 103	Washer-plain	2		
	PMZ 406	Screw-dip switch blanking hole	2		
26	AHH 8895	Screw-clamp to column-wiper switch	2		
	RMZ 204	Screw-panel light switch to cowl	2		


107-H 48

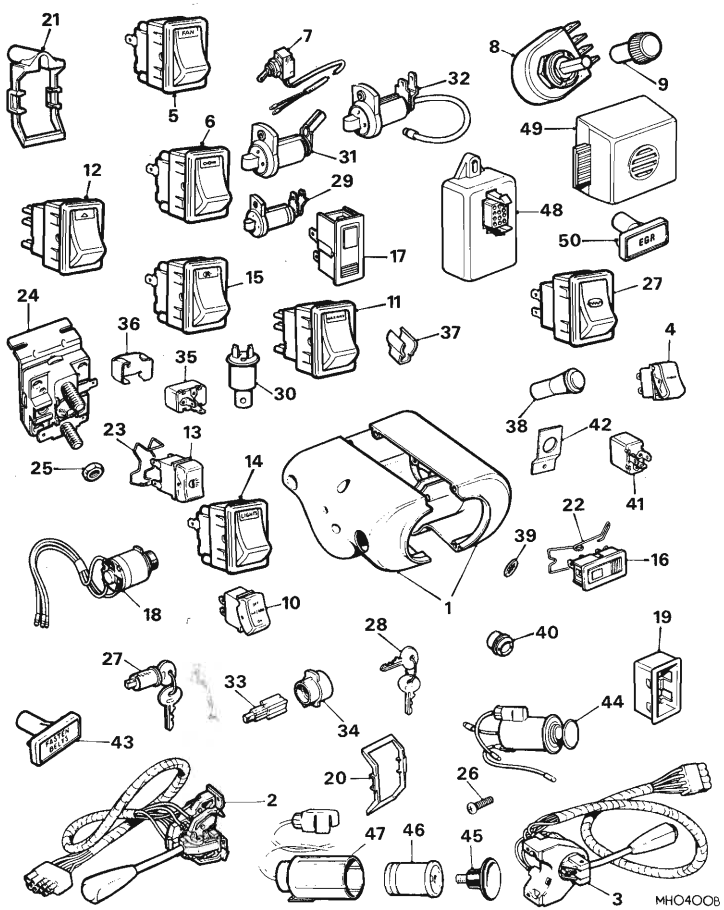

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-USA TYPE-continued.			
27	24G 1345	Barrel-lock-ignition switch	1		Use when steering LOCK IS Not FITTED Sweden and Germany.
29	BHA 4992	Switch-ignition	1		
	PTZ 604	Screw-switch	1		
27	24G 1345	Barrel-lock-ignition switch	1	Use prior to BHA 4974	Use when steering lock is not fitted USA and Canada.
30	BHA 4974	Buzzer-ignition key warning	1	(C)G-AN5-74886 TO 138800	
	13H 8600	Buzzer-ignition key warning $	1	(C)G-AN5-138801 TO 159053	
29	BHA 4992	Switch-ignition	1	Use prior to BHA 5063	USA and CANADA.
31	BHA 5063	Switch-ignition key audible warning and courtesy light	1	(C)G-AN5-89515 TO 143302	
31	BHA 5310	Switch-ignition key audible warning and courtesy light $	1	(C)G-AN5-143303 ON	
	PTZ 6034	Screw-switch	1		
32	BHA 5058	Switch-courtesy light-interior	2/1		Quantity reduced for USA and Canada when ignition switch BHA 5063 is fitted.
33	BHA 4803	Extension-spindle	NLA		
34	BHA 4802	Housing-lock	1		
35	GFU 107	Unit-flasher $	1		
36	BHA 4780	Clip	1		USA,Canada, Sweden and Germany.
	PTZ 1004	Screw	1		
37	BHH 402	Striker-trafficator	1	(C)G-AN5-89515 ON	
	LWZ 204	Washer-spring	2		
38	BHA 5124	Light-direction indicator warning	2	(C)G-AN5-105501 ON	
39	BHA 5125	Washer-retaining	2		

$ This item is subject to safety regulations.


107-H 50

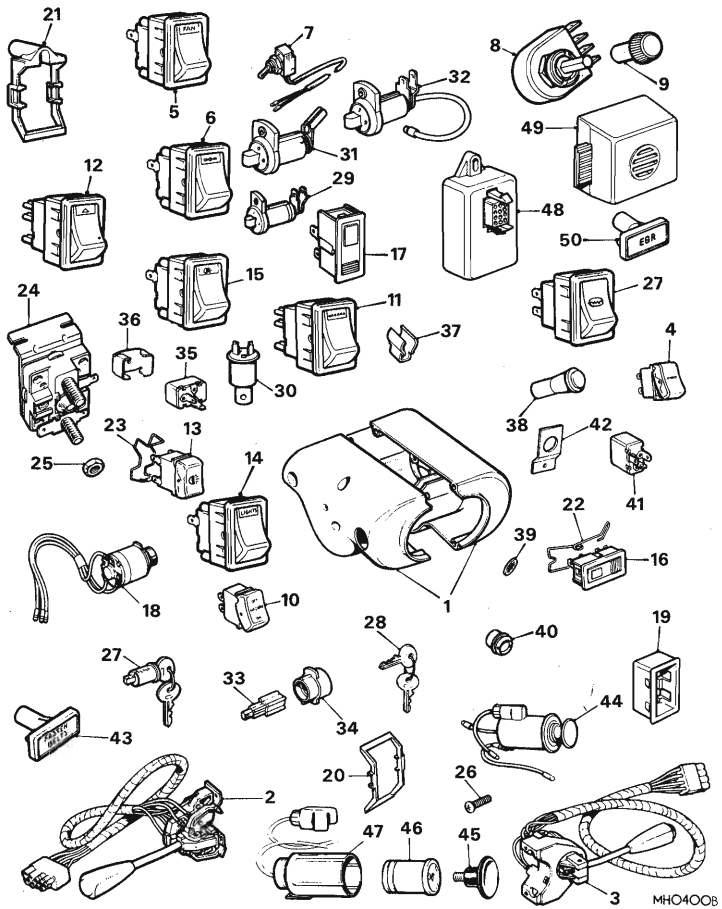

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SWITCHES-USA TYPE-continued			
40	BHA 4804	Lamp-hazard warning $	1	Use prior to 13H 4665	USA and CANADA
40	13H 4665	Lamp-hazard warning	1	(C)G-AN5-74886 ON	USA,Canada Sweden and Germany
41	13H 4666	Unit-hazard warning	1	Use prior to ATJ 8880	
41	ATJ 8880	Unit-hazard warning $	1	(C)G-AN5-99455 ON	
42	AHH 8889	Bracket-hazard warning lamp	1		USA,Canada Sweden and Germany
	PTZ 603	Screw	1		
	PWZ 102	Washer-plain	1	Use prior to BHA 4780 and LNZ 102	
	LWZ 202	Washer-spring	1		
	CNZ 102	Nut	1		
36	BHA 4780	Clip-hazard warning unit	1	(C)G-AN5-123731 ON	
	LNZ 102	Nut	1		
43	13H 7986	Light-warning'Fasten belts'	1	(C)G-AN5-112276 ON	
48	13H 9801	Unit-control-sequential seat system $	1	(C)G-AN5-138801 TO 154100 (C)G-AN6-154101 TO 159053	USA and Canada.
49	AAU 1110	Unit-buzzer-time delay $	1	(C)G-AN6-159054 ON	
50	13H 9408	Light-warning-EGR	1	(C)G-AN6-154101 ON	USA and Canada (Finished Canada At (C)175273)
	13H 9571	Light-warning-Catalyst	1	(C)G-AN6-160160 ON	California only
44	BHA 4765	CIGAR LIGHTER ASSEMBLY	1	Use prior to BHA 5137	
44	BHA 5137	CIGAR LIGHTER ASSEMBLY	1	(C)G-AN5-105501 TO 182000	USA,Canada, Sweden and Germany
45	37H 2503	Knob	1		
46	27H 9735	Unit-heating	1		
47	37H 2505	Clamp-shell	1		
	AAU 5101	LIGHTER-CIGAR	1		
	AAU 5944	Unit-'pop out'	1	(C)G-AN6-182001 ON	
	AAU 6008	Knob	1		
	AAU 2092	Light-warning-brake $	1	(C)G-AN6-166304 ON	USA and Canada


$ This item is subject to safety regulations.

107-H 52

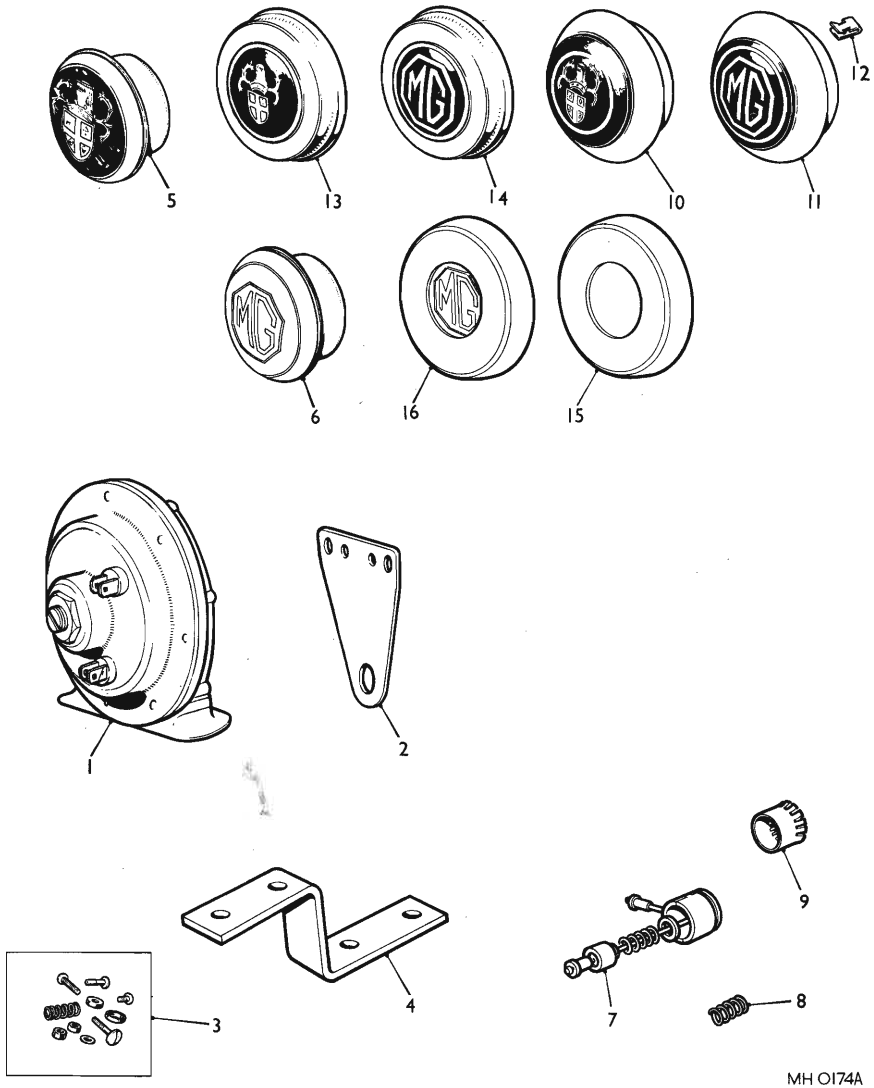

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HORN AND CONTROLS			
1	BHA 4515	HORN ASSEMBLY-HIGH NOTE	NLA		Use 37H 7542
1	BHA 4514	HORN ASSEMBLY-LOW NOTE	NLA		Use 37H 7543
	37H 7542	HORN-HIGH NOTE(LESS BRACKET)	1		Except Sweden
	37H 7543	HORN-LOW NOTE(LESS BRACKET)	1		And Germany.
2	57H 5309	Bracket	1/2		
	PMZ 410	Screw	2/4	Use prior to	Quantities
	LWZ 204	Washer-spring	2/4	BHA 5367/8	Increased with
	NH 604041	Nut	2/4		Twin horns
	AHA 6657	Bracket-horn mounting-RH	1		
	AHA 6658	Bracket-horn mounting-LH	1		Use when twin horns are fitted
1	BHA 5367	HORN ASSEMBLY-HIGH NOTE	1	(C)G-AN6-154101 ON	
1	BHA 5368	HORN ASSEMBLY-LOW NOTE	1		
5	BHA 4441	HORN-PUSH ASSEMBLY-SPRITE	1		
6	BHA 4442	HORN-PUSH ASSEMBLY-MIDGET	1		Except USA and
7	27H 3387	ROTOR ASSEMBLY-TOP AND CABLE	1	Use prior to BHA 4679 and BHA 5010	Canada
8	7H 6902	Spring	1		
9	27H 5401	Slip-ring	1		
10	AHA 8525	Housing-motif-'Sprite'	1		USA,Canada and
11	AHH 8682	Housing-motif-'Midget'	1		Sweden
12	57H 5423	Clip-motif housing	3		
13	BHA 5010	Bezel and motif-'Sprite'	1	(C)H-AN10-85287 TO 86302	
14	BHA 4979	Bezel and motif-'Midget'	1	(C)G-AN5-74886 TO 89514	
15	BHA 5053	Horn push-'Sprite'	1	(C)H-AN10-86303 TO 86803 (C)A-AN10-86804 TO 87824	
16	BHA 5043	Horn push-'Midget'	1	(C)G-AN5-89515 TO 105500	
16	BHA 5135	Horn push-'Midget'	1	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 TO 157172	
16	AAU 1161	Horn push	1	(C)G-AN6-157173 ON	
	BHA 5041	Brush	1	(C)H-AN10-86303	
	BHA 5042	Slip ring	1	TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89515 ON	


107-H 54

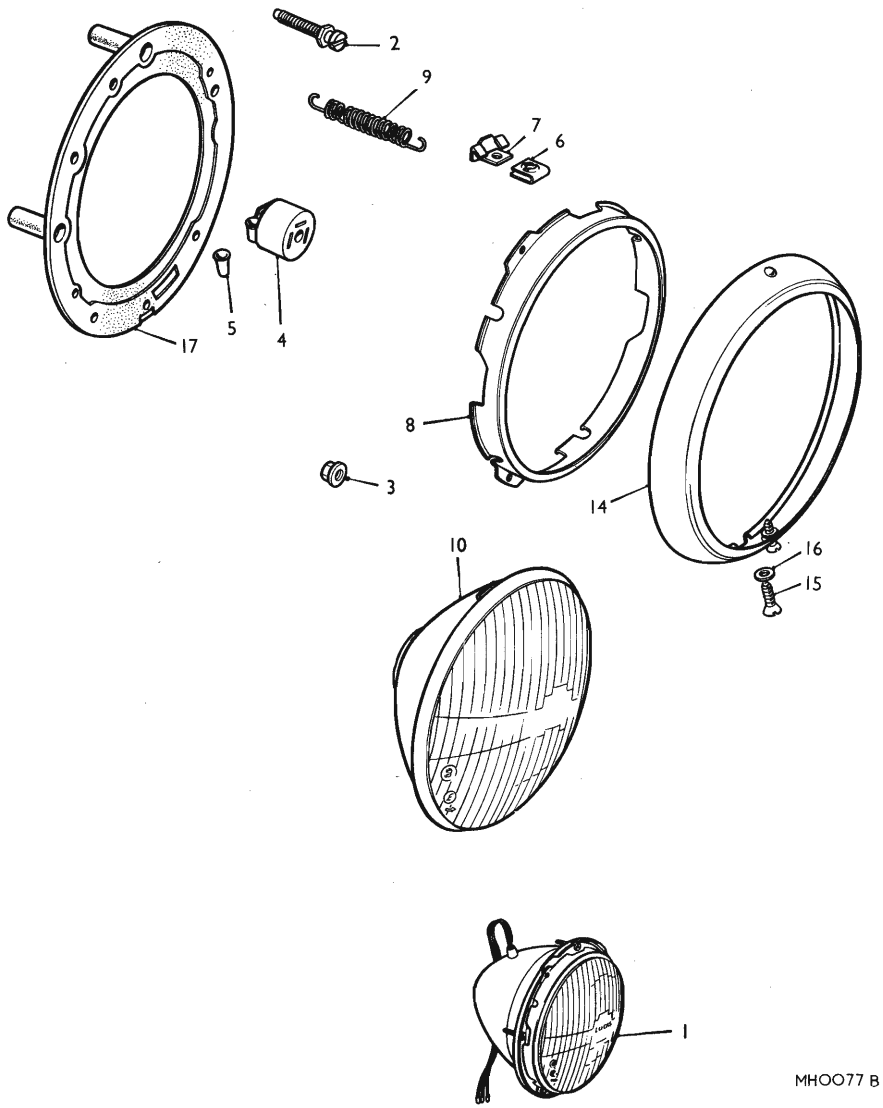

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-RHD AND LHD FOR USA AND CANADA.			
1	27H 8499	HEADLAMP ASSEMBLY	2		
2	67H 5025	Screw-trimmer	NLA		Use BHM 7058
3	27H 7824	Nut-trimmer screw	NLA		Use BMK 2435
3	BMK 2435	Nut-trimmer screw	NLA		Use BHM 7058
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2		
8	515218	Plate-light unit retaining	2		RHD
	PJZ 602	Screw	6		
9	67H 5026	Spring-unit seating rim	2		
10	GLU 101	Unit-light	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
16	21G 9057	Washer(rubber)	2	Finished at (C)G-AN5-154100	
17	9403	Gasket(rubber)	2		
1	27H 8207	HEADLAMP ASSEMBLY $	2		
2	67H 5025	Screw-trimmer	NLA		Use BHM 7058
3	27H 7824	Nut-trimmer screw	NLA		Use BMK 2435
3	BMK 2435	Nut-trimmer screw	NLA		Use BHM 7058
4	600226	ADAPTOR ASSEMBLY	2		USA and Canada
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2		
8	515218	Plate-light unit retaining	2		
	PJZ 602	Screw	6		
9	67H 5026	Spring-unit seating rim	2		
10	GLU 112	Unit-light	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
16	21G 9057	Washer(rubber)	2		
17	9403	Gasket(rubber)	2		
	BHM 7058	Kit-trimmer screw	2		

$ This item is subject to safety regulations

107-H 56

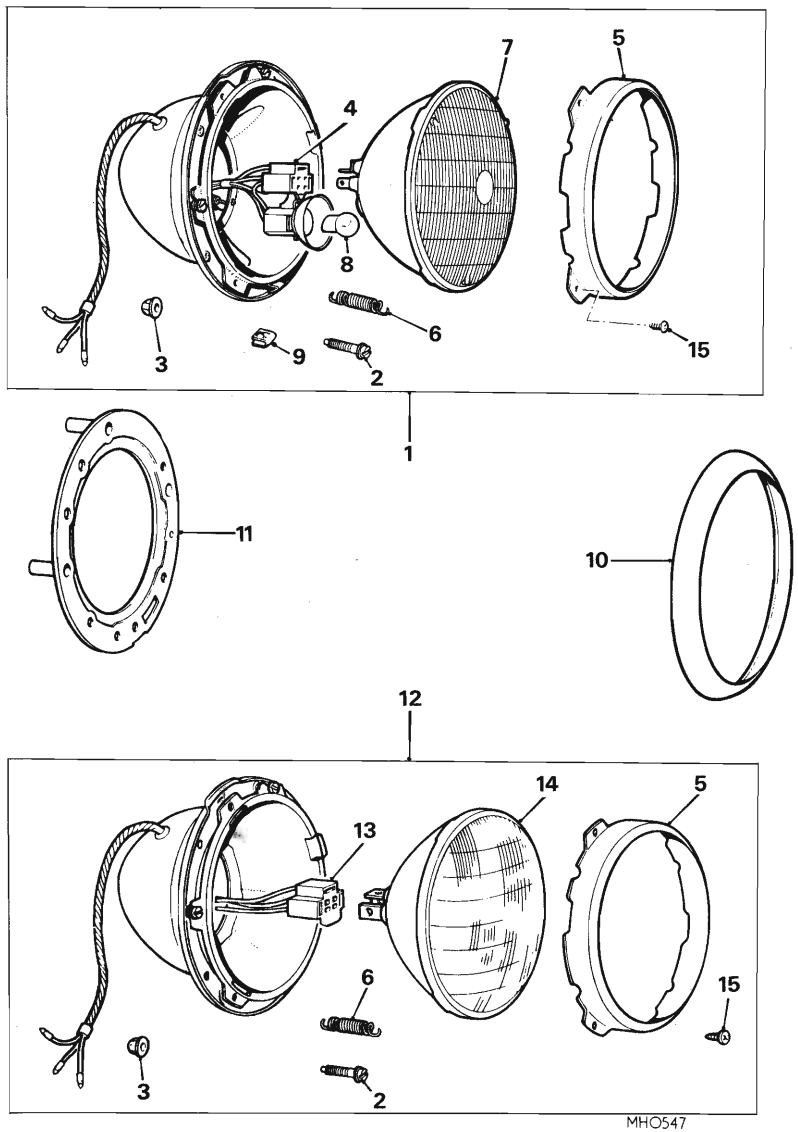


MHO547

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-RHD AND LHD FOR USA AND CANADA-1500.			
1	37H 8813	HEADLAMP ASSEMBLY	2		
2	67H 5025	Screw-trimmer	4		
3	BMK 2435	Retainer	NLA		Use BHM 7058.
4	37H 8814	Adaptor and cable	2		
5	515218	Plate-light unit retaining	2		
15	PJZ 602	Screw-fixing-unit rim	6		RHD.
6	67H 5026	Spring-fixing-unit rim	2		
7	GLU 104	Unit-light	2		
8	GLB 501	Bulb-pilot	2		
9	27H 5354	Nut-fixing screw	2		
	47H 5554	Rim and screw	2	(C)G-AN6-154101 ON	
11	9403	Gasket-body	2		
12	27H 8266	HEADLAMP ASSEMBLY $	2		
2	67H 5025	Screw-trimmer	4		
3	BMK 2435	Retainer	NLA		Use BHM 7058.
13	27H 6713	Adaptor and cable	NLA		USA and Canada.
5	515218	Plate-light unit retaining	2		
15	PJZ 602	Screw-fixing unit rim	6		
6	67H 5026	Spring-fixing unit rim	2		
14	BHA 5315	Unit-light $	2		
10	57H 5296	Rim and screw	2		
11	9403	Gasket-body	2		
	BHM 7058	Kit-screw-trimmer	2		

$ This item is subject to safety regulations.

107-H 56.02

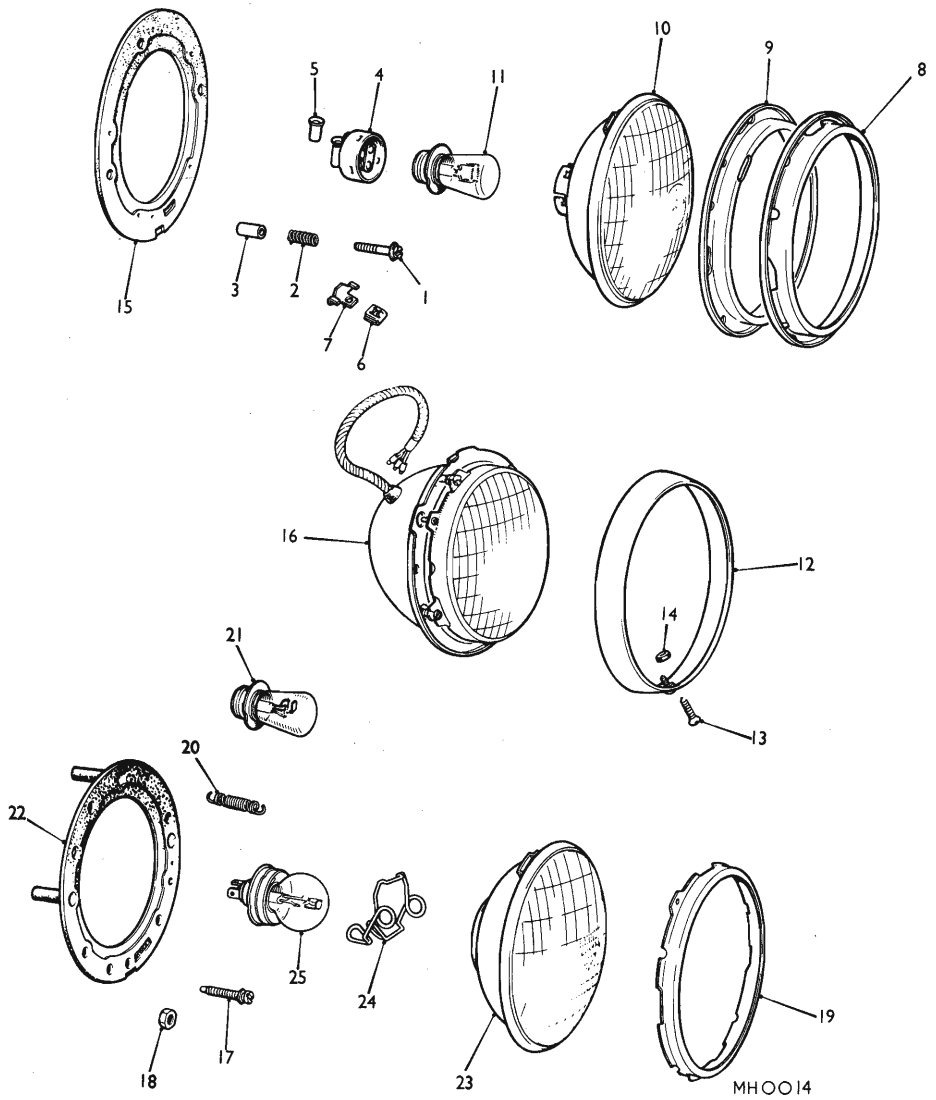


107– H57

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-LHD EXCEPT EUROPE,USA,CANADA AND MIDGET 1500			
	NSP	HEADLAMP ASSEMBLY-RIGHT DIP MK.6	2		Use 27H 8206 with rim and gasket
1	17H 5394	Screw-trimmer	6		
2	17H 5231	Spring-trimmer screw	6		
3	27H 5253	Sleeve-sealing	6		
4	17H 5306	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2		
9	17H 5205	PLATE ASSEMBLY-LIGHT UNIT RETAINING	2		
	PJZ 602	Screw	6		
10	262342	Unit-light	2		
11	BFS 355	Bulb	2		
12	47H 5554	RIM ASSEMBLY	2		
13	RTC 465	Screw	2		
14	21G 9057	Washer(rubber)	2		
15	57H 5457	Gasket(rubber)	2		
16	27H 8206	HEADLAMP ASSEMBLY-RIGHT DIP MK.10	2	Use prior to 27H 8204	
16	27H 8204	HEADLAMP ASSEMBLY-RIGHT DIP MK.10	2	(C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 154100	
17	67H 5025	Screw-trimmer	4		
18	27H 7824	Nut-trimmer screw	4		
4	17H 5306	ADAPTOR ASSEMBLY	2		Use with head-lamp assembly 27H 8206
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2		
19	515218	Plate-light unit retaining	2		
	PJZ 602	Screw	6		
20	67H 5026	Spring-unit seating rim	2		
10	262342	Unit-light	2		Use with head-LAMP ASSEMBLY 27H 8206
21	BFS 415	Bulb	2		
23	27H 4146	UNIT ASSEMBLY-LIGHT	NLA		Use GLU 513. Use with head-Lamp assembly 27H 8206.
24	47H 5125	Spring-bulb-retaining	2		
25	GLB 410	Bulb	2		
12	47H 5554	RIM ASSEMBLY	2		
13	RTC 465	Screw	2		
14	21G 9057	Washer(rubber)	2		
22	9405	Gasket(rubber)	2		
	PMZ 310	Screw-headlamp to wing	8		
	LWZ 203	Washer-spring	8		
	FNZ 103	Nut	8		

NOTE:
See TIB 1B45 F18 for identification of Mk.6 and Mk.10 headlamps


107-H 58

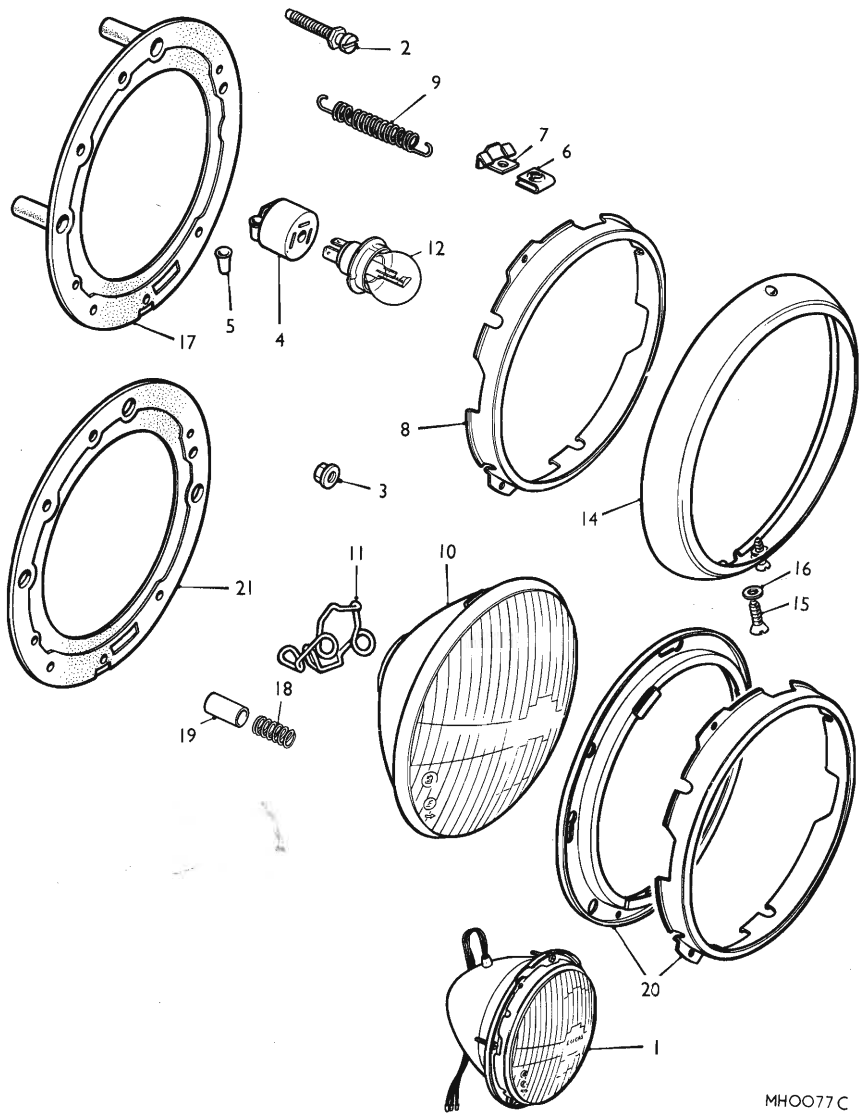

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-EUROPE EXCEPT FRANCE AND MIDGET 1500			
	NSP	HEADLAMP ASSEMBLY-VERTICAL DIP MK.6	2		Use 27H 8204 with rim and gasket.
2	17H 5394	Screw-trimmer	6		
18	17H 5231	Spring-trimmer screw	6		
19	27H 5253	Sleeve-sealing	6		
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA	(C)H-AN8-38829	
6	27H 5354	Nut-rim fixing screw	2	TO 50191	
7	37H 5190	Bracket-rim fixing screw	2	EXCEPT Germany	
20	17H 5205	PLATE ASSEMBLY-LIGHT UNIT RETAINING	2	(C)G-AN3-25788 TO 28969	
	PJZ 602	Screw	6	Germany,52389	
10	27H 4146	UNIT ASSEMBLY-LIGHT	NLA	except Germany	Use GLU 513 (Except Germany) Use GLU 515 (Germany)
11	47H 5125	Spring-bulb retaining	2		
12	GLB 410	Bulb	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
	GLU 513	Unit-light	2		
16	21G 9057	Washer(rubber)	2		
21	57H 5457	Gasket(rubber)	2		
1	27H 8204	HEADLAMP ASSEMBLY-VERTICAL DIP MK.10	2		
2	67H 5025	Screw-trimmer	NLA		Use BHM 7058
3	27H 7824	Nut-trimmer screw	NLA		Use BMK 2435
3	BMK 2435	Nut-trimmer screw	NLA		Use BHM 7058
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2	(C)H-AN9-64735	
8	515218	Plate-light unit retaining	2	TO 85286	
	PJZ 602	Screw	6	(C)G-AN4-52390	
9	67H 5026	Spring-unit seating rim	2	TO 74885	
10	27H 4146	UNIT ASSEMBLY-LIGHT	NLA		Use GLU 513 (Except Germany) Use GLU 515 (Germany)
11	47H 5125	Spring-bulb retaining	2		
12	GLB 410	Bulb	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
	GLU 513	Unit-light	2		
16	21G 9057	Washer(rubber)	2		
17	9403	Gasket(rubber)	2		
	BHM 7058	Kit-trimmer screw	2		

NOTE:
See TIB 1B45 F18 for identification of Mk.6 and Mk.10 headlamps

107-H 60

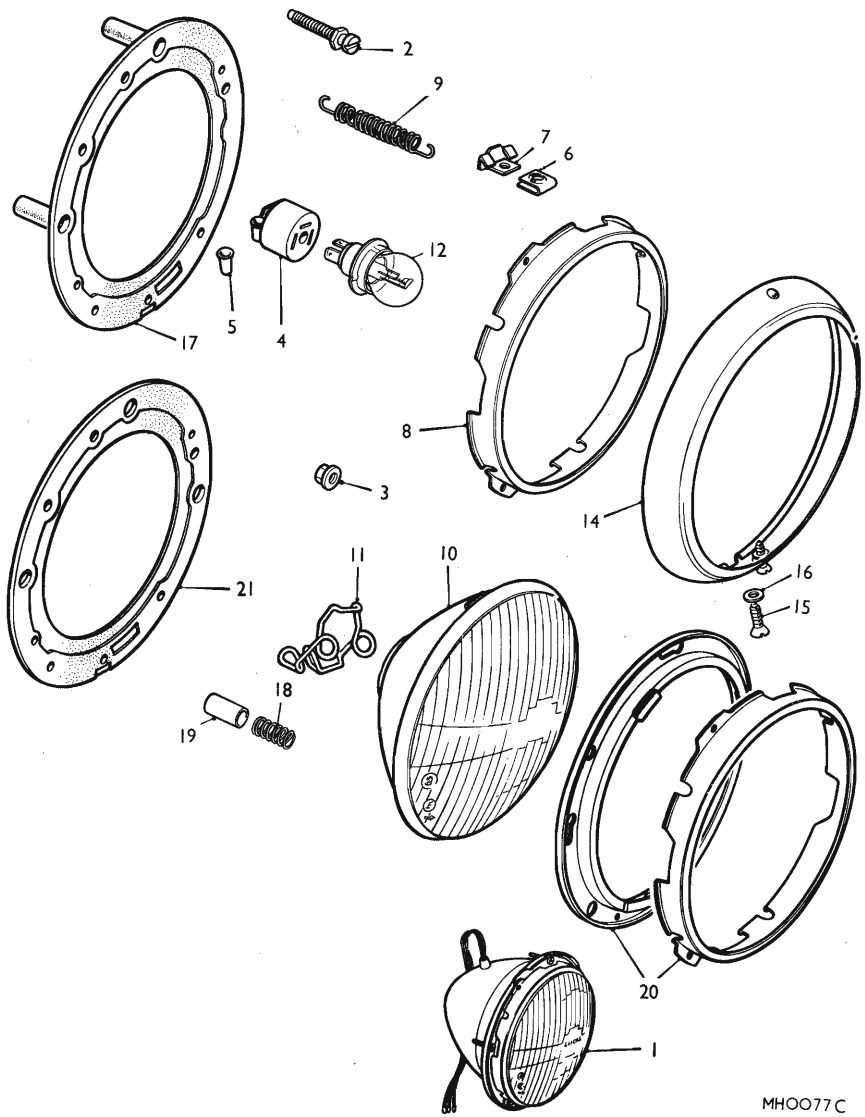


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-FRANCE EXCEPT MIDGET 1500			
	NSP	HEADLAMP ASSEMBLY-VERTICAL DIP-MK 6	2		Use 37H 1368 with rim and gasket.
2	17H 5394	Screw-trimmer	2		
18	17H 5231	Spring-trimmer screw	6		
19	27H 5253	Sleeve-sealing	6		
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA		
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2		
20	17H 5205	PLATE ASSEMBLY-LIGHT UNIT RETAINING	2	(C)H-AN8-38829 TO(+)	
	PJZ 602	Screw	2		
10	27H 4146	UNIT ASSEMBLY-LIGHT	NLA	(C)G-AN3-25788	Use GLU 513
	GLU 513	Unit-light	2		
11	47H 5125	Spring-bulb retaining	2	TO(+)	
12	GLB 411	Bulb	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
16	21G 9057	Washer(rubber)	2		
1	37H 1368	HEADLAMP ASSEMBLY-VERTICAL DIP MK 10	2		
2	67H 5025	Screw-trimmer	NLA	(C)H-AN8-(+)TO 64734	Use BHM 7058
3	27H 7824	Nut-trimmer screw	NLA		Use BMK 2435
3	BMK 2435	Nut-trimmer screw	NLA	(C)H-AN9-64735 TO 85286	Use BHM 7058
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 5713	Sleeve-terminal	6	(C)H-AN10-85287 TO 86803	
6	27H 5354	Nut-rim fixing screw	2		
7	37H 5190	Bracket-rim fixing screw	2	(C)A-AN10-86804 TO 87824	
8	515218	Plate-light unit retaining	2		
	PJZ 602	Screw	6	(C)G-AN3-(+)TO 52389	
9	67H 5026	Spring-unit seating	2		
10	27H 4146	UNIT ASSEMBLY-LIGHT	NLA	(C)G-AN4-52390 TO 749985	Use GLU 513
	GLU 513	Unit-light	2		
11	47H 5125	Spring-bulb retaining	2	(C)G-AN5-74886 TO 154100	
12	GLB 411	Bulb	2		
14	17H 5143	RIM ASSEMBLY	NLA		Use 47H 5554.
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
17	9403	Gasket(rubber)	2		
	BHM 7058	Kit-trimmer screw	2		

(1) See TIB 1B45 F18 for identification of Mk6 and Mk10 headlamps


(+) Change point not available

107-H 62

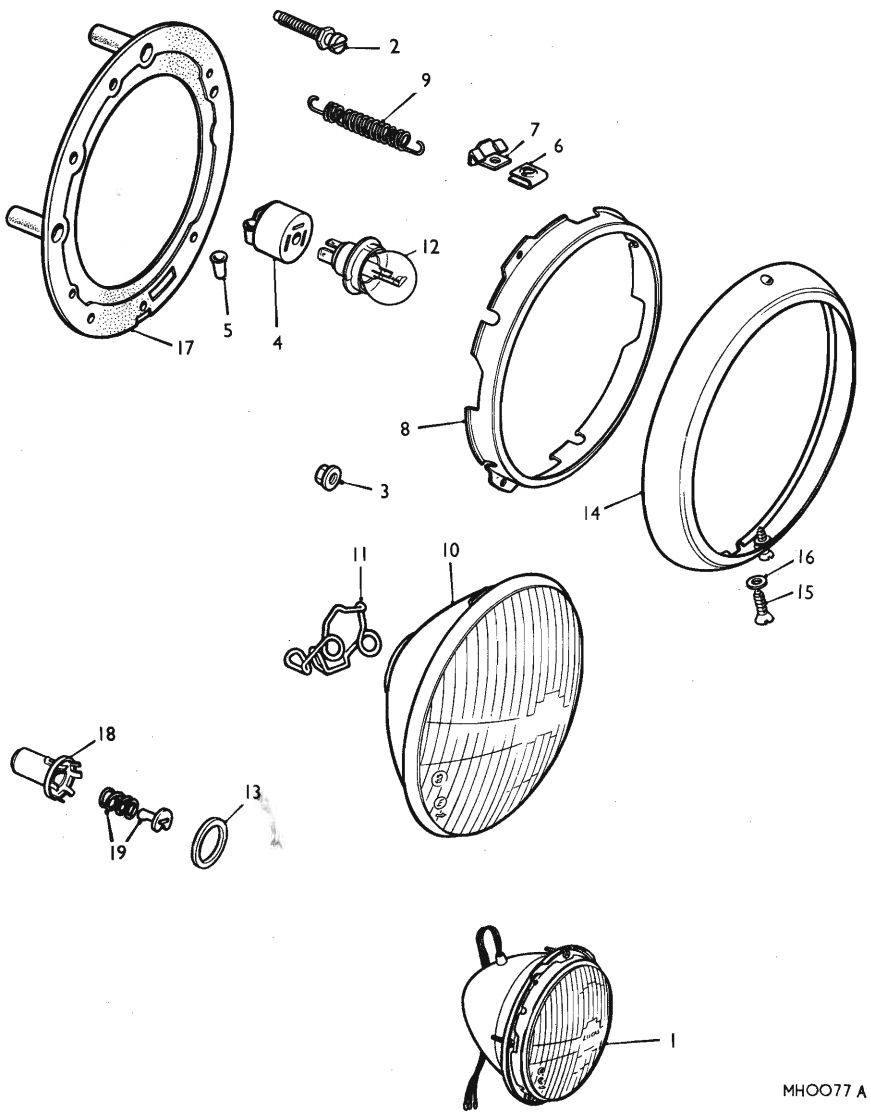


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEADLAMPS-WEST GERMANY EXCEPT MIDGET 1500			
1	27H 8210	HEADLAMP ASSEMBLY-VERTICAL DIP MK 10	2	Use prior to 27H 8204	
1	27H 8204	HEADLAMP ASSEMBLY	2	(C)H-AN10-83287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-74886 TO 154100	
2	67H 5025	Screw-trimmer	NLA		Use BHM 7058
3	27H 7824	Nut-trimmer screw	NLA		Use BMK 2435
3	BMK 2435	Nut-trimmer screw	NLA		Use BHM 7058
4	600226	ADAPTOR ASSEMBLY	2		
5	27H 6713	Sleeve-terminal	NLA		
18	27H 5977	Holder-pilot bulb	2	(C)H-AN8-50192 TO 64734	
19	244700	Interior-holder	2	(C)H-AN9-64735 TO 85286	Part of headlamp 27H 8210
6	27H 5354	Nut-rim fixing screw	2	(C)H-AN10-85287 TO 86803	
7	37H 5190	Bracket-rim fixing screw	2	(C)A-AN10-86804 TO 87824	
8	515218	Plate-light unit retaining	2	(C)G-AN3-38970 TO 52389	Part of headlamp 27H 8210
	PJZ 602	Screw	6	(C)G-AN4-52390	Use GLU 515
9	67H 5026	Spring-unit seating rim	2	TO 74885	
10	27H 5978	UNIT ASSEMBLY-LIGHT	2	(C)G-AN5-74886 TO 154100	
10	27H 4146	UNIT ASSEMBLY-LIGHT	NLA		Part of headlamp 27H 8210
	GLU 515	Unit-light	2		
11	47H 5125	Spring-bulb retaining	2		
12	GLB 410	Bulb-main	2		
13	47H 5353	Ring-sealing-pilot bulb holder	2		
14	47H 5554	RIM ASSEMBLY	2		
15	RTC 465	Screw	2		
16	21G 9057	Washer(rubber)	2		
17	9403	Gasket(rubber)	2		
	BHM 7058	Kit-trimmer screw	2		

107-H 64

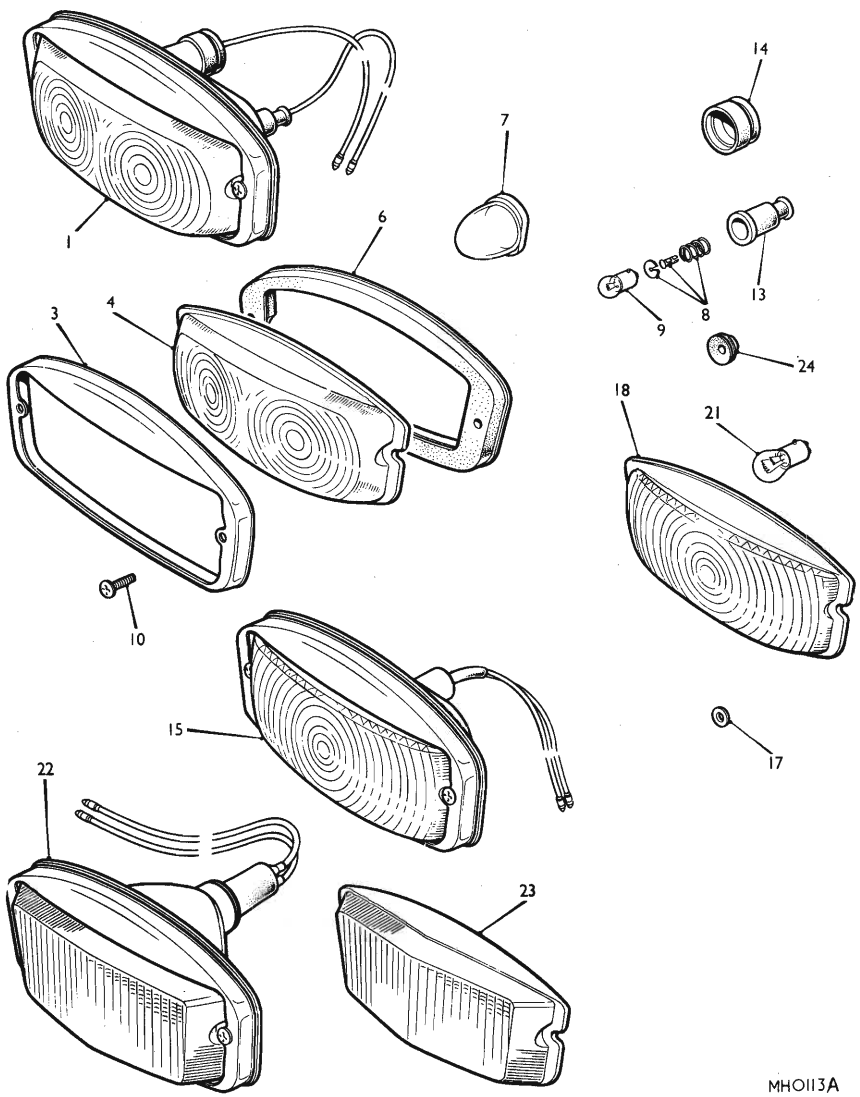

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		LAMP-SIDE AND FLASHER			
1	13H 429	LAMP ASSEMBLY-SIDE AND FLASHER-AMBER-RH	1	(C)H-AN8-38829 TO 50191 Germany.	
	13H 428	LAMP ASSEMBLY-SIDE AND FLASHER-AMBER-LH	1	(C)H-AN8-38829 TO 64734.Except	
3	57H 5155	Rim	2	Germany	
4	57H 5158	Lens-RH	1	(C)H-AN9-64735 TO	
	57H 5159	Lens-LH	1	85286.Except	
6	57H 5157	Gasket-lens seating	2	Germany	
7	57H 5156	Shield-flasher bulb-Amber	2	(C)H-AN10-85287	UK and W.Germany
8	244700	Interior-bulb holder-sidelamp	2	TO 86803	
9	GLB 989	Bulb-sidelamp	2	(C)A-AN10-86804	
10	17H 5400	Screw	4	TO 87824	
8	37H 5452	Interior-bulb holder-flasher lamp	2	(C)G-AN3-25788 TO 38969.Germany	
9	GLB 382	Bulb-flasher	2	(C)G-AN3-25788	
13	37H 1894	Grommet-sidelamp cable	2	TO 52389.Except	
14	17H 5216	Grommet-flasher lamp cable	2	Germany	
				(C)G-AN4-52390 TO 74885.Except Germany	
				(C)G-AN5-74886 TO 154100	
15	BHA 4487	LAMP ASSEMBLY FLASHER-AMBER	NLA	(C)H-AN8-50192	
3	57H 5308	RIM ASSEMBLY	2	TO 64734	
3	57H 5155	Rim	2	(C)H-AN9-64735	
10	17H 5400	Screw	4	TO 85286	W.Germany
17	21G 9057	Washer	4	(C)G-AN3-38970	
18	27H 6243	Lens	2	TO 52389	
6	57H 5157	Gasket-lens seating	2	(C)G-AN4-52390 TO 74885	
	BHA 5318	LAMP ASSEMBLY-DIRECTION INDICATOR-FRONT	2		
	37H 8759	Lens(with screws,washers and seating gasket)	2		
	37H 5452	Bulbholder	2	(C)G-AN6-154101 ON	UK only
	GLB 382	Bulb-21w	2		
	27H 6713	Sleeve-terminal	NLA		

107-H 66

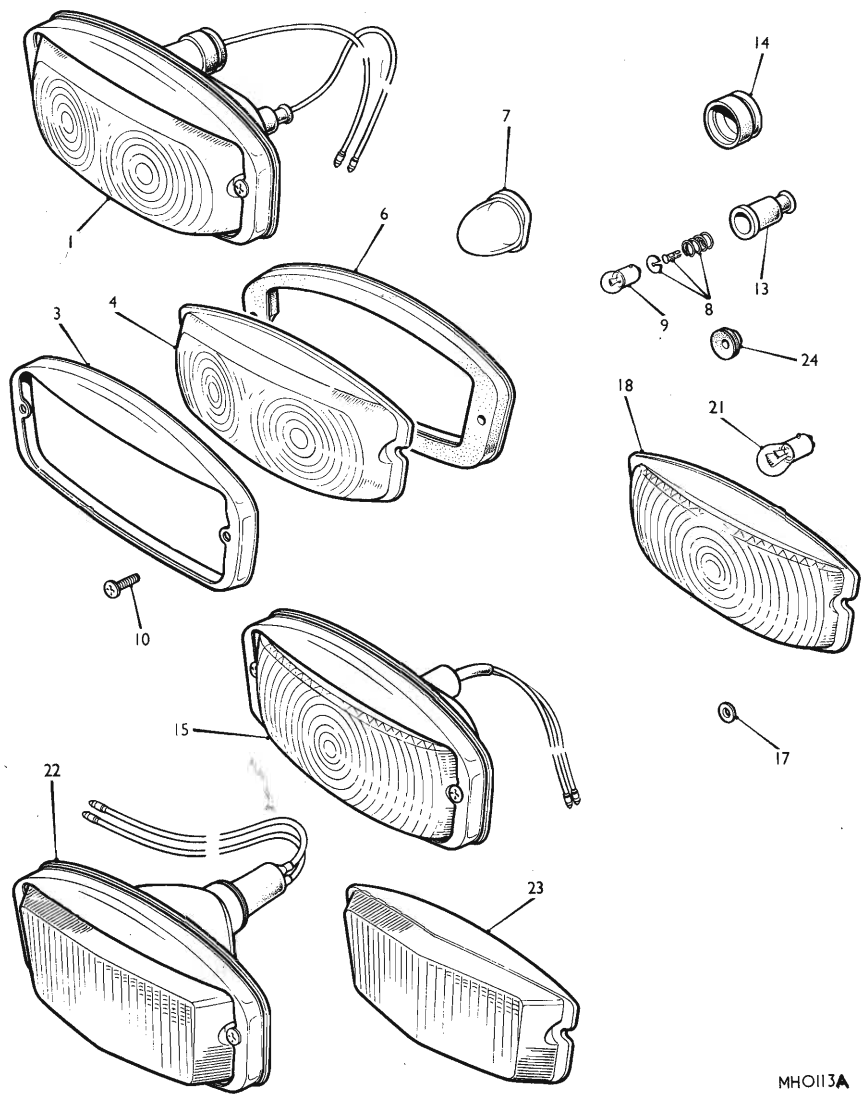


MH0113A

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		LAMP-SIDE AND FLASHER-continued			
15	BHA 4204	LAMP ASSEMBLY-SIDE AND FLASHER-WHITE	2		
3	57H 5308	RIM ASSEMBLY	2		Not UK
17	21G 9057	Washer	4		
18	57H 5307	Lens	2		
6	57H 5157	Gasket-lens seating	2		
21	GLB 380	Bulb	2		
15	BHA 4748	LAMP ASSEMBLY-SIDE AND FLASHER-AMBER $	2		
3	57H 5308	RIM ASSEMBLY	2		
3	57H 5155	Rim	2	Use prior to BHA 4905	
10	17H 5400	Screw	4		
17	21G 9057	Washer	4		
18	27H 6243	Lens $	2		
6	57H 5157	Gasket-lens seating	2		
21	GLB 380	Bulb	2		
22	BHA 4905	LAMP ASSEMBLY-SIDE AND FLASHER-AMBER	2		USA and Canada
3	57H 5155	Rim	2		
23	37H 4738	Lens	2		
6	57H 5157	Gasket-lens seating	2	(C)G-AN5-74886 TO 154100	
21	GLB 380	Bulb	2		
24	2A 9156	Nut-earthing	NLA		
	BHA 5320	LAMP ASSEMBLY-SIDE AND FLASHER-AMBER	2		
	37H 8759	Lens(with screws,washers and gaskets)	2	(C)G-AN6-154101 ON	
	GLB 380	Bulb-6/21w	2		
	27H 6679	Grommet	2		
	27H 6713	Sleeve-terminal	NLA		

$ This item is subject to safety regulations


107-H 68

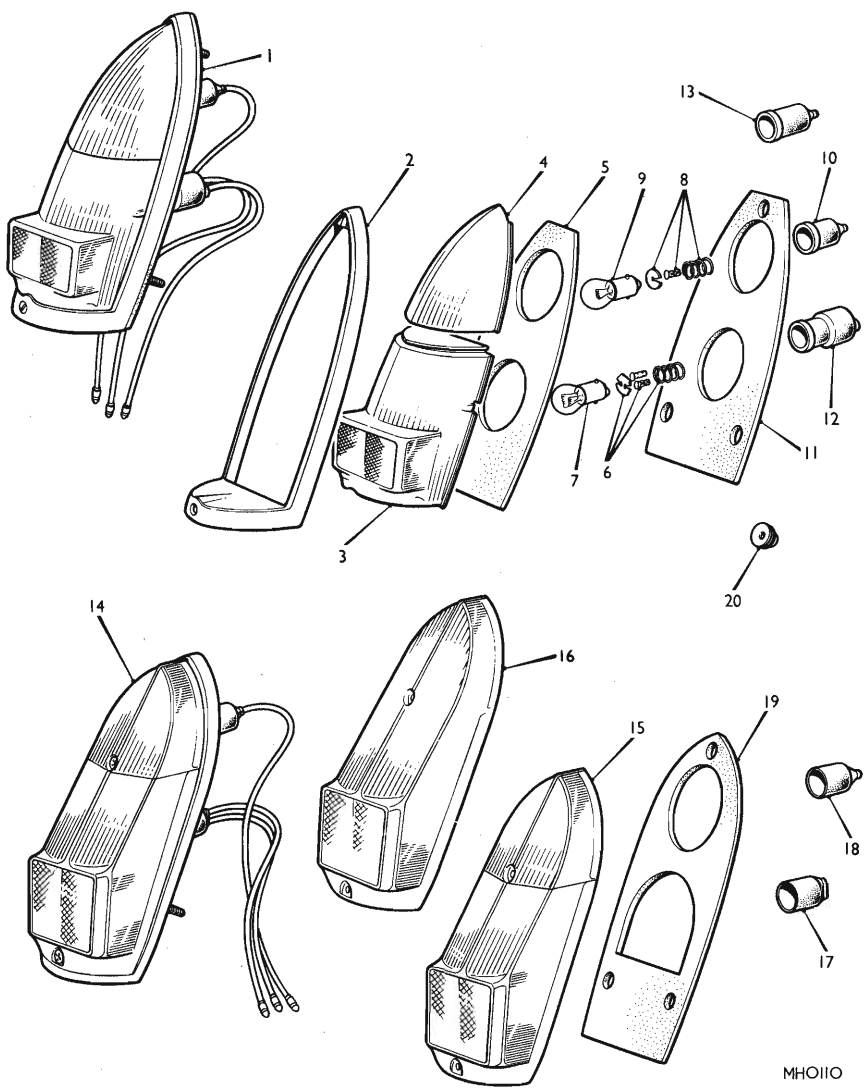

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STOP/TAIL LAMPS			
1	BHA 4175	LAMP ASSEMBLY-STOP/TAIL FLASHER AND REFLEX-AMBER			
		FLASHER	2	(C)H-AN8-38829 TO 5019.Germany	Except USA, Canada and
				(C)H-AN8-38829 TO 64734.Except Germany	W.Germany
1	BHA 4176	LAMP ASSEMBLY-STOP/TAIL FLASHER AND REFLEX-RED			
		FLASHER $	NLA	(C)H-AN9-64735 TO 85286	Use BHA 4175 With Lens 57H 5359
				(C)G AN3-25788 To 38969.GERMANY	USA,Canada and
				(C)G-AN3-25788 To 52389.Except Germany	W.Germany.
2	57H 5355	Rim	2		
	RMP 308	Screw	2		
3	57H 5357	Lens-stop/tail	2	(C)G-AN4-52390 To 74885	
4	57H 5354	Lens-flasher-Amber	2		
4	57H 5359	Lens-flasher-Red $	2		
5	57H 5356	Gasket-lens seating	2		
7	GLB 380	Bulb-stop/tail	2		
8	37H 5452	Interior-bulb holder-flasher	2		
9	GLB 382	Bulb-flasher	2		
10	37H 5525	Grommet-cable	4		
11	57H 5358	Gasket-lamp seating	2		
	BHA 4488	LAMP ASSEMBLY-STOP/TAIL-FLASHER AND REFLEX-AMBER			
		FLASHER	NLA	(C)H-AN8-50192 TO 64734	W.Germany
2	57H 5355	Rim	2	(C)H-AN9-64735 TO 85286	
	RMP 308	Screw-rim fixing	2		
3	57H 5357	Lens-stop/tail	2	(C)G-AN3-38970 TO 52389	
4	57H 5354	Lens-flasher	2		
5	57H 5356	Gasket-lens seating	2	(C)G-AN4-52390 TO 74885	
6	37H 5459	Interior-bulb holder-stop/tail	2		
8	37H 5452	Interior-bulb holder-flasher	2		
12	57H 5496	Grommet-stop/tail-lamp cable	2		
13	57H 5465	Grommet-flasher-lamp cable	NLA		
11	57H 5358	Gasket-lamp seating	2		


$ This item is subject to safety regulations

107-H 70

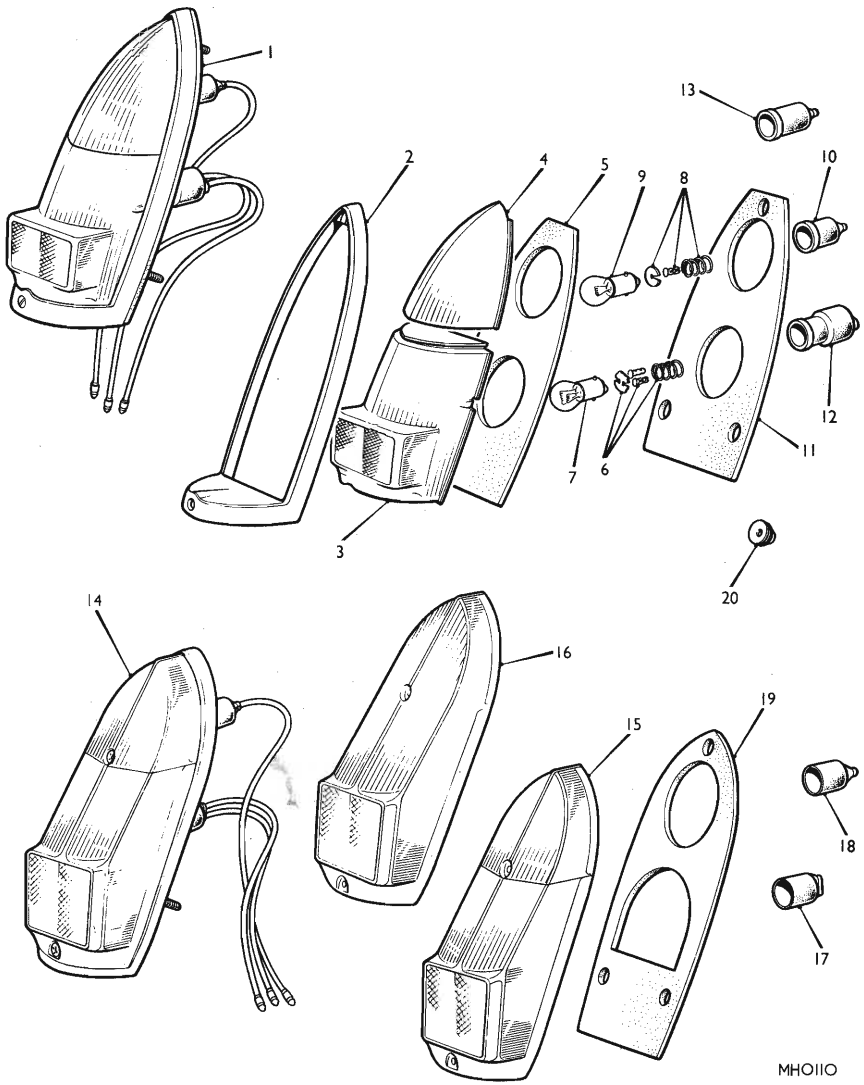

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STOP/TAIL LAMPS-continued			
14	BHA 4973	LAMP ASSEMBLY-STOP/TAIL-FLASHER AND REFLEX-AMBER FLASHER	2		
15	37H 4737	Lens-Amber/Red	2	(C)H-AN10-85287	
6	37H 5459	Interior-bulb holder	2	TO 86803	
7	GLB 380	Bulb-stop/tail	2	(C)A-AN10-86804	Except USA and Canada
8	37H 5452	Interior-bulb holder	2	TO 87824	
9	GLB 382	Bulb-flasher	2	(C)G-AN5-74886	
17	37H 2687	Grommet-cable-stop/tail	NLA	ON	
18	37H 2688	Grommet-cable-flasher	NLA		
19	37H 4679	Gasket-lamp seating	2		
14	BHA 4902	LAMP ASSEMBLY-STOP/TAIL-FLASHER AND REFLEX-AMBER FLASHER	NLA		Use BHA 5260
16	37H 7119	Lens-Red/Amber	2	(C)H-AN10-85287	
6	37H 5459	Interior-bulbholder	2	TO 86803	
7	GLB 380	Bulb-stop/tail	2	(C)A-AN10-86804	
8	37H 5452	Interior-bulb holder	2	TO 87824	
9	GLB 382	Bulb-flasher	2	(C)G-AN5-74886	
17	37H 2687	Grommet-cable-stop/tail	NLA	TO 129950	
18	37H 2688	Grommet-cable flasher	NLA		
19	37H 4679	Gasket-lamp seating	2		USA and Canada
14	BHA 5260	LAMP ASSEMBLY-STOP/TAIL-FLASHER AND REFLEX-AMBER FLASHER	2		
16	37H 7119	Lens-Red/Amber	2		
6	37H 5459	Interior-bulb holder	2		
7	GLB 380	Bulb-stop/tail	2	(C)G-AN5-129951 ON	
8	37H 5452	Interior-bulb holder	2		
9	GLB 382	Bulb-flasher	2		
17	37H 2687	Grommet-cable	NLA		
18	37H 2688	Grommet	NLA		
19	37H 4679	Gasket-lamp seating	2		


107-H 72

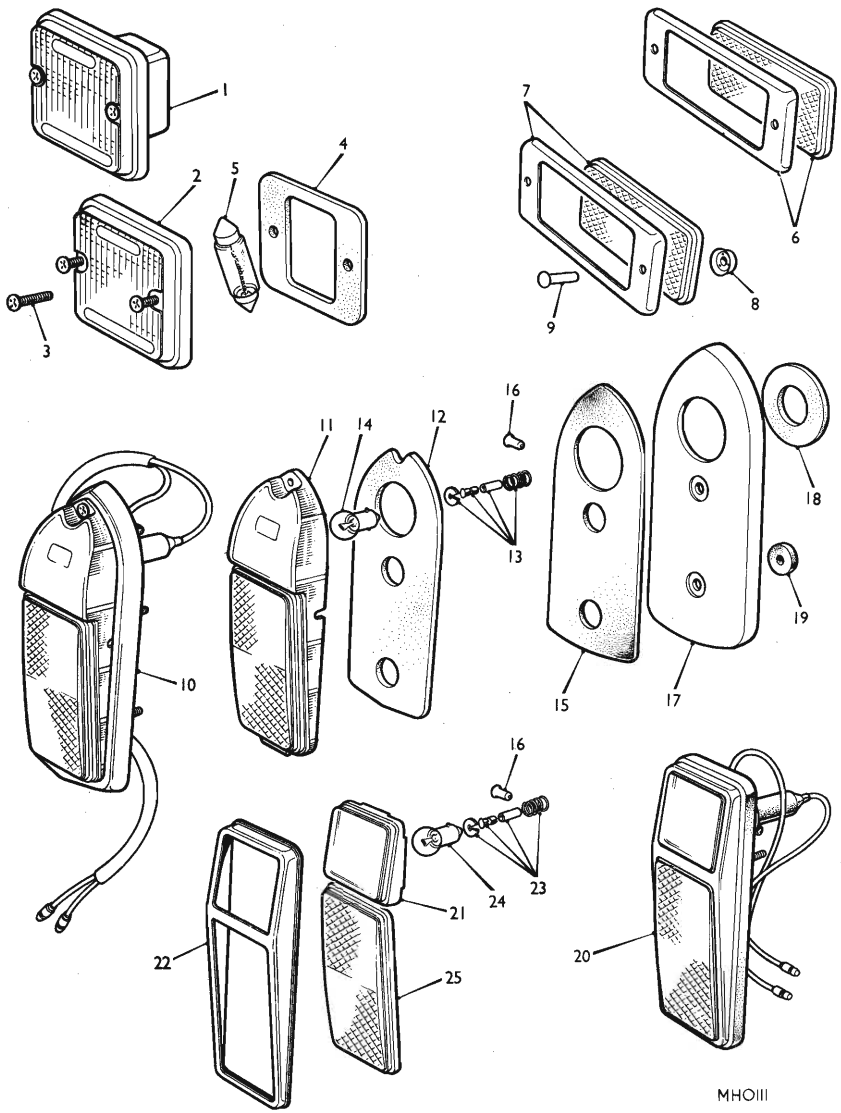

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		LAMP-REVERSE			
1	BHA 5167	LAMP ASSEMBLY-REVERSE $	2	(C)H-AN9-70268 TO 85286	
2	37H 1760	LENS ASSEMBLY $	2	(C)H-AN10-85287 TO 86803	Use 37H 3751.
3	27H 8811	Screw-lens fixing	NLA	(C)A-AN10-86804 TO 87824	
3	37H 3751	Screw-lens fixing	4	(C)G-AN4-58112 TO 74885	Except France
4	37H 1759	Gasket-lens seating	2	(C)G-AN5-74886 TO 113616 America 74886 ON except N.America	
5	GLB 273	Bulb	2		
	BHA 5167	LAMP ASSEMBLY-REVERSE $	2		
	37H 7512	Lens $	2	(C)G-AN5-113617 TO 129950	
	37H 1759	Gasket-seating	2		
	GLB 270	Bulb	2		
	BHA 5262	LAMP ASSEMBLY-REVERSE $	2		USA and Canada
	37H 7512	Lens $	2	(C)G-AN5-129951 ON	
	GLB 270	Bulb-festoon	2		
	37H 1759	Gasket-seating	2		
1	BHA 4621	LAMP ASSEMBLY-REVERSE	2	(C)H-AN9-70268 TO 85286	
2	37H 3400	LENS ASSEMBLY	2	(C)H-AN10-85287 TO 86803	
3	27H 8811	Screw-lens	4	(C)A-AN10-86804 TO 87824	France
4	37H 1759	Gasket-seating	2	(C)G-AN4-58112 TO 74885	
5	37H 1547	Bulb	2	(C)G-AN5-74886 ON	


$ This item is subject to safety regulations

107-H 74

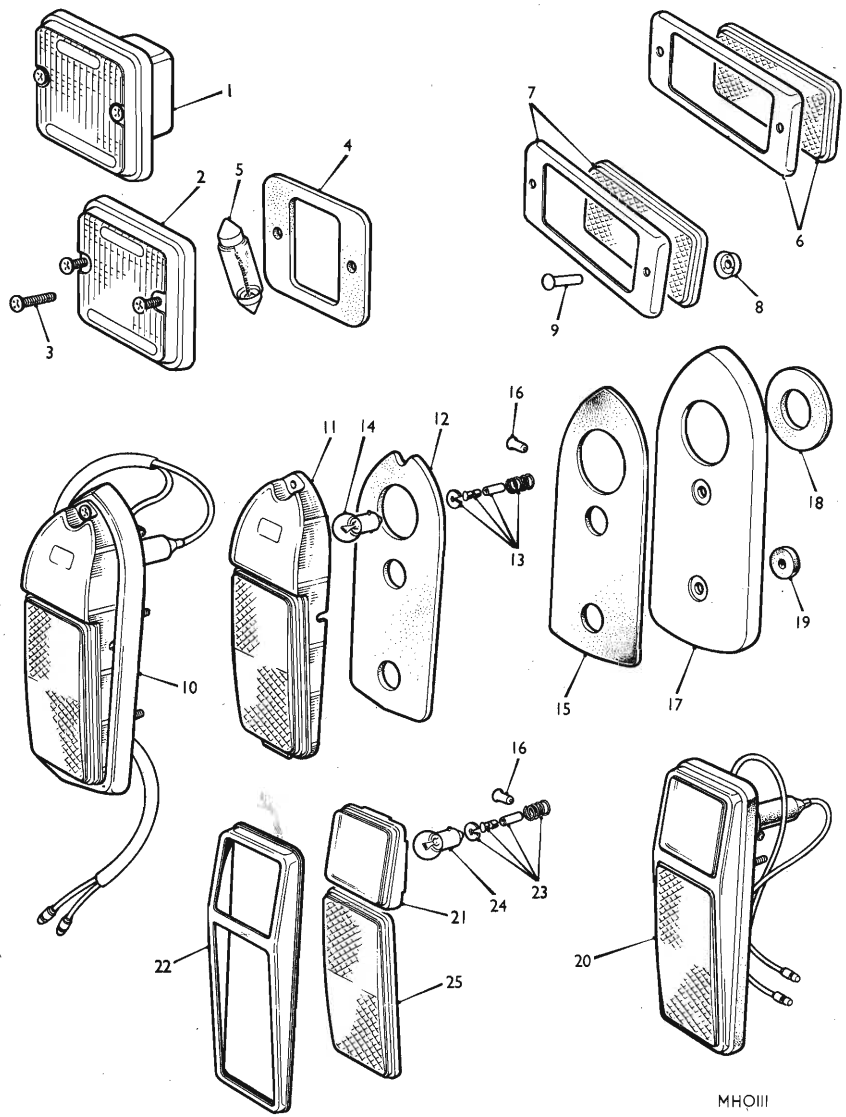

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		LAMP-REFLEX			
6	13H 4689	Reflector-reflex-Amber-front wing	2	Use prior to BHA 4968 and BHA 4969	USA,Canada AND Sweden
7	BCA 4568	Reflector-reflex-Red-rear wing	2		
8	BHA 4843	Push-on-fix	NLA		
9	AHH 8783	Rivet	8		
10	BHA 4968	LAMP ASSEMBLY-REFLEX-SIDE MARKER-FRONT-RH	1		
	BHA 4969	LAMP ASSEMBLY-REFLEX-SIDE MARKER-FRONT-LH	1		
11	11727	Lens-Amber-RH	1		
	11730	Lens-Amber-LH	1		
12	37H 4753	Gasket-lens seating	2		
13	244700	Interior-bulb holder	2		
14	GLB 989	Bulb	2		
15	37H 4752	Gasket-lamp seating	2		
16	27H 6713	Sleeve-terminal	NLA	(C)G-AN5-74886 ON	USA and Canada
17	AHA 9338	Plinth-side marker-RH	1		
	AHA 9339	Plinth-side marker-LH	1		
18	AHA 9485	Seal-plinth	NLA		
19	AHA 9484	Washer-sealing	NLA		
	PWZ 203	Washer-plain	4		
	LNZ 203	Lock-nut	4		
20	BHA 4972	LAMP ASSEMBLY-REFLEX SIDE MARKER-REAR	2		
21	608224	Lens-Red	2		
22	519364	Rim	2		
23	244700	Interior-bulb holder	2		
24	GLB 989	Bulb	2		
25	47H 5279	rEFLEX-REFLECTOR	2		
	27H 6713	Sleeve-terminal	NLA		
16	CNZ 102	Nut	6		
	LWZ 202	Washer-spring	6		

107-H 76

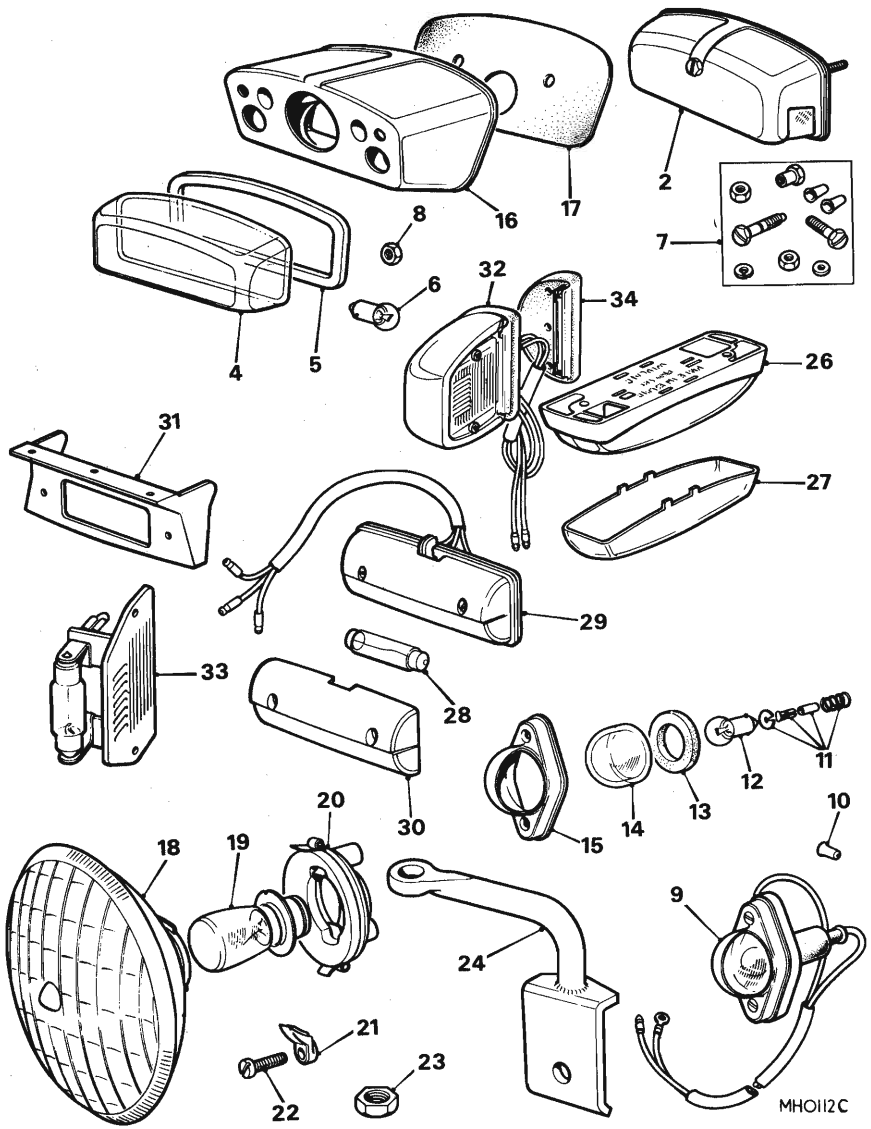


107— H77

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		NUMBER PLATE LAMPS AND FOGLAMP			
	BHA 4494	LAMP ASSEMBLY-NUMBER PLATE	NLA		West Germany
2	BHA 4153	LAMP ASSEMBLY-NUMBER PLATE $	1		
4	601721	Lens	1	Use prior to 2A 9119	
5	57H 5368	Gasket-lens seating	NLA		
6	GLB 989	Bulb	2		
7	7H 5123	Sundry parts	1SET		
8	AJD 8052	Nut	4		Use with BHA 4494
9	2A 9119	LAMP ASSEMBLY-NUMBER PLATE $	2	(C)H-AN10-85287	
10	27H 6713	Sleeve-terminal	NLA	TO 86803	
11	244700	Interior-bulb holder	2	(C)A-AN10-86804	
12	GLB 989	Bulb	2	TO 87824	
13	17H 5302	Gasket-glass-seating	2	(C)G-AN5-74886	
14	606078	Glass	2	TO 143354 USA	
15	37H 5426	Cover	2	AND Canada,74886 TO 154100 Except USA and Canada	
	127916	LAMP ASSEMBLY-NUMBER PLATE-RHD	1	(C)G-AN6-154101 ON	
32	BHA 5303	LAMP ASSEMBLY-NUMBER PLATE	2		
23	13H 5991	Lens and bulb support	2	(C)G-AN5-143355 TO 154100	
28	GLB 254	Bulb	2		
34	13H 9016	Grommet-base	2	(C)G-AN6-154101 To 179462	
	WA 702101	Washer	4		
	LNZ 203	Nut-lamp to mounting plate	4		USA And Canada
	AAU 2143	LAMP ASSEMBLY-NUMBER PLATE $	2		
	AAU 5113	Lens $	2	(C)G-AN6-179463 On	
	GLB 254	Bulb	2		
	NH 105041	Nut	4		
	WL 105001	Washer-spring	4		
16	AHA 9200	Plinth-number plate lamp	1	(C)H-AN10-85287	
17	AHA 9202	Seal-plinth to body	1	TO 86803	
	PWZ 104	Washer-spring	2	(C)A-AN10-86804	
	LNZ 204	Locknut	2	TO 87824	
				(C)G-AN5-74886 ON	


$ This item is subject to safety regulations

107-H 78

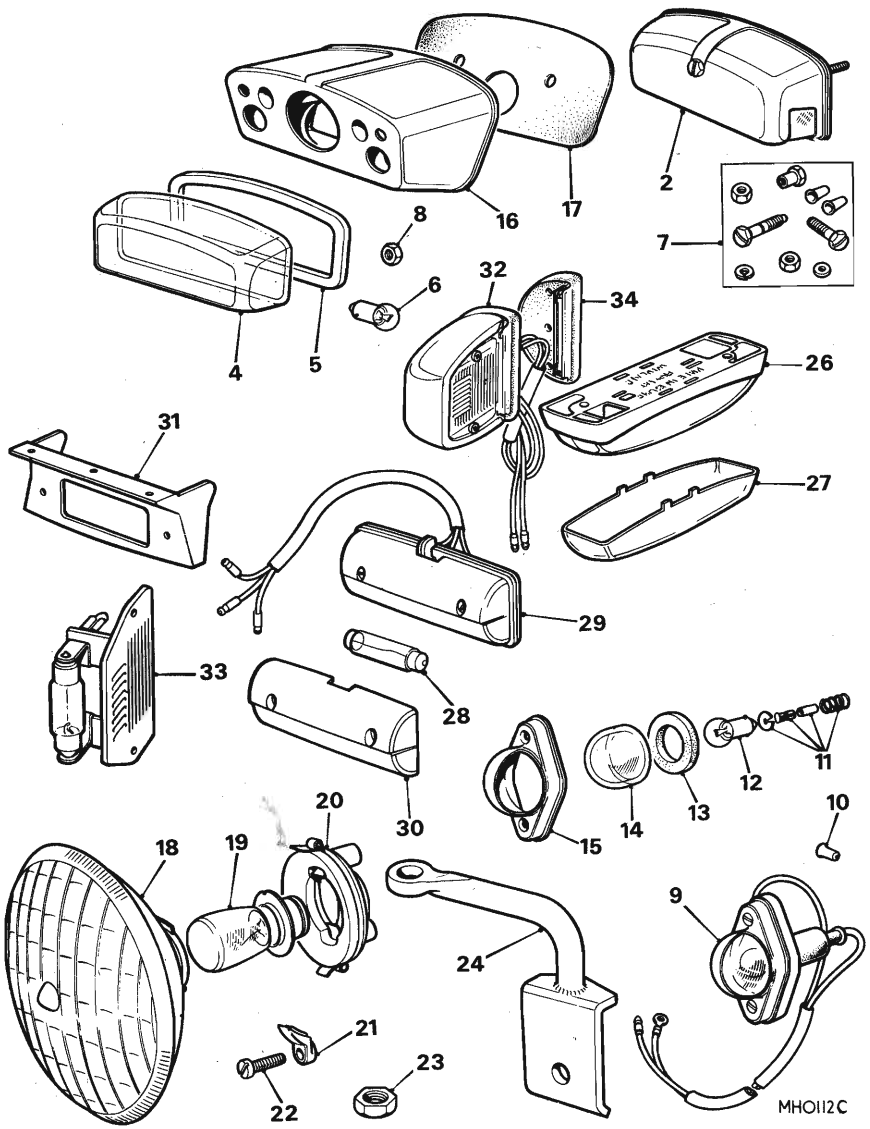


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		NUMBER PLATE LAMPS AND FOGLAMP-continued.			
	37H 5314	LAMP ASSEMBLY-FOG	NLA		
18	ACG 5179	Unit-light	2		
19	BFS 323	Bulb	2		
20	57H 5336	Adaptor	2		
21	AJH 5057	Catch-rim	2		
21	AJH 5057	Catch-rim	2		
22	17H 5400	Screw-catch	2		
23	27H 6767	Nut-lamp-spigot	2		
24	AHA 6368	Bracket-fog lamp mounting-RH	1		
25	AHA 6369	Bracket-fog lamp mounting-LH	NLA		
26	BHA 5040	COURTESY LIGHT ASSEMBLY-BOOT	1		
27	37H 5923	Lens	1		
28	GLB 254	Bulb	1		
	PTZ 606	Screw-courtesy light-trunk	2		
	PWZ 202	Washer	2		
29	BHA 5138	COURTESY LIGHT ASSEMLBY-INTERIOR	1		Was AVB 494.
30	27H 3590	Lens	1		
28	GLB 254	Bulb	1		
	PMZ 207	Screw-light to bracket	2		
	LWZ 202	Washer	2		
	AHA 9767	Bracket-interior light	1		USA Only
31	AHA 9769	Bracket-interior light	1		Except USA
	PMZ 207	Screw-bracket	3		Except USA
	LWZ 202	Washer	3		Except USA

107-H 78.02

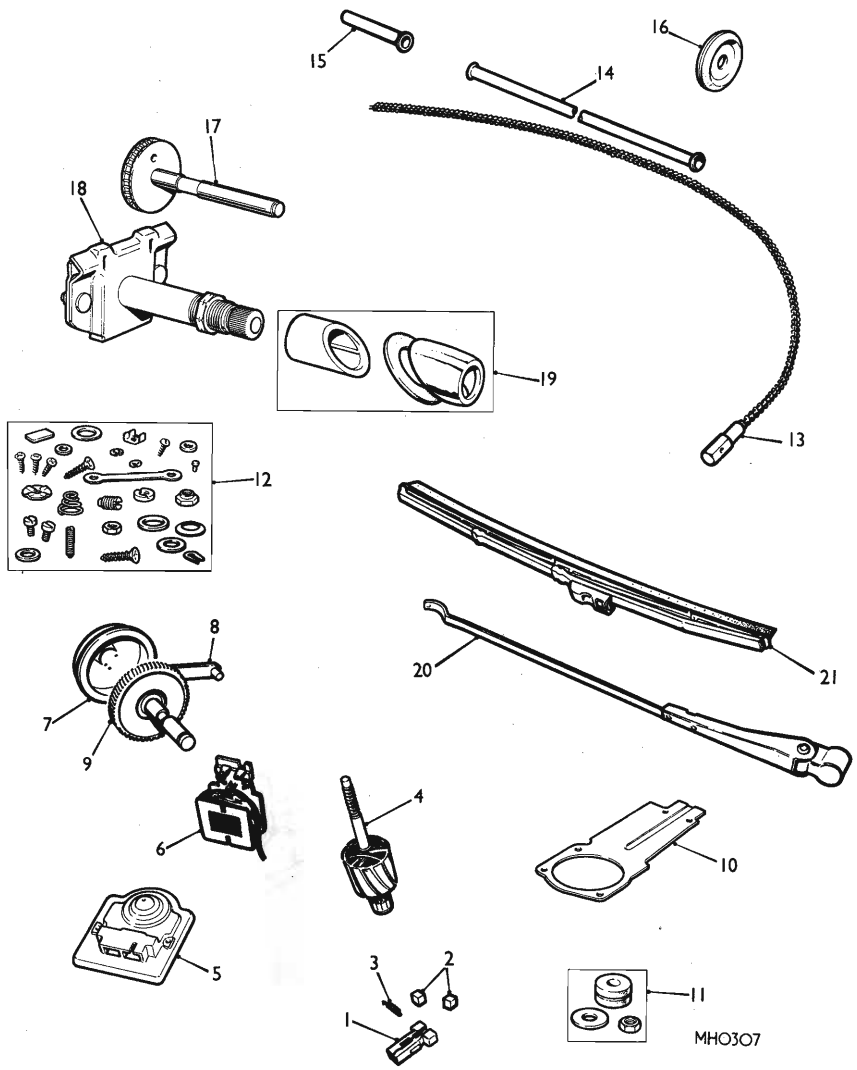

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WINDSCREEN WIPERS-2 BLADE SYSTEM			
	27H 3542	MOTOR ASSEMBLY-WINDSCREEN WIPER	NLA		
1	17H 5396	BRUSH GEAR ASSEMBLY	1		For use with early type motor 57H 5555
2	7H 5130	Brush	1SET		
3	27H 5309	Spring-brush	1		
	27H 4463	BRUSH GEAR ASSEMBLY	NLA		Use with 27H 3542
2	27H 4464	Brush	NLA		
3	27H 5309	Spring-brush	1		
4	27H 5374	Armature	1		
5	7H 5991	Cover-armature(with bearing)	1		
7	57H 5559	Switch-parking	1		
8	17H 2458	Rod-connecting	1	(C)H-AN8-38829	
9	57H 5589	Shaft and gear	1	TO 64734	
10	27H 9070	Cover-gearbox	1	(C)H-AN9-64735	
11	17H 5431	Fixing parts	3STS	TO 72040	
12	17H 5449	Sundry parts	NLA	(C)G-AN3-25788	
13	37H 5169	Cross-head and rack	1	TO 52389	
15	13H 5412	Casing-outer-wheelbox to extension	1	(C)G-AN4-52390 TO 60459	
16	C 5574	Grommet-casing through dash	1		
	BHA 4151	WHEELBOX ASSEMLY	NLA		Use wheelbox 37H 6316 with 1 off bush kit 18G 8851
17	AJH 5079	Spindle and gear	2		
18	37H 6316	Wheelbox(less bushes)	2		
19	18G 8851	Kit-bush	1		
20	13H 66	Arm-wiper-RHD	2		
	13H 68	Arm-wiper-LHD	2		
21	GWB 159	Blade-wiper	2		

107-H 80

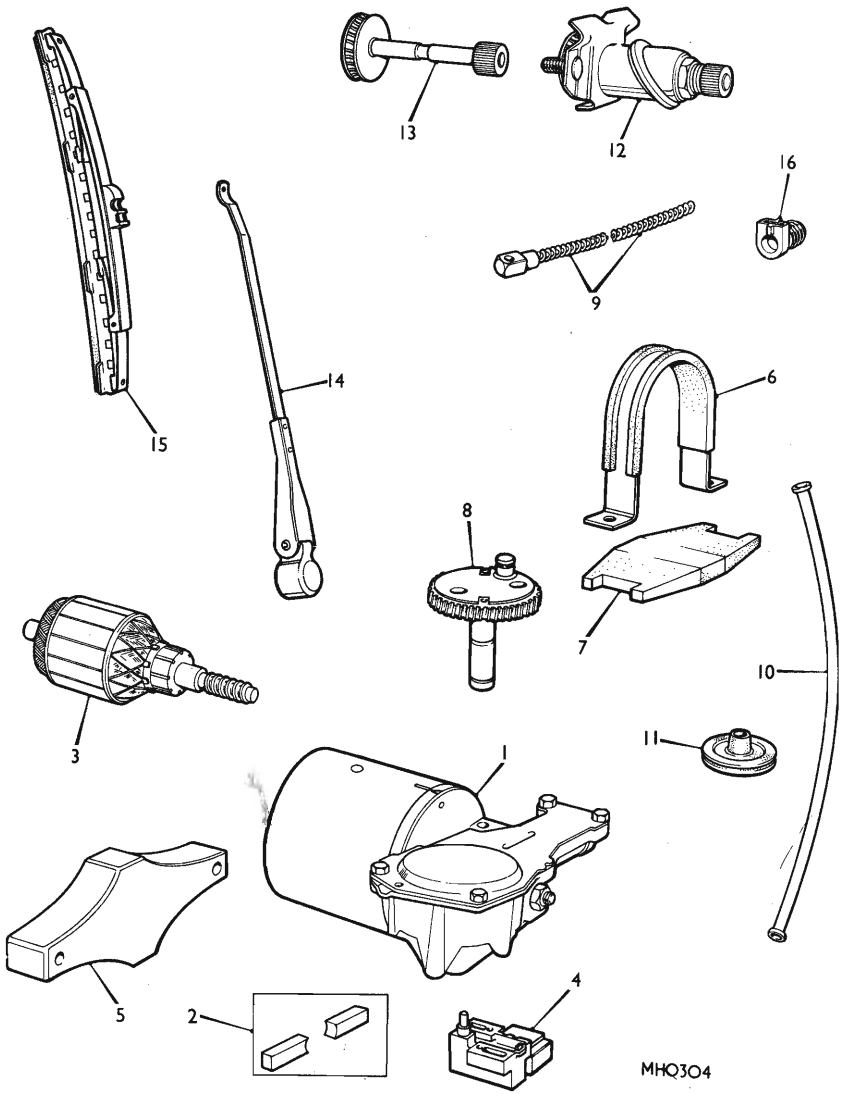


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WINDSCREEN WIPERS-2 BLADE SYSTEM-continued			
1	37H 8221	MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR) A/B AND D	1		Was 37H 2732
2	517644	Brush A/B	1SET	(C)H-AN9-72041	
3	37H 8222	Armature	1	TO 85286	Was 37H 2735
4	37H 2734	Switch-parking A/B	1	(C)H-AN10-85287	
	RTC 198	Brush D	1	TO 86803	
	37H 6784	Switch-parking D	1	(C)A-AN10-86804	
5	AHH 8766	Packing-wiper motor	NLA	TO 87824	
6	BHA 4790	Strap-wiper motor	1	(C)G-AN4-60460	
7	150844	Pad	1	TO 74885	
8	608092	Gear-wiper motor-LHD	1	(C)G-AN5-74886 ON	
9	37H 5208	Rack-96.85cm(38")long	1		
9	37H 5169	Rack-82.62cm(32")long	1		N.America
10	AHA 8696	Casing-outer-wheelbox to wheelbox	1		
10	13H 5412	Casing-outer-wheelbox to extension	1		
11	C 5574	Grommet-casing through dash	2		
	BHA 4774	WHEELBOX ASSEMBLY $	NLA		Use wheelbox 37H 6314 with 1 off bush kit 18G 8851
	27H 2330	Spindle and gear $	2		
	FNZ 103	Nut	2		
	37H 6314	Wheelbox(less bushes)	2	Use prior to 37H 7738.	
	37H 7738	Wheelbox(less bushes)	2	(C)G-AN6-156798 ON	
	18G 8851	Kit-bush	2		

NOTE:
Reference must be made to the suffix letter of the manufacturers part number stamped on the motor to ensure that the correct component parts are ordered.


$ This item is subject to safety regulations

107-H 82

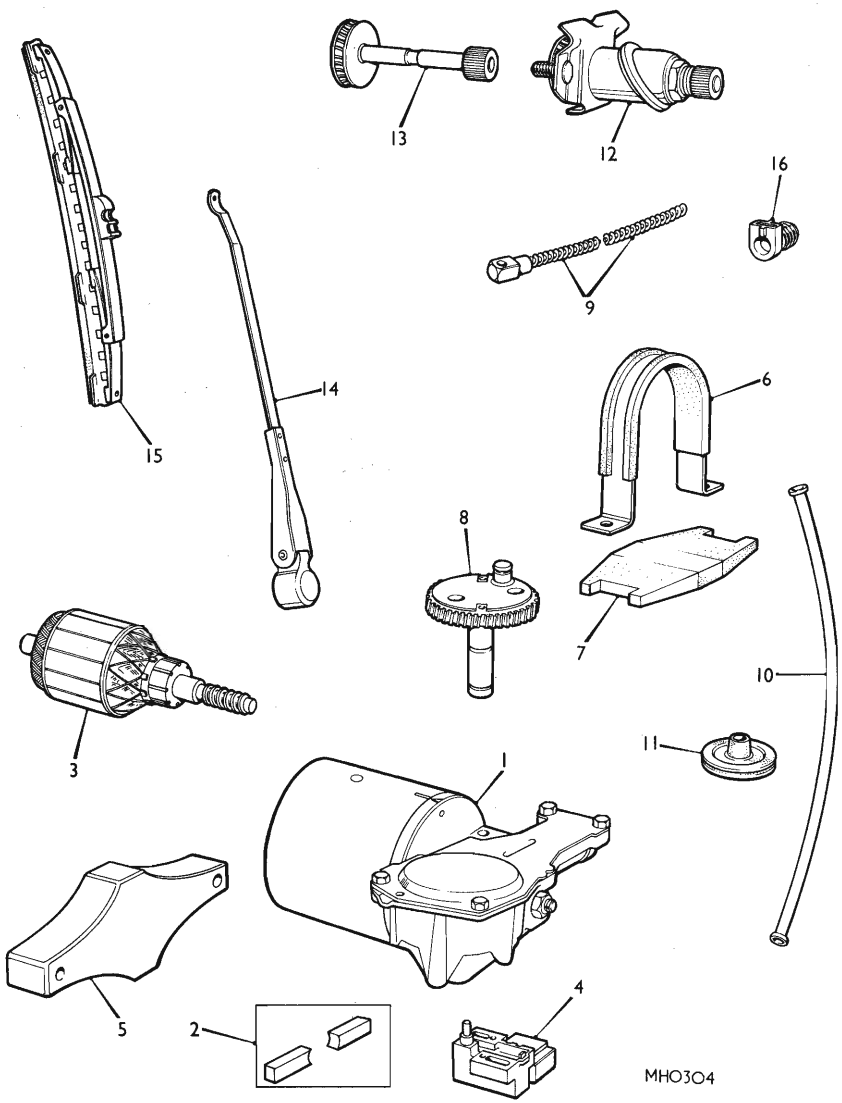

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WINDSCREEN WIPER-2 BLADE SYSTEM-continued			
14	BHA 4776	Arm-windscreen wiper-RHD	2		(C)H-AN9-72041
	BHA 4778	Arm-windscreen wiper-LHD	2		TO 77590
15	GWB 159	Blade-windscreen wiper	2		(C)G-AN4-60460
					TO 66225
14	BHA 4894	Arm-windscreen wiper-RHD $	2		(C)H-AN9-77591
	BHA 4893	Arm-windscreen wiper-LHD $	2		TO 85286
15	GWB 145	Blade-windscreen wiper $	2		(C)H-AN10-85287
					TO 86803
					(C)A-AN10-86804
					TO 87824
					(C)G-AN4-66226
					TO 74885
					(C)G-AN5-74886
					TO 123750
14	BHA 5208	Arm-windscreen wiper-RHD $	2		
	BHA 5207	Arm-windscreen wiper-LHD $	2		(C)G-AN5-123751 ON
15	GWB 164	Blade-windscreen wiper $	2		
	HBZ 411	Screw	2		(C)H-AN9-72041
	PWZ 204	Washer-plain	2		TO 85286
	LWZ 204	Washer-spring	2		(C)H-AN10-85287
	NH 604041	Nut	2		TO 86803
					(C)A-AN10-86804
					TO 87824
					(C)G-AN4-60460
					TO 74885
					(C)G-AN5-74886 ON

$ This item is subject to safety regulations

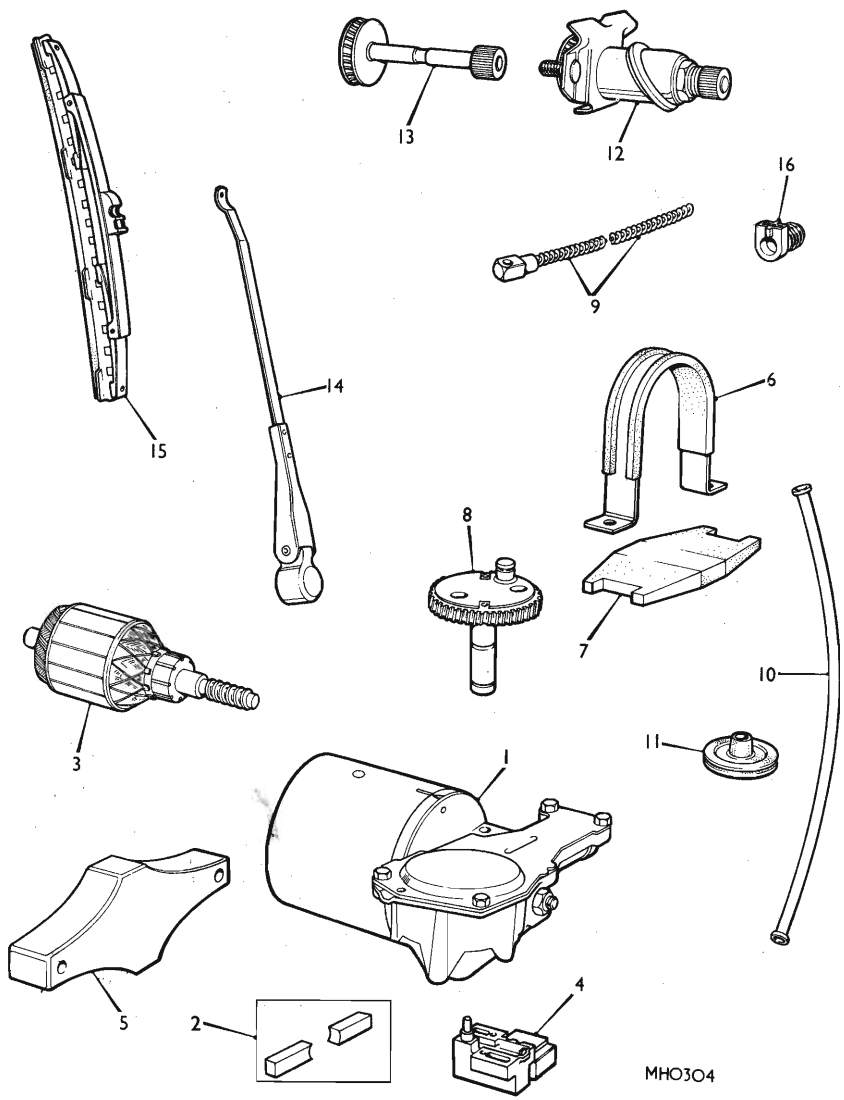


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		WINDSCREEN WIPERS-3 BLADE SYSTEM			
1	37H 2732	MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR) AB/D	NLA		Use GEU 708
1	GEU 708	MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR)	1		
2	517644	Brush AB	1SET		
3	37H 2735	Armature	1		
4	37H 2734	Switch-parking AB	1		
	RTC 198	Brush D	1SET		
	37H 6784	Switch-parking D	1		
16	37H 3694	Ferrule-casing retaining	1		
5	AHH 8766	Packing-wiper motor	NLA		
6	BHA 4790	Strap-wiper motor	1		
7	150844	Pad	1		
10	AHA 8696	Casing-outer-wheelbox to wheelbox	1		
10	13H 5412	Casing-wheelbox extension	1		
11	C 5574	Grommet-casing through dash	1		
8	37H 3045	Gear-wiper motor	1		
9	RTC 702	Rack-55"(140.73cm)long	1		
	BHA 4774	WHEELBOX ASSEMBLY $	NLA		Use wheelbox 37H 6314 with 1 off bush kit 18G 8851
13	27H 2330	Spindle and gear $	3		
	FNZ 103	Nut	6		
	37H 6314	Wheelbox(less bushes)	3	Use prior to 37H 7738. (C)G-AN6-156798 ON	
	37H 7738	Wheelbox(less bushes)	3		
	18G 8851	Kit-bush	3		
14	BHA 4893	Arm-windscreen wiper $	3	Use prior to BHA 5207 and GWB 164	
15	GWB 145	Blade-windscreen wiper $	3		
14	BHA 5207	Arm-windscreen wiper $	3	(C)G-AN5-123751 ON	
15	GWB 164	Blade-windscreen wiper $	3		
	HBZ 411	Screw	2		
	PWZ 204	Washer-plain	2		
	LWZ 204	Washer-spring	2		

NOTE:
Reference must be made to the suffix letter of the manufacturers part number stamped on the motor to ensure that the correct component parts are ordered.


$ This item is subject to safety regulations

107-H 86

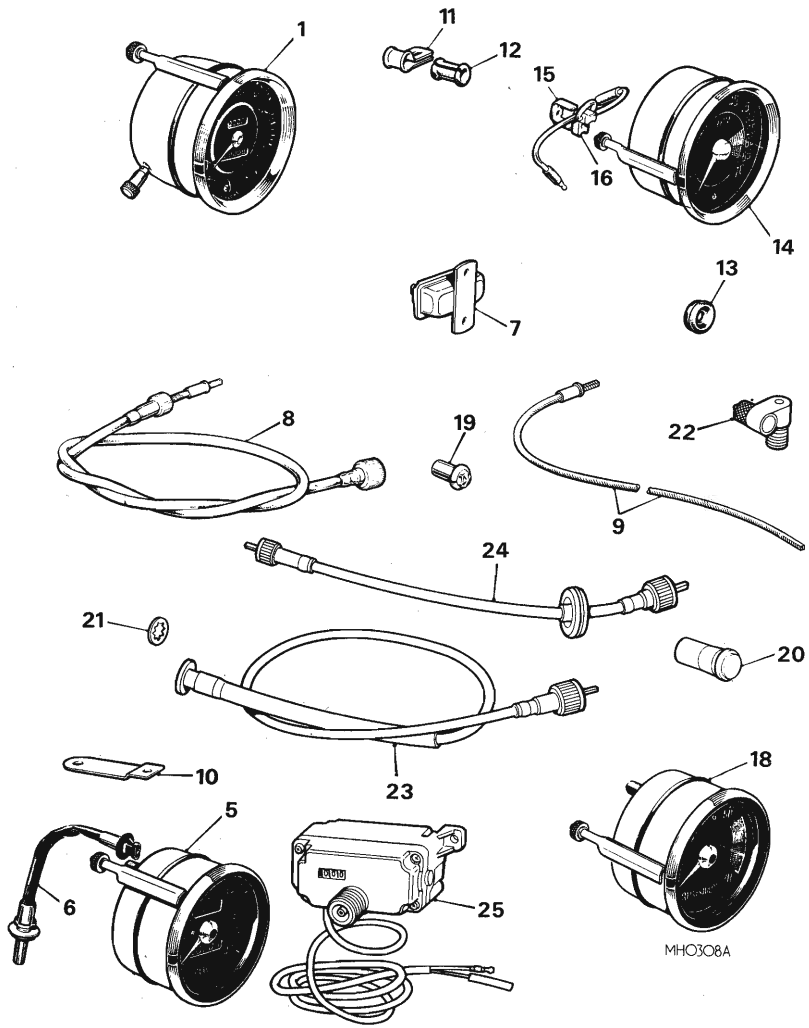


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SPEEDOMETER			
		SPEEDOMETER			
1	BHA 4634	KPH(SN6142/02)West Germany	1	(C)H-AN8-38829 TO 64734	For vehicles fitted with 145-13 tyres
1	BHA 4652	MPH(SN6142/04)West Germany	NLA	(C)H-AN9-64735 TO 77590	
1	BHA 4635	KPH(SN6142/03)West Germany	NLA	(C)G-AN3-24788 TO 52389	For vehicles fitted with 520-13 tyres
1	BHA 4653	MPH(SN6142/05)West Germany	NLA	(C)G-AN4-52390 TO 66225	
1	BHA 4437	KPH(SN6142/01)	1		
1	BHA 4436	MPH(SN6142/00)	1	Use prior to BHA 4844	
1	BHA 4844	MPH(SN6142/06)	1	(C)H-AN9-77591 TO 85286	
1	BHA 4845	KPH(SN6142/07)Except Germany	NLA	(C)H-AN10-85257 TO 86803	
1	BHA 4846	KPH(SN6142/08)Germany only	1	(C)A-AN10-86804 TO 87824 (C)G-AN4-66226 TO 74885 (C)G-AN5-74886 TO 141411	Not USA,Canada or Sweden
	BHA 5277	MPH(SN6142/06 BS)	1	(C)G-AN5-141412 TO 154100	
	BHA 5341	MPH(SN6142/09S)	1	(C)G-AN6-154101 ON	
1	BHA 4929	KPH(SN5226/10A)	NLA		Sweden
5	BHA 4689	MPH(SN5226/06)	NLA	Use prior to BHA 4863	
5	BHA 4863	MPH(SN5226/09)	1	(C)H-AN9-77591 TO 85286 (C)H-AN10-85287 TO 87284 (C)G-AN4-66226 TO 105500	USA and Canada
5	BHA 5094	MPH(SN5230/02)	1	(C)G-AN5-105501 TO 119495	
5	BHA 5166	MPH(SN5230/05)	1	(C)G-AN5-119496 TO 154100	
	BHA 5339	MPH(SN5230/12S)	1	(C)G-AN6-154101 ON	
6	BHA 4771	Control-remote	NLA		
7	BHA 4602	Stabilizer-voltage	1		
	PTZ 803	Screw	1		
22	BHA 4794	Angle drive-speedometer	1	(C)G-AN6-154101 ON	RHD

107-H 88

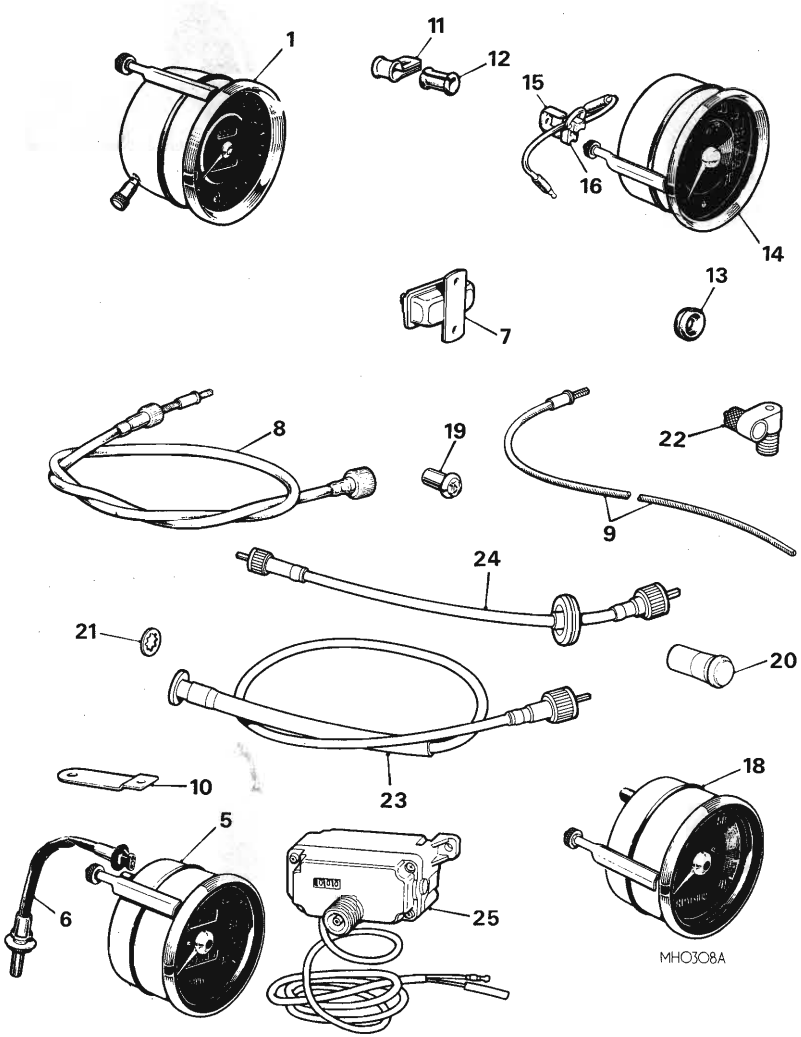


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		SPEEDOMETER CABLE			
8	GSD 118	CABLE ASSEMBLY-SPEEDOMETER-5'2"(157.48cm)-RHD	1		Midget Mk.2 Sprite Mk.3
9	17H 844	Cable-inner	1		
8	GSD 114	CABLE ASSEMBLY-SPEEDOMETER-5'6"(167.64cm)-RHD	1	Use prior to GSD 288	Midget Mk.3 Sprite Mk.4
9	17H 756	Cable-inner	1		
	GSD 288	Cable-speedometer-6'6"(210.8cm)	1	(C)G-AN6-154101 ON	RHD
8	GSD 104	CABLE ASSEMBLY-SPEEDOMETER-4'6"(137.16cm) LONG	1	Finished at (C)G-AN5-154100	LHD except USA Canada
9	17H 843	Cable-inner	1		
8	GSD 145	CABLE ASSEMBLY-SPEEDOMETER-3'11"(119.38cm) LONG	1	Use prior to BHA 5370/3 Inclusive	USA,Canada, Sweden,Germany
9	37H 2777	Cable-inner	1		
23	BHA 5370	Cable-speedometer-gearbox to single service interval counter	1	(C)G-AN6-154101 ON (USA) 154101 TO 175273(Canada)	USA and Canada (Except California)
	BHA 5371	Cable-speedometer-gearbox to double service interval counter	1		
	BHA 5372	Cable-speedometer service interval counter to service interval counter	1	(C)G-AN6-154101 ON	California
24	BHA 5373	Cable-speedometer-service interval counter to speedo head	1		USA and CANADA
25	UKC 4260	Counter-service interval-EGR	1	(C)G-AN6-154101 ON	
	13H 9407	Counter-service interval-Catalyst	1	(USA)-154101 TO 175273(Canada)	California
	PMZ 307	Screw-indicator to bracket	4		
	WL 700101	Washer-spring	4		
	PMZ 306	Screw-indicator bracket	2		
	WL 700101	Washer-spring	2		
	PWZ 103	Washer-plain	2		
	13H 2567	Angle-drive-S.I.C	1		California
8	AAU 3499	Cable assembly-speedometer 6'3"(160.0cm)long	1	(C)G-AN6-175274 ON (Canada)	
10	AHA 8755	Bracket-remote trip flex	1		
11	PCR 709	Clip-cable to bulkhead	NLA		
12	ACH 8529	Sleeve-clip(rubber)	1		
	NH 604041	Nut	1		
	LWZ 204	Washer-spring	1		
13	RFR 305	Grommet-cable through foot-well	1		
13	RFR 503	Grommet-sic cable through bulkhead	1		

107-H 90

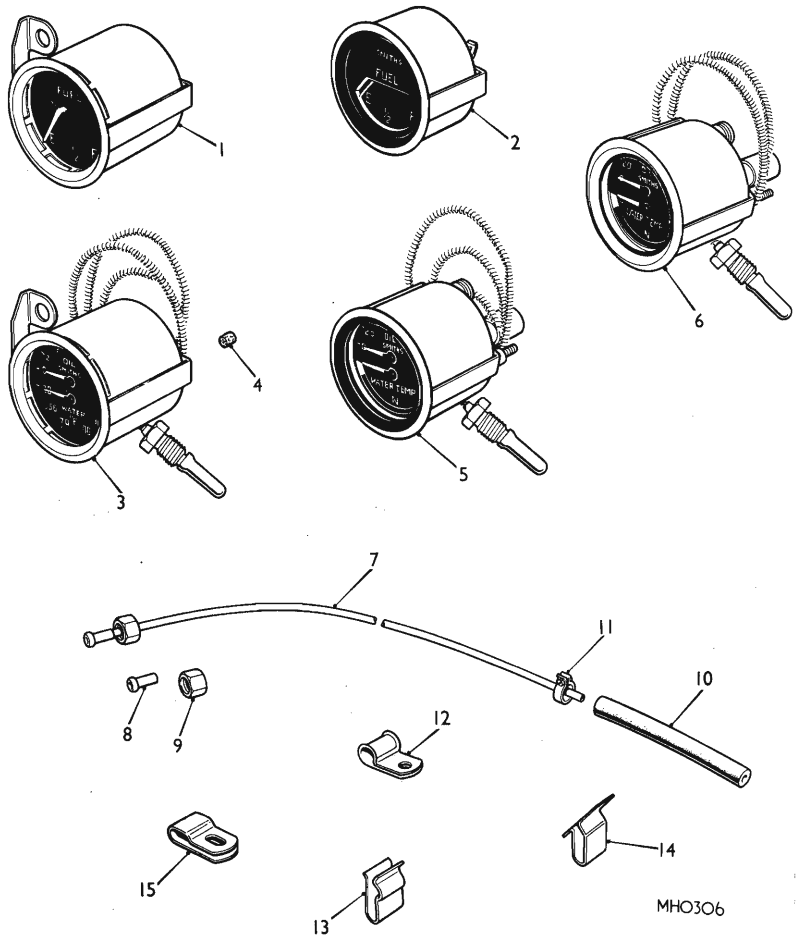


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		GAUGE-OIL PRESSURE AND WATER TEMPERATURE			
3	BHA 4587	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-CENTIGRADE	1		
3	BHA 4586	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-FAHRENHEIT	1	Use prior to BHA 4824 and BHA 4900.	
4	27H 7877	Restrictor	1		
5	BHA 4824	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-FAHRENHEIT	1	(C)H-AN9-72033 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-60441 TO 74885 (C)G-AN5-74886 TO 105500	USA and Canada
5	BHA 4900	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-H,N,C.	1	(C)G-AN5-105501 TO 154100 (C)G-AN6- 154101 ON	
5	AAU 2641	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERTURE-HNC	1	(C)G-AN6-154101 ON	USA and CANADA refer TSB75-A-6.
5	BHA 4900	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-H,N,C.	1	(C)H-AN9-72040 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86803 TO 87824 (C)G-AN4-60459 TO 74885 (C)G-AN5-74886 ON	Except USA, Canada and Sweden
6	BHA 4931	GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-H,N,C.	1		Sweden
4	27H 7877	Restrictor	1		

107-H 96

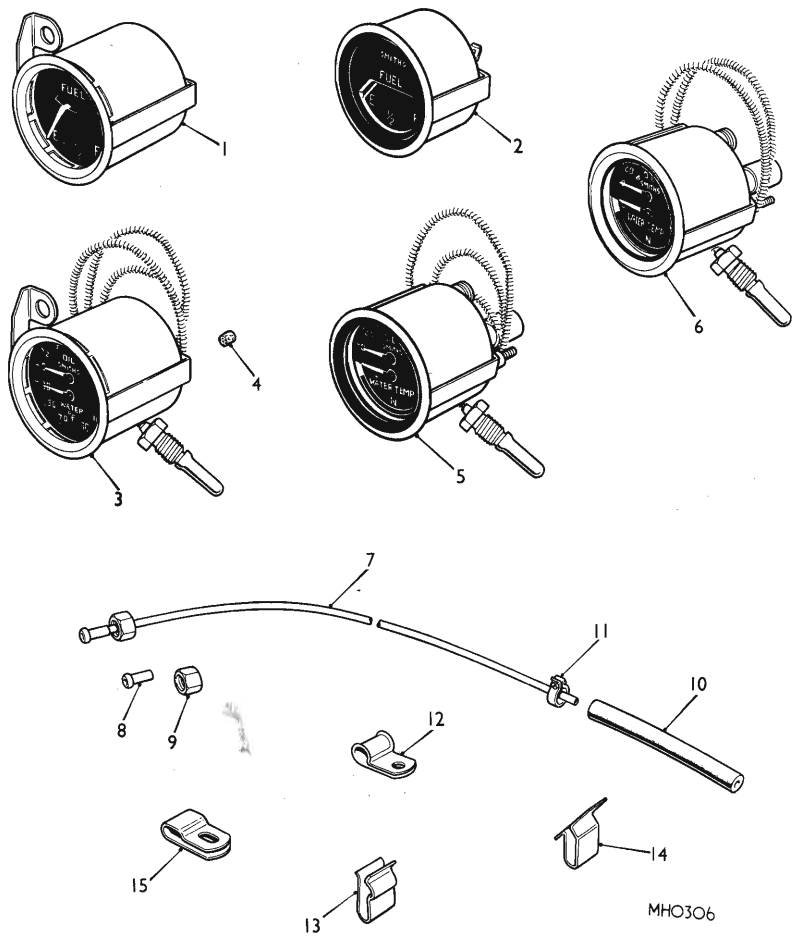

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		OIL PRESSURE GAUGE PIPES AND FITTINGS-EXCEPT MIDGET 1500			
7	2A 5635	PIPE ASSEMBLY-GAUGE TO FLEXIBLE PIPE(21"long)	1		
7	AHA 8756	PIPE ASSEMBLY-GAUGE TO FLEXIBLE PIPE(34"long)	1		USA,Canada and W.Germany.
8	51K 2824	Union	1		
9	11B 2037	Nut	1		
10	AHA 6331	Pipe-flexible	1		
11	88G 308	Clip-flexible	2		
7	AHA 6392	PIPE ASSEMBLY-FLEXIBLE PIPE TO ENGINE	1		
8	ACA 5422	Nipple	1		
9	ACA 5421	Nut	1		
12	PCR 307	Clip-thermometer capillary	A/R		
13	1G 9529	Clip-thermoter capillary to retainer	1		
14	BMK 385	Clip-thermometer capillary to vacuum pipe	1		
15	AHA 8683	Clip-thermometer capillary and heat control cable	NLA		
	PMZ 310	Screw-clip to wheelarch-front	1		
	PMZ 308	Screw-clip to wheelarch-rear	1		
	PMZ 306	Screw-clip to foot-well	1		
	PMZ 307	Screw-clip to foot-well	1		
	PWZ 103	Washer-plain	1		

107-H 98

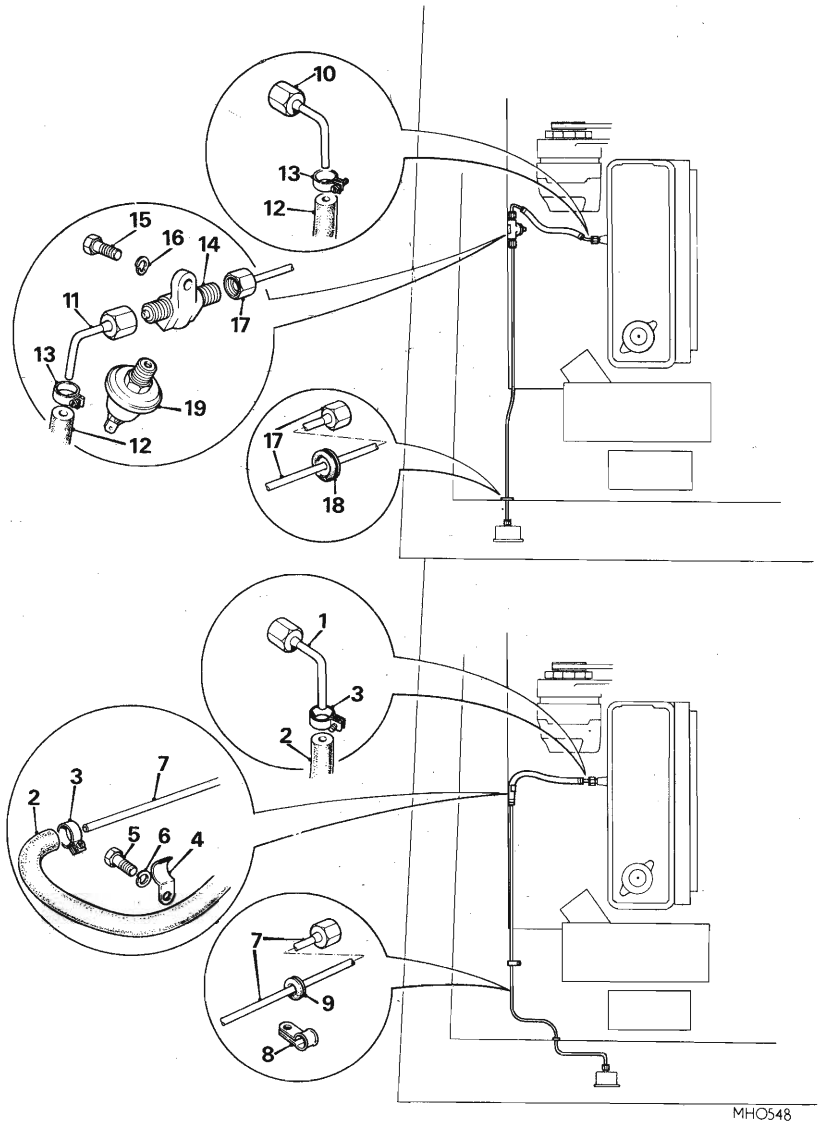

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		OIL PRESSURE GAUGE PIPES AND FITTINGS-MIDGET 1500.			
1	AHA 6392	Pipe-engine to hose	1		
2	AHA 6331	Hose-flexible	1	Use prior to CHA 600. (C)G-AN6-173709 ON	
2	CHA 600	Hose-flexible	1		
3	88G 308	Clip-flexible hose	2		
4	PCR 809	Clip-flexible hose to body	1		
5	SH 604041	Screw-clip	1		UK Only.
6	WL 600041	Washer-spring	1		
7	BHH 1281	Pipe-gauge to flexible hose	1		
8	PCR 809	Clip-pipe to footwell	1		
9	RFR 102	Ferrule-pipe	1		
10	AHA 6392	Pipe-adaptor to hose	1		
11	AHA 6392	Pipe-'T'piece to hose	1		
12	AHA 6331	Hose-flexible	1	Use prior to CHA 600. (C)G-AN6-173709 ON.	
12	CHA 600	Hose-flexible	1		
13	88G 308	Clip-hose	2		
14	BHH 649	'T' piece-anti run-on switch	1		
15	SH 604051	Screw-'T' piece to body	1		
16	WL 600041	Washer-spring	1		USA and Canada.
17	AHH 6678	Pipe-'T' piece to gauge	1		
18	AHC 805	Grommet-pipe	NLA		
19	BHA 5197	Switch-oil pressure-anti run-on valve	1		

107-H 98.02