
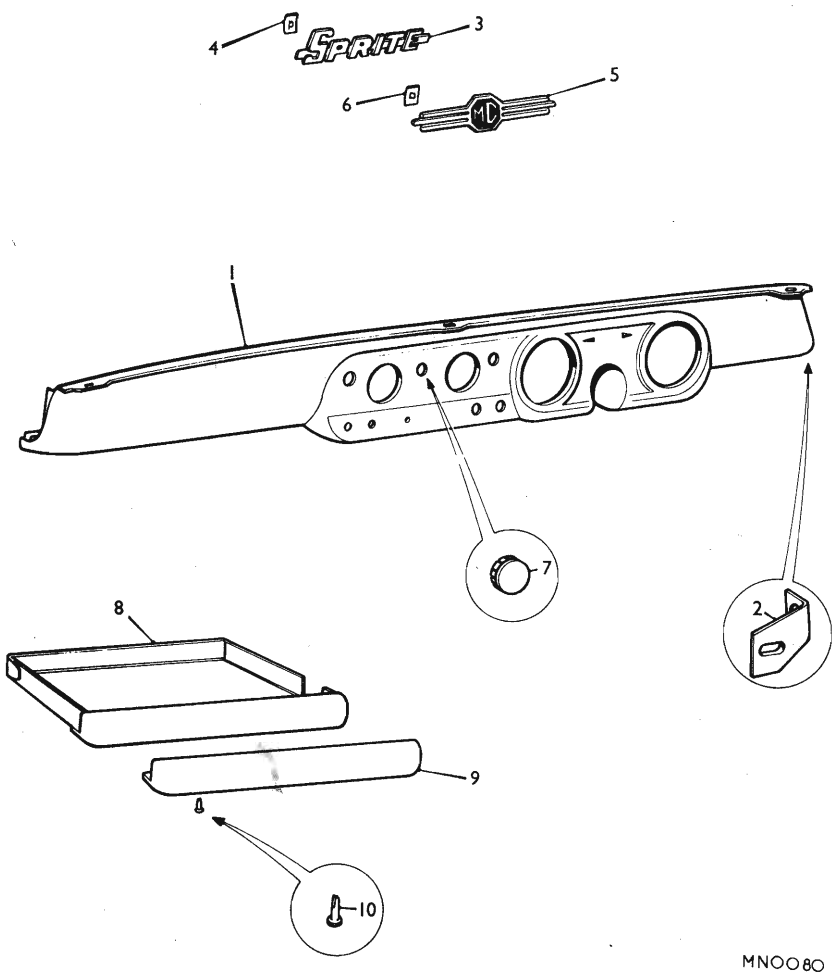


MN0080

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FASCIA DETAILS-NOT N.AMERICA AND SWEDEN.			
1	CZJ 422	Panel-fascia-RHD	1	Use prior to CZJ 488 (C)G-AN5-74886 TO 138800	When supplying prior to (C)G-AN5-105501 supply also 1 off BHA 5111,BHA 5109 and BHA 5112-switches
	CZJ 423	Panel-fascia-LHD	NLA		
1	CZJ 488	Panel-fascia-RHD	1	(C)G-AN5-138801 TO 154100	
1	CZJ 662	Panel-fascia-RHD	1	(C)G-AN6-154101 TO 182000	
1	CHA 660	Panel-fascia-RHD	1	(C)G-AN6-182001 ON	
2	AHA 7438	Bracket-fascia panel to 'A'post-RH	1		
	AHA 7439	Bracket-fascia panel to 'A'post-LH	1		
	PFS 512	Nut-spring	2		
	HZS 405	Screw	2		
	PMZ 408	Screw	2		
	PWZ 104	Washer-plain	7		
	LWZ 204	Washer-spring	5		
	PTZ 1003	Screw	4		
3	AHA 5799	Motif-'Sprite'	1		
4	BHA 4082	Push-on-fix-motif to fascia panel	2		
5	AHH 5258	Motif-'MG'	1		
6	ADB 509	Nut-spire	2		
7	ACH 9373	Plug-blanking-ignition switch hole	1		
8	AHA 8275	TRAY ASSEMBLY-PARCEL-RHD	1		
	AHA 8276	TRAY ASSEMBLY-PARCEL-LHD	1		
9	AHA 7541	Moulding	1		
	FWZ 210	Washer-cup	4		
	FWP 710	Washer-cup	5		

107-N 2

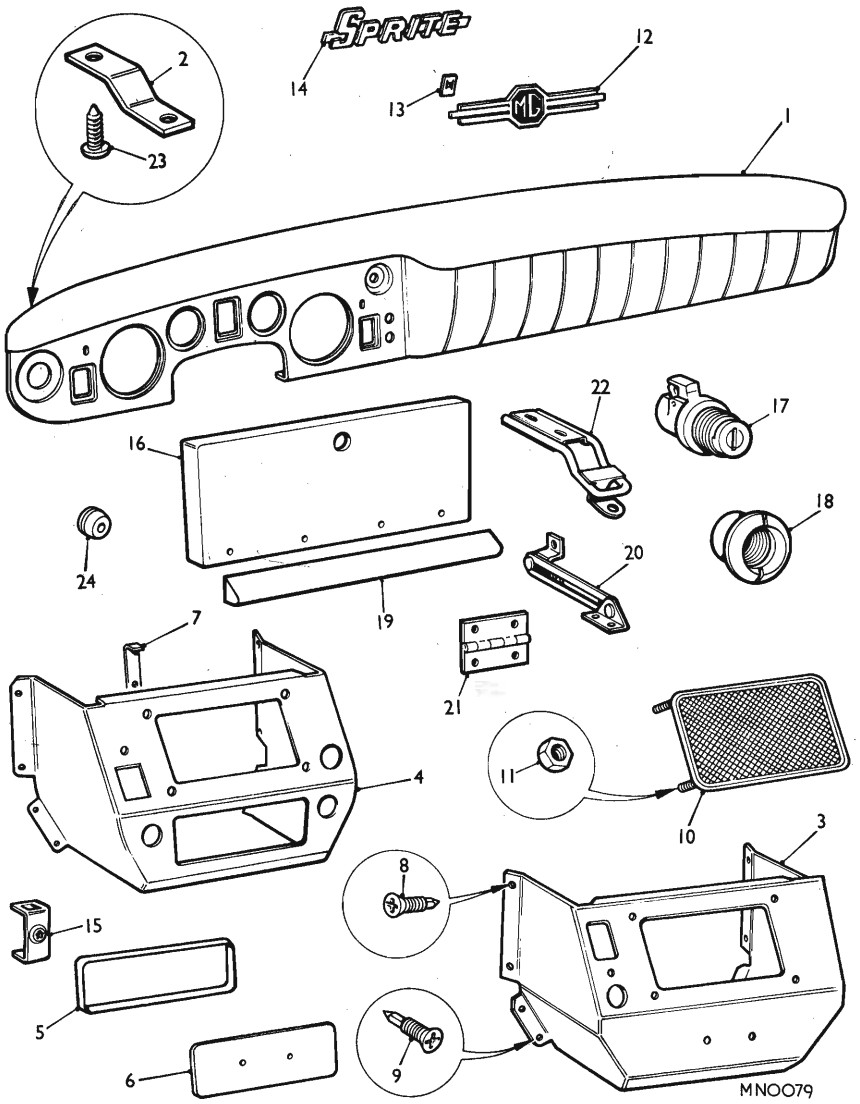


107-N3

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FASCIA DETAILS-N.AMERICA AND SWEDEN			
1	AHA 8780	Panel-fascia $	1	Use prior to AHA 8866	
1	AHA 8866	Panel-fascia $	1	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 ON	
	NH 604041	Nut-fascia to shroud	4		
	PWZ 104	Washer-plain	4		
	LWZ 204	Washer-spring	4		
2	AHA 8606	Plate-support-fascia to dash-LH	1		
	PTZ 1003	Screw-support plates	3		
	LWZ 203	Washer-spring	A/R		
	FNZ 103	Nut	A/R		
	HZA 5025	Badge-anniversary-fascia panel	1		
3	AHA 8570	Nacelle-switches	1		
4	J2A 9599	Panel-radio mounting	1	(C)G-AN5-74886 TO 112275	
4	J2A 9966	Panel-radio mounting	1	(C)G-AN5-112276 TO 123730	
4	CHA 59	Panel-radio mounting	1	(C)G-AN5-123731 TO 154100 (C)G-AN6-154101 ON	
5	AHH 5255	Bezel-radio aperture	1		
6	ARH 59	Plate-blanking-Black	1	Use prior to CHA 659	
4	CHA 659	Plate-blanking-Grey	1	(C)G-AN6-182001 ON	
7	BHH 364	Clip-blanking plate and motif	2		
8	AHA 8706	Screw-nacelle	4		
9	AHA 8763	Screw-nacelle	NLA		
	FWP 706	Washer-cup	NLA		
10	BHA 4823	Bezel-nacelle	1		
11	AJD 8014 Z	Nut-bezel	8		
	PWZ 103	Washer-plain	4		
12	AHH 5258	Motif-'MG'	1		
13	ADB 509	Nut-spire-motif	2		
14	AHA 5699	Motif-'Sprite'	1		
	PFS 104	Push-on-fix-motif	2		
15	BHA 5102	Clip-retaining panel	2		
	FWP 710	Washer-cup	5		
	13H 7986	Light-warning-'fasten belts'	1	(C)G-AN5-112276 TO 154100 (C)G-AN6-154101 ON	USA and Canada

$ This item is subject to safety regulations.


107-N 4

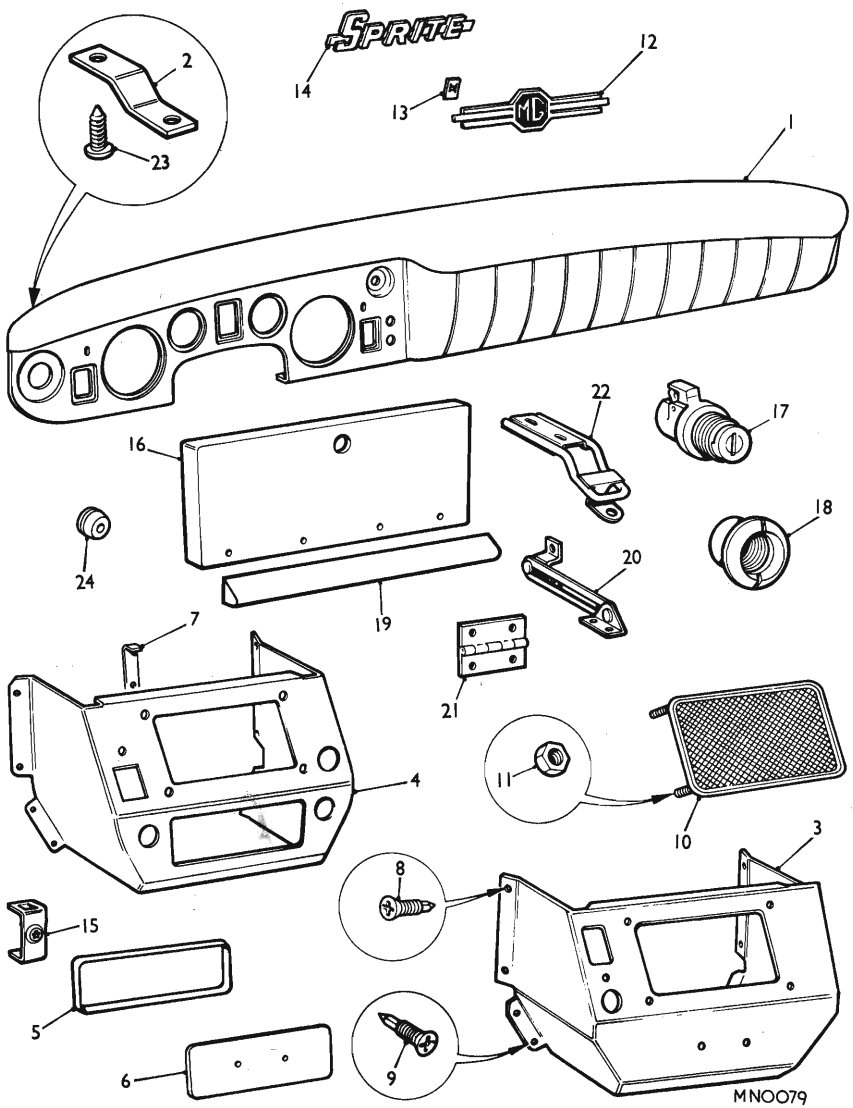

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FASCIA DETAILS-N.AMERICA AND SWEDEN-continued			
16	AHA 9965	Lid-cubby box	NLA	(C)G-AN5-105501 TO 123730	Use CHA 55
16	CHA 55	Lid-cubby box $	1	(C)G-AN5-123731 TO 154100 (C)G-AN6-154101 ON	
17	AHA 9802	Lock-lid	1	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 ON	
18	AHA 9809	Bezel-lock	1		
	PTZ 804	Screw	2		
19	AHA 9812	Moulding-lid	1	(C)G-AN5-105501 TO 123730	
19	CHA 54	Moulding-lid $	1	(C)G-AN5-123731 TO 154100 (C)G-AN6-154101 ON	
20	AHA 9813	Stay-support-lid	NLA		
	PTZ 804	Screw-stay	2		
	PTZ 806	Screw-stay	2		
21	AHA 9805	Hinge-lid	NLA		
	PTZ 804	Screw-hinge	4	(C)G-AN5-105501 TO 154100 (C)G-AN6-154101 ON	
22	AHA 9807	Striker-lock	1		
	PWZ 203	Washer-plain	2		
	LWZ 203	Washer-spring	2		
23	53K 126	Screw	2		
24	BHA 5103	Buffer-lid	NLA		

$ This item is subject to safety regulations.

107-N 6

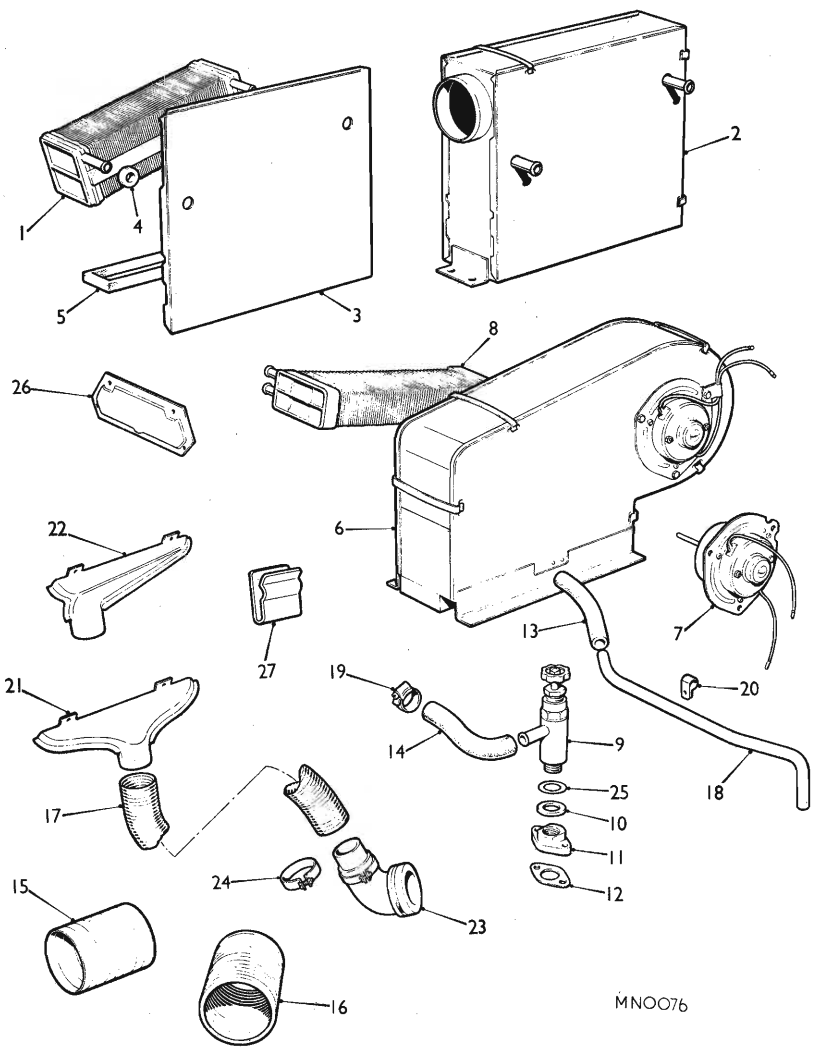


HEATER UNIT.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
2	AHA 8090	HEATER UNIT ASSEMBLY	1	(C)H-AN9-64735 TO 72033	
1	17H 1590	Matrix(with seals)	1		
4	27H 1253	Washer-water pipe	NLA	(C)G-AN4-52390 TO 60440	
2	BHA 4744	HEATER UNIT ASSEMBLY $	NLA	(C)H-AN9-72034 AND G-AN4-60441 TO (B)GUN-151300 AND (B)GBE-100650	
1	37H 2797	Matrix(with seals)	1		
4	27H 1253	Washer-water pipe	NLA		
5	4B 9713	Seal-heater base	NLA		
	PMZ 410	Screw	4		
	WA 106041	Washer-plain	4		
	WL 600041	Washer-spring	4		
6	AHA 9727	HEATER UNIT ASSEMBLY	1	(B)GUN-151301 AND (B)GBE-100651 TO (C)G-AN5-154100	
7	37H 6193	Motor and mounting plate	1		
8	37H 6194	Matrix	1		
	CHA 345	HEATER UNIT ASSEMBLY	1	(C)G-AN6-154101 ON	
	37H 4583	Motor and mounting plate	1		
	37H 8818	Matrix	1		
	PJZ 1005	Screw-heater to platform	6		
	PWZ 103	Washer	6		
9	88G 588	Tap-water control	1	Use prior to 12H 1293,CHA 349 AND 12H 3868.	
10	AAA 836	Washer-tap	1		
11	ACA 5456	Adaptor-tap	1		
	12H 1293	Tap-water control	1	(C)G-AN6-154101 ON	
	CHA 349	Elbow-tap	1		
	12H 3868	Gasket-tap	1		
	SE 604081	Screw-elbow to bracket	2		
	WL 600041	Washer-spring	2		
	NH 604041	Nut	2		
12	88G 221	Gasket-adaptor to cylinder head	1		
	SH 604061	Screw	2		
14	AHA 8782	Hose-heater to control tap	1	Use prior to AHA 9782 (B)GBE-100651 AND (B)GUN-151301 TO (C)G-AN5-154100	
16	AHA 8331	Hose-heater to blower	1		
14	AHA 9782	Hose-heater to control tap	1		
	CHA 352	Hose-control tap to manifold	1	(C)G-AN6-154101 ON	North America except California.
	CHA 351	Hose-heater to control tap	1		
	CHA 359	Hose-control tap to manifold	1		Except N.America.
	GHC 709	Clip-hose	4		
	CHA 448	Pipe-heater by-pass	1	(C)G-AN6-160160 ON	California only.
	CHA 449	Hose-pipe to manifold	1		
	CHA 450	Hose-elbow to pipe	1		
	CHA 521	Hose-automatic choke	2		
17	AHH 8394	Hose-demister	2		
18	12G 1785	Pipe-heater hose to radiator hose	1		
19	GHC 507	Clip	A/R		
20	PCR 809	Clip	2		

$ This item is subject to safety regulations.


107-N 8

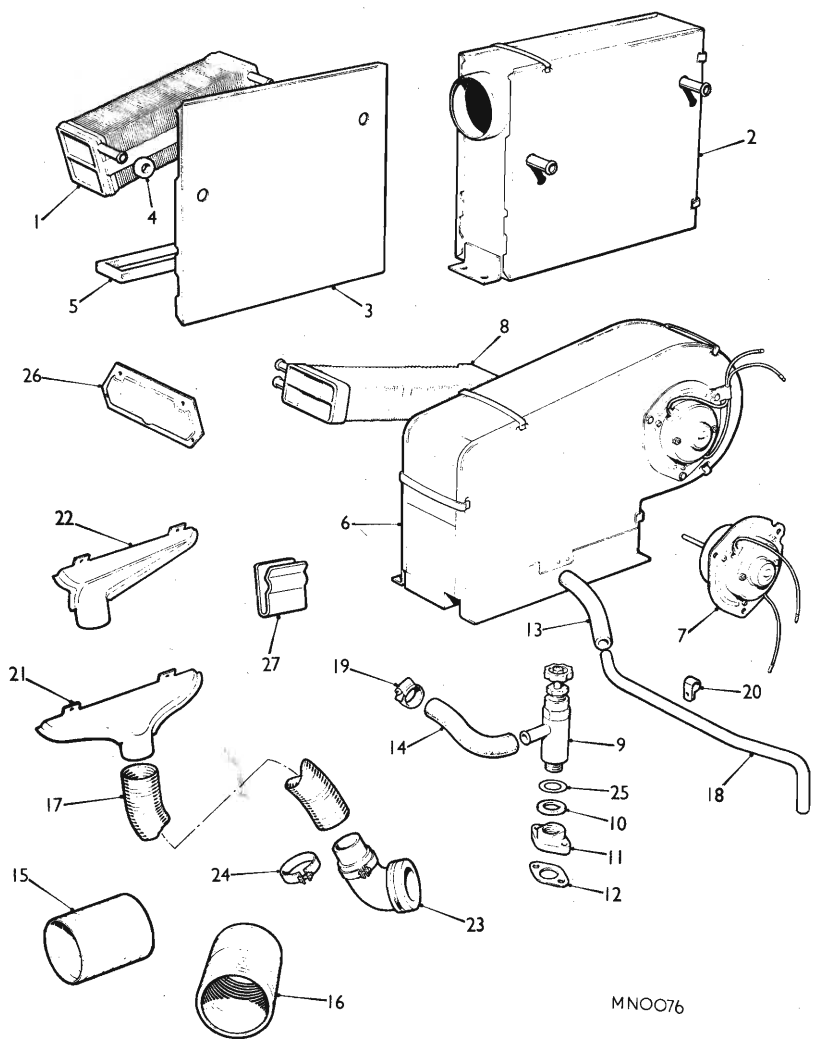

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEATER UNIT-continued.			
21	14A 1162	Nozzle-demister	NLA		Except N.America.
22	AHA 8565	Nozzle-demister-RH	NLA		N.America.
	AHA 8566	Nozzle-demister-LH	NLA		
	PTP 603	Screw	4		
23	14G 3499	ELBOW ASSEMBLY-DEMISTER	2		
24	BMK 924	Clip $	2		
26	13H 59	Door-heater outlet	NLA		
	AB 606031	Screw	8		
27	1G 9529	Clip-spring-pipe to heater tap	1		
13	GRH 1003 M	Hose-water outlet	A/R	Use prior to CHA 430	Supplied in MULTIPLES OF metres.
	GHC 709	Clip-hose	1		
	CHA 430	Hose-heater to water pump pipe	1	(C)G-AN6-154101-ON	
	GHC 709	Clip-hose	2		


$ This item is subject to safety regulations.

107-N 12

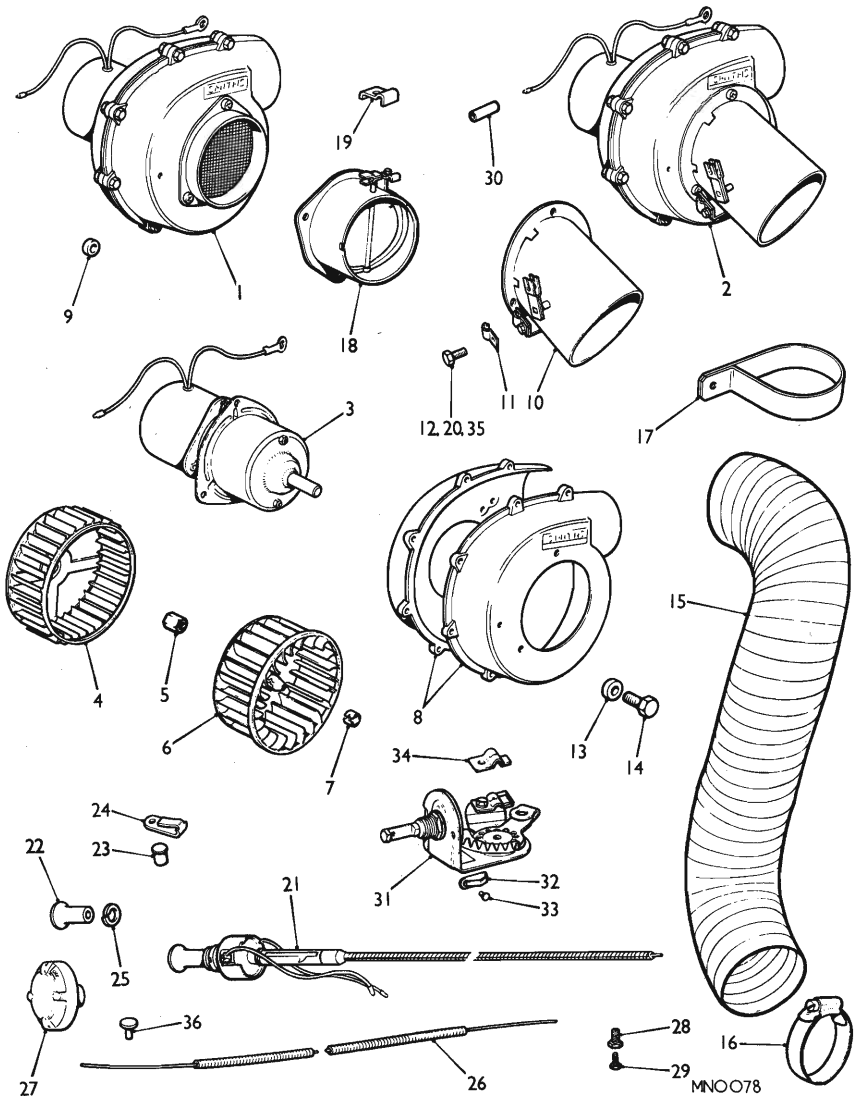

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEATER UNIT-continued.			
1	13H 51	BLOWER ASSEMBLY	1	Use prior to AHA 8091	
1	AHA 8091	BLOWER ASSEMBLY	NLA		(C)H-AN9-64735 TO 71120 (C)G-AN4-52390 TO 58853
2	AHA 8415	BLOWER ASSEMBLY	NLA		(C)H-AN9-71121 TO 72033 (C)G-AN4-58854 TO 60440
2	BHA 4745	BLOWER ASSEMBLY	1		(C)H-AN9-72034 and (C)G-AN4-60441 TO (B)GUN 151300 AND (B)GBE 100650
3	17H 1455	Motor	1		
4	17H 1574	ROTOR(METAL)	1		
5	27H 602	Nut-collet	NLA	Use prior to BHA 4745 and 37H 4708	
7	17H 6836	Ring-compression	1		
8	17H 819	Casing	1		
	HZS 404	Screw	3		
	PWZ 204	Washer-plain	3		
	WL 600041	Washer-spring	3		
3	37H 4708	Motor and mounting plate	1		
8	17H 819	Casing	1		
13	27H 1258	Spacer-bracket	3		(C)H-AN9-72034 AND
	PWZ 204	Washer-bracket	3		(C)G-AN4-60441 TO
14	53K 126	Screw-bracket	6		(B)GUN 151300 AND
9	27H 1232	Grommet	NLA		(B)GBE 100650
	FNZ 103	Nut	6		
	LWZ 403	Washer-shakeproof	6		
	WL 600041	Washer-bolt	3		
	NH 604041	Nut-bolt	3		
18	AHA 8092	TUBE ASSEMBLY-AIR INTAKE	1		
20	53K 126	Screw-clamp	1		(C)H-AN9-64735 TO
	LWZ 403	Washer-screw	1		71120
	PMZ 306	Screw	3		(C)G-AN4-52390
	WL 700101	Washer-spring	3		TO 58853
	FNZ 103	Nut	3		
10	AHA 8416	TUBE ASSEMBLY-AIR INTAKE	NLA		(C)H-AN9-71121 AND
11	27H 1193	Clamp-cable	1		(C)G-AN4-58854 TO
12	53K 126	Screw-clamp	1		(B)GBE 100650 AND
	LWZ 403	Washer-screw	1		(B)GUN 151300

107-N 14

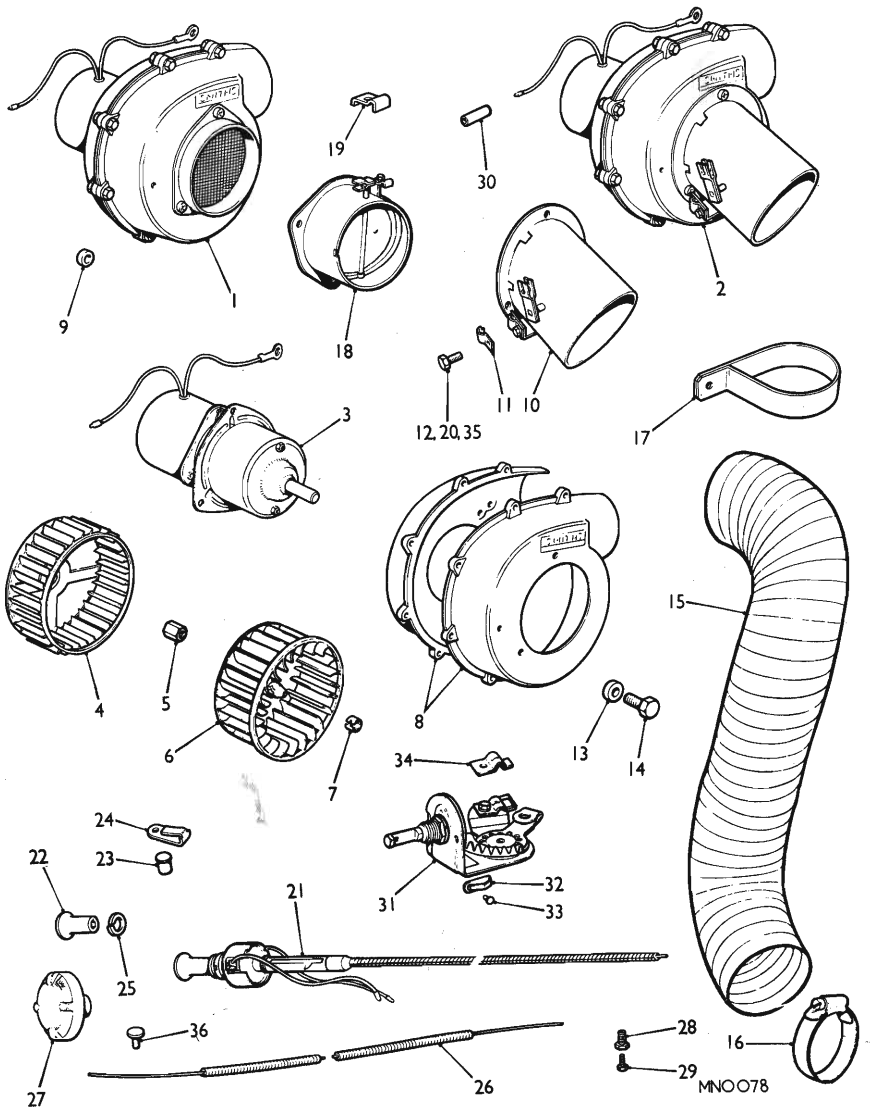


107-N15

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEATER UNIT-continued.			
15	13H 58	Hose-blower to inlet	1		Use prior to AHA 8501
15	AHA 8501	Hose-blower to inlet	1		(C)H-AN9-71121 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-58854 TO 74885 (C)G-AN5-74886 TO 154100 (C)G-AN6-154101 ON
	CHA 290	Hose-blower to inlet	1		
16	GHC 3036	Clip-hose	2/1		
	PMZ 310	Screw	1		
	WA 702101	Washer-plain	1		
	WL 700101	Washer-spring	1		
	FNZ 103	Nut	1		
21	BHA 4205	SWITCH ASSEMBLY-HEATER	1		Use prior to AHA 8317
21	AHA 8317	SWITCH ASSEMBLY-HEATER	1		(C)H-AN9-64735 TO 71120 (C)G-AN4-52390 TO 58853
21	AHA 8417	SWITCH ASSEMBLY-HEATER $	1		(C)H-AN9-71121 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-58854 TO 74885 (C)G-AN5-74886 TO 154100 (C)G-AN6-154101 ON
22	17H 1602	Knob $	1		
23	17H 1603	Pin-knob	1		
24	17H 1601	Clip-knob	1		

$ This item is subject to safety regulations.


107-N 16

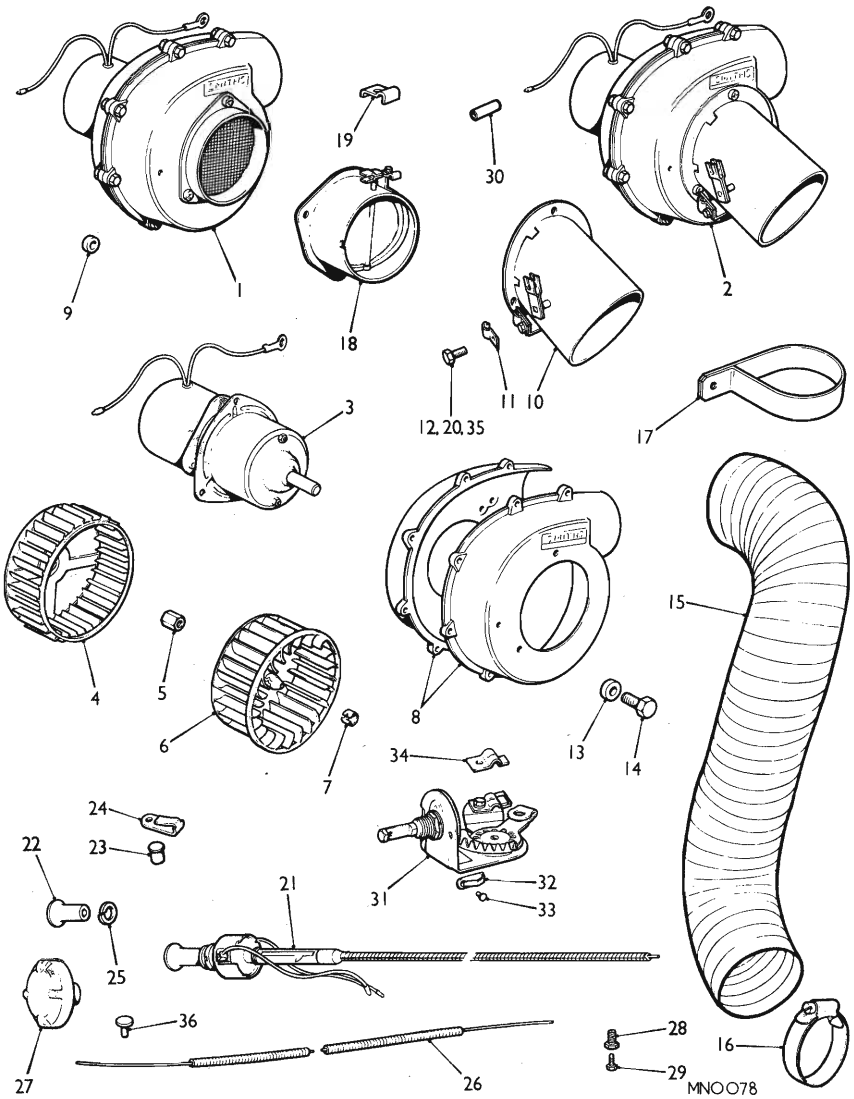

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HEATER FIXINGS.			
26	AHC 752	Cable-air control $	1	Use prior to CHA 447	
26	CHA 447	Cable-air control $	1	(C)G-AN6-154101 ON	North America.
27	AHA 8716	Knob-rotary control-air $	1	Use prior to AHA 9721	
27	AHA 9721	Knob-rotary control-air $	1	(C)H-AN10-86301 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89501 TO 112275	
27	CHA 1	Knob-rotary control-air	NLA	(C)G-AN5-112276 TO 123730	
27	BHH 1012 CHA 111	Knob-rotary control-air $ Dial-illuminated-air $	1 1	(C)G-AN5-123731 TO 154100 (C)G-AN6-154101 ON	N.America
28	24G 1482	Trunnion-control cable	1		
29	53K 1016	Screw-trunnion	1		
30	104618	Connector-snap-switch to blower	1		
31	BHA 4792	CONTROL ASSEMBLY-ROTARY-AIR VALVE	1	Use prior to AHA 9720	
31	AHA 9720	CONTROL ASSEMBLY-ROTARY-AIR VALVE	1	(C)H-AN10-86301 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN5-89501 TO 123730	N.America.
31	BHA 4792	CONTROL ASSEMBLY-ROTARY-AIR VALVE	1	(C)G-AN5-123731 TO 154100 (C)G-AN6-154101 ON	
32	17H 1601	Clip-knob	1		
33	17H 1603	Pin-knob	1		
34	27H 1193	Clamp-cable	1		
35	53K 126 LWZ 403	Screw-clamp Washer-shakeproof	1 1		
36	AHH 8971 WA 704061	Rivet-control Washer-rivet	NLA 1		

$ This item is subject to safety regulations.

107-N 20

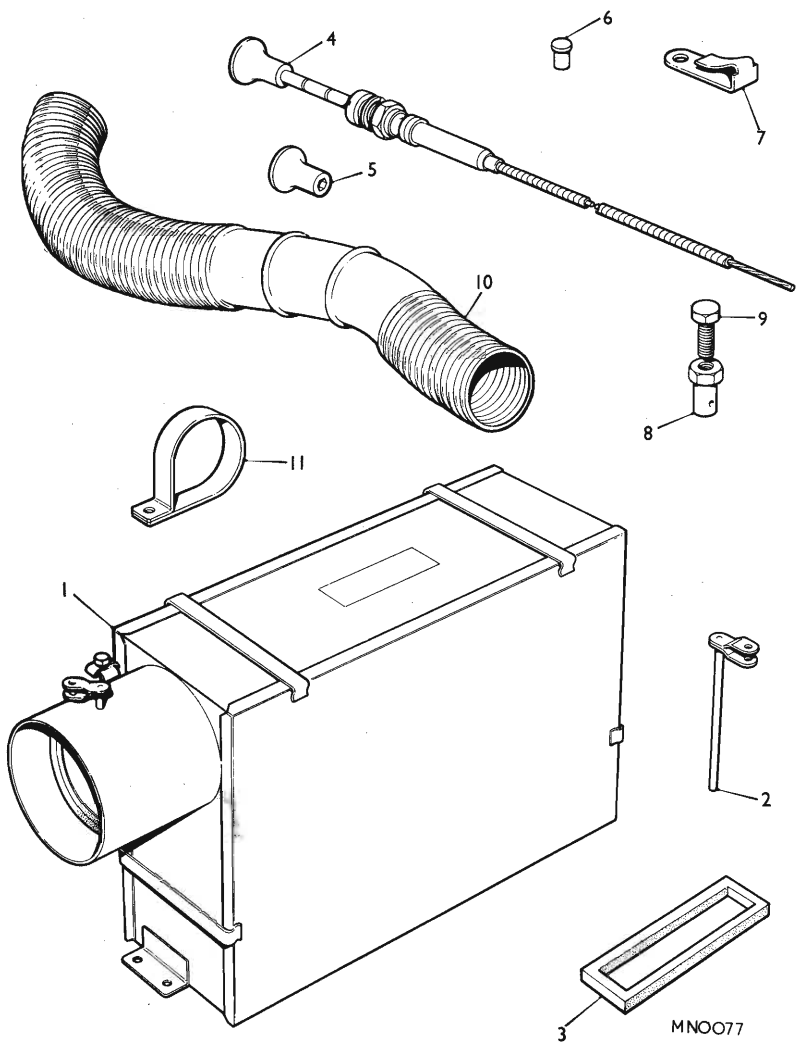

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		FRESH-AIR UNIT-OPTIONAL EXTRA			
1	13H 56	FRESH-AIR UNIT ASSEMBLY	NLA		
3	4B 9713	Seal-fresh-air unit base	NLA		
	HZS 404	Screw	4		
	WA 106041	Washer-plain	4		
	WL 600041	Washer-spring	4		
4	13H 57	CONTROL ASSEMBLY-PUSH-PULL	1		
5	14A 5772	Knob	NLA		
6	17H 1603	Pin-knob	1		
7	17H 1601	Clip-knob	1		
8	14G 6451	Trunnion-control cable	1		
9	AHH 5593	Screw-trunnion	1		
10	AHA 9172	Hose-fresh-air unit to inlet	1		
11	AHA 8768	Clip-hose	NLA		
	PMZ 316	Screw-clip to wheel arch	1		
	WL 700101	Washer-spring	2		
	PMZ 310	Screw	1		
	PWZ 103	Washer-plain	1		
	WL 700101	Washer-spring	1		
	FNZ 103	Nut	1		

107-N 24