
MASTER INDEX

INTRODUCTION INTRODUCTION EINFUHRUNG	1.B
ENGINE MOTEUR MOTOR	1.C
FLYWHEEL AND CLUTCH VOLANT ET EMBRAYAGE SCHWUNGRAD UND KUPPLUNG	1.D
GEARBOX AND PROPSHAFT BOITE DE VITESSES ET CARDAN GETRIEBE UND KARDANWELLE	1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS AXE, SUSPENSION, ARBRE DE COMMANDE,ROUES ACHSE, AUFHANGUNG, ANTRIEBSWELLE, RADER	1.F
STEERING DIRECTION LENKUNG	1.G
BRAKES AND BRAKE CONTROLS FREINS ET COMMANDES BREMSEN UND BEDIENUNGSORGANE	1.H
FUEL, EXHAUST AND EMISSION SYSTEMS ALIMENTATION ET ECHAPPEMENT KRAFTSTOFF UND AUSPUFFANLAGE	1.I
COOLING, HEATING AND AIR CONDITIONING REFROIDISSEMENT, CHAUFFAGE, AERATION KUHLUNG, HEIZUNG UND LUFTUNG	1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ELECTRICITE, ESSUIE GLACE, INSTRUMENTS ELEKTRISCHE, SCHEIBENWISCHER,INSTRUMENTE	1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS CHASSIS, SOUBASSEMENT, CABINE CHASSIS TEILE, HILFSRAHMEN, KABINE	2.C
FASCIA, TRIM, SEATS AND FIXINGS TABLEAU DE BORD,GARNITURES INT.ET SIEGES ARMATURENBRETT, POLSTERUNG UND SITZ	2.E
MISCELLANEOUS DIVERS VERMISCHT	2.F
NUMERICAL INDEX INDEX NUMERIQUE NUMMERNVERZEICHNIS	2.G

GROUP INDEX

CLUTCH CONTROLS.....D04
CYLINDER AND SUPPLY TANK.....D04
KIT-REPAIR-MASTER CYLINDER.....D04
FLYWHEEL CLUTCH HOUSING AND LEVER..D02
BEARING-CLUTCH RELEASE.....D03
CYLINDER-CLUTCH OPERATING.....D03

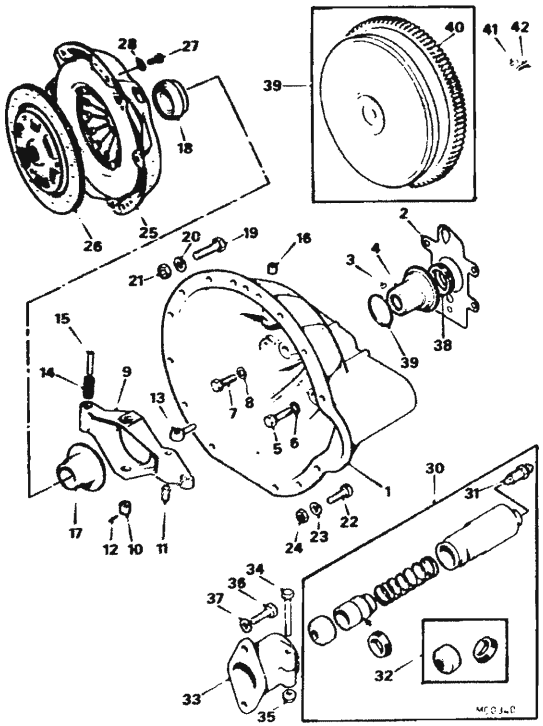

MC0340

FLYWHEEL CLUTCH HOUSING AND LEVER.


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
	TKC 1840		Flywheel	1		
	201350		Gear-starter ring	1		
	UKC 1938		Dowel	3		
	UKC 4254		Bolt	4		
1	312151		Housing-clutch	1		
2	157690		Gasket	1		
3	DP 205		Dowel	1		
4	122566		Cover-front	1		Use prior to UKC 7926
4	UKC 7926		Cover-front	1	(G)59163 TO 6000 And 65225 ON	
38	132292		Seal-oil	1		
39	22G 1944		O'ring	1		
5	156336		Bolt	1		
6	500464		Washer(copper)	1		
7	HU 909		Bolt	4		
8	GHF 333		Washer-spring	4		
9	207887		Lever-clutch operating	1		
10	112509		Plug-thrust	1		
11	112516		Pin	1		
12	DS 914		Dowel	2		
13	22B 65		Push-rod	1		
14	129412		Ring-tolerance	1		
15	129410		Pin	1		
16	129358		Bush	2		
17	139563		Sleeve	1		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

CLUTCH CONTROLS D04
CYLINDER AND SUPPLY TANK D04
KIT-REPAIR-MASTER CYLINDER D04
FLYWHEEL CLUTCH HOUSING AND LEVER D02
BEARING-CLUTCH RELEASE D03
CYLINDER-CLUTCH OPERATING D03

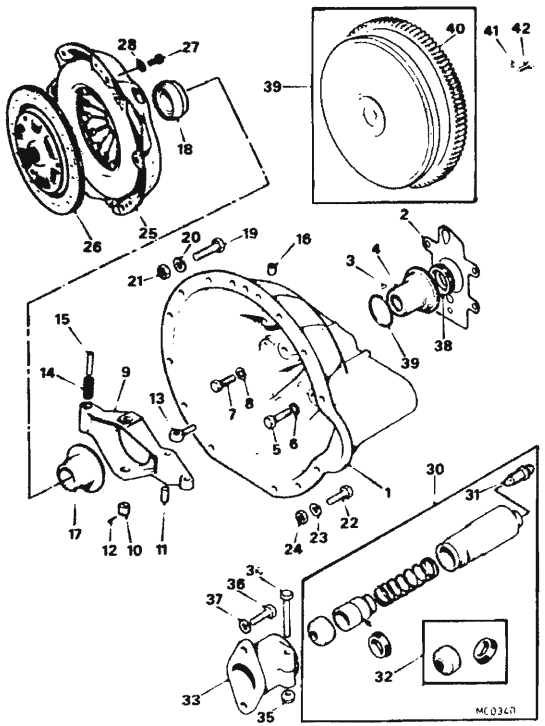

MC0340


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			FLYWHEEL CLUTCH HOUSING AND LEVER-cont			
18	GRB 207		Bearing-clutch release	1		
19	BH 605101		Bolt-clutch housing to engine	7		
19	BH 605111		Bolt-clutch housing to engine	1		
20	GHF 332		Washer-spring	11		
21	GHF 201		Nut	11		
22	132872		Bolt-dowel	1		
23	GHF 333		Washer	1		
24	GHF 202		Nut	1		
25	GCC 196		Cover-clutch	1		
26	GCP 230		Plate-clutch driven	1		
27	146176		Bolt-clutch to flywheel	6		
28	LWN 305		Washer	6		
30	DAM 73		Cylinder-clutch operating	1		
31	606733		Screw-bleeder	1		
32	BHM 7055		Kit-repair	1		
33	206175		Boss-operating cylinder	1		
34	BH 605181		Bolt-cylinder retaining	1		
35	GHF 222		Nut-bolt	1		
36	SH 605071		Screw-boss to housing	2		
37	GHF 332		Washer-spring	2		
35	GHF 222		Nut-bolt	1		
36	SH 605071		Screw-boss to housing	2		
37	GHF 332		Washer-spring	2		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

CLUTCH CONTROLS D04
CYLINDER AND SUPPLY TANK D04
KIT-REPAIR-MASTER CYLINDER D04
FLYWHEEL CLUTCH HOUSING AND LEVER D02
BEARING-CLUTCH RELEASE D03
CYLINDER-CLUTCH OPERATING D03

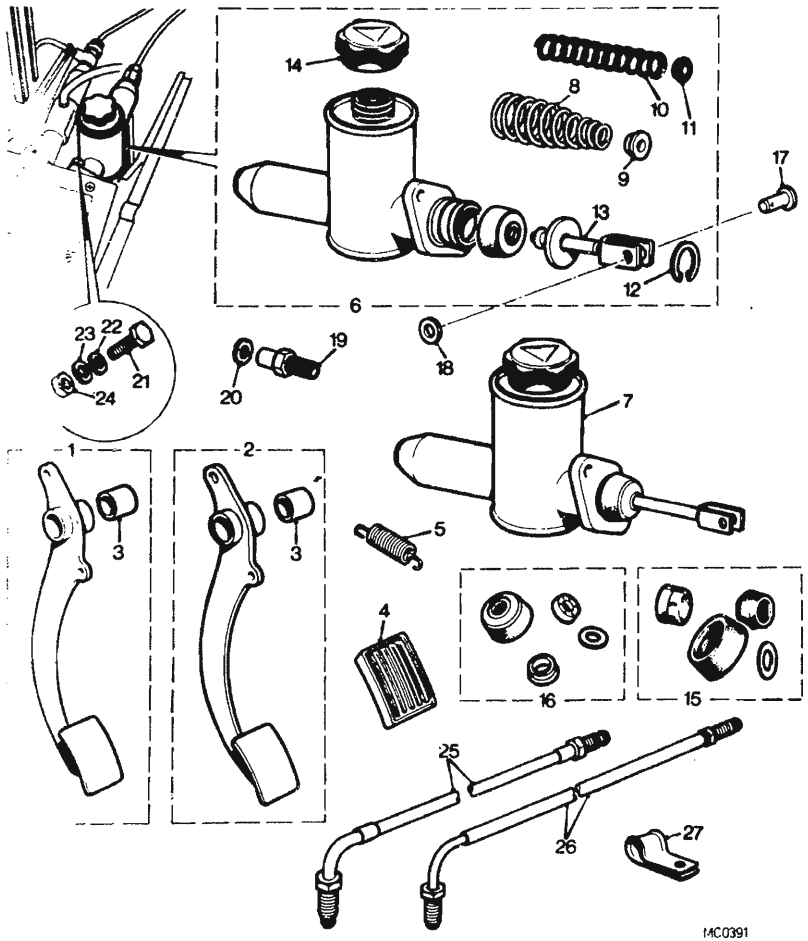

MC0391

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			CLUTCH CONTROLS			
1	AHA 8071		PEDAL ASSEMBLY-CLUTCH S	1	(C)G-AN6-154101 TO 212000	RHD
2	CHA 792		PEDAL ASSEMBLY-CLUTCH S	1	(C)G-AN6-212001 ON	RHD
	AHA 8071		PEDAL ASSEMBLY-CLUTCH S	1	(C)G-AN6-154101 ON	LHD
3	LBS 810		Bush	1		
4	AHA 5326		Pad-pedal rubber	1		
5	AAA 1628		Spring-pedal return	1		Use BHH 2387 For this Application
5	BHH 2387		Spring-pedal return	1		
6	BHA 4615		CYLINDER AND SUPPLY TANK ASSEMBLY-CLUTCH MASTER	NLA		Use AAU 2298
	AAU 2298		CYLINDER AND SUPPLY TANK ASSEMBLY-CLUTCH MASTER	NLA		Use ADU 1983
7	ADU 1983		CYLINDER AND SUPPLY TANK ASSEMBLY-CLUTCH MASTER	1		
8	27H 7751		Spring-piston return	1	Use prior to BAU 12507/1	
9	9025		Retainer-spring	NLA		Use 506670
9	506670		Retainer-spring	1		
10	BAU 1250		Spring-piston return	1	See(1)foot of page	
11	BAU 1251		Retainer-spring	1		
12	17H 7560		Circlip	1		
13	27H 8459		Push-rod	NLA		Use AAU 3469
13	AAU 3469		Push-rod	1		
14	17H 6861		Cap-filler	NLA		Use 513123
14	513123		Cap-filler	1		
15	8G 8730		KIT-REPAIR-MASTER CYLINDER	1	Use prior to BAU 1252	
16	BAU 1252		KIT-REPAIR-MASTER CYLINDER	1	See(1)foot of page	


CHANGE POINTS
(1) (C)G-AN6-212689 ON(N America),(C)G-AN6-212882 ON(Except N America)

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

CLUTCH CONTROLS D04
CYLINDER AND SUPPLY TANK D04
KIT-REPAIR-MASTER CYLINDER D04
FLYWHEEL CLUTCH HOUSING AND LEVER D02
BEARING-CLUTCH RELEASE D03
CYLINDER-CLUTCH OPERATING D03

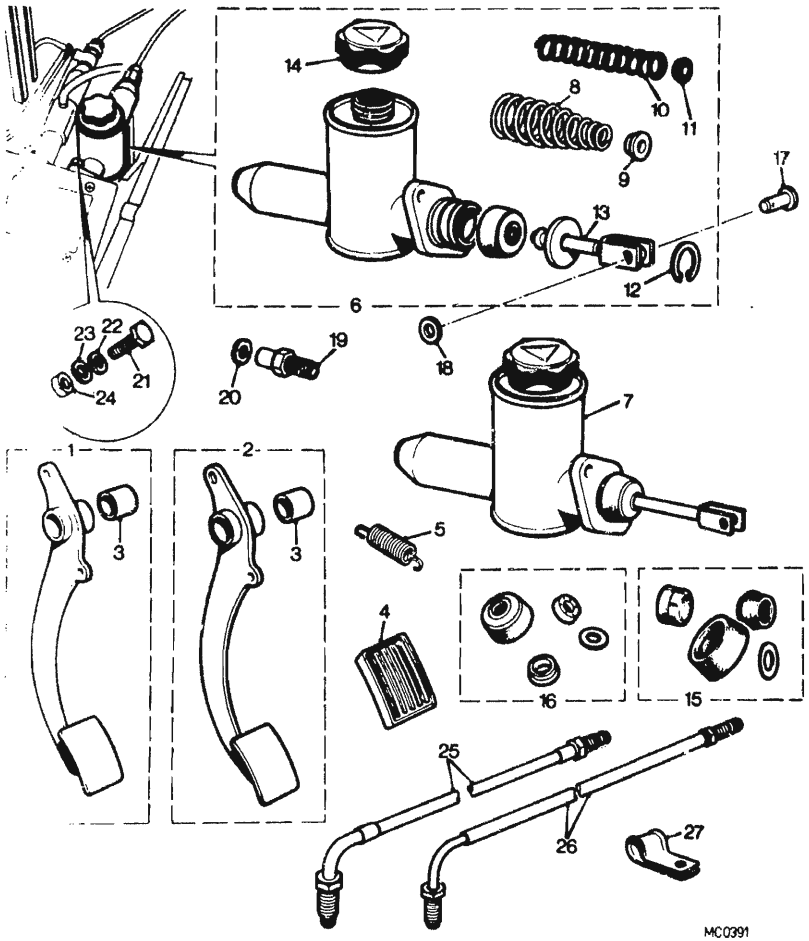

MC0391

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			CLUTCH CONTROLS–continued			
17	CLZ	513	Pin-clevis	1		
18	GHF	301	Washer-plain-pin	1		
19	ACB	9641	Adaptor-master cylinder	NLA		
20	3H	2287	Gasket-adaptor	NLA		Use 233220
20		233220	Gasket-adaptor	1		
21	SH	605071	Screw-master cylinder	2		
22	GHF	301	Washer-plain-screw	2		
23	GHF	332	Washer-spring-screw	2		
24	FNZ	505	Nut-screw	2		
25	BHA	5376	Pipe-master cylinder to operating cylinder-RHD	1	(C)G-AN6-154101 TO 212000	
26	ADU	1796	Pipe-master cylinder to operating cylinder-RHD	1	(C)G-AN6-212001 ON	
	BHA	5375	Pipe-master cylinder to operating cylinder-LHD	1		
27	AHA	8161	Clip-pipe to heater platform	1		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

CLUTCH CONTROLS D04
CYLINDER AND SUPPLY TANK D04
KIT-REPAIR-MASTER CYLINDER D04
FLYWHEEL CLUTCH HOUSING AND LEVER D02
BEARING-CLUTCH RELEASE D03
CYLINDER-CLUTCH OPERATING D03