
MASTER INDEX

INTRODUCTION INTRODUCTION EINFUHRUNG	1.B
ENGINE MOTEUR MOTOR	1.C
FLYWHEEL AND CLUTCH VOLANT ET EMBRAYAGE SCHWUNGRAD UND KUPPLUNG	1.D
GEARBOX AND PROPSHAFT BOITE DE VITESSES ET CARDAN GETRIEBE UND KARDANWELLE	1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS AXE, SUSPENSION, ARBRE DE COMMANDE,ROUES ACHSE, AUFHANGUNG, ANTRIEBSWELLE, RADER	1.F
STEERING DIRECTION LENKUNG	1.G
BRAKES AND BRAKE CONTROLS FREINS ET COMMANDES BREMSEN UND BEDIENUNGSORGANE	1.H
FUEL, EXHAUST AND EMISSION SYSTEMS ALIMENTATION ET ECHAPPEMENT KRAFTSTOFF UND AUSPUFFANLAGE	1.I
COOLING, HEATING AND AIR CONDITIONING REFROIDISSEMENT, CHAUFFAGE, AERATION KUHLUNG, HEIZUNG UND LUFTUNG	1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ELECTRICITE, ESSUIE GLACE, INSTRUMENTS ELEKTRISCHE, SCHEIBENWISCHER,INSTRUMENTE	1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS CHASSIS, SOUBASSEMENT, CABINE CHASSIS TEILE, HILFSRAHMEN, KABINE	2.C
FASCIA, TRIM, SEATS AND FIXINGS TABLEAU DE BORD,GARNITURES INT ET SIEGES ARMATURENBRETT, POLSTERUNG UND SITZ	2.E
MISCELLANEOUS DIVERS VERMISCHT	2.F
NUMERICAL INDEX INDEX NUMERIQUE NUMMERNVERZEICHNIS	2.G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05

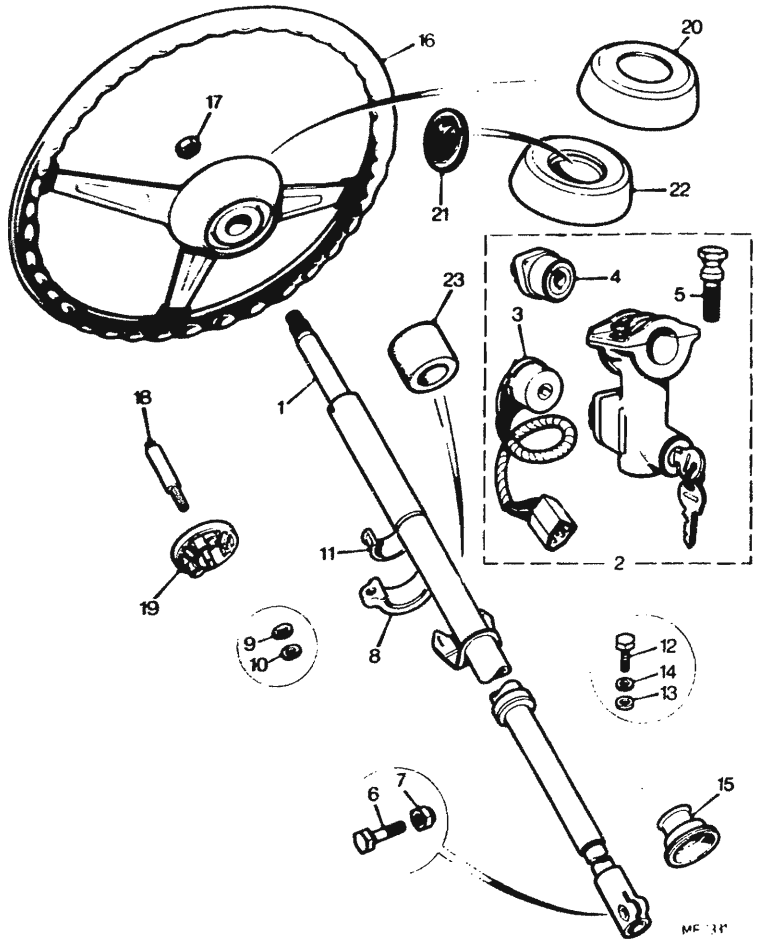

MF0331

STEERING COLUMN AND LOCK

EXCEPT N AMERICA

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
16	BHH	1307	Wheel-steering $	1		
17	BHH	119	Nut-wheel $	NLA		Use BHH 2103
17	BHM	2103	Nut-wheel $	1		
18	BHA	5041	Brush-horn push	1		
19	BHA	5042	Slip-ring	1		
20	BHA	5135	Horn-push	NLA	(C)G-AN6-154101 TO 157172	Use AAU 1161
20	AAU	1161	Horn-push	1	(C)G-AN6-157173 TO 200000	
21	CHA	747	Motif-steering wheel	1	(C)G-AN6-200001 ON	
22	CHA	748	Boss-centre	1		
1	AHA	9792	Column complete-RHD $	1	(C)G-AN6-154101 TO 170989	
1	CHA	558	Column complete-RHD $	1	(C)G-AN6-170990 ON	
	BHA	5215	LOCK ASSEMBLY-STEERING COLUMN	NLA		Use BMK 2259
2	BMK	2259	LOCK ASSEMBLY-STEERING COLUMN	1		
3	37H	7708	Switch	1		For use with BHA 5215
4	37H	5934	Switch	1		Use with BMK 2259
5	51K	4001	Bolt-shear	2		

MASTER INDEX


INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUB-FRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05

STEERING COLUMN AND LOCK-continued

EXCEPT N AMERICA-continued

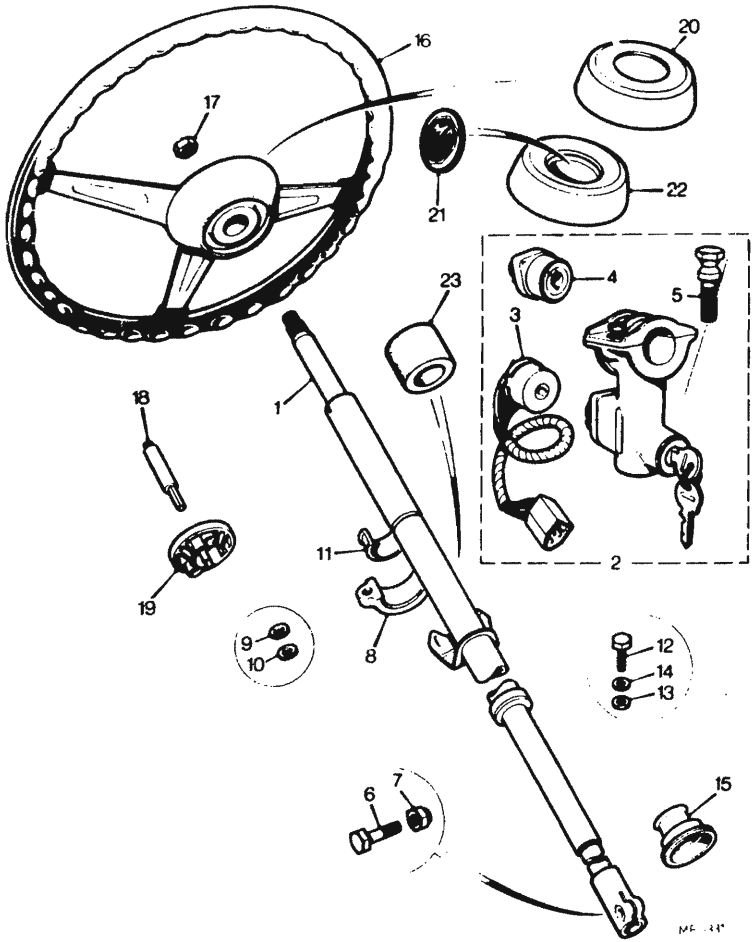

MF0331


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
6	53K	1013	Bolt-column tube to pinion clamping	1		
7	LNZ	104	Nut-bolt	1		
8	2A	6133	Cap-bracket-column mounting	1		
9	GHF	300	Washer-plain	2		
10	GHF	331	Washer-spring	2		
11	37H	2966	Seating-column mounting bracket	1		
12	GHF	101	Screw	2		
13	GHF	300	Washer-plain-screw	2		
14	GHF	331	Washer-spring-screw	2		
15	CHA	457	Seal-column to toeboard	1		(C)G-AN6-154101 TO 170989
23	CHA	559	Seal-column to toeboard	1		(C)G-AN6-170990 ON

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05

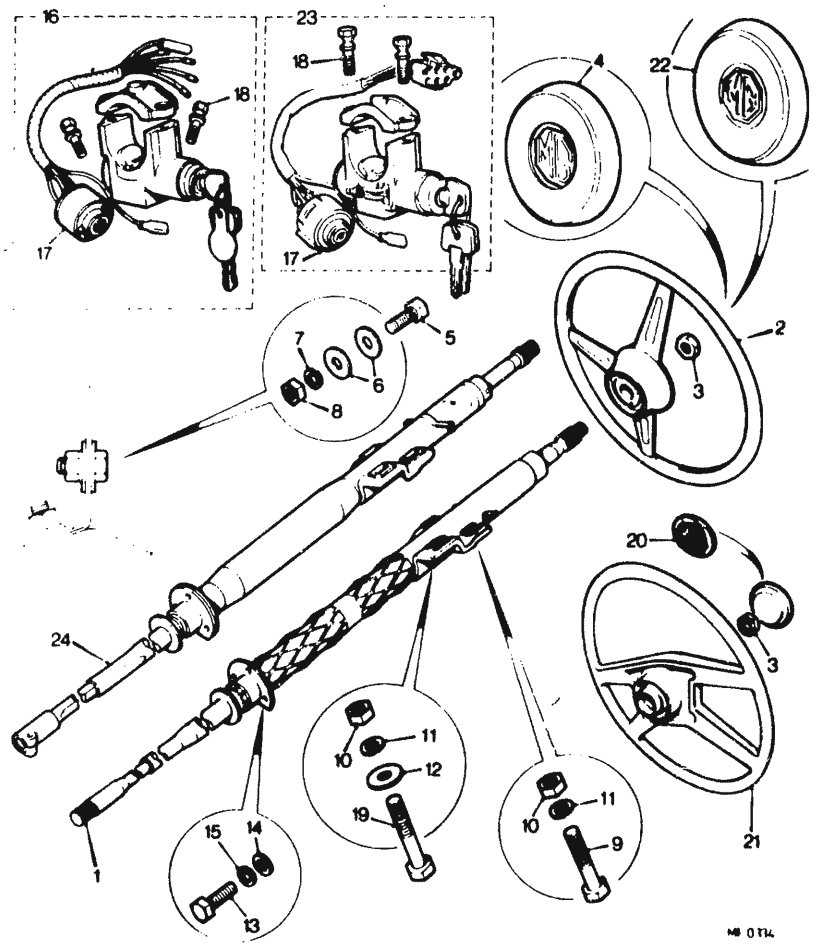

MF0334

STEERING COLUMN AND LOCK–continued .

N AMERICA


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
2	BHH	1307	Wheel-steering $	1	(C)G-AN6-154101 TO 200000	
21	BHH	1853	Wheel-steering $	1	(C)G-AN6-200001 ON	
3	BHH	119	Nut-steering wheel $	NLA		Use BHH 2103
3	BHH	2103	Nut-steering wheel	1		
4	BHA	5135	Horn push	NLA	(C)G-AN6-154101 TO 157172	Use AAU 1161
22	AAU	1161	Horn push	1	(C)G-AN6-157173 TO 200000	
20	CHA	747	Motif-steering wheel	1	(C)G-AN6-200001 ON	
5	SH	605061	Screw-column to bracket	4		
6	GHF	312	Washer-plain	8		
7	GHF	332	Washer-spring	4		
8	GHF	201	Nut	4		
9	GHF	106	Bolt-bracket to bulkhead	2		
19	BH	606161	Bolt-bracket to bulkhead	1		
10	GHF	202	Nut	3		
11	GHF	333	Washer-spring	3		
12	PWZ	306	Washer-plain	1		
13	SH	605071	Screw-column to floor	3		
14	PWZ	205	Washer-plain	3		
15	GHF	332	Washer-spring	3		
16	18G	9119	Kit-steering lock $	NLA	(C)G-AN6-154101 TO 200832	Use BHM 7143
17	BHA	5292	Switch $	1		
18	51K	4001	Bolt-shear $	2		
23	BHM	7143	KIT-STEERING LOCK $	1		
17	BHA	5292	Switch $	1	(C)G-AN6-200833 ON	
18	51K	4001	Bolt-shear $	2		
1	CHA	341	Column-steering $	NLA	(C)G-AN6-154101 TO 200000	
24	CHA	730	Column-steering $	1	(C)G-AN6-200001 ON	

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05

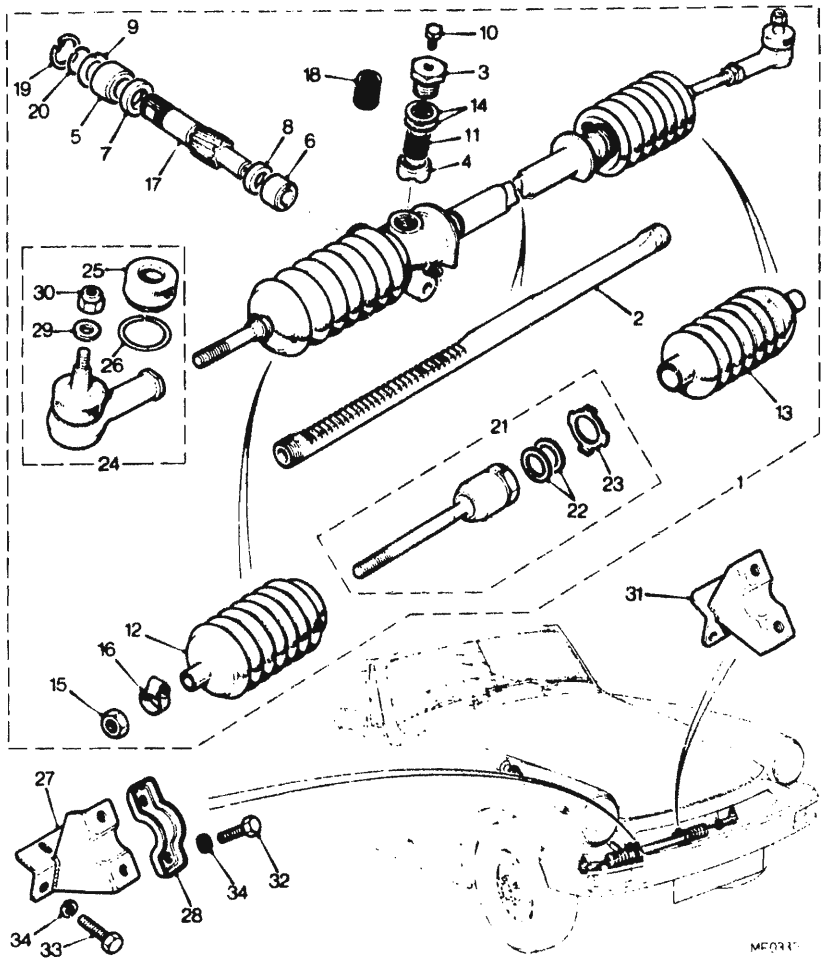

MF0330

STEERING RACK.


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	AHA 9956		RACK ASSEMBLY-RHD $	1		
	AHA 9955		RACK ASSEMBLY-LHD $	1		
2	208375		Rack $	1		
3	37H 7336		Cap-screwed	NLA		Use 132053
3	132053		Cap-screwed	1		
4	120946		Plunger	1		
5	37H 7560		Bush-pinion-upper	1		
6	127997		Bush-pinion-lower	1		
7	37H 7561		Washer-thrust-upper	1		
8	128000		Washer-thrust-lower	1		
9	37H 7562		Shim-pinion .005"(.127mm)	A/R		
9	37H 7341		Shim-pinion .010"(.26mm)	A/R		
10	133103		Plug-grease	1		
11	126765		Spring	NLA		
12	128004		Bellows-pinion side	1		
13	120948		Bellows	1		
14	120959		Shim-plunger .002"(.051mm)	A/R		
14	120949		Shim-plunger .004"(.102mm)	A/R		
14	37H 7342		Shim-plunger .010"(.26mm)	A/R		
15	37H 7338		Nut-lock	1		
16	GHC 507		Clip-bellows	2		
16	GHC 811		Clip-bellows	1		
17	37H 7339		Pinion-RHD	1		
	37H 7340		Pinion-LHD	1		
18	37H 7343		Spring	NLA		Use 120953
18	120953		Spring	2		
19	37H 7344		Circlip-pinion-upper	1		
20	37H 7345		O'Ring-pinion-upper $	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05

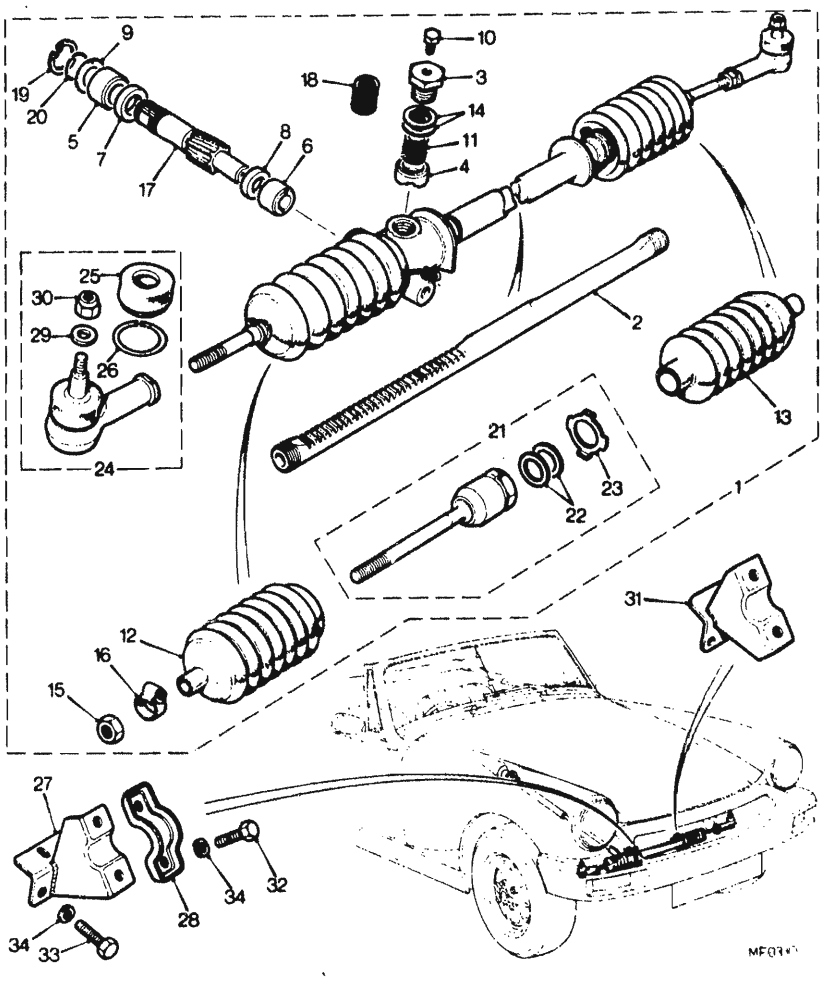

MF0330

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			STEERING RACK-continued			
21	37H 7346		BALL JOINT ASSEMBLY-INNER $	2		
22	130031		Shim	A/R		
22	130032		Shim	A/R		
23	120957		Washer-tab	1		
24	GSJ 158		END ASSEMBLY-TIE-ROD $	2		Was UKC 4944
25	143992		Gaiter	2		
26	138869		Clip-gaiter	N/A		
29	GHF 302		Washer-plain	2		
30	GHF 223		Nut	2		
27	AHA 9959		Bracket-rack mounting-RH $	1		
31	AHA 9960		Bracket-rack mounting-LH $	1		
28	AHA 9961		Clamp-bracket $	2		
32	SH 605061		Screw-clamp to bracket	4		
33	GHF 103		Screw-pinion side	2		
34	GHF 332		Washer-spring-screw	6		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

STEERING COLUMN AND LOCK G02
EXCEPT N AMERICA G02
KIT-STEERING LOCK G04
N AMERICA G04
SWITCH G02
SWITCH G04
WHEEL-STEERING G02
WHEEL-STEERING G04
STEERING RACK G05