
MASTER INDEX

INTRODUCTION INTRODUCTION EINFUHRUNG	1.B
ENGINE MOTEUR MOTOR	1.C
FLYWHEEL AND CLUTCH VOLANT ET EMBRAYAGE SCHWUNGRAD UND KUPPLUNG	1.D
GEARBOX AND PROPSHAFT BOITE DE VITESSES ET CARDAN GETRIEBE UND KARDANWELLE	1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS AXE, SUSPENSION, ARBRE DE COMMANDE,ROUES ACHSE, AUFHANGUNG, ANTRIEBSWELLE, RADER	1.F
STEERING DIRECTION LENKUNG	1.G
BRAKES AND BRAKE CONTROLS FREINS ET COMMANDES BREMSEN UND BEDIENUNGSORGANE	1.H
FUEL, EXHAUST AND EMISSION SYSTEMS ALIMENTATION ET ECHAPPEMENT KRAFTSTOFF UND AUSPUFFANLAGE	1.I
COOLING, HEATING AND AIR CONDITIONING REFROIDISSEMENT, CHAUFFAGE, AERATION KUHLUNG, HEIZUNG UND LUFTUNG	1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ELECTRICITE, ESSUIE GLACE, INSTRUMENTS ELEKTRISCHE, SCHEIBENWISCHER,INSTRUMENTE	1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS CHASSIS, SOUBASSEMENT, CABINE CHASSIS TEILE, HILFSRAHMEN, KABINE	2.C
FASCIA, TRIM, SEATS AND FIXINGS TABLEAU DE BORD,GARNITURES INT ET SIEGES ARMATURENBRETT, POLSTERUNG UND SITZ	2.E
MISCELLANEOUS DIVERS VERMISCHT	2.F
NUMERICAL INDEX INDEX NUMERIQUE NUMMERNVERZEICHNIS	2.G

GROUP INDEX

ALTERNATOR AND FIXINGS	L05
BELT-FAN	L05
BATTERY AND FIXINGS	N03
COURTESY LIGHTS	L13
DISTRIBUTOR-NOT USA	L02
DISTRIBUTOR-USA AND CANADA	L03
FUSE BOX AND RELAY	N02
HEADLAMPS	L07
KIT-SCREW-TRIMMER	L07
HORN AND CONTROLS	M03
INSTRUMENT WARNING LIGHTS	M08
INSTRUMENTS	M04
LAMP-REFLEX	L11
LAMP-REVERSE	L10
LAMP-SIDE AND FLASHER	L08
NUMBER PLATE LAMPS	L12
OIL PRESSURE GAUGE PIPES	M09
SWITCH-OIL PRESSURE-ANTI RUN-ON	M09
SWITCH-OIL-PRESSURE	M09
POWER UNIT ELECTRICS	L04
SWITCH-INHIBITOR(SEAT BELT)	L04
SWITCH-REVERSE LIGHT	L04
RADIO FITTINGS	N04
REAR FOG LAMPS	L14
STARTER AND FIXINGS	L06
STOP/TAIL LAMPS	L09
SWITCHES-(USA TYPES)	M12
LIGHT-WARNING-BRAKE	M14
LIGHT-WARNING FASTEN BELTS	M14
LIGHTER ASSEMBLY-CIGAR	M14
UNIT-FLASHER	M13
UNIT-HAZARD WARNING	M14
SWITCHES-RHD	M10
LIGHT-BRAKE WARNING	M11
LIGHTER ASSEMBLY-CIGAR	M11
UNIT-FLASHER-HAZARD WARNING	M11
WINDSCREEN WASHER	M02
WINDSCREEN WIPERS-LHD	L17
WINDSCREEN WIPERS-RHD	L15
WIRING CABLES AND FITTINGS	M15

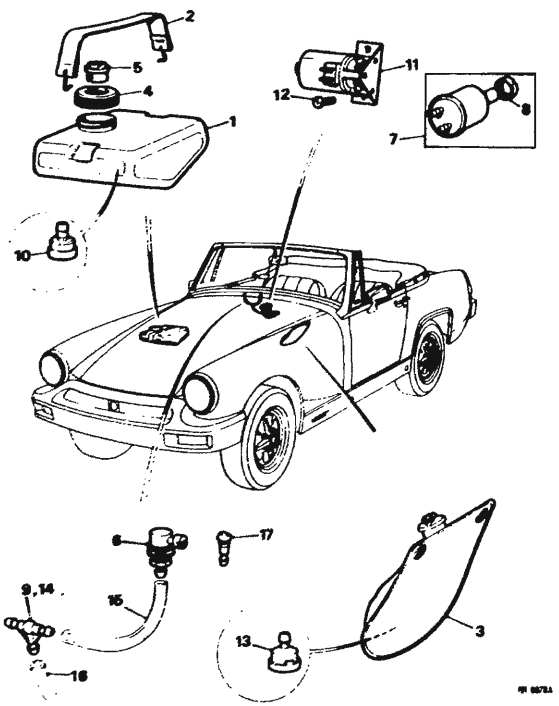

MM0078A

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			WINDSCREEN WASHER.			
1	GWW 902		Container	1		RHD
2	CHA 458		Strap-container	1		RHD
1	CHA 434		Container	1	(C)G-AN6-154101 TO 166300	LHD
2	CHA 458		Strap-container	1	(C)G-AN6-154101 TO 166300	LHD
3	GWW 917		Container $	1	(C)G-AN6-166301 ON	LHD
4	34G 1290		Cap-container	NLA		Use GWW 952
4	GWW 952		Cap-container	1		
5	34G 1289		Plug-filler	NLA		Use GWW 951
5	GWW 951		Plug-filler	1		
6	CZD 1593		Jet	NLA	(C)G-AN6-154101 TO 200000	Use GWW 802
	GWW 802		Jet	2	(C)G-AN6-200001 ON	
17	GWW 829		Jet	2		
7	BHA 4510		CONTROL ASSEMBLY	1		Manually operated Washer
8	17H 2669		Ring-locking	1		Washer
9	13H 6472		Connection-3 way	NLA	(C)G-AN6-154101 TO 200000	Use GWW 408
9	GWW 408		Connection-3 way	1	(C)G-AN6-154101 TO 200000	
9	BMK 2491		Connection-3 way	NLA	(C)G-AN6-200001 ON	Use GWW 407
9	GWW 407		Connection-3 way	1	(C)G-AN6-200001 ON	
10	GWW 506		Valve-foot	1		
11	AAU 5460		Control-windscreen washer $	1		
12	GHF 425		Screw-control	2		Electrically Operated washer
13	GWW 601		Filter-foot	1		
14	34G 1295		Connection-3 way	NLA	(C)G-AN6-154101 TO 200000	Use GWW 408
14	GWW 408		Connection-3 way	1	(C)G-AN6-154101 TO 200000	
14	13H 8866		Connection-3 way	1	(C)G-AN6-200001 ON	Use GWW 401
14	GWW 401		Connection-3 way	1	(C)G-AN6-200001 ON	
15	17H 8579	M	Tubing- 187"(4 8mm)O/D	NLA		Use GWW 201M
15	GWW 201	M	Tubing- 187"(4 8mm)O/D	A/R		
16	97H 2679	M	Tubing- 25"(6 4mm)O/D	NLA		Use 17H 8580 M
16	17H 8580	M	Tubing- 25"(6 4mm)O/D	NLA	(C)G-AN6-200001 ON	Use GWW 202 M
16	GWW 202	M	Tubing- 25"(6 4mm)O/D	A/R		


NOTE
Part numbers with suffix 'M' are supplied in multiples of metres(39 37")

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS' M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

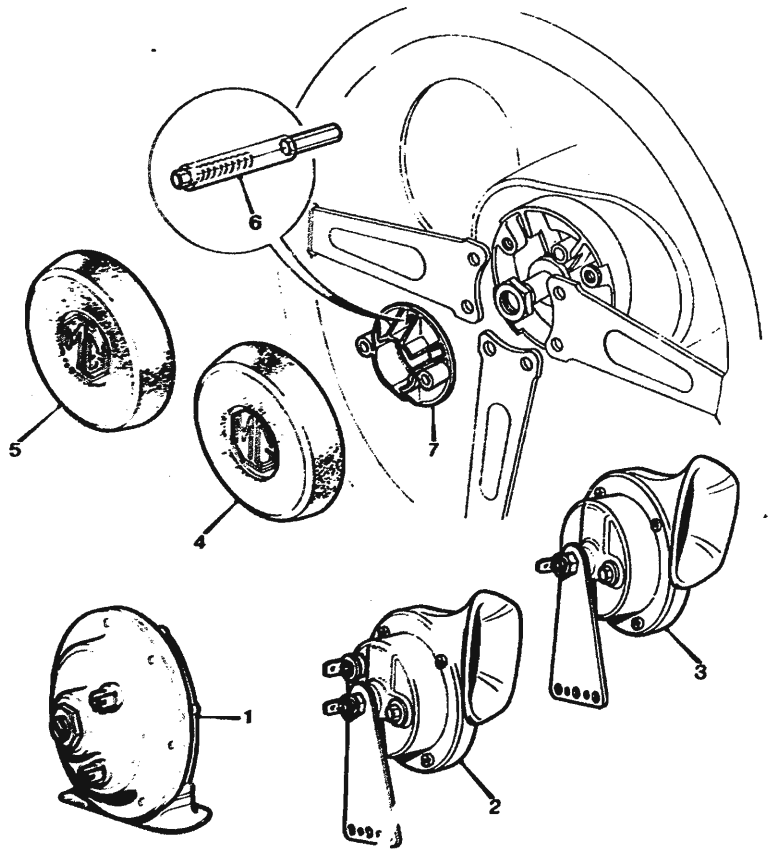

MK0231

MK0231


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			HORN AND CONTROLS.			
1	BHA	5367	HORN ASSEMBLY-HIGH NOTE	1	(C)G-AN6-154101 TO 212000	UK
1	BHA	5368	HORN ASSEMBLY-LOW NOTE	1	(C)G-AN6-212001 ON	UK
2	ADU	2185	HORN ASSEMBLY-HIGH NOTE	1		
2	ADU	2186	HORN ASSEMBLY-LOW NOTE	1		
3	BHA	5367	HORN ASSEMBLY-HIGH NOTE	1	(C)G-AN6-154101 ON	N America
3	BHA	5368	HORN ASSEMBLY-LOW NOTE	1		N America
4	BHA	5135	Horn push	1		Use AAU 1161
5	AAU	1161	Horn push	1		
6	BHA	5041	Brush	1	(C)G-AN6-154101 TO 200000	
7	BHA	5042	Slip ring	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

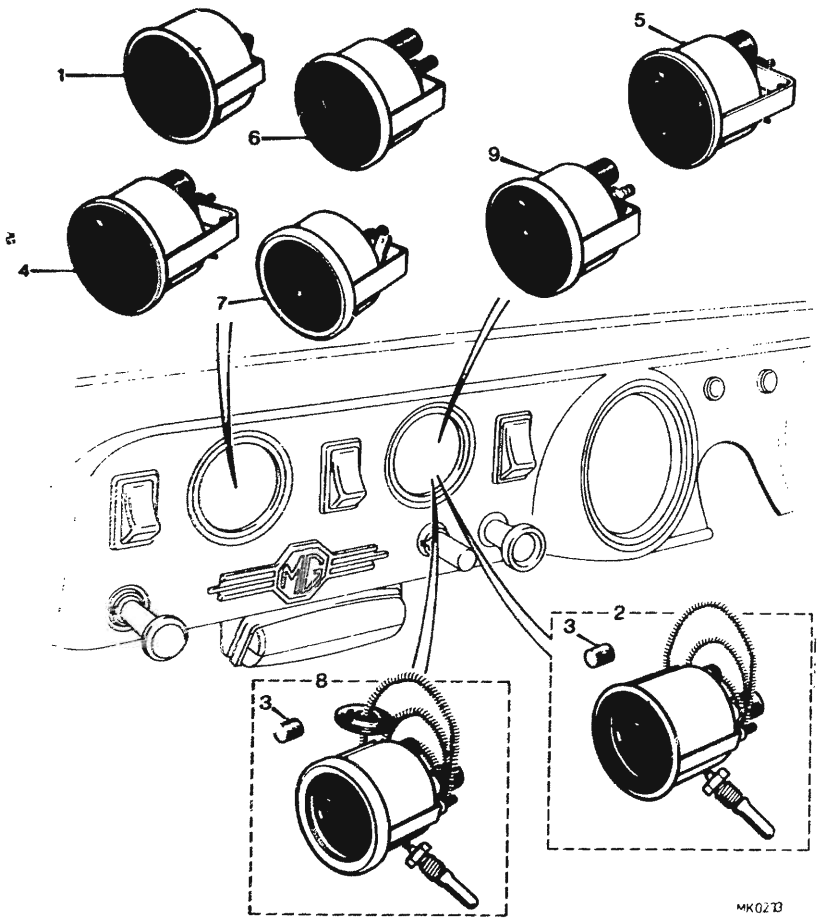

MK0233


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			INSTRUMENTS			
1	BHA 4736		Gauge-fuel-RHD $	1	(C)G-AN6-154101 TO 200000	
6	159604		Gauge-fuel-RHD $	1	(C)G-AN6-200001 ON	
1	BHA 4736		Gauge-fuel-LHD $	1	(C)G-AN6-154101 TO 188000 Except California	
7	BHA 5342		Gauge-fuel(unleaded)	1	(C)G-AN6-154101 TO 200000	California
					(C)G-AN6-188001 TO 200000	USA and Canada
4	AAU 3031		Gauge-fuel(unleaded)	1	(C)G-AN6-200001 ON	USA and Canada
2	BHA 4900		GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-H,N,C-RHD	1	(C)G-AN6-154101 TO 200000	
3	27H 7877		Restrictor	NLA		
5	159606		GAUGE-TEMPERATURE-RHD	1	(C)G-AN6-200001 ON	
2	BHA 4900		GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-HNC-LHD	1	(C)G-AN6-154101 TO 166303	USA and Canada Refer TSB75-A-6
3	27H 7877		Restrictor	NLA		
8	AAU 2641		GAUGE ASSEMBLY-OIL PRESSURE AND WATER TEMPERATURE-H,N,C-LHD	1	(C)G-AN6-166304 TO 200000	
3	27H 7877		Restrictor	NLA		
9	AAU 3030		GAUGE-TEMPERATURE COOLANT	1	(C)G-AN6-200001 ON	

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

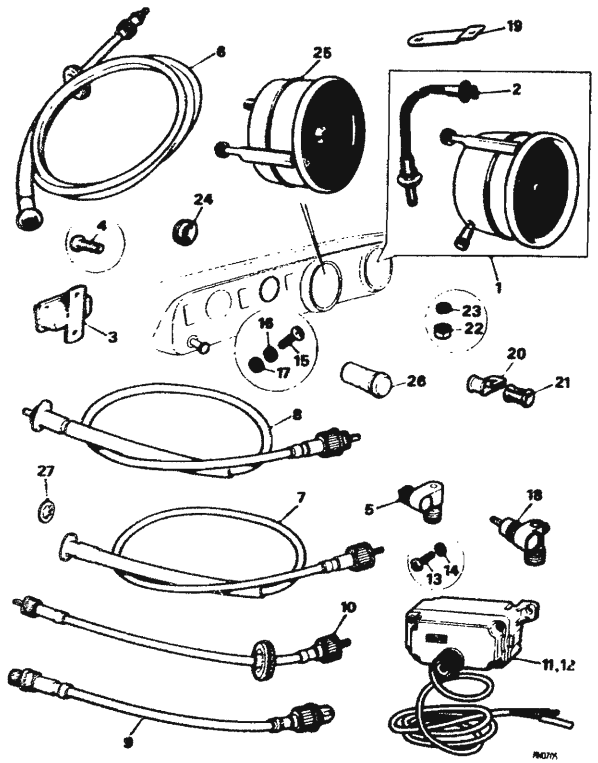

MH0705


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			INSTRUMENTS-continued.			
			SPEEDOMETER			
1	BHA 5341		MPH(SN6142/09S)	1	(C)G-AN6-154101 TO 200000	UK
	PKC 643		MPH/KMH(6211/14SA)	1	(C)G-AN6-200001 ON	
	BHA 5339		MPH(SN5230/13)	1	(C)G-AN6-154101 TO 200000	
	AAU 3035		MPH(SN5234/00)	1	(C)G-AN6-200001 TO 217508	USA
	ADU 2174		MPH(SN5234/02)	1	(C)G-AN6-217509 ON	
	BHA 5339		MPH(SN5230/13)	1	(C)G-AN6-154101 TO 189001	
	BHA 5340		KPH(SN5230/14S)	1	(C)G-AN6-189002 TO 200000	Canada
	AAU 9807		KMH(SN15230/14)	1	(C)G-AN6-200001 TO 216931	
	ADU 2175		KMH(SN5234/03)	1	(C)G-AN6-216932 ON	
	AAU 3035		MPH(SN5234/00)	1	(C)G-AN6-200001 TO 213430	
	AAU 9807		KMH(SN5230/14)	1	(C)G-AN6-213431 TO 216617	Japan
	ADU 2175		KMH(SN5234/03)	1	(C)G-AN6-216618 ON	
2	BHA 4771		Control-remote	NLA		
	159737		Control-remote-RHD	1	(C)G-AN6-200001 ON	
3	BHA 4602		Stabilizer-voltage-RHD	1	(C)G-AN6-154101 TO 200000	
	BHA 4602		Stabilizer-voltage-LHD	1		
	148876		Stabilizer-voltage-RHD	1	(C)G-AN6-200001 ON	
4	AB 608031		Screw	1		
5	BHA 4794		Angle drive-speedometer-RHD	1	(C)G-AN6-154101 TO 200000	
6	GSD 288		Cable speedometer-RHD-6'6"(210.8cm)	1		
	GSD 337		Cable-speedometer-RHD	1	(C)G-AN6-200001 ON	

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

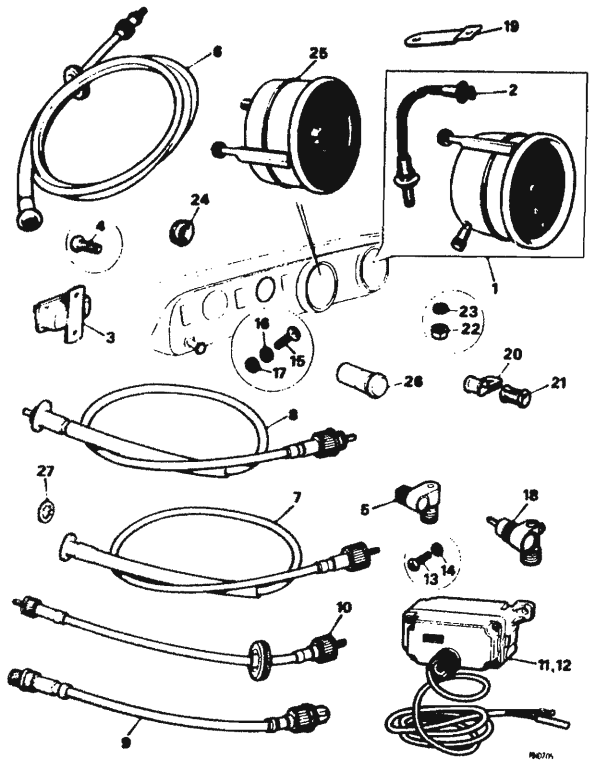

MH0705


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			INSTRUMENTS-continued			
7	BHA 5370		Cable-speedometer-gearbox to Single service interval counter	1	(C)G-AN6-154101 TO 188000 (USA)154101 TO 175273(Canada)	USA and Canada (Except California)
8	BHA 5371		Cable-speedometer-gearbox to double service interval counter	1		
9	BHA 5372		Cable-speedometer service interval counter to service interval counter	1	(C)G-AN6-154101 TO 168000	California
10	BHA 5373		Cable-speedometer-service interval counter to speedo head	1		USA and CANADA
11	UKC 4260		Counter-service interval-EGR	NLA	(C)G-AN6-154101 TO	
12	13H 9407		Counter-service interval-catalyst	1	188000	California
13	PMZ 307		Screw-indicator to bracket	4/2	(USA)-154101 TO	
14	WL 700101		Washer-spring-screw	4/2	175273(Canada)	Quantity reduced
15	PMZ 306		Screw-indicator bracket	2/1		At(C)188001
16	WL 700101		Washer-spring-screw	2/1		
17	GHF 306		Washer-spring-screw	2/1		
18	120694		Angle-drive-S I C	1		
7	BHA 5370		Cable-speedometer-gearbox to single service interval counter	1		
10	BHA 5373		Cable-speedometer-service interval counter to speedo head	1	(C)G-AN6-188001 TO 200000	
12	13H 9407		Counter-service interval-catalyst	1		California
7	BHA 5370		Cable-speedometer-gearbox to service interval counter	1		
10	ADU 1234		Cable-speedometer-service interval counter to speedo head	1	(C)G-AN6-200001 TO 212000	
12	13H 9407		Counter-service interval-catalyst	1		

MASTER INDEX

INTRODUCTION 1.B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

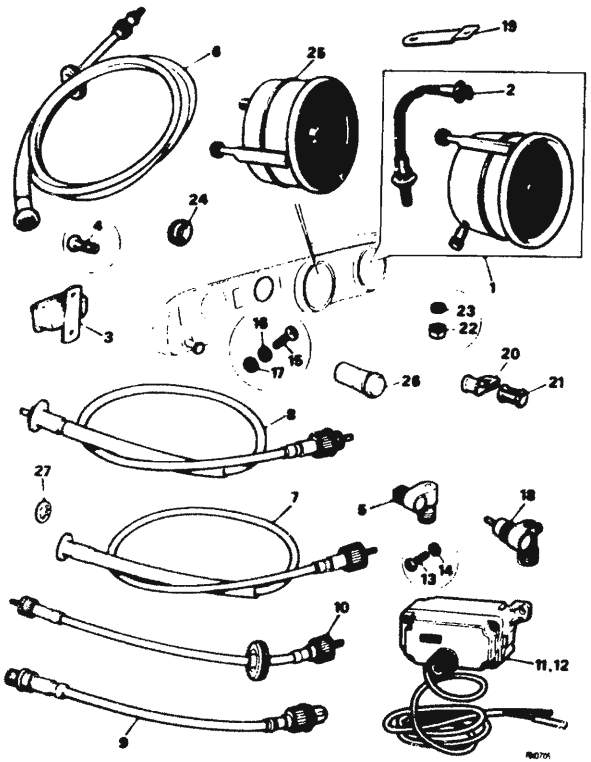

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			INSTRUMENTS-continued			
6	AAU 3499		Cable assembly-speedometer 6 3"(160 0cm)long-LHD	1	(C)G-AN6-175274 TO 200000(Canada) (C)G-AN6-188001 TO 200000 (USA)except California	
6	GSD 338		Cable-speedometer-LHD	1	(C)G-AN6-200001 ON (Except California) (C)G-AN6-212001 ON (California)	
19	AHA 8755		Bracket-remote trip flex	1		
20	CP 106111		Clip-cable to bulkhead	1		
21	ACH 8529		Sleeve-clip(rubber)	1		
22	GHF 200		Nut	1		
23	GHF 331		Washer-spring	1		
24	RFR 305		Grommet-cable through foot-well	1		
24	RFR 503		Grommet-sic cable through bulkhead	1		
			TACHOMETER			
25	BHA 5222		(RVS 2415/01AR)-RHD	NLA	(C)G-AN6-15401 TO 200000	Use BHA 5220
25	BHA 5220		(RVS 2415/00AF-RHD	1		
25	TKC 1706		(RVC2414/01F)-RHD	1	(C)G-AN6-200001 ON	
	BHA 5221		(RVC1410/01AF)-LHD	NLA	(C)G-AN6-154101 TO 200000	Use BHA 5219
	BHA 5219		(RVC1410/00AF)-LHD	1		
25	AAU 3037		(RVC1414/00F)-LHD	1	See(1)foot of page	
	ADU 2176		(RVC1414/01F)	1	See(2)foot of page	

CHANGE POINTS
(1) (C)G-AN6-200001 TO 217508 (USA) 200001 TO 216931 (Canada) and 200001 TO 216617 (Japan)
(2) (C)G-AN6-217509 ON (USA).216932 ON (Canada) 216618 ON (Japan)


MH0705

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

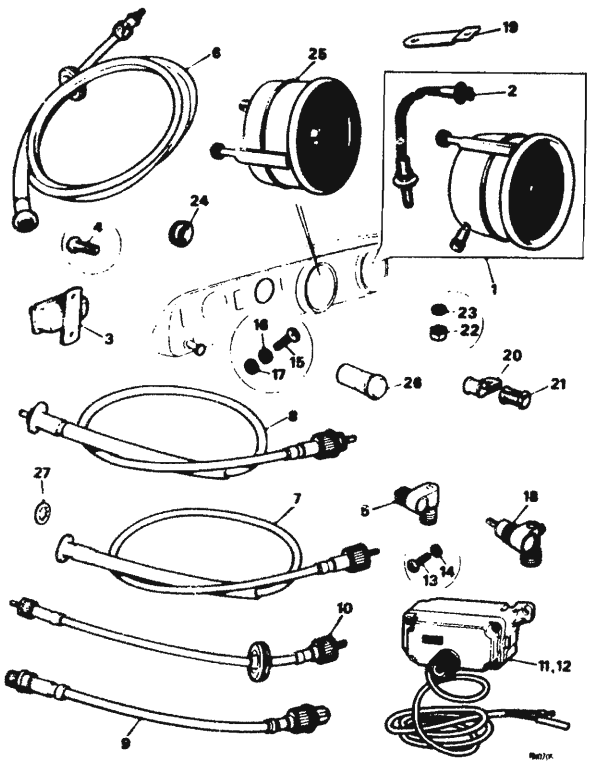

MH0705


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			INSTRUMENT WARNING LIGHTS.			
			BODY AND LENS			
26	BHA	5122	Main beam warning light-blue $	1	(C)G-AN6-154101 TO 200000	USA and CANADA
26	BHA	5123	Ignition warning light-red $	NLA		
26	AAU	3858	Main beam warning light-blue	1	(C)G-AN6-200001 ON	
26	AAU	3857	Ignition warning light-red	1		
26	ADU	1004	Oil-pressure warning light-amber	1		
27	BHA	5125	Washer-shakeproof-retaining	2		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

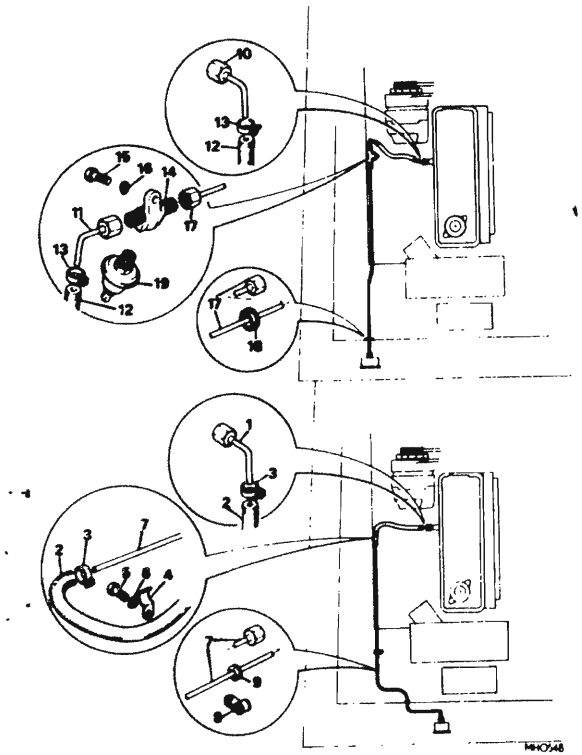

MH0548

OIL PRESSURE GAUGE PIPES.


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	AHA 6392		Pipe-engine to hose	1		
2	AHA 6331		Hose-flexible	NLA		Use CHA 600
2	CHA 600		Hose-flexible	1	(C)G-AN6-173709 ON	
3	88G 308		Clip-flexible hose	2		
4	PCR 809		Clip-flexible hose to body	1		
5	SH 604041		Screw-clip	1	(C)G-AN6-154101 TO 200000	UK Only
6	GHF 331		Washer-spring	1		
7	BHH 1281		Pipe-gauge to flexible hose	1		
8	PCR 809		Clip-pipe to footwell	1		
9	RFR 102		Ferrule-pipe	1		
19	GPS 101		Switch-oil-pressure	1	(C)G-AN6-200001 ON	
10	AHA 6392		Pipe-adaptor to hose	1		
11	AHA 6392		Pipe-'T'piece to hose	1		
12	AHA 6331		Hose-flexible	NLA		Use CHA 600
12	CHA 600		Hose-flexible	1		
13	88G 308		Clip-hose	2		
14	BHH 649		'T' piece-anti run-on switch	1		
15	HZS 405		Screw-'T' piece to body	1	(C)G-AN6-154101 TO 188000 (Except California)	USA and Canada
16	GHF 331		Washer-spring	1		
17	AHH 6678		Pipe-'T' piece to gauge	1		
18	AHC 805		Grommet-pipe	NLA	(C)G-AN6-154101 TO 200000 (California)	
19	BHA 5197		Switch-oil pressure-anti run-on valve	NLA		Use AAU 3886
19	AAU 3886		Switch-oil pressure-anti run-on valve	NLA		Use GPS 114
19	GPS 114		Switch-oil pressure-anti run-on valve	1		
	AAA 628		Adaptor-pipe	1	(C)G-AN6-188001 TO 200000 (Except California)	
19	GPS 101		Switch-oil pressure	1	(C)G-AN6-200001 ON (Except California)	
19	CPS 120		Switch-oil pressure-anti run-on valve		(C)G-AN6-200001 ON (California	


MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

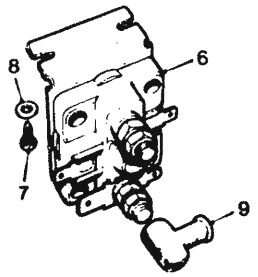

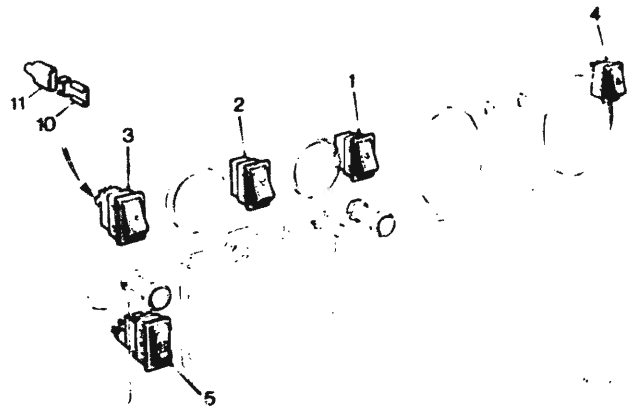

MX0366


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			SWITCHES-RHD.			
			SWITCH			
1	BHA 5111		Lighting	1		
2	BHA 5109		Windscreen wiper	1	(C)G-AN6-154101 TO 212000	
2	BHA 5110		Windscreen wiper-2 speed	1	(C)G-AN6-212001 ON	
3	BHA 5112		Panel light	1		
4	BHA 5267		Hazard warning	1		
5	ACU 1983		Fog lamp-rear	1		
6	13H 5952		starter solenoid	1		
7	PJZ 1005		Screw-switch	2		
8	GHF 306		Washer-plain-screw	2		
9	8G 548		Bootee-terminal insulating-starter switch	2		
10	47H 5496		Connector-socket-panel light switch	NLA		Use RTC 220
10	RTC 220		Connector-socket-panel light switch	1		
11	511269		Insulator-connector	1		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

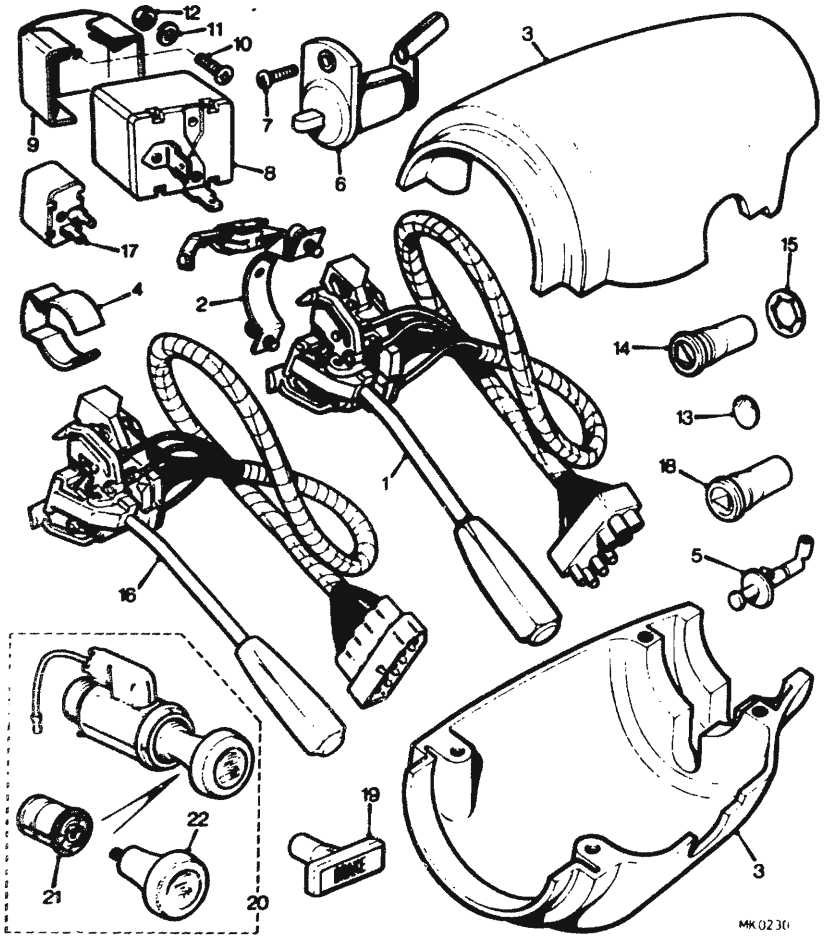

MK0230


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			SWITCHES-RHD-Continued.			
1	37H 8050		Switch-direction indicator/ headlamp flasher	1	(C)G-AN6-154101 TO 200000	
16	ADU 1021		Switch-direction indicator/ headlamp dip and horn	1	(C)G-AN6-200001 ON	
2	37H 8051		Clip-direction indicator switch(with horn contact)	1	(C)G-AN6-154101 TO 200000	
3	18G 8713		Cowling-indicator switch	1PR		
4	BHH 1301		Striker-direction indicator trip	1		
5	13H 391		Switch-courtesy light-trunk	1		
6	BHA 5058		Switch-courtesy light-interior	2		
7	GHF 421		Screw	2		
8	GFU 107		Unit-flasher $	NLA		Use GFU 124
8	GFU 124		Unit-flasher $	1		
9	BHA 4780		Clip-flasher unit	1		
10	GHF 425		Screw	1		
11	WL 700101		Washer-spring	2		
12	GHF 206		Nut	2		
13	AHH 6334		Window-flasher warning light	NLA		
17	ATJ 8880		Unit-flasher-hazard warning $	NLA		Use GFU 201
17	GFU 201		Unit-flasher-hazard warning $	NLA		Use GFU 203
17	GFU 203		Unit-flasher-hazard warning $	NLA		Use GFU 204
17	GFU 204		Unit-flasher-hazard warning	1		
9	BHA 4780		Clip-unit	1		
14	BHA 5124		Lens-body-direction indicator warning light	2	(C)G-AN6-154101 TO 200000	
18	AAU 4824		Lens-body-direction indicator warning light	2	(C)G-AN6-200001 ON	
15	BHA 5125		Washer-retaining	A/R		
19	UKC 5812		Light-brake warning	1		
20	AAU 5101		LIGHTER ASSEMBLY-CIGAR	NLA	(C)G-AN6-212001 ON	Use ZKC 1152
20	ZKC 1152		LIGHTER ASSEMBLY-CIGAR	1		
21	AAU 5944		Unit 'Pop-out'	1		
22	AAU 6008		Knob	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

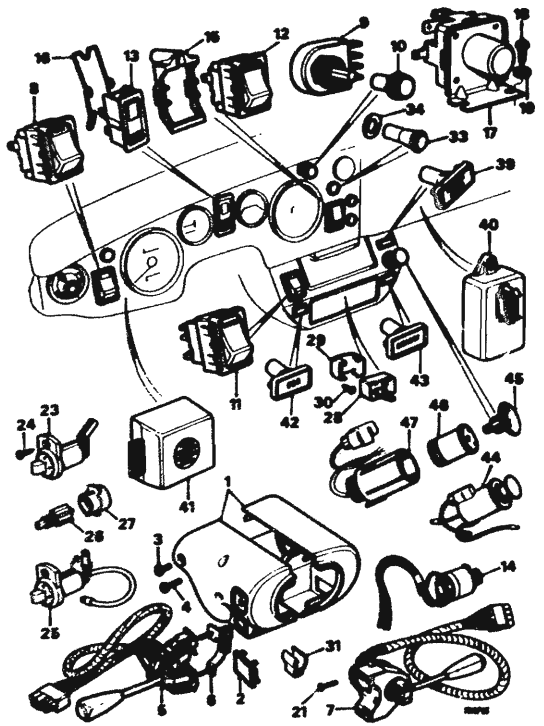

MH0703

SWITCHES-(USA TYPES).


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	BHM 7090		Cowl-switch	1		
2	AAM 222		Plug-blanking	2		
3	SE 910321		Screw-cowl	2		
4	ZPT 1003		Screw-cowl	NLA		
5	37H 8521		Switch-direction indicator, headlamp dipper and flasher $	1		USA
5	37H 8523		Switch-direction indicator, headlamp dipper and flasher $	1		Canada
6	37H 8566		Clip-direction indicator switch (with horn contact) $	1		
7	37H 8522		Switch-windscreen wiper, washer,overdrive $	1	(C)G-AN6-154101 TO 200000	USA
7	37H 8524		Switch-windscreen wiper, washer,overdrive $	1		Canada
8	BHA 5184		Switch-heater(illuminated)	1		USA
8	BHA 5192		Switch-heater(illuminated)	1		Canada
9	37H 7970		Switch-rheostat(illuminated)	1		
10	37H 7971		Knob-rheostat switch	1		
11	BHA 5185		Switch-hazard warning(illuminated)	1		USA
11	BHA 5193		Switch-hazard warning(illuminated)	1		Canada
12	BHA 5183		Switch-lighting(illuminated)	NLA		Use BHA 5191
12	BHA 5191		Switch-lighting(illuminated)	1		
5	AAU 4995		Switch-direction indicator and headlamp flasher and dipper, lane change and horn	1		USA
	AAU 4993		Switch-direction indicator and headlamp flasher and dipper lane change and horn	1		Canada a
7	BAU 1022		Switch-2 speed wiper,flickwipe and screenwash	1		USA
	BAU 1021		Switch-2 speed wiper,flickwipe and screenwash	1	(C)G-AN6-200001 ON	Canada ar
8	ADU 1023		Switch-heater(illuminated)	1		USA
	ADU 1062		Switch-heater(illuminated)	1		Canada and Jap
9	37H 7970		Switch-rheostat(illuminated)	1		
10	37H 7971		Knob-rheostat switch	1		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMP L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

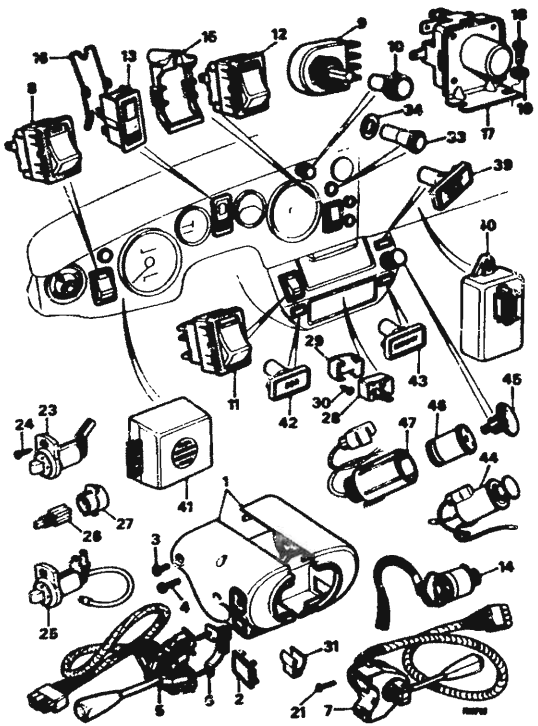

MH0703


Illus	Part Number	Description	Quantity	Change Point	Remarks
		SWITCHES-(USA TYPES)-Continued.			
11	BAU 1088	Switch-hazard warning(illuminated)	1	.....	USA
	BAU 1089	Switch-hazard warning(illuminated)	1	.....	Canada and Japan
	BAU 1090	Nacelle-hazard warning switch	2	(C)G-AN6-200001 ON	
12	ADU 1022	Switch-lighting(illuminated)	1	.....	USA
	ADU 1061	Switch-lighting(illuminated)	1	.....	Canada and Japan
13	BHA 4990	Switch-brake check light (4 terminal)	1	(C)G-AN6-154101 TO 166300	
14	BHA 5292	Switch-ignition	1	.....	Included with steering lock kit 18G 9119
15	BHH 1085	Clip-illuminated switch	6		
16	AHH 8920	Clip-spring-brake check light switch	NLA	(C)G-AN6-154101 TO 166300	
17	13H 5952	Switch-starter solenoid	1		
18	PJZ 1005	Screw	2		
19	GHF 306	Washer-plain	2		
21	AHH 8895	Screw-clamp to column-wiper switch	2	(C)G-AN6-154101 TO 200000	
23	BHA 5310	Switch-ignition key audible warning and courtesy light $	1		
24	PTZ 6034	Screw-switch	1		
25	BHA 5058	Switch-courtesy light-interior	2		
26	BHA 4803	Extension-spindle	NLA		
27	BHA 4802	Housing-lock	NLA		
28	GFU 107	Unit-flasher $	NLA	.....	Use GFU 124
28	GFU 124	Unit-flasher $	1	.....	USA and Canada
28	GFU 108	Unit-flasher	1	.....	Japan
29	BHA 4780	Clip	1		
30	GHF 425	Screw	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

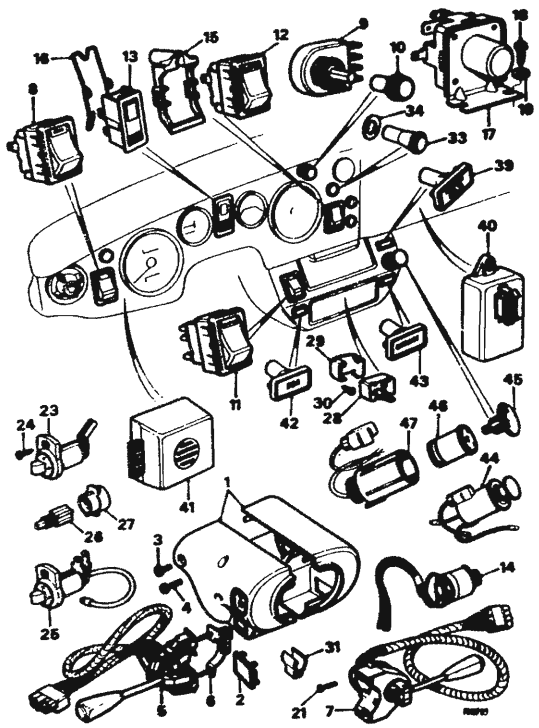

MHG703


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			SWITCHES-(USA TYPES)-Continued.			
31	BHH 402		Striker-trafficator	1	(C)G-AN6-154101 TO 200000	
33	BHA 5124		Light-direction indicator warning	2		
	AAU 4824		Light-direction indicator warning	2	(C)G-AN6-200001 ON	
34	BHA 5125		Washer-retaining	2		
28	ATJ 8880		Unit-hazard warning $	NLA		Use GFU 201
28	GFU 201		Unit-hazard warning $	NLA		Use GFU 203
28	GFU 203		Unit-hazard warning $	NLA		Use GFU 204
28	GFU 204		Unit-hazard warning $	1		
29	BHA 4780		Clip-hazard warning unit	1		
39	13H 7986		Light-warning fasten belts	1		
40	13H 9801		Unit-control-sequential seat system $	1		
					(C)G-AN6-154101 TO 159053	
41	AAU 1110		Unit-buzzer-time delay $	1	(C)G-AN6-159054 ON	
42	13H 9408		Light-warning-EGR	1	(C)G-AN6-154101 TO 188000	(Finished canada At(C)175273)
43	13H 9571		Light-warning-catalyst	1	(C)G-AN6-160160 TO 212000	California only
44	BHA 5137		LIGHTER ASSEMBLY-CIGAR	NLA		Use AAU 5101
45	37H 2503		Knob	1	(C)G-AN6-154101 TO 18200	
46	27H 9735		Unit-heating	1		
47	37H 2505		Clamp-shell	1		
	AAU 5101		LIGHTER ASSEMBLY-CIGAR	NLA		Use ZKC 1152
	ZKC 1152		LIGHTER ASSEMBLY-CIGAR	1		
	AAU 5944		Unit-pop out	1	(C)G-AN6-182001 ON	
	AAU 6008		Knob	1		
13	AAU 2092		Light-warning-brake $	NLA	(C)G-AN6-166301 TO 200000	
13	ADU 1024		Light-warning-brake	1	(C)G-AN6-200001 ON	

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M06
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

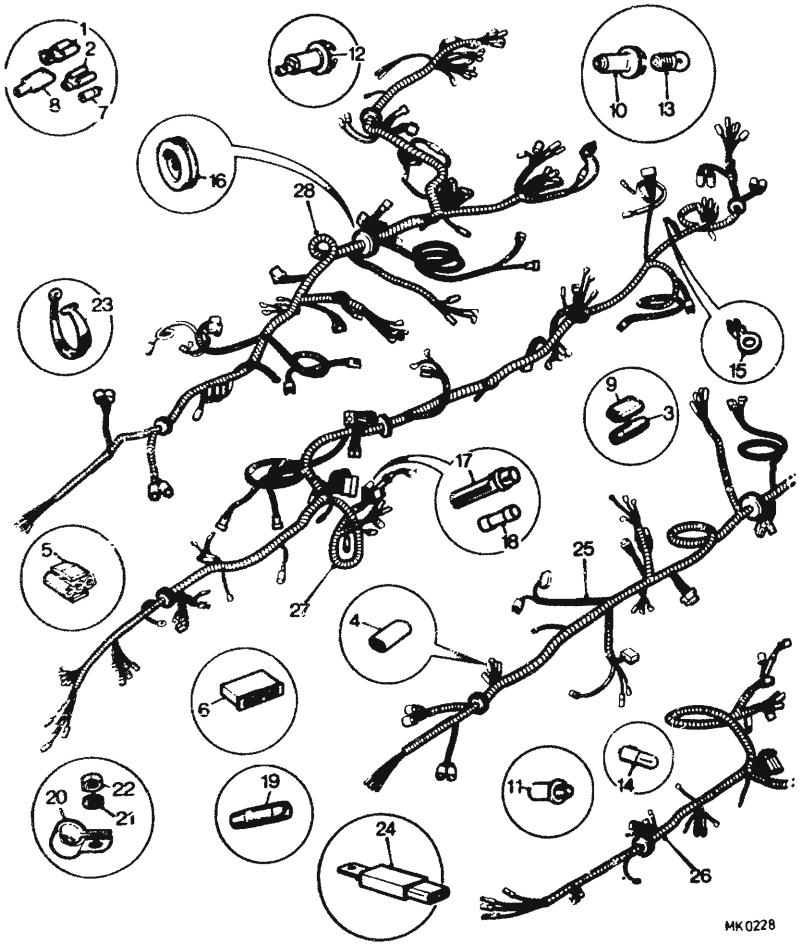

MK0228

WIRING CABLES AND FITTINGS.


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
25	CHA 455		CABLE ASSEMBLY-MAIN HARNESS-RHD	1	(C)G-AN6-154101 TO 200000	
	CHA 767		CABLE ASSEMBLY-MAIN HARNESS-RHD	1	(C)G-AN6-200001 TO 212000	
26	CHA 799		CABLE ASSEMBLY-MAIN HARNESS-RHD	1	(C)G-AN6-212001 ON	
	CHA 454		CABLE ASSEMBLY-MAIN HARNESS-LHD $	1	(C)G-AN6-154101 TO 159053	
	CHA 524		CABLE ASSEMBLY-MAIN HARNESS-LHD $	1	(C)G-AN6-159054 TO 166300	
	CHA 569		CABLE ASSEMBLY-MAIN HARNESS-LHD $	NLA	(C)G-AN6-166304 TO 188000 (Except California) (C)G-AN6-166304 TO 200000 (California)	
	CHA 691		CABLE ASSEMBLY-MAIN HARNESS-LHD $	1	(C)G-AN6-188001 TO 200000 (Except California)	
27	CHA 783		CABLE ASSEMBLY-MAIN HARNESS-LHD (EXCEPT CALIFORNIA)	1	(C)G-AN6-200001 ON	
	CHA 787		CABLE ASSEMBLY-MAIN HARNESS (CALIFORNIA)	1	(C)G-AN6-200001 TO 212000	
28	CHA 816		CABLE ASSEMBLY-MAIN HARNESS (CALIFORNIA)	1	(C)G-AN6-212001 ON	

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

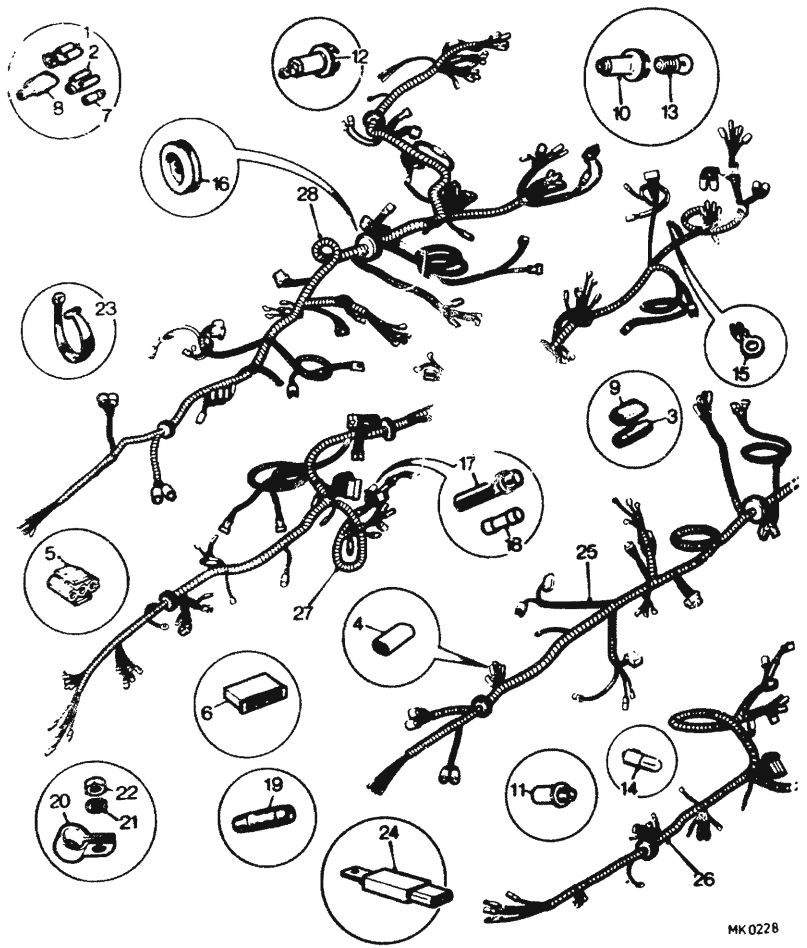

MK0228

WIRING CABLES AND FITTINGS–continued


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			CONNECTOR			
1	47H 5419		Socket-single(35amp)	A/R		
1	47H 5496		Socket-single(17 5amp)	NLA		Use 47H 5499
1	47H 5499		Socket-single(17 5amp)	NLA		Use RTC 220
2	RTC 220		Socket-double(17 5amp)	A/R		
3	104618		Snap-single-2-way	A/R		
4	RTC 603		Snap-single-4-way	A/R		
5	BHA 4460		Snap-single-6-way	NLA		Use RTC 603 With 104618
6	BMK 1398		Blade	NLA		
7	3632		Plug-snap connector	A/R		
			SLEEVE-INSULATOR			
8	515399		35amp connector	A/R		
8	511269		17 5amp connector	A/R		
9	5L 287		17 5amp double connector	NLA		
10	13H 1923		Bulb holder(screw type)-instrument illumination	NLA		Use 515412
10	515412		Bulb holder(screw type)-instrument illumination	A/R		
11	13H 1926		Bulb holder(screw type)-instrument illumination and warning lamp	A/R		
12	13H 1925		Bulb holder(bayonet type)-ignition,main beam and oil filter warning light	A/R		
13	GLB 987		Bulb(screw type)	A/R		
14	GLB 281		Bulb(bayonet type)	A/R		
15	17H 5287		Eyelet- 75"	NLA		
16	2H 2065		Grommet	NLA		
17	27H 3588		Holder-fuse	2		
18	GFS 10		Fuse-10amp(retail pack)	1 PK		
19	104618		Connector-snap	2		
7	3632		Plug	4		USA and Canada
20	CP 106111		Clip	1		
21	GHF 331		Washer-spring	1		
22	GHF 200		Nut	1		
23	13H 6107		Strap-cable	NLA		Use GHF 1266
23	GHF 1266		Strap-cable	A/R		
24	AAU 5034		Diode-blocking	2		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

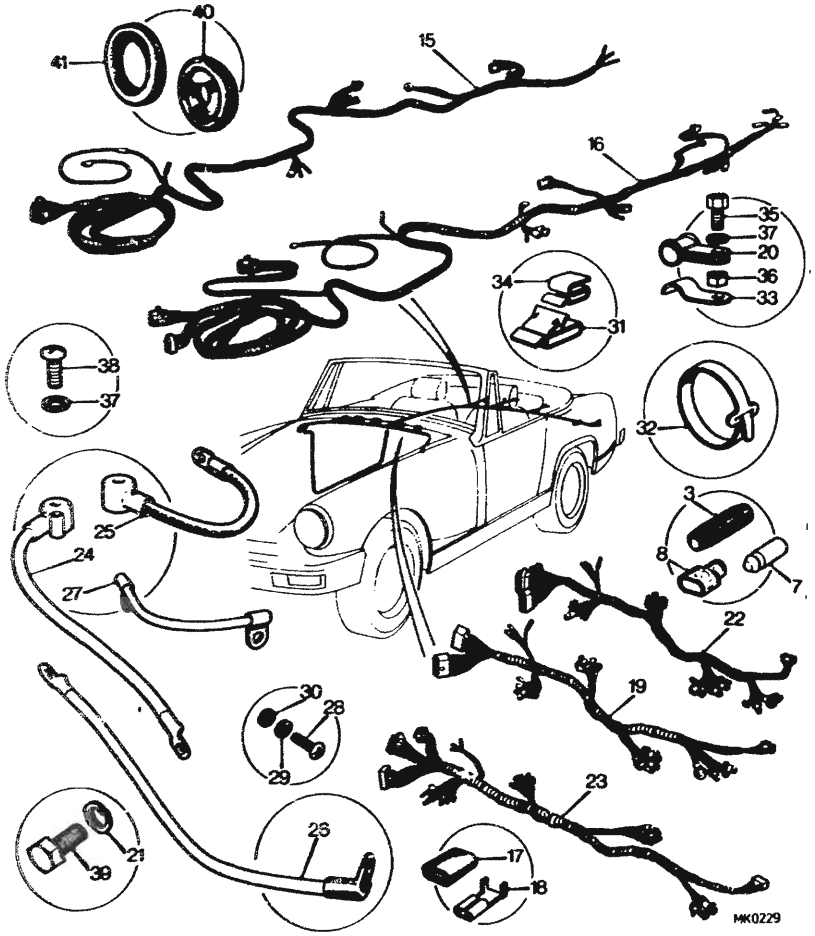

MK0229


Illus	Part Number	123456 Description	Quantity	Change Point	Remarks
		WIRING CABLES AND FITTINGS-continued			
15	CHA 432	CABLE ASSEMBLY-BODY HARNESS-RHD	1		
	CHA 407	CABLE ASSEMBLY-BODY HARNESS-LHD	1	(C)G-AN6-154101 TO 159053	
16	CHA 525	CABLE ASSEMBLY-BODY HARNESS-LHD	1	(C)G-AN6-159054 ON	
3	104618	Connector-snap-single	A/R		
17	RTC 603	Connector-snap-double	A/R		
	47H 5496	Connector-socket-single	NLA		Use 47H 5499
	47H 5499	Connector-socket-single	NLA		Use RTC 220
18	RTC 220	Connector-socket-double	2		
7	3632	Nipple-snap connector	A/R		
8	511269	Insulator-socket connector	2		
19	CHA 429	CABLE ASSEMBLY-FACIA HARNESS-RHD	1	(C)G-AN6-154101 TO 200000	
22	CHA 746	CABLE ASSEMBLY-FACIA HARNESS-RHD	1	(C)G-AN6-200001 TO 212000	
23	CHA 802	CABLE ASSEMBLY-FACIA HARNESS-RHD	1	(C)G-AN6-212001 ON	
	CHA 593	CABLE ASSEMBLY-FACIA HARNESS-LHD	1	(C)G-AN6-154101 TO 200000	
	CHA 788	CABLE ASSEMBLY-FACIA HARNESS-LHD	1	(C)G-AN6-200001 ON	

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

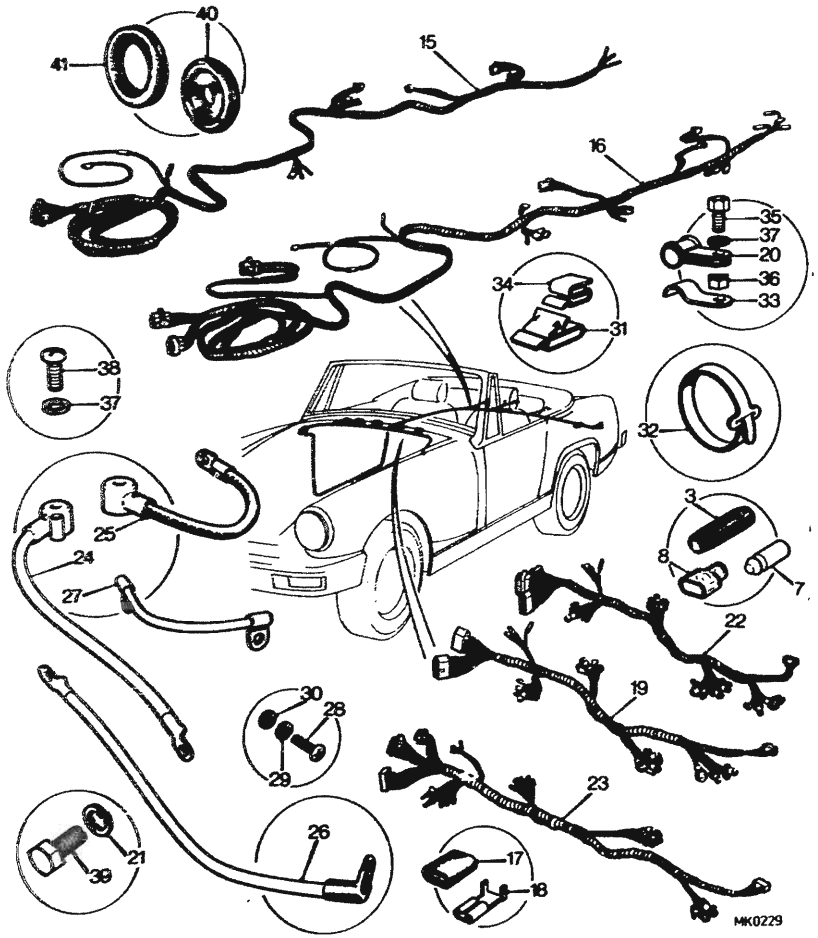

MK0229

WIRING CABLES AND FITTINGS-continued

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			CABLE-BATTERY			
24	BHA 5062		Positive to solenoid	NLA		Use 5L 734
24	5L 734		Positive to solenoid	1		
25	AHA 8697		Negative to earth	1		
26	CHA 390		Cable-starter switch to starter	1		
27	AHH 5452		Cable-engine to earth	NLA		
28	SH 605041		Screw	1		
29	LWZ 305		Washer-spring	1		
30	GHF 333		Washer-spring	1		
20	PCR 607		Clip-harness to wheelarch	1		
31	BHA 4473		Clip-harness to bonnet locking platform	NLA		
31	BHA 4473		Clip-harness to bonnet locking platform	NLA		
20	PCR 607		Clip-headlamp and sidelamp harness	2		
32	AHH 7108		Clip-cables to column	A/R		
33	CHR 405		Clip-harness to sill	2		
20	PCR 607		Clip-harness to tail lamp fixing stud	2		
34	BMK 385		Clip-fuel pump and tank unit cables to tank	4		
20	PCR 807		Clip-negative cable to footwell	1		
35	AB 606031		Screw	2		
36	GHF 206		Nut	2		
37	WL 700101		Washer-spring	2		
38	PMZ 308		Screw	1		
37	WL 700101		Washer-spring	1		
39	SE 604041		Screw-harness-earth to dash	1		
21	GHF 331		Washer-spring	1		
40	RFR 305		Grommet-harness	2		
41	RFR 110		Grommet-harness	NLA		
40	RFR 305		Grommet-wiper motor cable through dash	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15