AUSTIN
HEALEY SPRITE

SERVICE PARTS LIST

SECOND ISSUE

This List cancels the Preliminary List (Part No. AKD829) and embodies all information issued up to and including Parts List Amendment No. PAU/365

WHEN ORDERING FURTHER COPIES OF THIS LIST PART No. **AKD829** (SECOND ISSUE) SHOULD BE QUOTED

Issued by


B.M.C. SERVICE LIMITED

COWLEY · OXFORD · ENGLAND


Telephone	Oxford 77777
Telex	B.M.C. Serv. Oxford 15625 and 15626
Telegrams	Mowog, Telex, Oxford
Cables	Mowog, Oxford, England
Codes	Bentley's, Bentley's Second Phrase, A.B.C. (5th and 6th Editions), Western Union and Private

December, 1958


LOCATION OF SERIAL NUMBERS

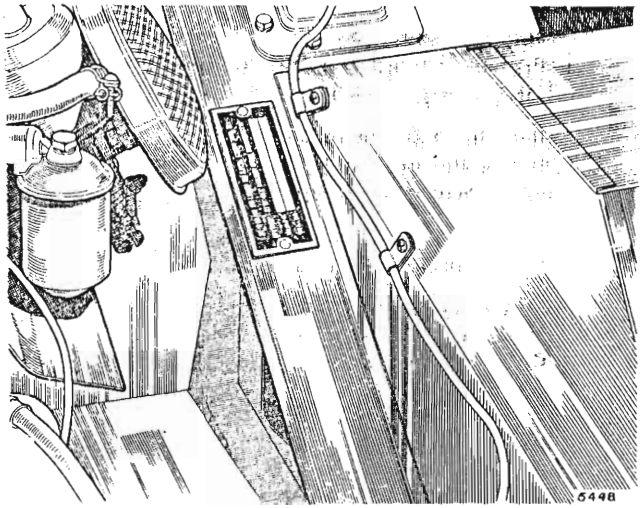


The **Car Number** is stamped on a plate secured to the left-hand inner wheel arch valance under the bonnet

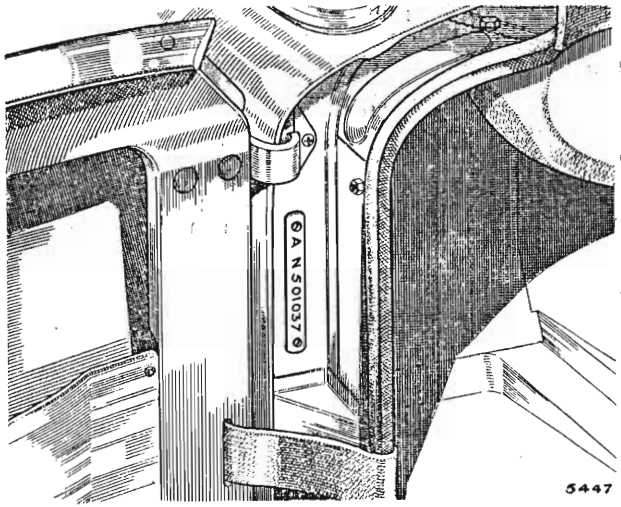


The **Body Number** is stamped on a plate secured to the left-hand front door pillar

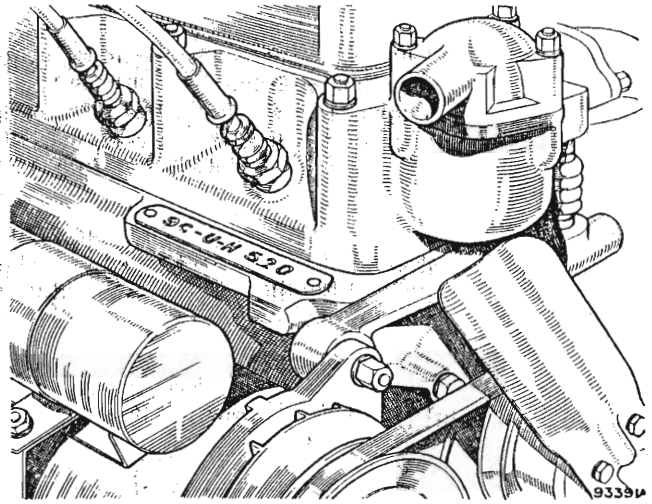

The **Engine Number** is stamped on a plate secured to the right-hand side of the cylinder block above the dynamo

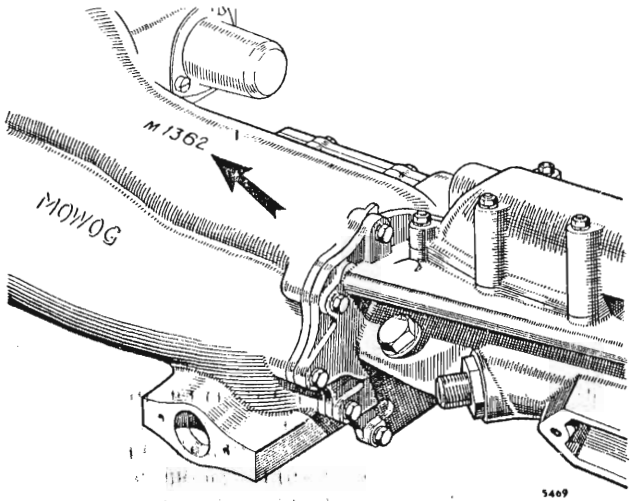

The **Gearbox Number** is stamped on the top of the gearbox casting

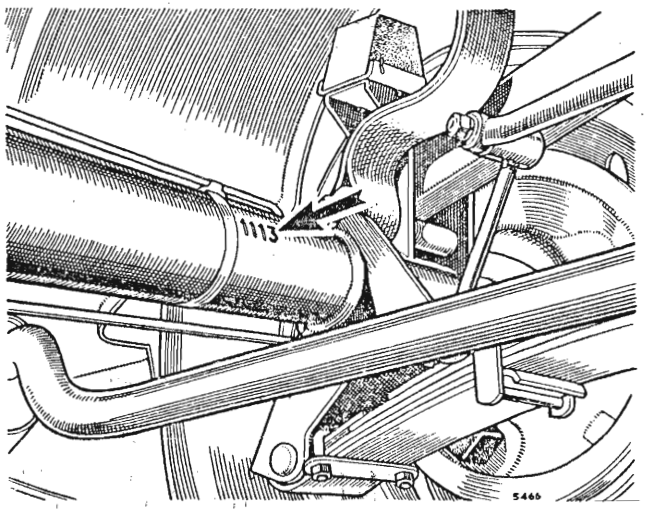

The **Rear Axle Number** is stamped on the front of the left-hand rear axle tube adjacent to the spring anchorage

Introduction

The range of parts in this List covers all serviceable components on all models to the standard specifications. Where the part is confined to one specification this is clearly defined in the 'Quantity' and/or 'Remarks' column, and where the part listed is not serviced, this is indicated by the letters N.S.P. in the 'Part Number' column.

The components in the plate illustrations are identified by numbers which correspond with the illustration references appearing on the facing page in the column immediately following the part number.

It is essential first to identify the part against the illustration in the appropriate section of the List and make use of the illustration reference number to locate the part number and official description on the adjacent page.

When using the List it must be noted that each assembly (or sub-assembly) is shown as the **first item** and followed immediately by the individual components of the assembly, which are 'offset' for easy identification. It must be clearly understood that such assemblies (or sub-assemblies) will only be supplied complete with all their components when ordered against the assembly (or sub-assembly) part number. It will be appreciated, however, that the individual components of the assembly (which are listed immediately below and offset) can themselves be supplied separately, provided they are ordered against their individual part numbers. Note that the quantities shown are the quantity per vehicle, and not the quantity per component.

Example:

CONNECTING RODS—BEARINGS

Connecting rod and cap for Nos. 1 and 3 cylinders	**2A656**	**2**
Connecting rod and cap for Nos. 2 and 4 cylinders	**2A654**	**2**
Screw for cap	2A659	8
Washer for screw (lock)	2A660	4
Screw—clamping	51K1382	4

We reserve the right to make changes or improvements in the construction or equipment of our products at any time. It is our general policy, however, to supply components to the latest specification.

Where a modification has taken place to a part, or a new part issued replacing the original part, this is indicated by the inclusion of the new part number under 'Modifications'.

Owner's Guide for Ordering Parts

Obtain your parts from the local B.M.C. Distributor or Dealer, who stocks only B.M.C. genuine and warranted parts.

(1) In order to ensure prompt and correct execution of orders it is essential that the following instructions are adhered to:
- (*a*) Always state the **vehicle/chassis** and **engine numbers** complete with prefixes and suffixes (see page ii).
- (*b*) Always **state the colour** of carpets, painted items, trim items, etc.
- (*c*) Give **part number** and **description** (prefix letters to part numbers must always be quoted).
- (*d*) **Quantity required,** bearing in mind that the quantities shown are the quantity per vehicle.
- (*e*) **If ordering for dispatch give definite forwarding instructions,** i.e. sea, air freight, air parcel service, post, passenger/goods train, road service, or collection.

(2) When cabling or telegraphing the local Distributor or Dealer use the part number and give the **vehicle/chassis number. Confirm your cable or telegram by letter, or order,** at once. Give sufficient postal address for a parcel to find you. If you are away from home give **your home address in addition** to the dispatching instructions. Remember when sending a telegraphic order that **your name and address must be telegraphed as a message.** If this is not done the order will arrive without any indication of the sender's address, as your signature and address on the back of the telegram form is not telegraphed. Always write the quantity required of any particular part in words.

(3) **Claims under Warranty**
Claims for the replacement of material or parts under Warranty must always be submitted to the supplying Distributor or Dealer, or when this is not possible to the nearest Distributor or Dealer, informing them of the vendor's name and address.

(4) **Replacement Unit Schemes**
Where service replacement units are available this is clearly indicated by a bold letter (R) against the item at the end of the 'Description' line. Details of these and the terms and method of replacement are published in the local press and trade periodicals. You are advised to consult the local Distributor or Dealer for full details.

Instructions to Dealers

Modifications will be covered by the issue of Parts Amendment Sheets as required and also by the periodical re-issue of the Parts Numerical Index. Each issue of this Index is identifiable by its issue number and supersedes the previous issue, which should be destroyed. This Numerical Index should be kept with this List, for which purpose it is suitably punched.

In practice, first identify the items with the aid of the appropriate illustration. This provides a reference to the part number and official description appearing on the facing page. Now turn up the part number in the Numerical Index. Any modification will be indicated by the Parts Amendment Sheet number appearing in the adjacent column, and reference to this will provide the information necessary to ensure the issue of the correct part. If no Amendment Sheet number is indicated against the part number in the Numerical Index the part is clear for issue.

New parts introduced subsequent to the printing of this Parts List may be traced with the aid of the separate Index to Improvements and Alterations. They will be included in the Numerical Index as this is re-issued and appropriately cross-referenced.

Certain classes of items are stocked and issued in **cartons, packets, etc., only,** and these are indicated in the Parts List by a figure in the 'Unit of Issue' column showing the quantity per package.

It is most important that orders should quote quite clearly the number of **packets** required, the word 'packets' (or the abbreviation 'pkt.') being used in every case.

If the word 'packet' is not used confusion may arise concerning the quantity actually required, with consequent delay in order handling.

While the quantity of units per pack indicated in the 'Unit of Issue' column in this Parts List provides a ready guide, it is always advisable to check the latest information regarding items in this category by referring to the Master Price List.

In addition a number of prices in the Price List are shown for a dozen (i.e. the abbreviation 'doz.' appears between the part number and the price), in which case the item is sold in 'dozens' only, and units of one dozen must be ordered, quoting the word 'dozen' or the abbreviation 'doz.'; thus, should 48 be required, the order should state clearly '4 doz.'. Again, confusion can result if this is not done and over- or under-issue may occur.

NOTE.—Oversize and undersize replacement parts are tabulated at the end of the engine section.

The following abbreviations are used:

Not U.K. indicates 'Export only'.
RHD indicates 'Right-hand drive'.
LHD indicates 'Left-hand drive'.
R/H indicates 'Right-handed'.
L/H indicates 'Left-handed'.
RHT indicates 'Right-hand thread'.
LHT indicates 'Left-hand thread'.
N.S.P. indicates 'Non-serviceable part'.
R at the end of the description to indicate that reconditioned units are available under the B.M.C. Exchange Parts Service.

Where commencing and finishing numbers are quoted they are preceded by the following symbols to indicate the unit to which they apply:

(E) in the case of engine numbers.
(C) in the case of car/chassis numbers.
(G) in the case of gearbox numbers.
(FA) in the case of front axle numbers.
(RA) in the case of rear axle numbers.
(B) in the case of body numbers.

Bundy pipes are supplied completely finished and to the correct length but not shaped. They may be delivered straight or coiled according to their length and mode of delivery.

S.U. carburetter needles are supplied under the one part number AJH5292 and the individual needles are identified by the letter symbols stamped on the shoulder. When ordering replacement needles it is essential to quote the identification symbol in addition to and immediately following the part number.

IMPORTANT

B.M.C. SERVICE PARTS

When purchasing replacement parts or having repairs done owners are requested to see that a label similar to the one illustrated here is attached to the invoice rendered. These labels are issued by the Company and constitute a guarantee that genuine parts are supplied.



No better vehicle maintenance service exists in the world than that provided by the manufacturers and no vehicle demands less attention but it is unfair to the manufacturers to expect the continuance of their support if the structure of the vehicle has been disturbed by the use of replacements that are not genuine B.M.C. parts.

Replacement parts that are not of genuine B.M.C. manufacture cannot be relied upon to be of B.M.C. specification, material, and workmanship, and therefore the manufacturers cannot be expected to extend their Warranty to vehicles which have been fitted with parts not of their manufacture.

All Authorized B.M.C. Distributors and Dealers are under contract to supply only genuine B.M.C. parts.

Alphabetical Index

A

	Page
Absorber—front and rear shock	K.2, L.1
Adaptor—oil filter	A.9
Adaptor—thermostat by-pass	A.5
Adjuster—front and rear brake-shoe	H.3, K.2
Air cleaner	D.2
Arm—distributor rotor	B.1
Arm—windscreen wiper	N.5
Armature assembly—dynamo	N.1
Armature assembly—starter	N.1
Axle assembly—rear	H.1
Axle assembly—swivel	K.1
Axle shaft—rear	H.2

B

	Page
Badge—bonnet top	R.9
Ball socket—steering tie-rod	J.1
Barrel lock—lighting and ignition switch	N.2
Battery	N.1
Bearing assembly—clutch release	E.1
Bearing assembly—propeller shaft needle	G.1
Bearing—connecting rod	A.2
Bearing—crankshaft main	A.1
Bearing—differential	H.1
Bearing—front hub	K.1
Bearing—gearbox	F.1, F.2
Bearing—rear axle pinion	H.2
Bearing—rear hub	H.2
Bearing—steering pinion	J.1
Bearing—water pump spindle	A.10
Belt—fan—pump and dynamo	A.10
Blade—fan	A.10
Blade—windscreen wiper	N.5
Bleeder screw—brake	K.2, M.3
Block—cylinder	A.1
Blower—car heater	S.6
Body—oil pump	A.8
Body—water pump	A.10
Bonnet assembly	R.1
Boot—steering ball socket	J.1
Boot—wheel and master cylinders	H.3, M.1
Box assembly—pedal	M.2
Box—control	N.2
Box—fuse	N.2
Bracket assembly—bonnet lock striker	R.9
Bracket—coil to dynamo	B.2
Bracket—dynamo	A.10
Bracket—engine mounting	A.11
Bracket—exhaust mounting	A.14
Bracket—hand brake	M.4
Bracket—mixture control to carburetter	A.15
Bracket—over-rider	R.15
Bracket—radiator to wheel arch	C.1
Bracket—rear suspension top link mounting	L.1
Bracket—rocker shaft	A.4
Bracket—shock absorber	R.3
Bracket—side curtain to door	R.6
Bracket—steering column support	J.2
Bracket—steering rack mounting	J.2
Brake-drum—front and rear	H.3, K.2
Brake-plate—front and rear	H.3, K.2
Brushes—dynamo and starter	N.1
Buffer—front suspension rebound	K.3
Bulb—instrument	O.2, O.3
Bulb—lamp	N.3, N.4
Bumper assembly—front	S.9
Bumper—rear axle	H.2
Bush—clutch withdrawal lever	F.1
Bush—rear spring	H.4
Bush—shock absorber	L.1
Bush—speedometer pinion	F.4
Bushes—gearbox	F.2, F.3, F.4, F.5

C

	Page
Cable—accelerator	A.15
Cable—hand brake	M.4
Cable—harness	N.6
Cable—mixture control	A.15
Cable—speedometer	O.2
Cable—tachometer	S.10
Cable—windscreen wiper	N.5
Cage—differential	H.1
Camshaft	A.2
Cap—distributor	B.1
Cap—main bearing	A.1
Cap—master cylinder	M.1
Cap—oil filler tube	A.5
Cap—petrol tank filler	O.1
Cap—radiator	C.1
Carbon and spring—distributor	B.1
Carburetters	D.3
Carrier assembly—differential	H.1
Case assembly—gearbox	F.1
Case assembly—rear axle	H.1
Case—side-curtain	R.6
Casing—gearbox remote control	F.4
Catch—bonnet safety	R.9
Channel—windscreen	R.5
Clamp—battery	N.1
Clamp—exhaust manifold	A.14
Cleaner—air	D.2
Clip—spring leaf	H.4
Clutch	E.1
Coil—ignition	B.2
Collar—petrol tank filler	D.1
Column—outer steering	J.2
Condenser—distributor	B.1
Connecting rod	A.2
Connections—brake and clutch pipe	M.3
Contact set—distributor	B.1
Control assembly—fresh-air unit	S.7
Control—mixture and starter	A.15, N.12
Control—starter switch	N.2
Core—radiator	C.1
Cotter—valve	A.4
Cover assembly—clutch	E.1
Cover assembly—hood	R.6
Cover—dust—clutch bell housing	F.3
Cover—dust—clutch withdrawal lever	F.3
Cover—engine front	A.6
Cover—engine side (front)	A.6
Cover—engine side (rear)	A.6
Cover—gearbox front and side	F.1
Cover—gearbox remote control	F.5
Cover—horn-push	N.5
Cover—oil pump body	A.8
Cover—starter pinion	F.3
Cover—tonneau	S.10
Cover—valve rocker	A.5
Crankshaft	A.2
Crown wheel and pinion	H.1
Curtain assembly—side	R.6
Cushion—seat	R.10
Cylinder block	A.1
Cylinder—clutch slave	E.2
Cylinder head	A.4
Cylinder—hydraulic brake	H.3, K.2
Cylinder—master	M.1

Alphabetical Index—*continued*

	Page
D	
Differential assembly	H.1
Distributor	B.1
Dog—distributor driving	B.1
Door assembly—heater outlet	R.15
Doors	R.7
Dynamo	N.1
E	
Elbow—demister	S.6
Elbow—water outlet	A.5
Element—oil filter	A.9
Excluder—draught—door	R.13
Excluder—draught—pedal box	M.2
Exhaust assembly	A.14
Exhaust manifold	A.11
Extension—gearbox	F.4
F	
Fan—dynamo	A.10
Fascia panel	O.1
Fastener—hood to windscreen	R.5
Filter assembly—oil	A.9
Finisher—cockpit rear	R.14
Finisher—doors and scuttle	R.14
Flange—universal joint—propeller shaft	G.1
Flange—universal joint—rear axle	H.2
Flasher unit	N.4
Flash—'Sprite'	R.15
Float—carburetter	D.4
Floor panels	R.1, R.2
Fluid—brake	M.2
Flywheel	A.3
Forks—gear striking	F.3
Frame assembly—hood	R.6
Frame assembly—seat	R.10
Fresh-air unit	S.7
Fuse	N.2
G	
Gaskets—decarbonizing	A.13
Gauge—fuel	O.1
Gauge—oil pressure and radiator thermometer	O.1
Gauge unit—petrol tank	D.1
Gear—camshaft	A.2
Gear—crankshaft	A.2
Gear—differential	H.1
Gear—speedometer	F.2
Gearbox	F.1
Gears—gearbox	F.2
Glass—mirror	R.15
Glass—windscreen	R.5
Grille assembly—radiator	C.1
Grommet—gear lever	F.5
Gudgeon pin	A.1
Guide—valve	A.4
H	
Hand brake	M.4
Handle—bonnet	R.9
Handle—grab	O.1
Harness—wiring	N.6
Head assembly—oil filter	A.9
Head—cylinder	A.4
Heat shield—carburetter	D.4
Heater unit	S.5
Hinge assembly—bonnet	R.8
Hinge assembly—door	R.7
Hood details	R.6
Horn	N.5
Horn-push	N.5
Hose—air cleaner to rocker cover	D.2
Hose—brake	M.3
Hose—heater and fresh-air unit	S.5, S.7
Hose—radiator	C.1
Housing—distributor	A.3
Housing—steering and tie-rod ball	J.1
Housing—steering rack and damper pad	J.1
Hub assembly—front and rear	H.2, K.1
Hub—water pump pulley	A.10
I	
Inlet flange plate—fresh-air unit	S.7
Inlet flange plate—heater	S.6
Inlet manifold	A.11
Instruments	O.1, O.2, O.3
J	
Jet—carburetter	D.3
Joint—air cleaner to carburetter	D.2
Joint—crankcase rear cover	A.1
Joint—cylinder head	A.5
Joint—differential carrier to axle case	H.1
Joint—engine front cover	A.6
Joint—engine side cover	A.6
Joint—front engine mounting plate	A.1
Joint—gearbox casing and extension	F.1, F.3
Joint—inlet and exhaust manifold	A.11
Joint—manifold blanking plate	A.11
Joint—oil filter	A.9
Joint—oil pump to block	A.8
Joint—petrol pump	D.1
Joint—rear engine mounting plate	A.6
Joint—rocker cover	A.5
Joint—sump	A.7
Joint washer—carburetter	D.4
Joint—water elbow	A.5
Joint—water pump to crankcase	A.10
Journal and needle kit set	G.1
K	
Key—camshaft gear	A.2
Key—crankshaft gear	A.2
Key—ignition	N.2
Kit—clutch cylinder repair	E.2
Kit—master cylinder repair	M.1
Kit—petrol pump repair	D.2
Kit—wheel cylinder repair	H.3, K.2
Knob—change speed lever	F.5
Knob—horn-push	N.5
Knob—switch	N.2
L	
Lamp—warning	O.3
Lamps	N.3, N.4
Laygear	F.1
Layshaft	F.1
Leaves—road spring	H.4
Lever—accelerator pedal	A.15
Lever—brake balance	M.4
Lever—change speed	F.5
Lever—clutch withdrawal	F.3
Lever—front and rear selector	F.5
Lever—gearbox control	F.4
Lever—hand brake—wheel cylinder	H.3
Lever—steering	K.1
Licence holder	R.5
Lining—brake-shoe	H.3, K.2
Lining—clutch	E.1

Alphabetical Index—*continued*

	Page
Link—accelerator pedal	A.15
Link—dynamo adjusting	A.10
Link—hand brake balance	M.4
Link—lower—front suspension	K.1
Link—shock absorber	L.1
Link—top—rear shock absorber	L.1
Literature	S.4
Lock assembly—bonnet	R.9
Lock assembly—door	R.7
M	
Manifold—exhaust	A.11
Manifold—inlet	A.11
Mask—brake-shoe adjuster	H.3, K.2
Mats—floor	R.13
Mirror—interior	R.15
Motor—windscreen wiper	N.5
Mounting assembly—engine front	A.11
Mounting assembly—engine rear	A.11
Mountings—exhaust pipe	A.14
N	
Needle—carburetter	D.3
Nozzle—demister	S.6
Number-plate—front	R.15, S.9
Nut—wheel stud	H.2, K.1
O	
Oil filter	A.9
Oil pump	A.8
Oil seal—front hub	K.1
Oil seal—gearbox extension	F.4
Oil seal—rear axle pinion	H.2
Oil seal—rear hub	H.2
Oil seal—valve	A.4
Oil thrower—crankshaft	A.2
Over-rider	R.15, S.9
P	
Packing—crankshaft	A.2
Pad—clutch and brake pedal	E.2, M.1
Pad—steering rack damper	J.1
Paint—touching-up	S.4
Panel—body	R.1, R.2
Panel—fascia	O.1
Pawl—hand brake	M.4
Pedal—accelerator	A.15
Pedal—brake	M.1
Pedal—clutch	E.1
Petrol tank	D.1
Pillar—dynamo adjusting link	A.10
Pillar—windscreen	R.5
Pin—differential pinion	H.1
Pin—gudgeon	A.1
Pin—rear spring	H.4
Pin—steering swivel	K.1
Pinion and barrel—starter	N.1
Pinion—differential	H.1
Pinion—speedometer	F.4
Pinion—steering	J.1
Pipe—carburetter feed	D.4
Pipe—crankcase vent	A.6
Pipe—exhaust	A.14
Pipe—heater outlet to radiator	S.5
Pipe—oil pressure	O.2
Pipe—vacuum ignition control	B.1
Pipes—brake	M.3
Pipes—petrol tank and pump	D.1
Piston—clutch slave cylinder	E.2
Piston—engine	A.1
Piston—master cylinder	M.1
Plate assembly—engine rear mounting support	A.11
Plate—clutch friction	E.1
Plate—clutch release	E.1
Plate—clutch thrust	E.1
Plate—fascia blanking	O.1
Plate—front and rear brake	H.3, K.2
Plate—front engine mounting	A.1
Plate—front number	R.15, S.9
Plate—heater tap hole cover	A.5
Plate—inlet flange	S.6, S.7
Plate—rear engine mounting	A.6
Plate—spring attachment	H.4
Plug—petrol tank drain	D.1
Plug—sparking	B.2
Plug—sump drain	A.7
Plugs—axle drain and filler	H.1
Plugs—gearbox drain and filler	F.1
Pocket—door	R.7
Propeller shaft	G.1
Pulley—crankshaft	A.2
Pulley—dynamo	A.10
Pulley—fan	A.10
Pump—oil	A.8
Pump—petrol	D.1
Pump—water	A.10
Push-rod—clutch slave cylinder	E.2
Push-rod—master cylinder	M.2
Push-rod—tappet	A.3
R	
Rack assembly—steering	J.1
Radiator assembly	C.1
Ring—piston	A.1
Ring—starter	A.3
Rocker—valve	A.4
Rod—brake cross	M.4
Rod—connecting	A.2
Rod—dipper	A.7
Rods—change speed mechanism	F.3
Rotor arm distributor	B.1
Rotor—oil pump	A.8
Rubber—bonnet sealing	R.9
Rubber—engine mounting	A.11
Rubber—front suspension bump	K.2
Rubber—windscreen glazing and sealing	R.5
Runners—seat	R.10
S	
Seal—front hub oil	K.1
Seal—gearbox oil	F.4
Seal—heater base	S.5
Seal—oil filter	A.9
Seal—rear axle oil	H.2
Seal—steering column	J.2
Seal—steering rack	J.1
Seal—water pump	A.10
Seat—coil spring	K.3
Seat—driver and passenger	R.10
Shaft—distributor drive	B.1
Shaft—gear control	F.4
Shaft—gearbox 1st and 3rd motion	F.1
Shaft—gearbox remote control	F.5
Shaft—gearbox reverse	F.3
Shaft—oil pump	A.8
Shaft—propeller	G.1
Shaft—rear axle	H.2
Shaft—valve rocker	A.4
Shield—heat	D.4
Shock absorbers	K.2, L.1

Alphabetical Index—*continued*

	Page
Shoe assembly—brake	H.3, K.2
Shroud—valve guide	A.4
Silencer—exhaust	A.14
Sleeve—universal joint	G.1
Socket assembly—steering tie-rod ball	J.1
Speedometer	O.2
Spindle and gear—wiper	N.5
Spindle—distributor driving	A.3
Spindle—water pump	A.10
Spring—accelerator pedal return	A.15
Spring—brake-shoe	H.3, K.2
Spring—clutch and brake pedal return	E.1, M.1
Spring—clutch thrust	E.1
Spring—coil	K.3
Spring—piston return—master cylinder	M.1
Spring—road	H.4
Spring—starter main	N.1
Spring—valve	A.4
'Sprite' flash	R.15
Starter	N.1
Stay—bonnet	R.8
Strainer—oil	A.8
Strap assembly—door check	R.7
Strap assembly—hood frame stowage	R.6
Strap assembly—spare wheel	P.1
Strap—rear axle check	L.1
Striker assembly—door lock	R.7
Strut—bonnet	R.8
Stud—wheel	H.2, K.1
Sump—engine	A.7
Sump—oil filter	A.9
Support—exhaust system	A.14
Support—front number-plate	S.9
Suspension assembly—front	K.1
Switch assembly—heater	S.5
Switch—stop light	M.3
Switches—electrical	N.2
Swivel pin—steering	K.1

T

Tachometer	S.10
Tank—petrol	D.1
Tap—radiator drain	C.1
Tap—water control—heater	S.5
Tap—water drain	A.6
Tappet—valve	A.3
Thermostat	A.5
Tie-rod—steering	J.1
Tonneau cover	S.10
Tool kit	S.1
Tools—special	S.2, S.3
Tray—battery	N.1
Trimming	R.7, R.11, R.12, R.13
Tube—steering column inner	J.2

U

Underframe	R.3, R.4
Unit—petrol tank gauge	D.1

V

Vacuum unit—distributor	B.1
Valve—inlet and exhaust	A.4
Valve—master cylinder	M.1
Vane—water pump	A.10

W

Washer—carburetter insulating	A.6
Washer—windscreen	S.8
Water pump	A.10
Weather strip—windscreen	R.5
Wheel—steering	J.2
Wheelbox—wiper	N.5
Wheels—road	P.1
Windscreen	R.5
Wings	R.1, R.2
Wiper—windscreen	N.5

Part Number Index

(Second Issue, 12 pages, replacing previous issue, which should be destroyed.)

This issue includes every item listed, also every item added or altered up to and including PAU535.

Note.—Items added are shown in **bold** type.
Items which have been superseded by interchangeable parts are printed in *italics*.

Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number	Part Number	Page	Amdt. Number
1A1559	A.2		2A180	A.5		2A686	A.12		**2A962**	A.8	405
1A1716	A.1		2A237	A.14		2A687	A.1		**2A971**	A.4	971
1A1717	A.1		2A242	A.5		2A687	A.12		2A2069	D.1	
1A1964	A.1		2A243	A.5		2A689	A.4		2A2070	D.1	
1A2093	A.6		2A253	A.1		2A703	A.9		2A2071	D.1	
1A2149	A.5		2A258	A.4		2A704	A.7		2A2077	A.15	
1A2156	A.5		2A269	A.8		2A711	A.7		2A2079	A.15	
1A2199	A.6		2A280	A.7		2A715	A.9		2A2028	C.1	
1A2203	A.6		2A294	A.7		2A719	A.11		2A2083	C.1	
1A2206	A.8		2A297	A.2		2A721	B.1		2A2084	C.1	
1A4744	K.1		2A299	A.2		2A755	A.1		2A2085	N.2	
			2A300	A.6		2A755	A.12		2A2086	A.15	
2A6	A.4		2A305	A.11		2A758	A.10		2A2088	D.1	
2A9	A.4		2A339	A.8		2A759	A.2		2A2089	A.14	414
2A10	A.4		2A341	A.8		2A769	A.9		2A2090	A.14	
2A11	A.4		2A375	B.2		2A770	A.6		2A2091	A.14	
2A12	A.4		2A378	A.3		**2A774**	A.10	527	2A2092	A.14	
2A13	A.4		2A404	D.1		*2A775*	A.10	527	2A3006	F.3	
2A14	A.3		2A494	A.8		2A776	A.10		2A3007	F.1	
2A15	A.4		2A504	D.1		2A777	A.10		2A3019	F.3	
2A16	A.4		2A515	A.4		2A778	A.10		2A3021	F.3	
2A18	A.4		2A516	A.3		2A780	A.9		2A3023	F.1	
2A21	A.4		2A522	A.8		2A784	A.11		2A3024	F.1	
2A22	A.4		2A533	A.4		2A787	A.9		2A3025	F.1	
2A23	A.4		2A535	A.4		2A788	A.9		2A3026	F.1	
2A52	A.1		2A536	B.2		2A803	A.10		2A3027	F.1	
2A53	A.1		2A544	A.4		2A805	A.5		2A3028	F.3	
2A54	A.1		2A545	A.4		**2A813**	A.8	444	2A3034	F.1	
2A76	A.2		2A550	A.2		2A816	A.6	438	2A3035	F.1	
2A77	A.2		2A552	A.6		2A817	A.6	438	2A3035	F.2	
2A84	A.2		2A569	A.6		2A819	A.8		2A3042	F.2	
2A85	A.2		2A571	A.2		2A828	A.2		2A3045	F.2	
2A98	A.7		2A601	A.10		2A830	A.2		2A3057	F.2	
2A102	A.11		2A608	A.4		2A836	D.2		2A3061	F.4	
2A106	A.11		2A612	A.3		2A837	A.1		2A3076	F.3	
2A110	A.11		2A613	A.4		2A837	A.12		2A3084	F.3	
2A113	D.1		2A654	A.2		2A837	A.12		2A3085	F.2	
2A118	A.6		2A656	A.2		2A847	A.3		2A3087	F.1	
2A123	A.6		2A659	A.2		2A850	A.15		2A3108	F.3	
2A125	A.1		2A660	A.2		2A848	D.2		2A3110	F.3	
2A126	A.1		2A664	A.10		2A877	A.4		2A3141	F.3	
2A127	A.1		2A665	A.10		2A849	D.2		2A3142	F.1	
2A128	A.10		2A667	A.10		2A879	A.4		2A3142	F.2	
2A139	A.3		2A668	A.8		2A880	A.4		2A3145	F.1	
2A150	A.5		2A672	A.8	414	**2A935**	A.4	414	2A3147	F.1	
2A179	A.5		2A686	A.1		**2A957**	A.8	414	2A3147	F.2	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
2A3160	F.2	
2A3161	F.2	
2A3168	F.1	
2A3217	F.2	
2A3218	F.2	
2A3219	F.2	
2A3220	F.1	
2A3224	F.1	
2A3226	F.1	
2A3245	F.2	
2A3253	F.3	
2A3254	F.1	
2A3254	F.4	
2A3255	F.4	
2A3256	F.4	
2A3278	F.4	
2A3282	F.3	
2A3283	F.3	
2A3284	F.3	
2A3285	F.1	
2A3286	F.1	
2A3289	F.3	
2A3290	F.2	
2A3295	F.3	
2A3298	F.2	
2A3305	F.3	
2A3325	F.4	
2A3330	F.2	
2A3333	F.2	
2A3335	F.5	
2A3339	F.4	
2A3340	F.4	
2A3341	F.4	
2A3344	F.4	
2A3345	F.4	
2A3347	F.3	
2A3350	F.4	
2A3352	F.5	
2A3354	F.5	
2A3357	F.3	
2A3358	F.1	
2A3359	F.1	
2A3361	F.2	
2A3363	F.3	
2A3366	F.1	
2A3367	F.4	
2A3371	F.2	
2A3372	F.4	414
2A3375	F.5	
2A3377	F.5	
2A3378	F.5	
2A3379	F.5	
2A3380	F.4	
2A3383	F.5	
2A3384	F.4	
2A3385	F.5	
2A3388	F.5	
2A3389	F.5	
2A3390	F.5	
2A3394	F.5	
2A3406	F.3	
2A3411	F.4	
2A3413	F.1	
2A3416	F.5	
2A3420	F.4	414
2A4003	K.1	
2A4004	K.1	
2A4005	K.1	
2A4006	K.1	
2A4007	K.1	
2A4008	K.1	
2A4009	K.1	
2A4010	K.1	
2A4011	K.1	
2A4020	K.1	
2A4021	K.3	
2A4024	K.3	
2A4027	K.2	
2A4028	K.2	
2A4029	K.3	
2A4031	K.3	
2A4066	K.1	
2A4067	K.1	
2A4082	K.3	
2A4129	K.1	415
2A4137	K.1	396
2A4146	K.1	
2A4147	K.1	415
2A4148	K.1	
2A4163	K.2	
2A4168	K.1	
2A4169	K.1	
2A4172	K.2	
2A4174	K.2	
2A4176	K.1	
2A4205	K.1	
2A4206	K.1	
2A4212	K.1	
2A4213	K.1	
2A4214	K.3	
2A4299	K.1	415
2A4304	K.1	415
2A4348	K.1	396
2A5379	S.1	
2A5393	G.1	396
2A5412	S.1	
2A4519	S.1	
2A5420	A.11	
2A5422	A.11	
2A5457	R.3	
2A5458	R.3	
2A5462	R.3	
2A5463	R.3	
2A5465	R.3	
2A5467	R.3	
2A5468	R.3	
2A5469	R.3	
2A5472	S.1	
2A5475	R.3	
2A5475	R.3	
2A5478	R.3	
2A5483	R.3	
2A5488	R.3	
2A5497	R.3	
2A5499	R.3	
2A5507	R.3	
2A5509	R.3	
2A5510	R.4	
2A5523	R.4	
2A5524	R.4	
2A5527	R.4	
2A5528	R.4	
2A5529	R.4	444
2A5530	R.4	444
2A5533	R.4	
2A5534	R.3	
2A5535	R.3	
2A5537	R.3	
2A5538	M.2	
2A5549	M.2	
2A5549	R.15	
2A5550	R.4	
2A5551	R.4	
2A5552	A.11	
2A5557	R.4	415
2A5558	R.4	415
2A5559	M.1	
2A5562	E.1	415
2A5562	M.1	415
2A5564	E.1	
2A5564	M.1	
2A5565	M.1	
2A5566	E.1	
2A5568	E.1	
2A5570	A.11	
2A5571	A.11	
2A5572	M.2	
2A5573	E.1	
2A5573	M.1	
2A5574	E.1	
2A5574	M.1	
2A5575	M.2	
2A5576	M.2	
2A5577	R.4	
2A5580	R.4	
2A5581	R.4	
2A5582	R.4	
2A5583	R.4	
2A5587	M.2	
2A5588	M.2	
2A5589	R.15	
2A5590	R.3	
2A5591	C.1	
2A5592	C.1	
2A5594	R.4	
2A5595	R.4	
2A5596	R.3	
2A5605	M.3	
2A5607	M.3	
2A5609	M.3	
2A5611	M.3	
2A5612	R.3	
2A5615	M.3	
2A5617	M.3	
2A5619	M.3	
2A5623	R.3	
2A5626	S.1	
2A5627	S.1	
2A5628	R.3	
2A5630	R.3	
2A5635	O.2	
2A5637	O.2	
2A5638	D.1	
2A5640	O.2	
2A6128	J.2	
2A6129	J.2	
2A6130	J.2	
2A6131	J.2	
2A6132	J.2	
2A6133	J.2	
2A6136	J.2	
2A6140	J.2	
2A6141	J.2	444
2A6142	J.2	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
2A6144	J.2	
2A6145	J.2	
2A6146	J.2	
2A6156	J.2	
2A6157	N.5	
2A6158	N.5	
2A6161	N.5	
2A6162	N.5	
2A7015	H.1	
2A7016	H.1	
2A7027	H.1	
2A7057	M.4	
2A7058	M.4	
2A7085	H.2	
2A7087	H.2	
2A7089	H.2	
2A7091	H.2	
2A7103	H.1	
2A7142	H.2	
2A7168	H.3	
2A7168	K.2	
2A7213	H.2	
2A7226	H.1	
2A7228	H.3	
2A7228	K.2	
2A7250	H.1	
2A7271	H.1	
2A7272	G.1	
2A7278	L.1	
2A7279	H.4	
2A7279	L.1	
2A7290	M.4	
2A7291	M.4	
2A7298	L.1	
2A7299	L.1	
2A7303	L.1	407
2A7306	L.1	
2A7308	M.4	
2A7309	H.4	
2A7310	L.1	
2A7314	L.1	
2A7315	L.1	
2A8012	H.2	
2A8012	K.1	
2A8055	P.1	
2A8060	P.1	
2A9013	N.4	
2A9039	O.2	
2A9040	N.4	
2A9067	O.2	
2A9068	S.10	
2A9069	O.1	
2A9070	O.1	
2A9071	N.6	
2A9072	N.6	
2A9073	N.6	
2A9074	N.2	
2A9075	N.6	
2A9076	N.6	
2A9077	O.2	
2A9097	S.10	
2A9102	N.2	
2A9105	S.10	
2A9108	S.10	
2A068610	A.12	
2A068620	A.12	
2A068630	A.12	
2A068640	A.12	
2A068710	A.12	
2A068720	A.12	
2A068730	A.12	
2A068740	A.12	
2A075510	A.12	
2A075520	A.12	
2A075530	A.12	
2A075540	A.12	
2A083702	A.12	
2A083704	A.12	
2A083706	A.12	
14A81	R.1	
14A81	R.7	
14A82	R.1	
14A82	R.7	
14A84	R.1	
14A89	R.2	
14A90	R.2	
14A716	R.7	
14A764	R.7	
14A4718	R.5	416
14A1162	S.6	
14A3410	R.1	
14A3411	R.15	
14A3413	R.1	
14A3823	R.5	
14A4497	O.1	
14A4497	R.10	
14A4587	R.2	
14A4593	R.2	
14A4594	R.2	
14A4606	R.1	427
14A4606	R.2	427
14A4611	R.2	
14A4612	R.2	
14A4615	N.4	
14A4635	R.1	
14A4636	R.1	
14A4656	O.1	
14A4657	O.1	
14A4659	R.15	
14A4667	N.1	
14A4671	R.1	
14A4672	R.7	496
14A4673	R.7	
14A4675	R.7	
14A4676	R.7	
14A4677	R.7	
14A4684	R.1	
14A4684	R.8	
14A4687	R.1	
14A4687	R.8	
14A4691	R.8	
14A4705	R.8	
14A4706	O.1	
14A4707	R.9	
14A4708	R.9	
14A4709	R.9	
14A4712	R.1	
14A4712	R.9	
14A4714	R.1	
14A4714	R.9	
14A4715	C.1	
14A4719	R.5	416
14A4720	R.5	416
14A4721	R.5	416
14A4722	R.5	416
14A4723	R.5	416
14A4724	R.5	416
14A4725	R.5	416
14A4726	R.5	416
14A4727	R.5	416
14A4728	R.5	416
14A4729	R.5	416
14A4730	R.5	
14A4733	R.9	
14A4734	N.4	
14A4734	R.15	
14A4738	R.15	
14A4739	R.15	
14A4743	N.4	
14A4744	O.1	
14A4754	R.6	416
14A4762	S.6	
14A4763	S.6	
14A4763	S.7	
14A4766	S.6	
14A4769	R.2	
14A4770	R.12	
14A4771	R.2	
14A4772	R.2	
14A4773	R.1	
14A4774	R.1	
14A4775	R.1	
14A4776	R.1	
14A4776	R.8	
14A4778	R.10	
14A4787	R.10	414
14A4790	R.15	
14A4791	R.15	
14A4801	N.5	
14A4802	N.5	
14A4805	R.5	
14A4806	R.6	
14A4820	R.14	
14A4821	R.14	
14A4822	R.14	
14A4823	R.14	
14A4824	R.5	
14A4859	R.15	
14A4860	R.10	
14A4874	R.16	
14A4879	R.6	
14A4891	R.9	
14A4892	R.9	
14A4898	R.9	
14A5472	R.5	
14A5473	R.15	
14A5492	R.6	438
14A5506	R.1	
14A5507	R.6	
14A5513	R.6	
14A5519	R.10	
14A5520	R.10	
14A5521	R.6	
14A5530	S.8	
14A5531	S.8	
14A5532	S.8	
14A5542	R.9	
14A5706	R.5	
ACA4000	K.1	
ACA5071	D.2	
ACA5118	J.2	
ACA5208	F.5	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
ACA5244	J.1	
ACA5245	J.1	
ACA5246	J.1	
ACA5247	J.2	
ACA5248	J.1	
ACA5249	J.1	
ACA5257	J.1	
ACA5258	J.1	
ACA5259	J.1	
ACA5260	J.1	
ACA5261	J.1	
ACA5275	J.1	
ACA5284	J.1	
ACA5283	J.1	
ACA5285	J.1	
ACA5286	J.1	
ACA5297	J.2	
ACA5301	J.1	
ACA5302	J.1	
ACA5303	J.1	
ACA5304	J.1	
ACA5307	J.1	
ACA5320	J.1	
ACA5322	A.15	
ACA5375	M.3	
ACA5398	J.2	
ACA5416	A.15	
ACA5420	O.2	
ACA5421	O.2	
ACA5422	O.2	
ACA54560	S.5	
ACA6004	J.1	
ACA6015	J.1	
ACA6017	J.1	
ACA6018	J.1	
ACA6019	J.1	
ACA6020	J.1	
ACA6026	J.1	
ACA6027	J.1	
ACA6028	J.1	
ACA6029	J.2	
ACA6030	J.2	
ACA6031	J.1	
ACC5062	A.15	
ACG6009	J.1	
ACG6010	J.1	
ACH6168	J.1	
ACH6170	J.2	
ACH6173	J.2	
ACH8393	A.15	527
ACH8529	O.3	
ACH9009	B.1	
ADA1613	N.3	
ADA2765	R.12	
ADA2765	R.13	
ADA2889	R.12	
ADB4811	R.12	509
ADB4811	R.13	509
ADE1596	R.16	
ADG474	S.9	
ADG1859	N.5	
AEA19	A.11	
AEA301	A.10	
AEA303	A.11	
AEA305	A.9	
AEA306	A.5	
AEA309	N.1	
AEA311	A.4	
AEA312	A.2	
AEA313	A.9	
AEA325	A.10	
AEA327	A.4	
AEA330	A.5	
AEA338	D.4	
AEA339	D.4	
AEA342	D.1	
AEA346	B.1	
AEG3122	F.5	
AEG3123	F.5	
AEG3124	F.5	
AEH550	D.4	
AFH1684	R.7	496
AHA5005	R.12	496
AHA5006	R.12	496
AHA5007	R.12	496
AHA5025	R.1	
AHA5030	R.10	
AHA5032	R.10	
AHA5033	R.10	
AHA5034	R.10	
AHA5035	R.10	
AHA5037	R.10	
AHA5038	R.10	
AHA5039	R.10	
AHA5040	R.10	
AHA5042	R.10	
AHA5043	R.10	
AHA5044	R.10	
AHA5045	R.10	
AHA5047	R.10	
AHA5048	R.10	
AHA5048	R.10	
AHA5049	R.10	
AHA5050	R.7	
AHA5052	R.7	
AHA5053	R.7	
AHA5054	R.7	
AHA5055	R.7	
AHA5057	R.7	
AHA5058	R.7	
AHA5059	R.7	
AHA5060	R.11	
AHA5062	R.11	
AHA5063	R.11	
AHA5064	R.11	
AHA5065	R.11	
AHA5067	R.11	
AHA5068	R.11	
AHA5069	R.11	
AHA5070	R.12	
AHA5072	R.12	
AHA5073	R.12	
AHA5074	R.12	
AHA5075	R.12	
AHA5077	R.12	
AHA5078	R.12	
AHA5079	R.12	
AHA5080	R.12	
AHA5082	R.12	
AHA5083	R.12	
AHA5084	R.12	
AHA5085	R.12	
AHA5087	R.12	
AHA5088	R.12	
AHA5089	R.12	
AHA5090	R.11	
AHA5092	R.11	
AHA5093	R.11	
AHA5094	R.11	
AHA5095	R.7	
AHA5097	R.7	
AHA5098	R.7	
AHA5099	R.7	
AHA5100	R.11	
AHA5102	R.11	
AHA5103	R.11	
AHA5104	R.11	
AHA5105	R.11	
AHA5107	R.11	
AHA5108	R.11	
AHA5109	R.11	
AHA5110	R.12	
AHA5111	R.12	
AHA5112	R.12	
AHA5113	R.12	
AHA5114	R.12	
AHA5115	R.12	
AHA5116	R.12	
AHA5117	R.12	
AHA5118	R.13	
AHA5119	R.13	
AHA5120	R.13	
AHA5121	R.13	
AHA5122	R.7	
AHA5123	R.7	
AHA5124	R.7	
AHA5125	R.7	
AHA5126	R.7	
AHA5127	R.7	
AHA5128	R.7	
AHA5129	R.7	
AHA5130	R.13	
AHA5131	R.13	
AHA5132	R.13	
AHA5133	R.13	
AHA5134	R.13	
AHA5135	R.13	
AHA5136	R.13	
AHA5137	R.13	
AHA5138	R.13	
AHA5139	R.13	
AHA5140	R.13	
AHA5141	R.13	
AHA5147	R.2	
AHA5148	R.2	
AHA5149	R.2	
AHA5150	R.1	
AHA5150	R.9	
AHA5151	R.1	
AHA5151	R.9	
AHA5154	R.1	
AHA5155	R.1	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
AHA5156	R.1	
AHA5157	R.1	
AHA5162	R.1	
AHA5163	R.1	
AHA5164	R.1	
AHA5165	R.1	
AHA5173	R.1	
AHA5174	R.1	
AHA5175	R.1	
AHA5176	R.1	
AHA5177	R.1	
AHA5179	R.2	
AHA5182	R.2	
AHA5183	R.2	
AHA5184	R.2	
AHA5185	R.2	
AHA5198	M.3	
AHA5201	R.11	
AHA5202	R.11	
AHA5203	R.11	
AHA5204	R.11	
AHA5205	R.11	
AHA5206	R.11	
AHA5207	R.11	
AHA5208	R.11	
AHA5210	R.15	415
AHA5211	S.9	
AHA5212	S.5	
AHA5213	S.5	
AHA5214	S.5	
AHA5216	R.6	
AHA5217	P.1	
AHA5218	P.1	
AHA5219	R.10	
AHA5220	S.8	
AHA5221	H.4	
AHA5222	H.4	
AHA5223	R.10	
AHA5224	L.1	443
AHA5225	R.9	
AHA5232	R.8	
AHA5233	R.8	
AHA5234	R.8	
AHA5235	N.2	
AHA5238	A.14	414
AHA5239	A.14	
AHA5240	R.13	
AHA5241	R.13	
AHA5242	R.13	
AHA5243	R.13	
AHA5244	R.13	
AHA5245	R.13	
AHA5246	R.13	
AHA5247	R.13	
AHA5248	R.13	
AHA5249	R.13	
AHA5250	R.13	
AHA5251	R.13	
AHA5255	R.5	416
AHA5256	S.10	
AHA5257	S.10	
AHA5259	R.13	
AHA5260	R.13	
AHA5261	R.13	
AHA5262	R.13	
AHA5263	R.6	
AHA5264	R.6	
AHA5265	R.6	
AHA5266	R.6	
AHA5267	R.6	
AHA5268	R.14	
AHA5269	R.14	
AHA5272	J.2	499
AHA5282	R.4	
AHA5299	R.4	
AHA5300	R.4	
AHA5305	L.1	
AHA5306	L.1	
AHA5311	L.1	
AHA5312	L.1	
AHA5313	L.1	407
AHA5314	R.5	416
AHA5315	R.5	416
AHA5316	R.5	416
AHA5317	R.5	416
AHA5318	R.5	416
AHA5319	R.5	416
AHA5320	R.5	416
AHA5321	R.5	416
AHA5322	R.5	416
AHA5323	R.6	416
AHA5324	R.6	416
AHA5326	E.1	414
AHA5326	M.1	414
AHA5329	R.7	444
AHA5329	R.9	444
AHA5331	H.4	
AHA5332	H.4	
AHA5346	H.4	
AHA5347	H.4	
AHA5348	H.4	
AHA5349	H.4	
AHA5350	H.4	
AHA5351	H.4	
AHA5352	H.4	
AHA5353	H.4	
AHA5354	A.14	
AHA5355	R.12	496
AHA5356	R.12	496
AHA5359	R.6	
AHA5360	A.14	414
AHA5361	A.14	414
AHA5371	R.12	
AHA5372	R.12	
AHA5373	R.12	
AHA5374	R.12	
AHA5375	R.12	
AHA5376	R.12	
AHA5377	R.12	
AHA5378	R.12	
AHA5379	R.12	
AHA5380	R.12	
AHA5381	R.12	
AHA5382	R.12	
AHA5383	R.12	
AHA5384	R.12	
AHA5385	R.12	
AHA5386	R.12	
AHA5390	R.3	527
AHA5391	J.2	
AHA5392	J.2	
AHA5393	R.1	
AHA5394	R.1	
AHA5395	R.1	
AHA5396	R.1	
AHA5397	R.1	
AHA5398	R.1	
AHA5399	R.16	415
AHA5400	R.16	415
AHA5401	R.4	415
AHA5402	R.4	415
AHA5403	R.4	415
AHA5404	R.4	415
AHA5405	R.4	415
AHA5406	R.4	415
AHA5407	R.4	415
AHA5408	R.4	415
AHA5409	R.4	415
AHA5410	R.4	415
AHA5411	R.4	415
AHA5412	R.4	416
AHA5413	R.7	416
AHA5431	E.1	
AHA5435	J.2	444
AHA5437	R.16	444
AHA5438	R.4	444
AHA5440	R.4	444
AHA5442	R.9	509
AHA5445	D.1	527
AHA5447	N.5	415
AHA5454	A.15	527
AHA5455	R.7	509
AHA5456	R.7	509
AHA5468	H.4	499
AHH5081	L.1	
AHH5171	A.14	
AHH5283	M.3	
AHH5459	P.1	
AHH5460	R.8	
AHH5593	S.5	
AHH5593	S.7	
AHH5634	M.3	
AHH5712	S.9	
AHH5714	S.6	414
AHH5714	S.7	414
AHH5759	R.16	496
AJA5008	H.3	
AJA5069	N.3	
AJA5071	N.3	
AJA5072	N.3	
AJA5073	N.3	
AJA5081	N.3	
AJA5085	K.2	
AJA5086	H.3	
AJD4205Z	A.8	405
AJD6155Z	J.1	
AJD7624	M.1	507
AJD7731	R.8	
AJD8012Z	S.10	438
AJG5006	M.1	
AJG5016	M.1	
AJH5083	M.1	
AJH5084	M.1	
AJH5085	M.1	
AJH5086	M.1	
AJH5100	N.4	
AJH5128	M.1	
AJH5177	O.2	
AJH5177	S.10	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
AJH5178	O.2	
AJH5178	S.10	
AJH5179	O.2	
AJH5182	O.1	
AJH5292	D.3	
AKD659	S.4	
AKD693	S.4	
AKD829	S.4	
AKD858A	S.4	414
AKD876	S.4	
AKD877	S.4	
AKD1021	S.4	496
ALA1716	R.16	415
ALH2459	D.1	527
ANK4646	N.2	
ARA73	C.1	416
ARA77	D.1	
ARA79	A.14	
ARA92	C.1	416
ARA949	D.1	
ARH672	D.1	
ARH1039	C.1	
ATA4064	K.1	
ATA4130	K.1	
ATA4132	K.1	
ATA7032	H.1	
ATA7036	H.1	
ATA7037	H.1	
ATA7043	H.1	
ATA7044	H.1	
ATA7047	H.2	
ATA7056	H.2	
ATA7076	H.3	
ATA7077	H.3	
ATA7123	H.1	
ATA7124	H.1	
ATA7125	H.1	
ATA7126	H.1	
ATA7127	H.1	
ATA7128	H.1	
ATA7129	H.1	
ATA7130	H.1	
ATA7187	M.4	
ATA7219	H.2	
ATA7225	H.2	
ATA7266	H.1	
ATA7269	H.1	
ATA7296	H.1	
ATA7297	H.1	
ATA7320	M.4	
ATA7326	H.1	
ATA7328	H.2	
ATA7329	H.1	
ATA7458	M.4	
ATA7459	M.4	
ATA7618	H.1	
AUA1086	D.3	
AUC1025	D.3	
AUC1045	D.4	
AUC1134	D.4	
AUC1135	D.4	
AUC1137	D.4	
AUC1151	D.3	
AUC1152	D.4	
AUC1158	D.3	
AUC1163	D.4	
AUC1223	D.4	
AUC1249	D.3	
AUC1250	D.3	
AUC1358	D.4	
AUC1412	D.4	
AUC1501	D.4	
AUC1557	D.4	
AUC1606	D.4	
AUC1867	D.4	
AUC1981	D.4	
AUC2103	D.4	
AUC2109	D.3	
AUC2114	D.3	
AUC2117	D.3	
AUC2118	D.3	
AUC2119	D.3	
AUC2120	D.3	
AUC2121	D.3	
AUC2122	D.3	
AUC2156	D.4	
AUC2197	D.4	
AUC2246	D.4	
AUC2381	D.3	
AUC2383	D.3	
AUC2411	D.4	
AUC2669	D.4	
AUC2673	D.4	
AUC2694	D.4	
AUC3230	D.3	
AUC3231	D.3	
AUC3232	D.3	
AUC3233	D.3	
AUC3446	D.4	
AUC3464	D.4	
AUC3465	D.4	
AUC3471	D.4	
AUC3501	D.3	
AUC3503	D.4	
AUC4045	D.3	
AUC4334	D.4	
AUC4612	D.4	
AUC4667	D.3	
AUC4719	D.3	
AUC4781	D.4	
AUC4880	D.4	
AUC4881	D.4	
AUC4900	D.3	
AUC5004	D.3	
AUC4009	D.3	
AUC5017	D.3	
AUC5047	D.3	
AUC5058	D.3	
AUC5117	D.4	
AUC5156	D.3	
AUC5292	D.3	
AUC6012	D.3	
AUC8000	D.3	
AUC8103	D.3	
AUC8170	D.4	
AUC8182	D.3	
AUC8402	D.4	
AUC8403	D.4	
AUC8404	D.4	
AUC8484	D.4	
AUC8485	D.4	
AUC9050	D.3	
AUC9051	D.3	
AWZ105	R.8	
1B2121	B.1	
1B2697	A.15	
1B2802	N.6	
1B2925	A.5	
1B3346	F.3	
1B3498	M.2	
1B5329	M.4	
1B7364	M.4	
1B8859	M.4	
1B9100	N.3	
1B9132	O.3	
4B2502	J.2	
4B6821	R.6	496
4B9713	S.5	
4B9713	S.7	
11B542	A.15	
11B543	A.15	
11B2037	O.2	
14B1729	O.1	
14B1730	R.6	
14B1917	S.6	414
14B1917	S.7	414
14B2464	R.6	
14B2465	R.6	
14B2465	S.10	438
14B5588	N.5	
BCA4031	M.3	
BCA4163	P.1	
BHA4082	C.1	
BHA4086	S.10	
BHA4092	N.3	527
BHA4093	N.3	438
BHA4114	N.5	415
BHA4114	N.5	527
BLA768	F.5	
BLS107	F.1	
BLS110	F.3	
BMK37	N.1	535
BNK1500	R.8	
BNN105	A.11	
1C166	O.2	
CHR0307	M.3	
CHR0405	N.6	
CLZ0414	M.4	
CLZ0514	M.4	
CLZ0515	M.4	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
CLZ0517	E.2	
CMZ0203	R.5	416
CMZ0204	R.5	496
CMZ0308	R.11	
CMZ0407	K.2	
CMZ0410	H.2	
CNZ102	O.1	
CRS0206	R.6	
CPZ0410	R.7	
CTZ604	R.12	
C4–96	A.8	527
1F9012	N.4	
1F9026	N.3	
2F4249	A.7	
8F2408	R.6	
8F2409	R.6	
8F2480	R.6	
FNN104	A.5	
FNN105	A.4	
FNN107	H.1	
FNZ103	K.1	
FNZ103	M.3	
FNZ103	R.16	
FNZ103	N.5	
FNZ104	B.2	527
FNZ105	A.5	
FNZ105	A.14	
FNZ106	A.10	
FNZ106	L.1	
FNZ107	H.4	
FNZ201	J.2	507
FNZ204	A.15	
FNZ205	A.14	
FNZ210	J.2	507
FNZ306	K.2	
FNZ306	K.3	
FNZ307	K.1	
FNZ407	J.1	
FNZ612	H.2	
1G752	A.6	
1G752	F.1	
1G1167	A.2	
1G1319	A.2	
1G1452	A.8	
1G1783	A.10	
1G2342	S.5	
1G2613	N.2	
1G2673	B.1	
1G2716	A.10	
1G2984	A.3	
1G3584	H.1	
1G3667	F.3	
1G3668	H.1	
1G3707	F.5	
1G3709	F.5	
1G3863	F.5	
1G7439	H.2	
1G9198	M.3	
4G877	R.10	
4G878	R.10	
4G1851	R.16	
4G2541	R.16	
4G4920	R.16	
4G6680	N.1	
4G6826	S.5	
4G6957	R.16	
4G9763	R.16	
8G10	A.1	
8G531	D.2	
8G531	S.5	
8G548	N.2	
8G549	A.2	
8G550	C.1	
8G589	K.1	
8G612	A.5	
8G616	B.1	414
8G621	K.3	
8G654	D.1	
8G664	F.1	
8G684	A.9	
8G687	A.1	
8G687	A.12	
8G697	A.10	
8G2198	A.2	
8G2198	A.12	
8G2200	A.13	
8G2205	D.2	
8G2206	D.2	
8G2210	A.2	
8G2210	A.12	
8G2222	A.1	
8G2222	A.12	
8G2232	A.13	
8G2268	A.13	
8G3000	G.1	
8G8146	E.2	
8G8181	A.8	
8G8243	H.3	438
8G8245	K.2	438
8G9023	S.5	
8G9024	S.7	
8G9043	R.1	
8G9044	R.1	
8G068710	A.12	
8G068720	A.12	
8G068730	A.12	
8G068740	A 12	
8G219810	A 12	
8G219820	A.12	
8G219830	A.12	
8G219840	A.12	
8G221010	A.12	
8G221020	A.12	
8G221030	A.12	
8G221040	A.12	
8G222210	A.12	
8G222220	A.12	
8G222230	A.12	
8G222240	A.12	
11G221	B.2	527
11G291	A.5	
11G2007	N.2	
11G2034	A.15	
11G3084	F.4	
11G9093	N.4	
14G800	S.6	
14G800	S.7	
14G3499	S.6	
14G3722	N.5	
14G5508	N.1	
14G5716	R.13	
14G6451	S.5	
14G6451	S.7	
14G8736	R.13	
18G2	S.2	
18G4	S.3	
18G7	S.3	
18G8P	S.3	
18G14	S.3	
18G27	S.2	
18G29B	S.2	
18G34A	S.3	
18G45	S.2	
18G47C	S.3	
18G47M	S.3	
18G55A	S.2	
18G69	S.2	
18G98	S.2	
18G99A	S.2	
18G123A	S.2	
18G123W	S.2	
18G123AH	S.2	
18G123AJ	S.2	
18G124A	S.2	
18G124K	S.2	
18G134	S.2	
18G134	S.3	
18G134B	S.3	
18G134C	S.3	
18G134L	S.2	
18G134Q	S.3	
18G138	S.2	
18G139	S.2	
18G140	S.2	
18G144	S.2	
18G146	S.3	
18G148	S.2	496
18G152	S.3	
18G153	S.3	
18G154	S.3	
18G155	S.3	
18G155A	S.3	
18G167	S.2	
18G167A	S.2	
18G167B	S.2	
18G167C	S.2	
18G167D	S.2	
18G187	S.2	
18G191	S.3	
18G191A	S.3	
18G194	S.2	
18G207	S.3	
18G226	S.2	496
18G253	S.3	
18G260	S.3	
18G260A	S.3	
18G260B	S.3	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
18G264	S.3	
18G264D	S.3	
18G264E	S.3	
18G285	S.3	
18G312	S.3	
18G313	S.3	
18G372	S.3	
18G389	S.2	
18G389A	S.2	
18G471	S.2	
18G488	S.2	
21G5077	A.15	
21G5078	A.15	
28G84	A.1	
28G85	A.1	
28G86	A.4	
28G87	F.1	
1H529	D.2	
1H998	A.10	
1H1070	B.2	527
1H1302	B.2	370
1H1302	B.2	527
1H3101	F.4	
1H3101	F.5	
1H9047	O.2	
1H9049	O.2	
2H400	M.3	
2H1082	D.1	
2H1683	S.1	
2H4243	B.1	414
2H4244	B.1	414
2H4245	B.1	414
2H4246	B.1	414
2H4605	H.4	
2H4614	S.1	
2H4732	O.2	
2H4732	O.3	
2H4732	S.10	
2H4817	N.4	
2H5133	R.6	496
2H5134	R.6	496
2H5905	R.6	
2H8198	R.16	
2H8445	R.13	
3H550	M.3	
3H576	A.6	438
3H688	O.2	
3H822	S.10	
3H914	O.2	
3H914	S.10	
3H921	N.3	527
3H949	N.2	
3H950	N.2	
3H952	N.1	
3H1031	N.3	
3H1557	N.2	
3H1558	N.2	
3H1655	B.1	414
3H1656	B.1	414
3H1657	B.1	414
3H1658	B.1	414
3H1709	K.1	
3H1813	N.4	
3H1835	N.2	
3H1893	N.3	
3H1894	M.3	
3H2006	B.2	
3H2098	A.10	
3H2113	F.1	
3H2118	H.2	
3H2127	A.2	
3H2138	B.1	
3H2192	K.1	
3H2192	M.4	
3H2274	S.1	
3H2287	M.3	
3H2424	M.3	
3H2428	E.2	
3H2428	K.2	
3H2428	M.3	
3H2520	N.3	527
3H2648	S.1	
3H2686	D.4	
3H2687	D.4	
3H2695	B.2	
3H2696	B.2	
3H2724	C.1	
3H2962	N.3	
3H2963	A.5	
3H3076	A.14	
3H3095	N.2	
3H3100	N.2	
7H25	A.9	
7H28	A.9	
7H147	A.9	
7H157	A.9	
7H813	D.1	438
7H816	D.1	438
7H920	D.1	438
7H1379	D.1	438
7H1382	D.1	438
7H1384	D.1	438
7H1386	D.1	438
7H1387	D.1	438
7H1388	D.1	438
7H1389	D.1	438
7H1390	D.1	438
7H1391	D.1	438
7H1392	D.1	438
7H1393	D.1	438
7H1483	D.1	438
7H1561	D.1	438
7H1649	A.8	
7H1650	A.8	
7H1666	D.1	438
7H1667	D.1	438
7H1670	D.1	438
7H1679	D.1	438
7H1756	A.9	
7H1758	A.9	
7H1759	A.9	
7H1761	A.9	
7H1764	A.9	
7H1765	A.9	
7H1840	A.9	
7H3025	E.1	
7H3028	E.1	
7H3029	E.1	
7H3031	E.1	
7H3036	E.1	
7H3166	E.1	
7H3181	E.1	
7H3185	E.1	
7H3221	E.1	
7H3222	E.1	
7H3564	J.1	
7H3565	J.1	
7H3858	G.1	396
7H3874	G.1	
7H3877	G.1	
7H5028	N.1	
7H5031	N.1	
7H5034	N.1	
7H5038	N.1	
7H5039	N.1	
7H5040	N.1	
7H5041	N.1	
7H5042	N.1	
7H5043	N.1	
7H5044	N.1	
7H5045	N.1	
7H5046	N.1	
7H5047	N.1	
7H5048	N.1	
7H5049	N.1	
7H5050	N.1	
7H5051	N.1	
7H5062	N.3	
7H5066	N.2	
7H5067	N.2	
7H5071	N.1	
7H5086	B.1	
7H5121	N.4	
7H5122	N.4	
7H5123	N.4	
7H5128	N.2	
7H5130	N.5	
7H5156	N.1	
7H5164	N.4	
7H5182	N.3	
7H5182	N.4	
7H5185	N.4	
7H5376	N.1	
7H5388	N.1	
7H5390	N.1	527
7H5483	N.3	
7H5485	N.3	527
7H5486	N.3	438
7H5522	N.2	
7H5527	N.1	
7H5529	N.1	
7H5563	N.5	
7H5582	N.3	
7H5944	M.4	
7H5945	M.4	
7H5946	M.4	
7H5947	M.4	
7H5948	M.4	
7H5949	M.4	
7H5950	M.4	
7H5951	M.4	
7H5952	M.4	
7H6795	A.8	
7H6796	A.8	
7H6807	A.8	
7H6808	A.8	
7H6810	A.8	
7H6813	A.8	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
7H7022	M.1	
7H7367	K.2	
7H7368	K.2	
7H7398	H.3	
7H7398	K.2	
7H7462	E.1	
7H7484	M.1	
7H7485	M.1	
7H7487	M.1	
7H7488	M.1	
7H7489	M.1	
7H7520	K.2	
7H7553	A.9	
7H7636	K.2	
7H7753	K.2	
7H7847	M.3	
7H7923	E.2	
7H7923	H.3	
7H7924	K.2	
7H7925	M.1	
7H7928	H.3	
7H7929	H.3	
7H7938	K.2	
7H7939	H.3	
7H7939	K.2	
7H7940	H.3	
7H7941	K.2	
7H7942	H.3	
7H7943	H.3	
7H7949	K.2	
7H7950	K.2	
7H7957	H.3	
7H9740	S.9	
7H9779	S.8	
7H9782	S.8	
7H9785	S.8	
7H9830	N.2	
7H9961	S.10	438
7H9968	S.4	
7H9969	S.4	
7H9970	S.4	
13H21	E.2	
13H50	S.1	
13H51	S.6	
13H53	S.6	
13H54	S.5	
13H55	S.5	
13H56	S.7	
13H57	S.7	
13H58	S.7	
13H59	R.15	
13H66	N.5	
13H68	N.5	
13H69	N.5	
13H72	A.15	
13H80	E.2	416
13H82	C.1	
13H83	M.3	
13H88	N.1	525
13H135	E.2	416
13H138	N.3	527
13H139	N.3	438
13H140	N.3	
13H184	B.1	**414**
17H98	D.1	
17H577	S.8	
17H578	S.8	
17H579	S.8	
17H689	O.2	
17H690	O.2	
17H819	S.6	
17H843	O.2	499
17H844	O.2	
17H856	D.1	507
17H860	D.1	438
17H861	D.1	438
17H932	O.1	
17H942	A.9	
17H943	A.9	
17H944	A.9	
17H945	A.9	
17H1068	O.1	
17H1148	A.9	
17H1150	A.9	
17H1152	A.9	
17H1167	A.9	
17H1168	A.9	
17H1169	A.9	
17H1170	A.9	
17H1172	A.9	
17H1173	A.9	
17H1174	A.9	
17H1292	S.6	
17H1304	O.2	
17H1304	S.10	
17H1341	S.10	
17H1344	S.10	
17H1455	S.6	
17H1478	O.2	
17H1479	O.1	
17H1480	O.1	
17H1481	O.1	
17H1496	O.2	
17H1498	S.10	
17H1544	S.10	
17H1574	S.6	396
17H1590	S.5	
17H1591	S.5	
17H1592	S.5	
17H1593	S.5	
17H1594	S.5	
17H1595	S.5	
17H1596	S.5	
17H1597	S.6	
17H1598	S.6	
17H1599	S.5	
17H1601	S.5	
17H1602	S.5	
17H1603	S.5	
17H1604	S.7	
17H1605	S.7	
17H1606	S.7	
17H1607	S.7	
17H1608	S.7	
17H1609	S.7	
17H1610	S.7	
17H1611	S.7	
17H1612	S.7	
17H1631	S.5	
17H1634	S.5	
17H1642	O.1	
17H1669	O.2	499
17H1678	S.10	
17H1679	S.10	
17H1821	O.1	
17H1822	O.1	
17H1962	A.8	405
17H1963	A.8	405
17H1964	A.8	405
17H1965	A.8	405
17H1965	A.8	527
17H3818	G.1	
17H3819	G.1	
17H3828	G.1	
17H3894	G.1	
17H3919	G.1	
17H5064	B.1	
17H5065	B.1	
17H5066	B.1	
17H5069	B.1	
17H5071	B.1	
17H5095	B.1	
17H5106	B.1	
17H5118	B.1	
17H5146	N.3	
17H5147	N.3	
17H5205	N.3	
17H5217	N.1	
17H5244	N.3	
17H5255	N.5	
17H5306	N.3	527
17H4330	N.3	438
17H5361	N.5	415
17H5375	N.3	
17H5388	N.5	
17H5396	N.5	
17H5407	N.1	527
17H5421	B.1	
17H5422	B.1	
17H5423	B.1	
17H5427	N.3	
17H5431	N.5	
17H5433	N.1	
17H5441	N.5	
17H5442	N.5	415
17H5443	N.5	415
17H5444	N.1	
17H5469	N.1	
17H5512	N.5	
17H5531	B.1	
17H5543	N.3	
17H5546	N.3	
17H7046	H.3	438
17H7050	K.2	438
17H7054	M.1	
17H7109	M.1	
17H7266	E.2	416
17H7268	E.2	
17H7531	M.3	
17H7532	M.3	
17H7533	M.2	
17H7534	M.2	
17H7535	M.2	
17H7539	E.2	
17H7540	E.2	
17H7541	E.2	
17H7543	K.2	
17H7544	K.2	
17H9501	S.4	
17H9502	S.4	
17H9503	S.4	
17H9525	D.1	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
17H9675	S.4	
17H9676	S.4	
17H9677	S.4	
27H168	S.6	
27H387	O.1	
27H387	O.2	
27H397	O.2	
27H397	S.10	
27H406	O.2	
27H406	S.10	
27H429	O.2	
27H429	S.10	
27H1170	D.1	438
27H3101	E.1	
27H3102	E.1	396
27H3103	E.2	
27H3177	E.1	
27H3183	E.1	
27H3231	E.1	414
27H5253	N.3	
27H5354	N.3	
27H5420	N.1	
27H5545	N.3	
27H5554	N.5	
27H5559	N.5	
27H5562	O.3	
27H5564	O.3	
27H5565	O.3	
27H5566	O.3	
27H5568	N.5	
27H5569	N.5	
27H5570	N.5	
27H5572	N.5	
27H5581	N.5	
27H5582	N.5	
27H5583	N.5	
27H5596	O.3	
27H5597	O.3	
27H7395	H.3	
27H7466	A.9	507
27H9607	S.9	
27H9608	S.9	
27H9609	S.9	
27H9610	S.9	
27H9611	S.9	
27H9612	S.9	
27H9613	S.9	
27H9622	S.8	
27H9623	S.8	
27H9625	S.8	
27H9626	S.8	
27H9654	S.8	
27H9655	S.8	
27H9657	S.8	
27H9662	S.8	
27H9704	S.5	
27H9705	S.4	
27H9706	S.4	
27H9707	S.4	
27H9708	S.4	
27H9709	S.4	
27H9710	S.4	
27H9711	S.4	
27H9712	S.4	
27H9713	S.4	
27H9714	S.4	
27H9715	S.4	
27H9716	S.4	
27H9717	S.4	
27H9718	S.4	
27H9719	S.4	
27H9720	S.4	
27H9721	S.4	
27H9781	R.15	
37H5181	O.3	
37H5207	N.1	
37H5271	N.3	
37H5288	N.5	
37H5409	B.1	
37H5410	N.3	
37H5428	N.5	527
37H5438	B.1	
37H5439	B.1	
37H5440	B.1	
37H5519	N.3	
37H5520	N.4	
37H5527	N.3	
37H5527	N.4	
37H5528	N.4	
37H5531	N.4	
47H5023	N.5	
47H5124	N.3	527
47H5124	N.3	438
47H5125	N.3	438
47H5125	N.3	527
47H5126	N.3	438
47H5126	N.3	527
47H5251	N.3	
47H5315	N.5	415
47H5316	N.5	415
97H222	L.1	
97H497	S.10	438
97H498	S.10	438
97H626	N.1	
97H717	S.10	438
97H1583	S.4	
97H1585	S.4	
97H1636	S.4	
97H2071	N.2	
97H2072	N.2	
97H2073	N.3	
97H2074	A.15	
97H2075	A.15	
97H2076	A.15	
HBN0414	A.8	
HBZ0408	J.2	414
HBZ0408	M.3	414
HBZ0409	M.3	
HBZ0509	A.10	
HBZ0510	G.1	
HBZ0513	A.10	
HBZ0515	A.6	
HBZ0524	R.8	
HBZ0604	H.4	499
HBZ0612	L.1	
HBZ0612	S.9	
HBZ0613	N.1	
HBZ0618	L.1	
HBZ0624	M.2	
HBZ0626	H.4	
HBZ0630	L.1	
HBZ0732	L.1	
HCZ0512	J.2	
HCZ0628	A.9	
HNS0404	A.8	
HNS0405	A.11	
HNS0406	A.2	
HNS0408	R.9	
HPZ0505	A.11	
HPZ0626	A.11	
HZS0403	A.6	
HZS0404	A.15	
HZS0405	A.8	
HZS0405	B.2	
HZS0406	A.14	
HZS0406	B.2	
HZS0406	J.2	414
HZS0408	E.1	414
HZS0408	M.1	414
HZS0408	M.2	
HZS0409	R.10	
HZS0410	E.1	414
HZS0410	M.1	414
HZS0504	N.6	
HZS0505	A.1	
HZS0506	A.14	
HZS0507	A.10	
HZS0507	A.14	
HZS0508	A.14	
HZS0510	A.10	
HZS0515	A.10	
HZS0518	A.14	
HZS0605	N.6	
HZS0609	L.1	
HZS0610	L.1	
1K52	A.6	
1K1977	S.10	
2K1203	A.11	
2K1204	A.4	
2K1210	A.8	370
2K1345	A.1	
2K4608	A.1	
2K4609	F.3	
2K4936	R.6	
2K4936	S.10	438
2K4954	A.6	438
2K4956	A.8	
2K4958	A.6	
2K4974	A.10	
2K4975	A.6	438
2K4982	A.8	
2K4994	A.8	
2K5197	A.6	
2K5319	A.10	
2K5377	K.1	
2K5629	S.5	
2K5806	A.14	
2K5813	F.3	
2K5820	M.4	
2K5830	F.1	
2K5943	H.1	
2K6124	A.10	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
2K6167	N.6	
2K6677	F.1	
2K7131	M.3	
2K7140	A.6	
2K7440	A.6	
2K7778	H.1	
2K7779	H.1	
2K7816	A.3	
2K8122	J.2	499
2K8158	F.5	
2K8259	A.11	
2K8169	A.1	
2K8568	A.5	
2K8606	D.1	
2K8607	A.2	
2K8609	R.7	
2K8623	A.1	
2K8645	N.6	
2K8737	F.2	
2K8738	F.2	
2K8739	F.2	
2K9030	R.8	
2K9262	R.6	438
2K9679	R.15	
2K9932	A.10	
4K9670	R.6	
4K9671	R.6	
6K35	D.1	
6K464	A.8	
6K490	N.6	
6K499	H.1	
6K555	A.4	
6K556	A.4	
6K558	F.1	
6K558	F.2	
6K559	F.1	
6K559	F.2	
6K584	H.2	
6K628	A.2	
6K629	A.2	
6K630	A.3	
6K631	H.1	
6K638	A.7	
6K639	A.7	
6K639	B.1	
6K643	F.1	
6K648	D.1	
6K653	K.1	
6K654	A.4	
6K685	D.1	
6K689	M.4	
6K690	M.4	
6K694	J.2	
6K808	A.4	
6K831	A.1	
6K836	A.2	
6K853	A.8	
6K870	M.4	
6K878	A.4	
6K927	A.1	
6K9388	N.5	
6K9588	N.2	
6K9695	M.4	
6K9789	R.7	
6K9833	R.9	
11K5564	R.6	
11K9101	N.2	
51K254	A.1	
51K255	A.1	
51K256	A.1	
51K328	K.1	
51K448	A.11	
51K554	A.4	
51K885	A.4	
51K886	H.1	
51K907	A.8	
51K1368	K.2	
51K1382	A.2	
51K1671	F.3	
51K1769	K.1	
51K2036	E.1	
51K2824	O.2	
51K3169	F.4	
51K3424	K.1	
53K152	E.2	
53K154	A.11	
53K165	D.1	
53K371	A.4	
53K402	A.4	
53K463	F.1	
53K486	A.4	
53K487	A.4	
53K488	A.4	
53K525	A.1	
53K528	F.4	
53K530	A.4	
53K535	F.4	
53K1013	J.2	
53K1023	A.15	
53K1045	A.1	
53K1364	K.2	
53K1368	K.3	
53K1370	K.1	
53K1389	K.2	
53K1392	A.15	
53K1433	A.10	
53K1435	F.3	
53K1722	F.5	
53K2016	A.1	
53K2017	A.3	
53K2599	J.2	
53K3427	R.9	
53K3428	R.9	509
53K3464	R.14	
LNZ104	J.2	
LNZ106	L.1	
LNZ108	H.4	
LNZ205	A.10	
LNZ206	A.10	
LNZ206	K.3	
LWN204	A.6	
LWN204	A.8	370
LWN205	A.4	
LWN206	A.9	
LWN207	H.1	
LWN304	A.5	
LWN304	B.2	527
LWN305	A.2	
LWZ202	N.2	
LWZ203	K.1	
LWZ203	M.3	
LWZ203	R.16	
LWZ203	N.5	
LWZ204	B.2	527
LWZ205	A.6	
LWZ205	A.14	
LWZ206	A.9	
LWZ212	H.2	
LWZ304	C.1	
LWZ305	A.1	
LWZ306	A.10	
LWZ306	L.1	
LWZ307	H.4	
LWZ404	M.1	507
LWZ404	R.7	
LWZ406	M.4	
NCS0608	A.9	
PCR0306	S.8	
PCR0307	O.2	
PCR0309	S.8	
PCR0311	M.3	
PCR0407	N.6	
PCR0409	D.1	
PCR0607	N.6	
PCR0609	N.6	
PCR0709	O.3	
PCR1007	N.6	
PFS104	R.15	
PFS326	N.3	
PFS510	N.4	
PJZ1006	N.4	
PMP0410	O.1	
PMZ0205	N.5	
PMZ0206	O.1	
PMZ0304	R.6	
PMZ0305	M.3	
PMZ0306	N.6	
PMZ0307	N.2	
PMZ0308	N.3	
PMZ0308	N.5	
PMZ0310	N.2	
PMZ0312	N.3	
PMZ0320	N.2	
PMZ0328	R.16	415
PMZ0406	N.4	
PMZ0408	N.2	
PMZ0408	R.15	
PMZ0410	S.9	
PMZ0412	S.9	
PPN0408	R.7	
PPN0412	R.7	444
PTP603	S.6	
PTZ603	N.6	
PTZ604	N.3	
PTZ605	R.16	
PTZ803	F.5	
PTZ804	R.6	

Part Number Index—*continued*

Part Number	Page	Amdt. Number
PTZ805	R.6	
PWN107	H.1	
PWN204	B.2	527
PWZ104	A.15	
PWZ104	R.15	
PWZ105	A.11	
PWZ105	R.5	
PWZ106	A.11	
PWZ106	L.1	
PWZ107	J.1	
PWZ108	H.4	
PWZ203	A.15	527
PWZ203	R.16	
PWZ204	B.2	527
PWZ204	O.1	
PWZ205	A.14	
PWZ205	R.5	
PWZ206	L.1	
RFN206	R.16	
RFN210	R.16	
RFN218	R.16	444
RFN303	A.15	
RFN305	N.6	
RMP0308	R.15	
RMP0410	R.5	416
RMZ0307	R.5	416
RMZ0308	R.5	416
RMZ0310	R.7	
RMZ0312	R.14	414
RMZ0316	R.14	414
RMZ0316	R.14	414
RMZ0520	R.5	
RTZ604	R.11	
RTZ604	R.12	
RTZ606	R.11	
RTZ606	R.12	
TCN206	A.9	
UHN105	M.4	
UHN305	J.2	
WKN404	F.5	
WKN505	A.2	
X31404	E.1	527
ZCS0404	D.1	
7698	R.11	
7699	R.7	416
7700	R.11	
7700	R.12	
37831	E.2	416
39731	M.1	
45223	B.1	
68640	K.2	
68643	H.3	
68643	K.2	
68648	H.3	
68739	N.4	
84180	A.15	527
99762	R.12	509
99762	R.13	509
135198	R.6	
185373	S.9	
300826	H.3	
300826	K.2	
301020	H.3	
301549	M.1	
301550	M.1	
301551	M.1	
301622	H.3	
301627	K.2	
301633	H.3	
301634	H.3	

Numerical Index

The following is a complete index of parts in this list, giving the page reference of each part number. Standard bolts, nuts, washers, etc., have only the first page number on which they appear.

Part Number	Page	PAU Number
1A1559	A.2	
1A1716	A.1	
1A1717	A.1	
1A1964	A.1	
1A2093	A.6	
1A2149	A.5	
1A2156	A.5	
1A2199	A.6	
1A2203	A.6	
1A2206	A.8	
1A4744	K.1	
2A6	A.4	
2A9	A.4	
2A10	A.4	
2A11	A.4	
2A12	A.4	
2A13	A.3	
2A14	A.3	
2A15	A.4	
2A16	A.4	
2A18	A.4	
2A21	A.4	
2A22	A.4	
2A23	A.4	
2A52	A.1	
2A53	A.1	
2A54	A.1	
2A76	A.2	
2A77	A.2	
2A84	A.2	
2A85	A.2	
2A98	A.7	
2A102	A.11	
2A106	A.11	
2A110	A.11	
2A113	D.1	
2A118	A.6	
2A123	A.6	
2A125	A.1	
2A126	A.1	
2A127	A.1	
2A128	A.10	
2A139	A.3	
2A150	A.5	
2A179	A.5	
2A180	A.5	
2A237	A.14	
2A242	A.5	
2A243	A.5	
2A253	A.1	
2A258	A.4	
2A269	A.8	
2A280	A.7	
2A294	A.7	
2A297	A.2	
2A299	A.2	
2A300	A.6	
2A305	A.11	
2A339	A.8	
2A341	A.8	
2A375	B.2	
2A378	A.3	
2A404	D.1	
2A494	A.8	
2A504	D.1	
2A515	A.4	
2A516	A.3	
2A522	A.8	
2A533	A.4	
2A535	A.4	
2A536	B.2	
2A544	A.4	
2A545	A.4	
2A550	A.2	
2A552	A.6	
2A569	A.6	
2A571	A.2	
2A601	A.10	
2A608	A.4	
2A612	A.3	
2A613	A.4	
2A654	A.2	
2A656	A.2	
2A659	A.2	
2A660	A.2	
2A664	A.10	
2A665	A.10	
2A667	A.10	
2A668	A.8	
2A672	A.8	
2A686	A.1	
2A686	A.12	
2A687	A.1	
2A687	A.12	
2A689	A.4	
2A703	A.9	
2A704	A.7	
2A711	A.7	
2A715	A.9	
2A719	A.11	
2A721	B.1	
2A755	A.1	
2A755	A.12	
2A758	A.10	
2A759	A.2	
2A769	A.9	
2A770	A.6	
2A775	A.10	
2A776	A.10	
2A777	A.10	
2A778	A.10	
2A780	A.9	
2A784	A.11	
2A787	A.9	
2A788	A.9	
2A803	A.10	
2A805	A.5	
2A816	A.6	
2A817	A.6	
2A819	A.8	
2A828	A.2	
2A830	A.2	
2A835	D.2	
2A836	D.2	
2A837	A.1	
2A837	A.12	
2A847	A.3	
2A848	D.2	
2A849	D.2	
2A850	A.15	
2A877	A.4	
2A879	A.4	
2A880	A.4	
2A2069	D.1	
2A2070	D.1	
2A2071	D.1	
2A2077	A.15	
2A2079	A.15	
2A2082	C.1	
2A2083	C.1	
2A2084	C.1	
2A2085	N.2	
2A2086	A.15	
2A2088	D.1	
2A2089	A.14	
2A2090	A.14	
2A2091	A.14	
2A2092	A.14	
2A3006	F.3	
2A3007	F.1	
2A3019	F.3	
2A3021	F.3	
2A3023	F.1	
2A3024	F.1	
2A3025	F.1	
2A3026	F.1	
2A3027	F.1	
2A3028	F.3	
2A3034	F.1	
2A3035	F.1	
2A3035	F.2	
2A3042	F.2	
2A3045	F.2	
2A3057	F.2	
2A3061	F.4	
2A3076	F.3	
2A3084	F.3	
2A3085	F.2	
2A3087	F.1	
2A3108	F.3	
2A3110	F.3	
2A3141	F.3	
2A3142	F.1	
2A3142	F.2	
2A3145	F.1	
2A3147	F.1	
2A3147	F.2	
2A3160	F.2	
2A3161	F.2	
2A3168	F.1	
2A3217	F.2	
2A3218	F.2	
2A3219	F.2	
2A3220	F.1	
2A3224	F.1	
2A3226	F.1	
2A3245	F.2	
2A3253	F.3	
2A3254	F.1	
2A3254	F.4	
2A3255	F.4	

Numerical Index—*continued*

Part Number	Page	PAU Number
2A3256	F.4	
2A3278	F.4	
2A3282	F.3	
2A3283	F.3	
2A3284	F.3	
2A3285	F.1	
2A3286	F.1	
2A3289	F.3	
2A3290	F.2	
2A3295	F.3	
2A3298	F.2	
2A3305	F.3	
2A3325	F.4	
2A3330	F.2	
2A3333	F.2	
2A3335	F.5	
2A3339	F.4	
2A3340	F.4	
2A3341	F.4	
2A3344	F.4	
2A3345	F.4	
2A3347	F.3	
2A3350	F.4	
2A3352	F.5	
2A3354	F.5	
2A3357	F.3	
2A3358	F.1	
2A3359	F.1	
2A3361	F.2	
2A3363	F.3	
2A3366	F.1	
2A3367	F.4	
2A3371	F.2	
2A3372	F.4	
2A3375	F.5	
2A3377	F.5	
2A3378	F.5	
2A3379	F.5	
2A3380	F.4	
2A3383	F.5	
2A3384	F.4	
2A3385	F.5	
2A3388	F.5	
2A3389	F.5	
2A3390	F.5	
2A3394	F.5	
2A3406	F.3	
2A3411	F.4	
2A3413	F.1	
2A3416	F.5	
2A4008	K.1	
2A4004	K.1	
2A4005	K.1	
2A4006	K.1	
2A4007	K.1	
2A4008	K.1	
2A4009	K.1	
2A4010	K.1	
2A4011	K.1	
2A4020	K.1	
2A4021	K.3	
2A4024	K.3	
2A4027	K.2	
2A4028	K.2	
2A4029	K.3	
2A4031	K.3	
2A4066	K.1	
2A4067	K.1	
2A4082	K.3	
2A4129	K.1	
2A4137	K.1	
2A4146	K.1	
2A4147	K.1	
2A4148	K.1	
2A4163	K.2	
2A4168	K.1	
2A4169	K.1	
2A4172	K.2	
2A4174	K.2	
2A4176	K.1	
2A4205	K.1	
2A4206	K.1	
2A4212	K.1	
2A4213	K.1	
2A4214	K.3	
2A5379	S.1	
2A5393	G.1	
2A5412	S.1	
2A5419	S.1	
2A5420	A.11	
2A5422	A.11	
2A5457	R.3	
2A5458	R.3	
2A5462	R.3	
2A5463	R.3	
2A5465	R.3	
2A5467	R.3	
2A5468	R.3	
2A5469	R.3	
2A5472	S.1	
2A5475	R.3	
2A5478	R.3	
2A5483	R.3	
2A5488	R.3	
2A5497	R.3	
2A5499	R.3	
2A5507	R.3	
2A5509	R.3	
2A5510	R.4	
2A5523	R.4	
2A5524	R.4	
2A5527	R.4	
2A5528	R.4	
2A5529	R.4	
2A5530	R.4	
2A5533	R.4	
2A5534	R.3	
2A5535	R.3	
2A5537	R.3	
2A5538	M.2	
2A5549	M.2	
2A5549	R.15	
2A5550	R.14	
2A5551	R.4	
2A5552	A.11	
2A5557	R.4	
2A5558	R.4	
2A5559	M.1	
2A5562	E.1	
2A5562	M.1	
2A5564	E.1	
2A5564	M.1	
2A5565	M.1	
2A5566	E.1	
2A5568	E.1	
2A5570	A.11	
2A5571	A.11	
2A5572	M.2	
2A5573	E.1	
2A5573	M.1	
2A5574	E.1	
2A5574	M.1	
2A5575	M.2	
2A5576	M.2	
2A5577	R.4	
2A5580	R.4	
2A5581	R.4	
2A5582	R.4	
2A5583	R.4	
2A5587	M.2	
2A5588	M.2	
2A5589	R.15	
2A5590	R.3	
2A5591	C.1	
2A5592	C.1	
2A5594	R.4	
2A5595	R.4	
2A5596	R.3	
2A5605	M.3	
2A5607	M.3	
2A5609	M.3	
2A5611	M.3	
2A5612	R.3	
2A5615	M.3	
2A5617	M.3	
2A5619	M.3	
2A5623	R.3	
2A5626	S.1	
2A5627	S.1	
2A5628	R.3	
2A5630	R.3	
2A5635	O.2	
2A5637	O.2	
2A5638	D.1	
2A5640	O.2	
2A6128	J.2	
2A6129	J.2	
2A6130	J.2	
2A6131	J.2	
2A6132	J.2	
2A6133	J.2	
2A6136	J.2	
2A6140	J.2	
2A6141	J.2	
2A6142	J.2	
2A6144	J.2	
2A6145	J.2	
2A6146	J.2	
2A6156	J.2	
2A6157	N.5	
2A6158	N.5	
2A6161	N.5	
2A6162	N.5	
2A7015	H.1	
2A7016	H.1	
2A7027	H.1	
2A7057	M.4	
2A7058	M.4	
2A7085	H.2	
2A7087	H.2	
2A7089	H.2	
2A7091	H.2	
2A7103	H.1	
2A7142	H.2	

Numerical Index—*continued*

Part Number	Page	PAU Number
2A7168	H.3	
2A7168	K.2	
2A7213	H.2	
2A7226	H.1	
2A7228	H.3	
2A7228	K.2	
2A7250	H.1	
2A7271	H.1	
2A7272	G.1	
2A7278	L.1	
2A7279	H.4	
2A7279	L.1	
2A7290	M.4	
2A7291	M.4	
2A7298	L.1	
2A7299	L.1	
2A7303	L.1	
2A7306	L.1	
2A7308	M.4	
2A7309	H.4	
2A7310	L.1	
2A7314	L.1	
2A7315	L.1	
2A8012	H.2	
2A8012	K.1	
2A8055	P.1	
2A8060	P.1	
2A9013	N.4	
2A9039	O.2	
2A9040	N.4	
2A9067	O.2	
2A9068	S.10	
2A9069	O.1	
2A9070	O.1	
2A9071	N.6	
2A9072	N.6	
2A9073	N.6	
2A9074	N.2	
2A9075	N.6	
2A9076	N.6	
2A9077	O.2	
2A9097	S.10	
2A9102	N.2	
2A9105	S.10	
2A9108	S.10	
2A068610	A.12	
2A068620	A.12	
2A068630	A.12	
2A068640	A.12	
2A068710	A.12	
2A068720	A.12	
2A068730	A.12	
2A068740	A.12	
2A075510	A.12	
2A075520	A.12	
2A075530	A.12	
2A075540	A.12	
2A083702	A.12	
2A083704	A.12	
2A083706	A.12	
14A81	R.1	
14A81	R.7	
14A82	R.1	
14A82	R.7	
14A84	R.1	
14A89	R.2	
14A90	R.2	
14A716	R.7	
14A764	R.7	
14A1162	S.6	
14A3410	R.1	
14A3411	R.15	
14A3413	R.1	
14A3823	R.5	
14A4497	O.1	
14A4497	R.10	
14A4587	R.2	
14A4593	R.2	
14A4594	R.2	
14A4611	R.2	
14A4612	R.2	
14A4615	N.4	
14A4635	R.1	
14A4636	R.1	
14A4656	O.1	
14A4657	O.1	
14A4659	R.15	
14A4667	N.1	
14A4671	R.1	
14A4672	R.7	
14A4673	R.7	
14A4675	R.7	
14A4676	R.7	
14A4677	R.7	
14A4684	R.1	
14A4684	R.8	
14A4687	R.1	
14A4687	R.8	
14A4691	R.8	
14A4705	R.8	
14A4706	O.1	
14A4707	R.9	
14A4708	R.9	
14A4709	R.9	
14A4712	R.1	
14A4712	R.9	
14A4714	R.1	
14A4714	R.9	
14A4715	C.1	
14A4718	R.5	
14A4719	R.5	
14A4720	R.5	
14A4721	R.5	
14A4722	R.5	
14A4723	R.5	
14A4724	R.5	
14A4725	R.5	
14A4726	R.5	
14A4727	R.5	
14A4728	R.5	
14A4729	R.5	
14A4730	R.5	
14A4733	R.9	
14A4734	N.4	
14A4734	R.15	
14A4738	R.15	
14A4739	R.15	
14A4743	N.4	
14A4744	O.1	
14A4745	R.6	
14A4762	S.6	
14A4763	S.6	
14A4763	S.7	
14A4766	S.6	
14A4769	R.2	
14A4770	R.12	
14A4771	R.2	
14A4772	R.2	
14A4773	R.1	
14A4774	R.1	
14A4775	R.1	
14A4776	R.1	
14A4776	R.8	
14A4778	R.10	
14A4790	R.15	
14A4791	R.15	
14A4801	N.5	
14A4802	N.5	
14A4805	R.5	
14A4806	R.6	
14A4820	R.14	
14A4821	R.14	
14A4822	R.14	
14A4823	R.14	
14A4824	R.5	
14A4859	R.15	
14A4860	R.10	
14A4874	R.16	
14A4879	R.6	
14A4891	R.9	
14A4892	R.9	
14A4898	R.9	
14A5472	R.5	
14A5473	R.15	
14A5492	R.6	
14A5506	R.1	
14A5507	R.6	
14A5513	R.6	
14A5519	R.10	
14A5520	R.10	
14A5521	R.6	
14A5530	S.8	
14A5531	S.8	
14A5532	S.8	
14A5542	R.9	
14A5706	R.5	
ACA4000	K.1	
ACA5071	D.2	
ACA5118	J.2	
ACA5208	F.5	
ACA5244	J.1	
ACA5245	J.1	
ACA5246	J.1	
ACA5247	J.2	
ACA5248	J.1	
ACA5249	J.1	
ACA5257	J.1	
ACA5258	J.1	
ACA5259	J.1	
ACA5260	J.1	
ACA5261	J.1	
ACA5275	J.1	
ACA5283	J.1	
ACA5284	J.1	
ACA5285	J.1	
ACA5286	J.1	
ACA5297	J.2	
ACA5301	J.1	
ACA5302	J.1	
ACA5303	J.1	
ACA5304	J.1	
ACA5307	J.1	

Numerical Index—*continued*

Part Number	Page	PAU Number
ACA5320	J.1	
ACA5322	A.15	
ACA5375	M.3	
ACA5398	J.2	
ACA5416	A.15	
ACA5420	O.2	
ACA5421	O.2	
ACA5422	O.2	
ACA5456	S.5	
ACA6004	J.1	
ACA6015	J.1	
ACA6017	J.1	
ACA6018	J.1	
ACA6019	J.1	
ACA6020	J.1	
ACA6026	J.1	
ACA6027	J.1	
ACA6028	J.1	
ACA6029	J.2	
ACA6030	J.2	
ACA6031	J.1	
ACC5062	A.15	
ACG6009	J.1	
ACG6010	J.1	
ACH6168	J.1	
ACH6170	J.2	
ACH6173	J.2	
ACH8393	A.15	
ACH8529	O.3	
ACH9009	B.1	
ADA1613	N.3	
ADA2765	R.12	
ADA2765	R.13	
ADA2889	R.12	
ADE1596	R.16	
ADG474	S.9	
ADG1869	N.5	
AEA19	A.11	
AEA301	A.10	
AEA303	A.11	
AEA305	A.9	
AEA306	A.5	
AEA309	N.1	
AEA311	A.4	
AEA312	A.2	
AEA313	A.9	
AEA325	A.10	
AEA327	A.4	
AEA330	A.5	
AEA338	D.4	
AEA339	D.4	
AEA342	D.1	
AEA346	B.1	
AEG3122	F.5	
AEG3123	F.5	
AEG3124	F.5	
AEH550	D.4	
AHA5025	R.1	
AHA5030	R.10	
AHA5032	R.10	
AHA5033	R.10	
AHA5034	R.10	
AHA5035	R.10	
AHA5037	R.10	
AHA5038	R.10	
AHA5039	R.10	
AHA5040	R.10	
AHA5042	R.10	
AHA5043	R.10	
AHA5044	R.10	
AHA5045	R.10	
AHA5047	R.10	
AHA5048	R.10	
AHA5049	R.10	
AHA5050	R.7	
AHA5052	R.7	
AHA5053	R.7	
AHA5054	R.7	
AHA5055	R.7	
AHA5057	R.7	
AHA5058	R.7	
AHA5059	R.7	
AHA5060	R.11	
AHA5062	R.11	
AHA5063	R.11	
AHA5064	R.11	
AHA5065	R.11	
AHA5067	R.11	
AHA5068	R.11	
AHA5069	R.11	
AHA5070	R.12	
AHA5072	R.12	
AHA5073	R.12	
AHA5074	R.12	
AHA5075	R.12	
AHA5077	R.12	
AHA5078	R.12	
AHA5079	R.12	
AHA5080	R.12	
AHA5082	R.12	
AHA5083	R.12	
AHA5084	R.12	
AHA5085	R.12	
AHA5087	R.12	
AHA5088	R.12	
AHA5089	R.12	
AHA5090	R.11	
AHA5092	R.11	
AHA5093	R.11	
AHA5094	R.11	
AHA5095	R.7	
AHA5097	R.7	
AHA5098	R.7	
AHA5099	R.7	
AHA5100	R.11	
AHA5102	R.11	
AHA5103	R.11	
AHA5104	R.11	
AHA5105	R.11	
AHA5107	R.11	
AHA5108	R.11	
AHA5109	R.11	
AHA5110	R.12	
AHA5111	R.12	
AHA5112	R.12	
AHA5113	R.12	
AHA5114	R.12	
AHA5115	R.12	
AHA5116	R.12	
AHA5117	R.12	
AHA5118	R.13	
AHA5119	R.13	
AHA5120	R.13	
AHA5121	R.13	
AHA5122	R.7	
AHA5123	R.7	
AHA5124	R.7	
AHA5125	R.7	
AHA5126	R.7	
AHA5127	R.7	
AHA5128	R.7	
AHA5129	R.7	
AHA5130	R.13	
AHA5131	R.13	
AHA5132	R.13	
AHA5133	R.13	
AHA5134	R.13	
AHA5135	R.13	
AHA5136	R.13	
AHA5137	R.13	
AHA5138	R.13	
AHA5139	R.13	
AHA5140	R.13	
AHA5141	R.13	
AHA5147	R.2	
AHA5148	R.2	
AHA5149	R.2	
AHA5150	R.1	
AHA5150	R.9	
AHA5151	R.1	
AHA5151	R.9	
AHA5154	R.1	
AHA5155	R.1	
AHA5156	R.1	
AHA5157	R.1	
AHA5162	R.1	
AHA5163	R.1	
AHA5164	R.1	
AHA5165	R.1	
AHA5173	R.1	
AHA5174	R.1	
AHA5175	R.1	
AHA5176	R.1	
AHA5177	R.1	
AHA5179	R.2	
AHA5182	R.2	
AHA5183	R.2	
AHA5184	R.2	
AHA5185	R.2	
AHA5198	M.3	
AHA5201	R.11	
AHA5202	R.11	
AHA5203	R.11	
AHA5204	R.11	
AHA5205	R.11	
AHA5206	R.11	
AHA5207	R.11	
AHA5208	R.11	
AHA5210	R.15	
AHA5211	S.9	
AHA5212	S.5	
AHA5213	S.5	
AHA5214	S.5	
AHA5216	R.6	

Numerical Index—*continued*

Part Number	Page	PAU Number
AHA5217	P.1	
AHA5218	P.1	
AHA5219	R.10	
AHA5220	S.8	
AHA5221	H.4	
AHA5222	H.4	
AHA5223	R.10	
AHA5224	L.1	
AHA5225	R.9	
AHA5232	R.8	
AHA5233	R.8	
AHA5234	R.8	
AHA5235	N.2	
AHA5238	A.14	
AHA5239	A.14	
AHA5240	R.13	
AHA5241	R.13	
AHA5242	R.13	
AHA5243	R.13	
AHA5244	R.13	
AHA5245	R.13	
AHA5246	R.13	
AHA5247	R.13	
AHA5248	R.13	
AHA5249	R.13	
AHA5250	R.13	
AHA5251	R.13	
AHA5255	R.5	
AHA5259	R.13	
AHA5260	R.13	
AHA5261	R.13	
AHA5262	R.13	
AHA5263	R.6	
AHA5264	R.6	
AHA5265	R.6	
AHA5266	R.6	
AHA5267	R.6	
AHA5268	R.14	
AHA5269	R.14	
AHA5282	R.4	
AHA5299	R.4	
AHA5300	R.4	
AHA5305	L.1	
AHA5306	L.1	
AHA5311	L.1	
AHA5312	L.1	
AHA5329	R.7	
AHA5331	H.4	
AHA5332	H.4	
AHA5346	H.4	
AHA5347	H.4	
AHA5348	H.4	
AHA5349	H.4	
AHA5350	H.4	
AHA5351	H.4	
AHA5352	H.4	
AHA5353	H.4	
AHA5354	A.14	
AHA5359	R.6	
AHA5371	R.12	
AHA5372	R.12	
AHA5373	R.12	
AHA5374	R.12	
AHA5375	R.12	
AHA5376	R.12	
AHA5377	R.12	
AHA5378	R.12	
AHA5379	R.12	
AHA5380	R.12	
AHA5381	R.12	
AHA5382	R.12	
AHA5383	R.12	
AHA5384	R.12	
AHA5385	R.12	
AHA5386	R.12	
AHA5387	J.2	
AHA5391	J.2	
AHA5392	J.2	
AHA5393	R.1	
AHA5394	R.1	
AHA5395	R.1	
AHA5396	R.1	
AHA5397	R.1	
AHA5398	R.1	
AHA5431	E.1	
AHH5081	L.1	
AHH5171	A.14	
AHH5283	M.3	
AHH5459	P.1	
AHH5460	R.8	
AHH5593	S.5	
AHH5593	S.7	
AHH5634	M.3	
AHH5712	S.9	
AJA5008	H.3	
AJA5069	N.3	
AJA5071	N.3	
AJA5072	N.3	
AJA5073	N.3	
AJA5081	N.3	
AJA5085	K.2	
AJA5086	H.3	
AJD6155Z	J.1	
AJD7624	M.1	
AJD7731	R.8	
AJG5006	M.1	
AJG5016	M.1	
AJH5083	M.1	
AJH5084	M.1	
AJH5085	M.1	
AJH5086	M.1	
AJH5100	N.4	
AJH5128	M.1	
AJH5177	O.2	
AJH5177	S.10	
AJH5178	O.2	
AJH5178	S.10	
AJH5179	O.2	
AJH5182	O.1	
AJH5292	D.3	
AKD659	S.4	
AKD693	S.4	
AKD829	S.4	
AKD876	S.4	
AKD877	S.4	
ALH2459	D.1	
ANK4646	N.2	
ARA73	C.1	
ARA77	D.1	
ARA79	A.14	
ARA949	D.1	
ARH672	D.1	
ARH1039	C.1	
ATA4064	K.1	
ATA4130	K.1	
ATA4131	K.1	
ATA4132	K.1	
ATA7032	H.1	
ATA7036	H.1	
ATA7037	H.1	
ATA7043	H.1	
ATA7044	H.1	
ATA7047	H.2	
ATA7056	H.2	
ATA7076	H.3	
ATA7077	H.3	
ATA7123	H.1	
ATA7124	H.1	
ATA7125	H.1	
ATA7126	H.1	
ATA7127	H.1	
ATA7128	H.1	
ATA7129	H.1	
ATA7130	H.1	
ATA7187	M.4	
ATA7219	H.2	
ATA7225	H.2	
ATA7266	H.1	
ATA7269	H.1	
ATA7296	H.1	
ATA7297	H.1	
ATA7320	M.4	
ATA7326	H.1	
ATA7328	H.2	
ATA7329	H.1	
ATA7458	M.4	
ATA7459	M.4	
ATA7618	H.1	
AUA1086	D.3	
AUC1025	D.3	
AUC1045	D.4	
AUC1134	D.4	
AUC1135	D.4	
AUC1137	D.4	
AUC1151	D.3	
AUC1152	D.4	
AUC1158	D.3	
AUC1163	D.4	
AUC1223	D.4	
AUC1249	D.3	
AUC1250	D.3	
AUC1358	D.4	
AUC1412	D.4	
AUC1501	D.4	
AUC1557	D.4	
AUC1606	D.4	
AUC1867	D.4	
AUC1928	D.4	
AUC1981	D.4	
AUC2103	D.4	
AUC2109	D.3	

Numerical Index—*continued*

Part Number	Page	PAU Number
AUC2114	D.3	
AUC2117	D.3	
AUC2118	D.3	
AUC2119	D.3	
AUC2120	D.3	
AUC2121	D.3	
AUC2122	D.3	
AUC2139	D.4	
AUC2156	D.4	
AUC2197	D.4	
AUC2246	D.4	
AUC2381	D.3	
AUC2383	D.3	
AUC2411	D.4	
AUC2669	D.4	
AUC2673	D.4	
AUC2694	D.4	
AUC3230	D.3	
AUC3231	D.3	
AUC3232	D.3	
AUC3233	D.3	
AUC3446	D.4	
AUC3464	D.4	
AUC3465	D.4	
AUC3471	D.4	
AUC3501	D.3	
AUC3503	D.4	
AUC4045	D.3	
AUC4334	D.4	
AUC4612	D.4	
AUC4667	D.3	
AUC4719	D.3	
AUC4781	D.4	
AUC4880	D.4	
AUC4881	D.4	
AUC4900	D.3	
AUC5004	D.3	
AUC5009	D.3	
AUC5017	D.3	
AUC5047	D.3	
AUC5058	D.3	
AUC5117	D.4	
AUC5156	D.3	
AUC5292	D.3	
AUC6012	D.3	
AUC8000	D.3	
AUC8103	D.3	
AUC8170	D.4	
AUC8182	D.3	
AUC8402	D.4	
AUC8403	D.4	
AUC8404	D.4	
AUC8484	D.4	
AUC8485	D.4	
AUC9050	D.3	
AUC9051	D.3	
AWZ105	R.8	
1B2121	B.1	
1B2697	A.15	
1B2802	N.6	
1B2925	A.5	
1B3346	F.3	
1B3498	M.2	
1B5329	M.4	
1B7364	M.4	
1B8859	M.4	
1B9100	N.3	
1B9132	O.3	
4B2502	J.2	
4B9713	S.5	
4B9713	S.7	
11B542	A.15	
11B543	A.15	
11B2037	O.2	
14B1729	O.1	
14B1730	R.6	
14B1917	S.6	
14B1917	S.7	
14B2464	R.6	
14B2465	R.6	
14B5588	N.5	
BCA4031	M.3	
BCA4163	P.1	
BHA4082	C.1	
BHA4086	S.10	
BLA768	F.5	
BLS107	F.1	
BLS110	F.3	
BMK37	N.1	
BNK1500	R.8	
BNN105	A.11	
1C166	O.2	
CHR0307	M.3	
CHR0405	N.6	
CLZ0414	M.4	
CLZ0514	M.4	
CLZ0515	M.4	
CLZ0517	E.2	
CMZ0203	R.5	
CMZ0308	R.11	
CMZ0407	K.2	
CMZ0410	H.2	
CNZ102	O.1	
CRS0206	R.6	
CPZ0410	R.7	
CTZ604	R.12	
C4-96	A.8	
1F9012	N.4	
1F9026	N.3	
2F4249	A.7	
8F2408	R.6	
8F2409	R.6	
8F2480	R.6	
FNN104	A.5	
FNN105	A.4	
FNN107	H.1	
FNZ103	K.1	
FNZ105	A.5	
FNZ106	A.10	
FNZ107	H.4	
FNZ201	J.2	
FNZ204	A.15	
FNZ205	A.14	
FNZ306	K.2	
FNZ307	K.1	
FNZ407	J.1	
FNZ612	H.2	
1G752	A.6	
1G752	F.1	
1G1167	A.2	
1G1319	A.2	
1G1452	A.8	
1G1783	A.10	
1G2342	S.5	
1G2613	N.2	
1G2673	B.1	
1G2716	A.10	
1G2984	A.3	
1G3584	H.1	
1G3667	F.3	
1G3668	H.1	
1G3707	F.5	
1G3709	F.5	
1G3863	F.5	
1G7439	H.2	
1G9198	M.3	
4G877	R.10	
4G878	R.10	
4G1851	R.16	
4G2541	R.16	
4G4920	R.16	
4G6680	N.1	
4G6826	S.5	
4G6957	R.16	
4G9763	R.16	
8G10	A.1	
8G531	D.2	
8G531	S.5	
8G548	N.2	
8G549	A.2	
8G550	C.1	
8G589	K.1	
8G612	A.5	
8G616	B.1	
8G621	K.3	
8G654	D.1	
8G664	F.1	
8G684	A.9	
8G687	A.1	
8G687	A.12	
8G2198	A.2	
8G2198	A.12	
8G2200	A.13	
8G2205	D.2	
8G2206	D.2	
8G2210	A.2	

Numerical Index—*continued*

Part Number	Page	PAU Number
8G2210	A.12	
8G2222	A.1	
8G2222	A.12	
8G2232	A.13	
8G2268	A.13	
8G3000	G.1	
8G8146	E.2	
8G8181	A.8	
8G9023	S.5	
8G9024	S.7	
8G068710	A.12	
8G068720	A.12	
8G068730	A.12	
8G068740	A.12	
8G219810	A.12	
8G219820	A.12	
8G219830	A.12	
8G219840	A.12	
8G221010	A.12	
8G221020	A.12	
8G221030	A.12	
8G221040	A.12	
8G222210	A.12	
8G222220	A.12	
8G222230	A.12	
8G222240	A.12	
11G162	A.10	
11G175	A.10	
11G221	B.2	
11G291	A.5	
11G2007	N.2	
11G2034	A.15	
11G3084	F.4	
11G9093	N.4	
14G800	S.6	
14G800	S.7	
14G3499	S.6	
14G3722	N.5	
14G5508	N.1	
14G5716	R.13	
14G6451	S.5	
14G6451	S.7	
14G8736	R.13	
18G2	S.2	
18G4	S.3	
18G7	S.3	
18G8P	S.3	
18G14	S.3	
18G27	S.2	
18G29B	S.2	
18G34A	S.3	
18G45	S.2	
18G47C	S.3	
18G47M	S.3	
18G55A	S.2	
18G69	S.2	
18G98	S.2	
18G99A	S.2	
18G123A	S.2	
18G123W	S.2	
18G123AH	S.2	
18G123AJ	S.2	
18G124A	S.2	
18G124K	S.2	
18G134	S.2	
18G134	S.3	
18G134B	S.3	
18G134C	S.3	
18B134L	S.2	
18G134Q	S.3	
18G138	S.2	
18G139	S.2	
18G140	S.2	
18G144	S.2	
18G146	S.3	
18G148	S.2	
18G152	S.3	
18G153	S.3	
18G154	S.3	
18G155	S.3	
18G155A	S.3	
18G167	S.2	
18G167A	S.2	
18G167B	S.2	
18G167C	S.2	
18G167D	S.2	
18G187	S.2	
18G191	S.3	
18G191A	S.3	
18G194	S.2	
18G207	S.3	
18G253	S.3	
18G260	S.3	
18G260A	S.3	
18G260B	S.3	
18G264	S.3	
18G264D	S.3	
18G264E	S.3	
18G285	S.3	
18G312	S.3	
18G313	S.3	
18G372	S.3	
18G389	S.2	
18G389A	S.2	
18G471	S.2	
18G488	S.2	
21G5077	A.15	
21G5078	A.15	
28G84	A.1	
28G85	A.1	
28G86	A.4	
28G87	F.1	
1H529	D.2	
1H998	A.10	
1H1070	B.2	
1H3101	F.4	
1H3101	F.5	
1H9047	O.2	
1H9049	O.2	
2H400	M.3	
2H1082	D.1	
2H1683	S.1	
2H4605	H.4	
2H4614	S.1	
2H4732	O.2	
2H4732	O.3	
2H4732	S.10	
2H4817	N.4	
2H5905	R.6	
2H8198	R.16	
2H8445	R.13	
3H550	M.3	
3H688	O.2	
3H822	S.10	
3H914	O.2	
3H914	S.10	
3H921	N.3	
3H949	N.2	
3H950	N.2	
3H952	N.1	
3H1031	N.3	
3H1557	N.2	
3H1558	N.2	
3H1655	B.1	
3H1656	B.1	
3H1657	B.1	
3H1658	B.1	
3H1709	K.1	
3H1813	N.4	
3H1835	N.2	
3H1893	N.3	
3H1894	M.3	
3H2006	B.2	
3H2098	A.10	
3H2113	F.1	
3H2118	H.2	
3H2127	A.2	
3H2138	B.1	
3H2192	K.1	
3H2192	M.4	
3H2274	S.1	
3H2287	M.3	
3H2424	M.3	
3H2428	E.2	
3H2428	K.2	
3H2428	M.3	
3H2520	N.3	
3H2648	S.1	
3H2686	D.4	
3H2687	D.4	
3H2695	B.2	
3H2696	B.2	
3H2724	C.1	
3H2962	N.3	
3H2963	A.5	
3H3076	A.14	
3H3095	N.2	
3H3100	N.2	
7H25	A.9	
7H28	A.9	
7H147	A.9	
7H157	A.9	
7H1649	A.8	
7H1650	A.8	
7H1756	A.9	
7H1758	A.9	
7H1759	A.9	
7H1761	A.9	
7H1764	A.9	
7H1765	A.9	
7H1840	A.9	
7H3025	E.1	
7H3028	E.1	
7H3029	E.1	
7H3031	E.1	

Numerical Index—*continued*

Part Number	Page	PAU Number
7H3036	E.1	
7H3166	E.1	
7H3181	E.1	
7H3185	E.1	
7H3221	E.1	
7H3222	E.1	
7H3564	J.1	
7H3565	J.1	
7H3874	G.1	
7H3877	G.1	
7H5028	N.1	
7H5031	N.1	
7H5034	N.1	
7H5038	N.1	
7H5039	N.1	
7H5040	N.1	
7H5041	N.1	
7H5042	N.1	
7H5043	N.1	
7H5044	N.1	
7H5045	N.1	
7H5046	N.1	
7H5047	N.1	
7H5048	N.1	
7H5049	N.1	
7H5050	N.1	
7H5051	N.1	
7H5062	N.3	
7H5066	N.2	
7H5067	N.2	
7H5071	N.1	
7H5086	B.1	
7H5121	N.4	
7H5122	N.4	
7H5123	N.4	
7H5128	N.2	
7H5130	N.5	
7H5156	N.1	
7H5164	N.4	
7H5182	N.3	
7H5182	N.4	
7H5185	N.4	
7H5376	N.1	
7H5388	N.1	
7H5483	N.3	
7H5485	N.3	
7H5486	N.3	
7H5522	N.2	
7H5527	N.1	
7H5529	N.1	
7H5563	N.5	
7H5582	N.3	
7H5944	M.4	
7H5945	M.4	
7H5946	M.4	
7H5947	M.4	
7H5948	M.4	
7H5949	M.4	
7H5950	M.4	
7H5951	M.4	
7H5952	M.4	
7H6795	A.8	
7H6796	A.8	
7H6807	A.8	
7H6808	A.8	
7H6810	A.8	
7H6813	A.8	
7H7022	M.1	
7H7367	K.2	
7H7368	K.2	
7H7398	H.3	
7H7398	K.2	
7H7462	E.1	
7H7484	M.1	
7H7485	M.1	
7H7487	M.1	
7H7488	M.1	
7H7489	M.1	
7H7520	K.2	
7H7553	A.9	
7H7636	K.2	
7H7753	K.2	
7H7847	M.3	
7H7923	E.2	
7H7923	H.3	
7H7924	K.2	
7H7925	M.1	
7H7928	H.3	
7H7929	H.3	
7H7938	K.2	
7H7939	H.3	
7H7939	K.2	
7H7940	H.3	
7H7941	K.2	
7H7942	H.3	
7H7943	H.3	
7H7949	K.2	
7H7950	K.2	
7H7957	H.3	
7H9740	S.9	
7H9779	S.8	
7H9782	S.8	
7H9785	S.8	
7H9830	N.2	
7H9968	S.4	
7H9969	S.4	
7H9970	S.4	
13H21	E.2	
13H50	S.1	
13H51	S.6	
13H53	S.6	
13H54	S.5	
13H55	S.5	
13H56	S.7	
13H57	S.7	
13H58	S.7	
13H59	R.15	
13H66	N.5	
13H68	N.5	
13H69	N.5	
13H72	A.15	
13H80	E.2	
13H82	C.1	
13H83	M.3	
13H88	N.1	
13H140	N.3	
17H98	D.1	
17H577	S.8	
17H578	S.8	
17H579	S.8	
17H689	O.2	
17H690	O.2	
17H819	S.6	
17H844	O.2	
17H932	O.1	
17H942	A.9	
17H943	A.9	
17H944	A.9	
17H945	A.9	
17H1068	O.1	
17H1148	A.9	
17H1150	A.9	
17H1152	A.9	
17H1167	A.9	
17H1168	A.9	
17H1169	A.9	
17H1170	A.9	
17H1172	A.9	
17H1173	A.9	
17H1174	A.9	
17H1292	S.6	
17H1304	O.2	
17H1304	S.10	
17H1341	S.10	
17H1344	S.10	
17H1455	S.6	
17H1478	O.2	
17H1479	O.1	
17H1480	O.1	
17H1481	O.1	
17H1496	O.2	
17H1498	S.10	
17H1544	S.10	
17H1590	S.5	
17H1591	S.5	
17H1592	S.5	
17H1593	S.5	
17H1594	S.5	
17H1595	S.5	
17H1596	S.5	
17H1597	S.6	
17H1598	S.6	
17H1599	S.5	
17H1601	S.5	
17H1602	S.5	
17H1603	S.5	
17H1604	S.7	
17H1605	S.7	
17H1606	S.7	
17H1607	S.7	
17H1608	S.7	
17H1609	S.7	
17H1610	S.7	
17H1611	S.7	
17H1612	S.7	
17H1631	S.5	
17H1634	S.5	
17H1642	O.1	
17H1678	S.10	
17H1679	S.10	
17H1821	O.1	
17H1822	O.1	
17H3818	G.1	
17H3819	G.1	
17H3828	G.1	
17H3894	G.1	
17H3919	G.1	
17H5064	B.1	
17H5065	B.1	
17H5066	B.1	
17H5069	B.1	
17H5071	B.1	

Numerical Index—*continued*


Part Number	Page	PAU Number
17H5095	B.1	
17H5106	B.1	
17H5118	B.1	
17H5146	N.3	
17H5147	N.3	
17H5205	N.3	
17H5217	N.1	
17H5244	N.3	
17H5255	N.5	
17H5306	N.3	
17H5330	N.3	
17H5361	N.5	
17H5375	N.3	
17H5388	N.5	
17H5396	N.5	
17H5407	N.1	
17H5421	B.1	
17H5422	B.1	
17H5423	B.1	
17H5427	N.3	
17H5431	N.5	
17H5433	N.1	
17H5441	N.5	
17H5442	N.5	
17H5443	N.5	
17H5444	N.1	
17H5469	B.1	
17H5512	N.5	
17H5531	B.1	
17H5543	N.3	
17H5546	N.3	
17H7046	H.3	
17H7050	K.2	
17H7054	M.1	
17H7109	M.1	
17H7266	E.2	
17H7268	E.2	
17H7531	M.3	
17H7532	M.3	
17H7533	M.2	
17H7534	M.2	
17H7535	M.2	
17H7539	E.2	
17H7540	E.2	
17H7541	E.2	
17H7543	K.2	
17H7544	K.2	
17H9501	S.4	
17H9502	S.4	
17H9503	S.4	
17H9525	D.1	
17H9675	S.4	
17H9676	S.4	
17H9677	S.4	
27H168	S.6	
27H387	O.1	
27H387	O.2	
27H397	O 2	
27H397	S.10	
27H406	O.2	
27H406	S.10	
27H429	O.2	
27H429	S.10	
27H3101	E.1	
27H3102	E.1	
27H3103	E.2	
27H3177	E.1	
27H3183	E.1	
27H5253	N.3	
27H5354	N.3	
27H5420	N.1	
27H5545	N.3	
27H5554	N.5	
27H5559	N.5	
27H5562	O.3	
27H5564	O.3	
27H5565	O.3	
27H5566	O.3	
27H5568	N.5	
27H5569	N.5	
27H5570	N.5	
27H5572	N.5	
27H5581	N.5	
27H5582	N.5	
27H5583	N.5	
27H5596	O.3	
27H5597	O.3	
27H7395	H.3	
27H9607	S.9	
27H9608	S.9	
27H9609	S.9	
27H9610	S.9	
27H9611	S.9	
27H9612	S.9	
27H9613	S.9	
27H9622	S.8	
27H9623	S.8	
27H9625	S.8	
27H9626	S.8	
27H9654	S.8	
27H9655	S.8	
27H9657	S.8	
27H9662	S.8	
27H9704	S.4	
27H9705	S.4	
27H9706	S.4	
27H9707	S.4	
27H9708	S.4	
27H9709	S.4	
27H9710	S.4	
27H9711	S.4	
27H9712	S.4	
27H9713	S.4	
27H9714	S.4	
27H9715	S.4	
27H9716	S.4	
27H9717	S.4	
27H9718	S.4	
27H9719	S.4	
27H9720	S.4	
27H9721	S.4	
27H9781	R.15	
27H9782	R.15	
37H5181	O.3	
37H5207	N.1	
37H5271	N.3	
37H5288	N.5	
37H5409	B.1	
37H5410	N.3	
37H5438	B.1	
37H5439	B.1	
37H5440	B.1	
37H5519	N.3	
37H5520	N.4	
37H5527	N.3	
37H5527	N.4	
37H5528	N.4	
37H5531	N.4	
47H5023	N.5	
47H5251	N.3	
97H222	L.1	
97H626	N.1	
97H1583	S.4	
97H1585	S.4	
97H1636	S.4	
97H2071	N.2	
97H2072	N.2	
97H2073	N.3	
97H2074	A.15	
97H2075	A.15	
97H2076	A.15	
HBN0414	A.8	
HBZ0408	M.3	
HBZ0409	M.3	
HBZ0509	A.10	
HBZ0510	G.1	
HBZ0513	A.10	
HBZ0515	A.6	
HBZ0524	R.8	
HBZ0612	L.1	
HBZ0613	N.1	
HBZ0618	L.1	
HBZ0624	M.2	
HBZ0626	H.4	
HBZ0630	L.1	
HBZ0732	L.1	
HCZ0512	J.2	
HCZ0628	A.9	
HNS0404	A.8	
HNS0405	A.11	
HNS0406	A.2	
HNS0408	R.9	
HPZ0505	A.11	
HPZ0626	A.11	
HZS0403	A.6	
HZS0404	A.15	
HZS0405	A.8	
HZS0406	A.14	
HZS0408	M.2	
HZS0409	R.10	
HZS0410	E.1	
HZS0504	N.6	
HZS0505	A.1	
HZS0506	A.14	
HZS0507	A.10	
HZS0508	A.14	
HZb0510	A.10	
HZS0515	A.10	
HZS0518	A.14	
HZS0605	N.6	
HZS0609	L.1	
HZS0610	L.1	
1K52	A.6	

Numerical Index—*continued*

Part Number	Page	PAU Number
1K1977	S.10	
2K1203	A.11	
2K1204	A.4	
2K1210	A.8	
2K1345	A.1	
2K4608	A.1	
2K4909	F.3	
2K4936	R.6	
2K4956	A.8	
2K4958	A.6	
2K4974	A.10	
2K4982	A.8	
2K4994	A.8	
2K5319	A.10	
2K5377	K.1	
2K5629	S.5	
2K5806	A.14	
2K5813	F.3	
2K5820	M.4	
2K5830	F.1	
2K5943	H.1	
2K6124	A.10	
2K6167	N.6	
2K6677	F.1	
2K7131	M.3	
2K7140	A.6	
2K7440	A.6	
2K7778	H.1	
2K7779	H.1	
2K7816	A.3	
2K8122	J.2	
2K8158	F.5	
2K8159	A.11	
2K8169	A.1	
2K8568	A.5	
2K8606	D.1	
2K8607	A.2	
2K8609	R.7	
2K8623	A.1	
2K8645	N.6	
2K8737	F.2	
2K8738	F.2	
2K8739	F.2	
2K9030	R.8	
2K9679	R.15	
2K9932	A.10	
4K9670	R.6	
4K9671	R.6	
6K35	D.1	
6K464	A.8	
6K490	N.6	
6K499	H.1	
6K555	A.4	
6K556	A.4	
6K558	F.1	
6K558	F.2	
6K559	F.1	
6K559	F.2	
6K584	H.2	
6K628	A.2	
6K629	A.2	
6K630	A.3	
6K631	H.1	
6K638	A.7	
6K639	A.7	
6K639	B.1	
6K643	F.1	
6K648	D.1	
6K653	K.1	
6K654	A.4	
6K685	D.1	
6K689	M.4	
6K690	M.4	
6K694	J.2	
6K808	A.4	
6K831	A.1	
6K836	A.2	
6K853	A.8	
6K870	M.4	
6K878	A.4	
6K927	A.1	
6K9388	N.5	
6K9588	N.2	
6K9695	M.4	
6K9789	R.7	
6K9833	R.9	
11K5564	R.6	
11K9101	N.2	
51K254	A.1	
51K255	A.1	
51K256	A.1	
51K328	K.1	
51K448	A.11	
51K554	A.4	
51K885	A.4	
51K886	H.1	
51K907	A.8	
51K1368	K.2	
51K1382	A.2	
51K1671	F.3	
51K1769	K.1	
51K2036	E.1	
51K2824	O.2	
51K3169	F.4	
51K3424	K.1	
53K152	E.2	
53K154	A.11	
53K165	D.1	
53K371	A.4	
53K402	A.4	
53K463	F.1	
53K486	A.4	
53K487	A.4	
53K488	A.4	
53K525	A.1	
53K528	F.4	
53K530	A.4	
53K535	F.4	
53K1013	J.2	
53K1023	A.15	
53K1045	A.1	
53K1364	K.2	
53K1368	K.3	
53K1370	K.1	
53K1389	K.2	
53K1392	A.15	
53K1433	A.10	
53K1435	F.3	
53K1722	F.5	
53K2016	A.1	
53K2017	A.3	
53K2599	J.2	
53K3427	R.9	
53K3428	R.9	
53K3464	R.14	
LNZ104	J.2	
LNZ106	L.1	
LNZ108	H.4	
LNZ205	A.10	
LNZ206	A.10	
LWN204	A.6	
LWN205	A.4	
LWN206	A.9	
LWN207	H.1	
LWN304	A.5	
LWN305	A.2	
LWZ202	N.2	
LWZ203	K.1	
LWZ205	A.6	
LWZ206	A.9	
LWZ212	H.2	
LWZ304	C.1	
LWZ305	A.1	
LWZ306	A.10	
LWZ307	H.4	
LWZ404	R.7	
LWZ406	M.4	
NCS0608	A.9	
PCR0306	S.8	
PCR0307	O.2	
PCR0309	S.8	
PCR0311	M.3	
PCR0407	N.6	
PCR0409	D.1	
PCR0607	N.6	
PCR0609	N.6	
PCR0709	O.3	
PCR1007	N.6	
PFS104	R.15	
PFS326	N.3	
PFS510	N.4	
PJZ1006	N.4	
PMP0410	O.1	
PMZ0205	N.5	
PMZ0206	O.1	
PMZ0304	R.6	
PMZ0305	M.3	
PMZ0306	N.6	
PMZ0307	N.2	
PMZ0308	N.3	
PMZ0310	N.2	
PMZ0312	N.3	
PMZ0320	N.2	
PMZ0406	N.4	
PMZ0408	N.2	
PMZ0410	S.9	
PMZ0412	S.9	
PPN0408	R.7	

Numerical Index—*continued*


Part Number	Page	PAU Number
PPN0412	R.7	
PTP603	S.6	
PTZ603	N.6	
PTZ604	N.3	
PTZ605	R.16	
PTZ803	F.5	
PTZ804	R.6	
PTZ805	R.6	
PWN107	H.1	
PWN204	B.2	
PWZ104	A.15	
PWZ105	A.11	
PWZ106	A.11	
PWZ107	J.1	
PWZ108	H.4	
PWZ203	A.15	
PWZ204	O.1	
PWZ205	A.14	
PWZ206	L.1	
RFN206	R.16	
RFN210	R.16	
RFN218	R.16	
RFN303	A.15	
RFN305	N.6	
RMP0308	R.15	
RMZ0307	R.5	
RMZ0308	R.5	
RMZ0310	R.7	
RMZ0520	R.5	
RTZ604	R.11	
RTZ606	R.11	
TCN206	A.9	
UHN105	M.4	
UHN305	J.2	
WKN404	F.5	
WKN505	A.2	
ZCS0404	D.1	
7698	R.11	
7700	R.11	
7700	R.12	
39731	M.1	
45223	B.1	
68640	K.2	
68643	H.3	
68643	K.2	
68648	H.3	
68739	N.4	
99762	R.12	
99762	R.13	
135198	R.6	
185373	S.9	
300826	H.3	
300826	K.2	
301020	H.3	
301549	M.1	
301550	M.1	
301551	M.1	
301622	H.3	
301627	K.2	
301633	H.3	
301634	H.3	

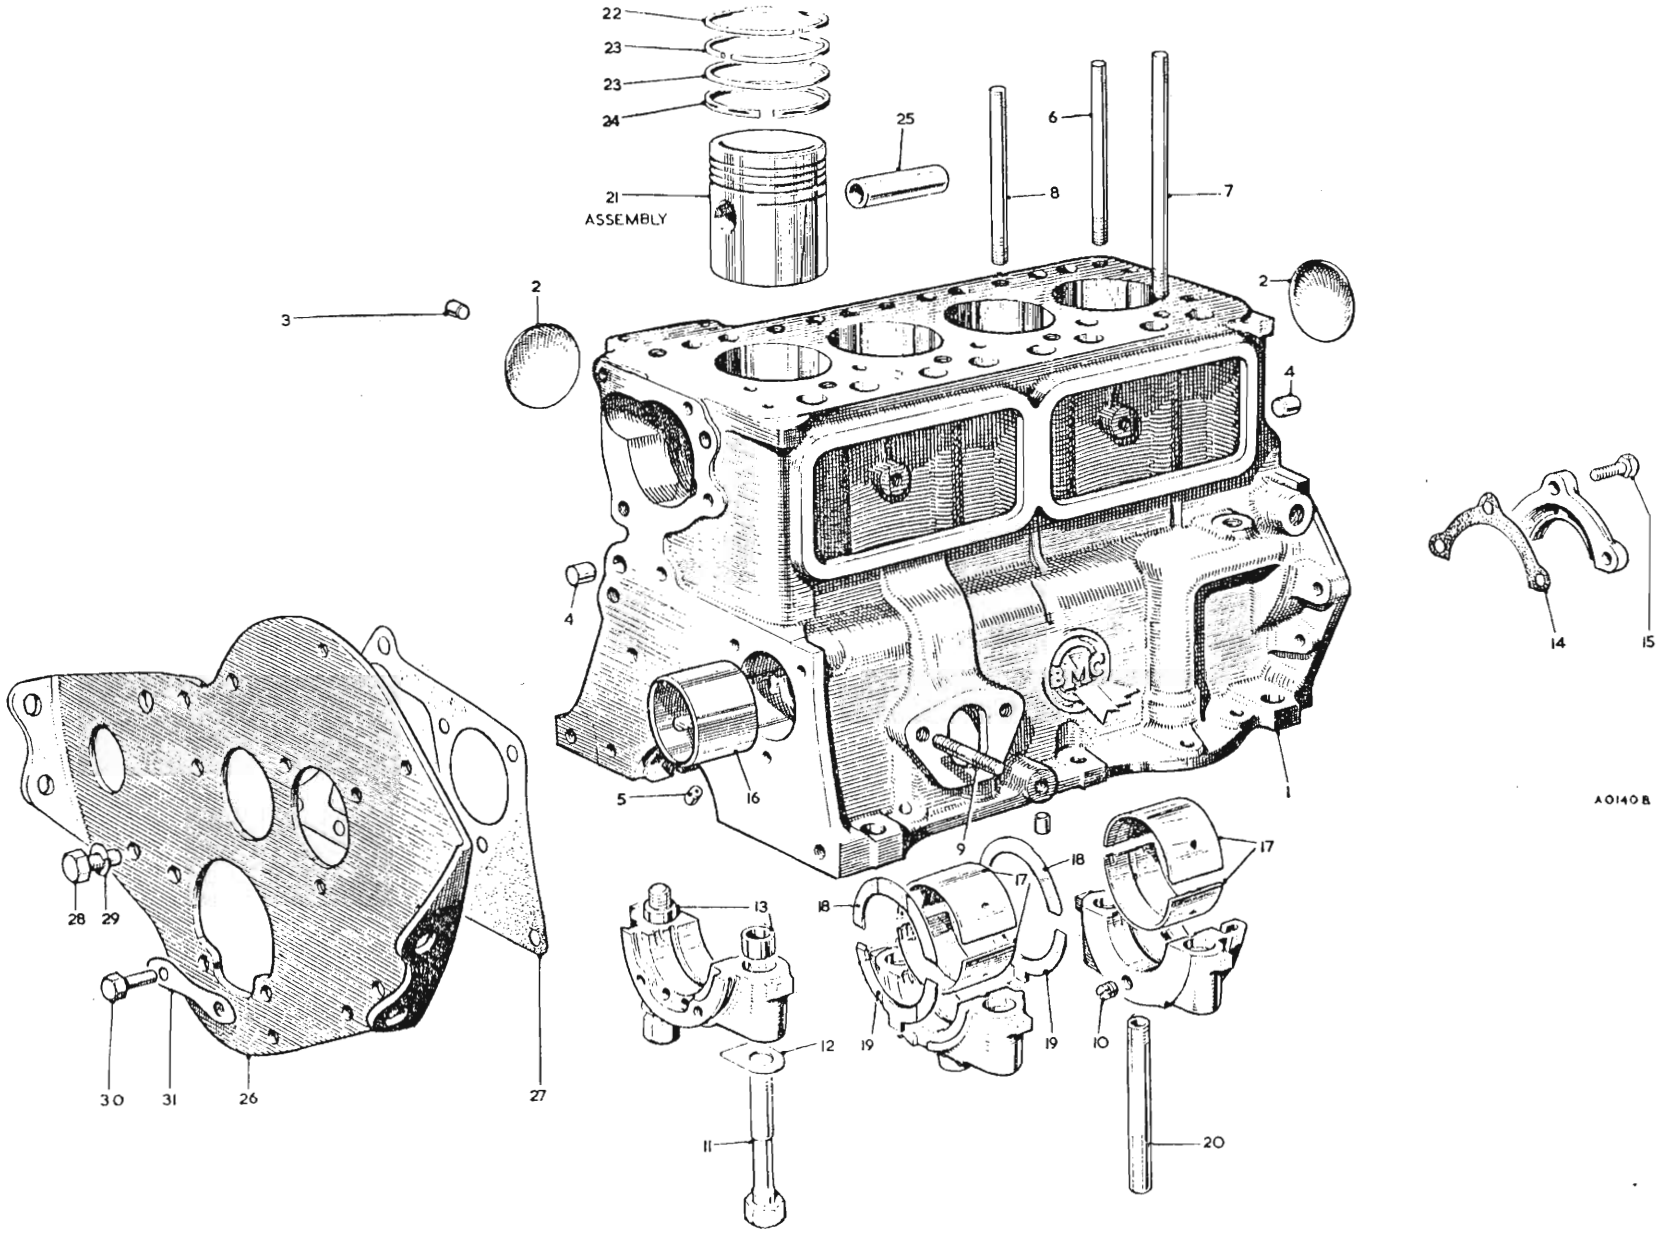


To face page A.1

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	ENGINE										
	ENGINE UNIT										
1	**Stripped engine unit (R)**	8G10		1	1						
2	**Half-engine**	28G85		1	1						
3	**Block assembly—cylinder and pistons**	28G84	1	1	1						
4	Plug—welch	2K8169	2	4	4						
5	Plug for oil release valve passage	2K1345	3	2	2						
6	Plug for oil gallery	2K8623	4	2	2						
7	Restrictor for camshaft bearing oil feed	1A1964	5	1	1						
8	Stud for cylinder head	51K254	6	1	1						
9	Stud for cylinder head (long)	51K255	7	4	4						
10	Stud for cylinder head (short)	51K256	8	4	4						
11	Stud for petrol pump	53K525	9	2	2						
12	Cap for main bearing (front)	N.S.P.		1	1						
13	Cap for main bearing (centre)	N.S.P.		1	1						
14	Cap for main bearing (rear)	N.S.P.		1	1						
15	Plug for rear main bearing cap (screwed)	2K4608	10	1	1	12					Finished at (E) 1168
16	Set screws for main bearing cap	2A53	11	6	6						
17	Washer for set screw (lock)	6K927	12	6	6						
18	Dowel for main bearing cap	2A54	13	6	6	12					
19	Cover for crankcase (rear)	N.S.P.		1	1						
20	Joint for rear cover	2A127	14	1	1						
21	Set screw for rear cover	53K1045	15	3	3						
22	Liner for camshaft (front)	2A52	16	1	1	6					
23	**Bearing—main (standard)**	8G2222	17	1	1	set					
24	Washer—thrust (upper)	1A1716	18	2	2	12					
25	Washer—thrust (lower)	1A1717	19	2	2	12					
26	Drain pipe—rear main bearing cap	2A253	20	1	1						Finished at (E) 1168
27	**Piston assembly—standard**	8G687	21	4	4						
28	Ring—compression (plain)	2A755	22	4	4						
29	Ring—compression (tapered)	2A686	23	8	8						
30	Ring—scraper	2A687	24	4	4						
31	Pin—gudgeon	2A837	25	4	4						
	FRONT MOUNTING PLATE										
32	**Plate—engine mounting (front)**	2A125	26	1	1						
33	Joint for engine front mounting plate	2A126	27	1	1	12					
34	Screw—mounting plate to crankcase	HZS0505	28	2	2						
35	Washer for set screw (spring)	LWZ305	29	2	2						
36	Screw—mounting plate to bearing cap	53K2016	30	2	2						
37	Plate for set screw (lock)	6K831	31	1	1						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CONNECTING RODS—BEARINGS										
1	**Connecting rod and cap for Nos. 1 and 3 cylinders**	**2A656**	**1**	**2**	**2**						
2	**Connecting rod and cap for Nos. 2 and 4 cylinders**	**2A654**	**2**	**2**	**2**						
3	Screw for cap	2A659	3	8	8						
4	Washer for screw (lock)	2A660	4	4	4						
5	Screw—clamping	51K1382	5	4	4						
6	Washer for screw (spring)	LWN305	6	4	4						
7	**Bearing for connecting rod—big-end (standard)**	**8G2210**	**7**	**1**	**1**	**set**					] **Alternatives**
8	**Bearing for connecting rod—big-end (standard)**	**8G2198**		**1**	**1**	**set**					] **Alternatives**
	CRANKSHAFT AND GEAR										
9	**Crankshaft with oil restrictors and bush (R)**	**2A828**	**8**	**1**	**1**						**Alternative to 2A830**
10	Restrictor—oil	1G1167	9	4	4	12					
11	**Crankshaft (with bush) (R)**	**2A830**		**1**	**1**						**Alternative to 2A828**
12	Bush for 1st motion shaft	1A1559	10	1	1	12					
13	**Gear for crankshaft**	**2A76**	**11**	**1**	**1**						
14	Washer—packing	6K628	12	1	1						
15	Thrower—oil (front)	2A77	13	1	1						
16	Key for gear and crankshaft	6K836	14	1	1						
	CAMSHAFT										
17	**Camshaft with driving pin for oil pump**	**2A297**	**15**	**1**	**1**						] **Alternatives**
18	**Camshaft with driving pin for oil pump**	**2A571**		**1**	**1**						] **Alternatives**
19	Pin for oil pump—driving	2A299	16	1	1						
20	Plate—locating	2A84	17	1	1						
21	Screw—plate to crankcase	HNS0406	18	3	3						
22	Washer for set screw (shakeproof)	2K8607	19	3	3						
23	**Gear for camshaft (with tensioner rings)**	**2A85**	**20**	**1**	**1**						
24	Ring—tensioner	8G549	21	2	2	12					
25	Key for gear	WKN505	22	1	1						
26	Nut for gear	6K629	23	1	1						
27	Washer for nut (lock)	2A759	24	1	1						
28	**Chain for camshaft drive**	**3H2127**	**25**	**1**	**1**						
	CRANKSHAFT PULLEY										
29	**Pulley for crankshaft**	**2A550**	**26**	**1**	**1**						
30	Bolt—crankshaft pulley retaining	AEA312	27	1	1						
31	Washer for retaining bolt (lock)	1G1319	28	1	1						

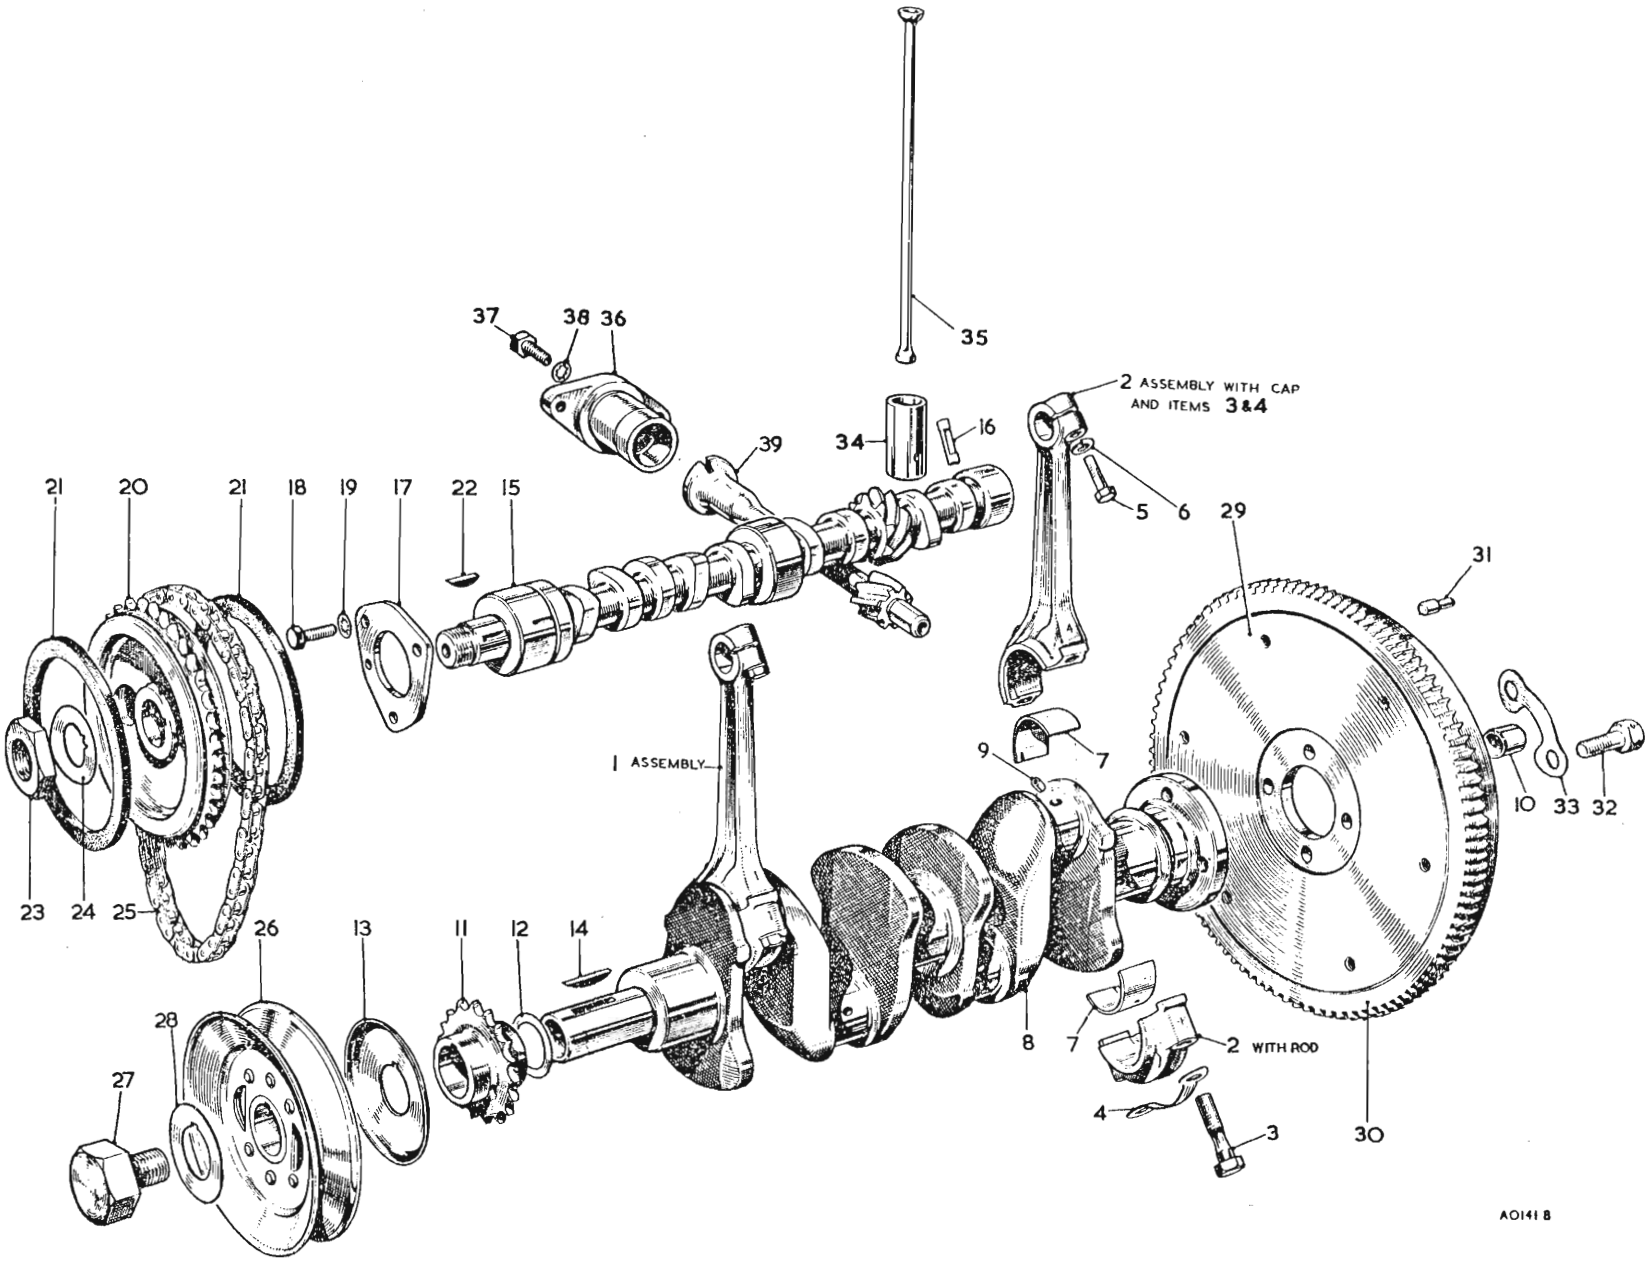


To face page A.2

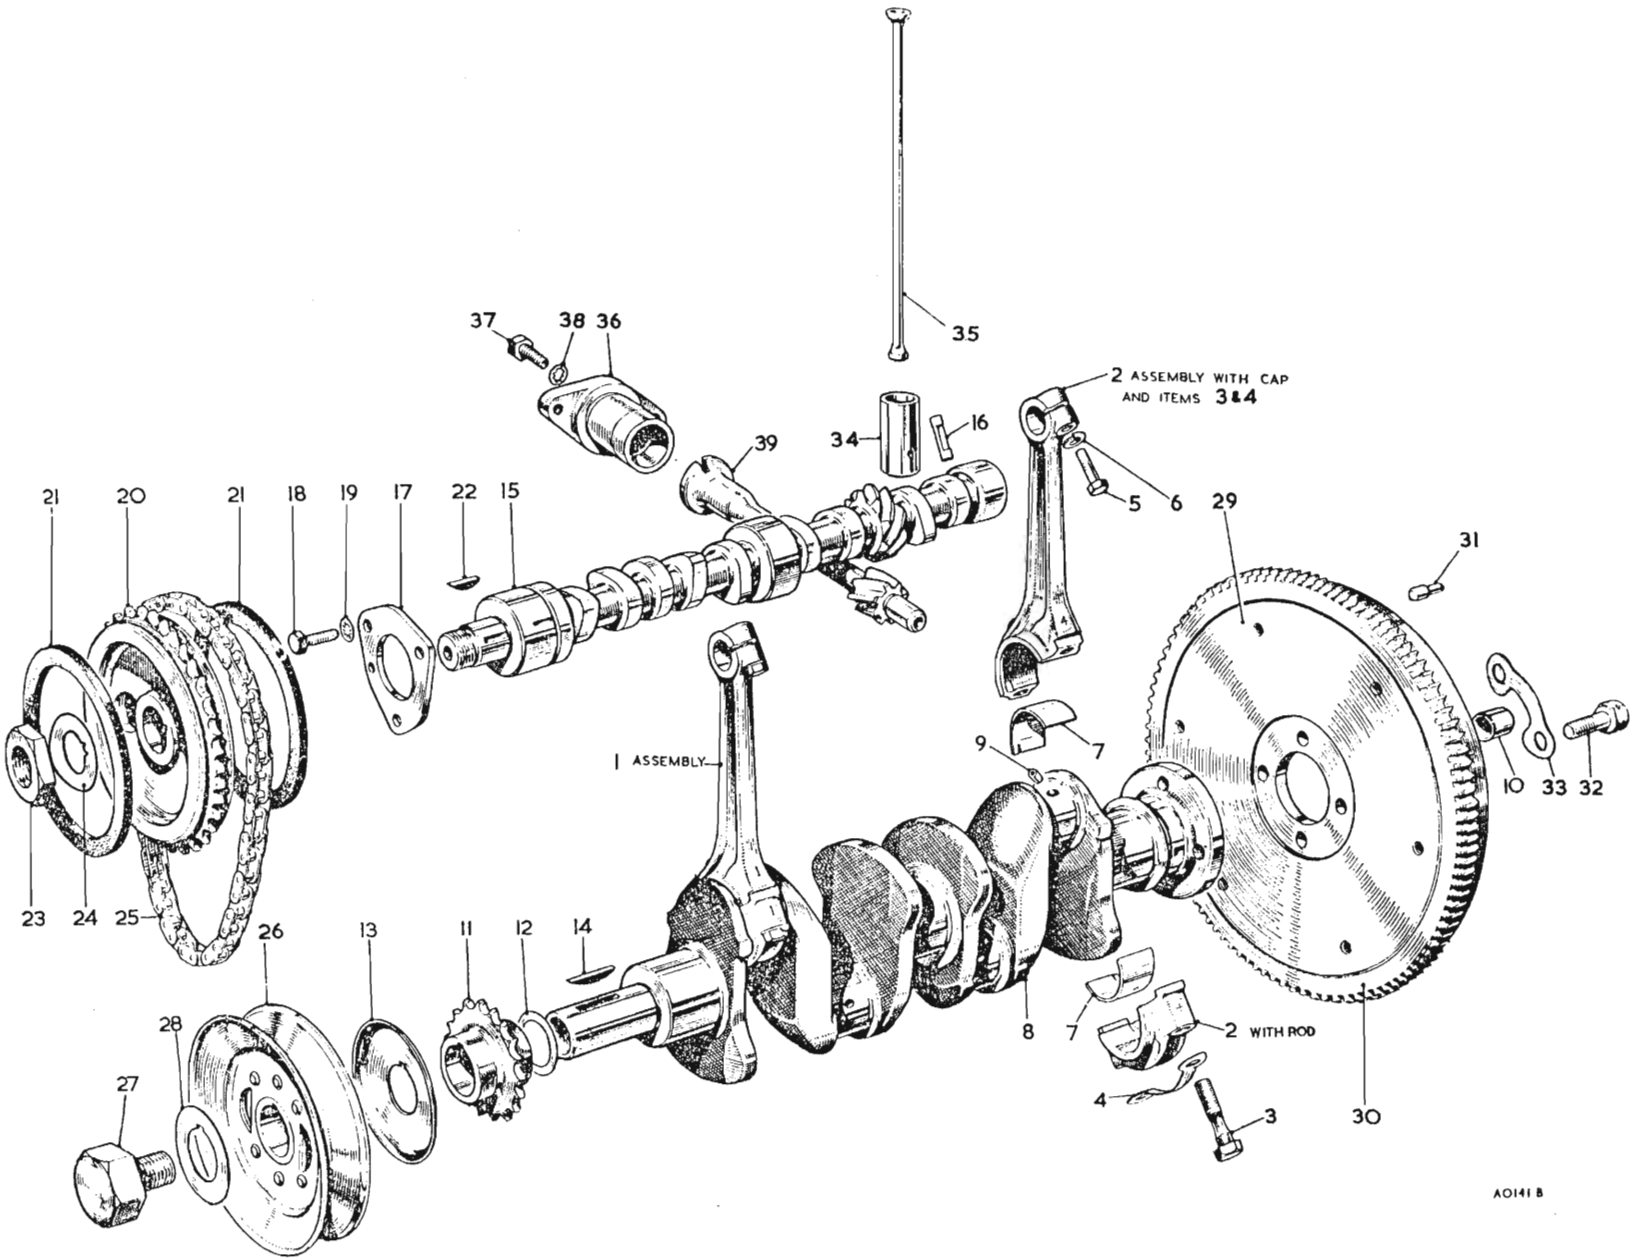


To face page A.3

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	FLYWHEEL										
1	**Flywheel with starter ring and dowels (R)**	**2A516**	**29**	1	1						
2	Starter ring	2A378	30	1	1						
3	Dowel—clutch to flywheel	1G2984	31	2	2						
4	Screw—flywheel to crankshaft	6K630	32	4	4						
5	Washer for set screw (lock)	2K7816	33	2	2						
	TAPPETS AND PUSH-RODS										
6	Tappet	2A13	34	8	8						
7	Push-rod	2A14	35	8	8						
	DISTRIBUTOR HOUSING—SPINDLE										
8	Housing for distributor	2A612	36	1	1						
9	Screw—housing to crankcase	53K2017	37	1	1						
10	Washer for set screw (shakeproof)	2K8607	38	1	1						
11	Spindle for distributor—driving	2A139	39	1	1						] Alternatives
12	Spindle for distributor—driving	2A847		1	1						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CYLINDER HEAD—VALVES—GUIDES—SPRINGS—ROCKERS										
1	**Cylinder head with valve assembly**	**28G86**		**1**	**1**						
2	**Cylinder head with valve guides—assembly**	**2A613**	**1**	**1**	**1**						
3	Guide—inlet valve	2A608	2	4	4	12					
4	Guide—exhaust valve	2A608	3	4	4	12					
5	Plug for oil hole	6K808	4	1	1						
6	**Valve—inlet**	**2A6**	**5**	**4**	**4**	**4**		**2A877**	**From (E) 1397**		
7	**Valve—exhaust**	**AEA327**	**6**	**4**	**4**			**AEA358**	**From (E) 1397**		
8	**Spring—valve**	**AEA311**	**7**	**8**	**8**						
9	Shroud and oil seal retainer for valve guide	2A544	8	8	8						Finished at (E) 1396
10	Oil seal for valves	2A9	9	8	8	36					Finished at (E) 1396
11	Shroud for valve guide							2A545	From (E) 1397		
12	Valve packing ring (rubber)							2A879	From (E) 1397		
13	Cup—valve spring	2A10	10	8	8			2A880	From (E) 1397		
14	Cotter—valve	2A11	11	16	16	36 prs.					
15	Circlip for valve cotter	2A12	12	8	8						
16	Stud for rocker bracket (long)	51K885	13	2	2						
17	Stud for rocker bracket (short)	51K554	14	2	2						
18	Stud for cover-plate	53K402	15	2	2						
19	Stud for water outlet elbow	53K530	16	3	3						
20	Stud for exhaust manifold (short)	53K486	17	2	2	12					
21	Stud for exhaust and inlet manifold (medium)	53K487	18	2	2						
22	Stud for exhaust and inlet manifold (long)	53K488	19	2	2	12					
23	**Shaft assembly—valve rocker**	**2A15**		**1**	**1**						
24	**Shaft—valve rocker (plugged)**	**2A16**	**20**	**1**	**1**						
25	Plug for rocker shaft (plain)	6K878	21	1	1						
26	Plug for rocker shaft (screwed)	2K4608	22	1	1	12					
27	Bracket for rocker shaft (tapped)	2A22	23	1	1						
28	Bracket for rocker shaft (plain)	2A23	24	3	3						
29	**Rocker for valve—bushed**	**2A533**	**25**	**8**	**8**						
30	Bush for valve rocker	2A21	26	8	8	8					
31	Spring—rocker spacing	6K556	27	3	3						
32	Screw—tappet adjusting	2A535	28	8	8	6					
33	Locknut for adjusting screw	6K654	29	8	8						
34	Screw for rocker-shaft—locating	2A258	30	1	1						
35	Plate for rocker shaft bracket	2A515	31	4	4	12					
36	Washer for rocker shaft (spring)	2A18	32	2	2						
37	Washer for rocker shaft	6K555	33	2	2						
38	Washer for stud (spring)	LWN205	34	4	4						
39	Nut for stud	FNN105	35	4	4						
40	Nut for cylinder head stud	53K371	36	9	9						
41	Washer for cylinder head stud	2K1204	37	5	5	72					
42	Joint for cylinder head	2A689	38	1	1			2A935	From (E) 1169		

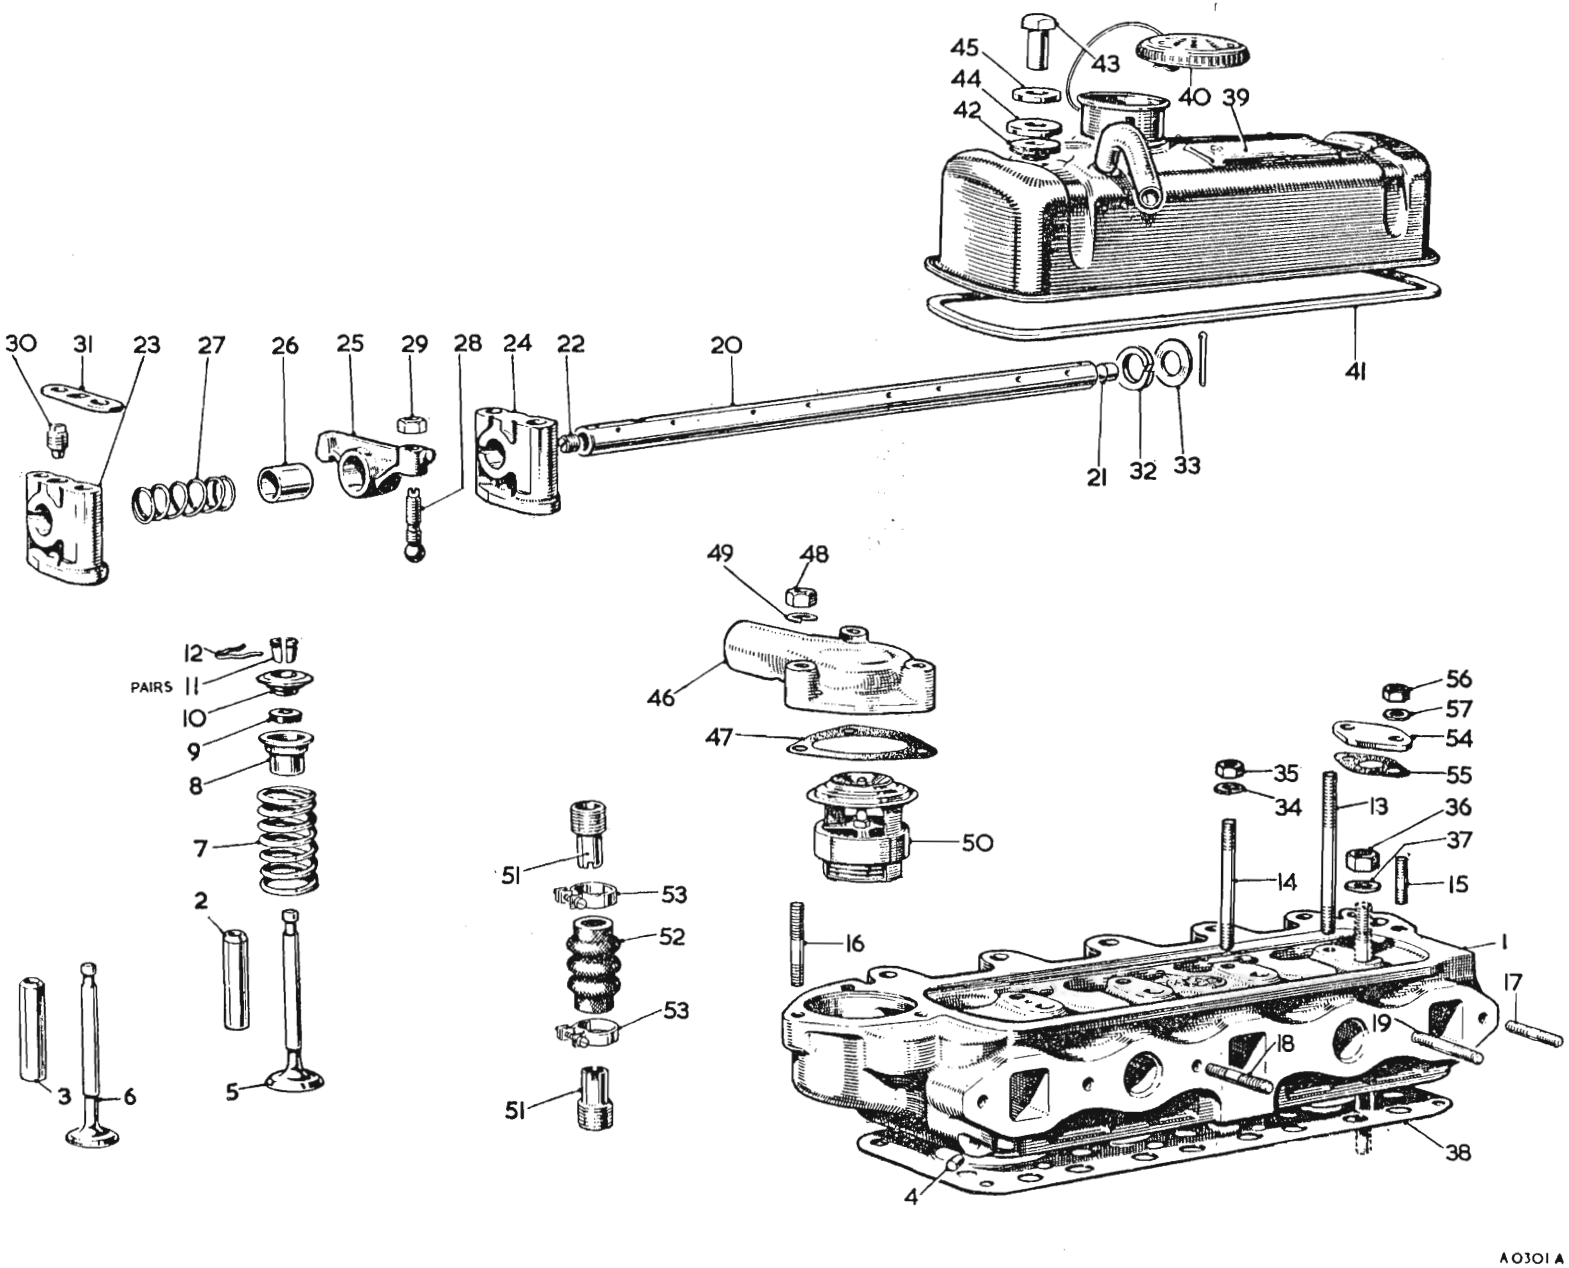
45
44
42
43
40
39
41
30
31
23
27
26
25
29
28
24
22
20
21
32
33
12
PAIRS 11
10
9
8
7
2
3
6
5
49
48
46
47
50
51
53
52
53
51
35
34
13
36
37
56
57
54
55
14
15
16
1
17
19
18
38
4

A0301A

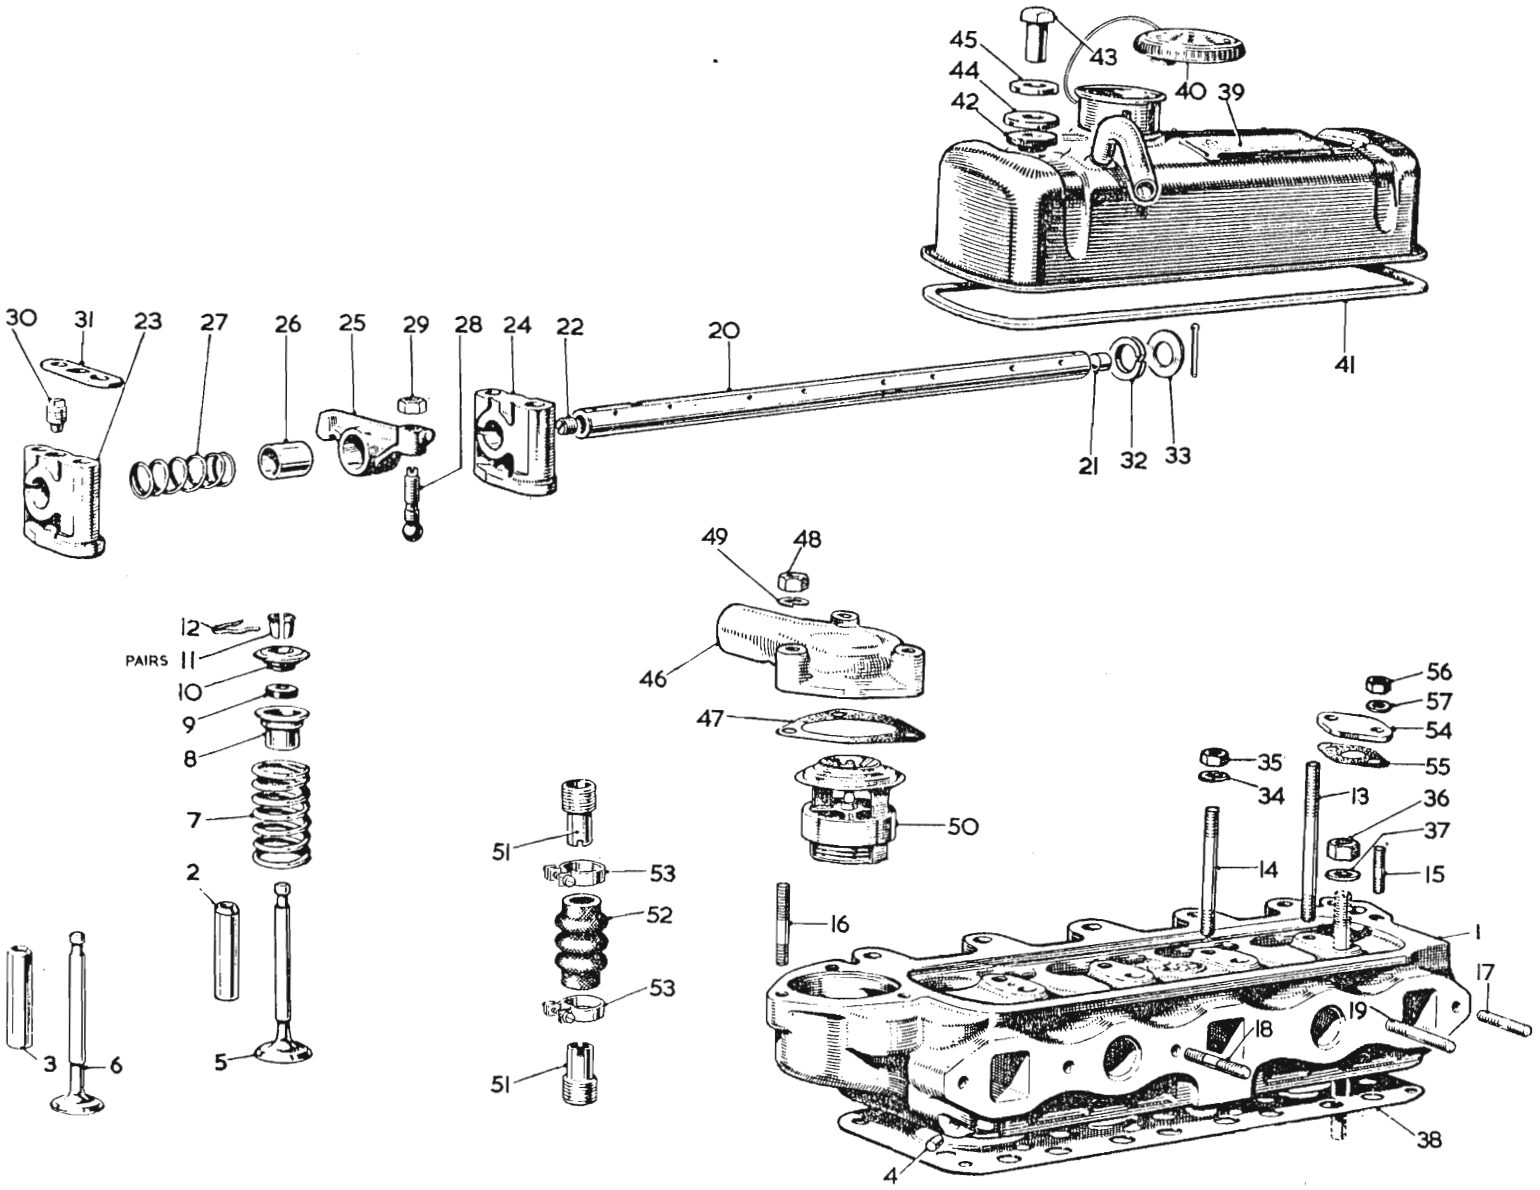


A 0301 A


To face page A.5

Item No.	DESCRIPTION	Commencing (E) 101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	PAU No.	
	VALVE ROCKER COVER—OIL FILLER										
1	**Cover—valve rocker (with filler cap and cable)**	**AEA330**	**39**	**1**	**1**						
2	Cap and cable for oil filler	8G612	40	1	1						
3	Joint for cover	2A805	41	1	1	12					
4	Joint for cover	2A956		1	1						Alternative to 2A805 for use in tropical climate
5	Bush for cover (rubber)	2K8568	42	2	2	36					
6	Nut for cover	2A150	43	2	2						
7	Distance piece for nut	1B2925	44	2	2						
8	Washer for nut (cup)	1A2156	45	2	2						
	WATER OUTLET ELBOW—THERMOSTAT—COVER-PLATE										
9	**Elbow—water outlet**	**AEA306**	**46**	**1**	**1**						
10	Joint washer—elbow to cylinder head	1A2149	47	1	1	12					
11	Nut for stud—elbow to cylinder head	FNZ105	48	3	3						
12	Washer for nut (spring)	LWN205	49	3	3						
13	**Thermostat**	**11G291**	**50**	**1**	**1**			**11K399**	**From (E) 1073**		
14	Adaptor—by-pass	2A243	51	2	2						
15	Connection—by-pass (rubber)	2A242	52	1	1						
16	Clip for connection	3H2963	53	2	2						
17	**Plate—cover (for heater tap hole in cylinder head)**	**2A180**	**54**	**1**	**1**						
18	Joint washer—plate to cylinder head	2A179	55	1	1	12					
19	Nut for cover stud	FNN104	56	2	2						
20	Washer for nut (spring)	LWN304	57	2	2						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	REAR MOUNTING PLATE										
1	**Plate—engine mounting (rear)**	**2A300**	**1**	1	1						] **Alternatives**
2	**Plate—engine mounting (rear)**	**2A569**		1	1						] **Alternatives**
3	Joint for mounting plate	2A123	2	1	1	12					
4	Dowel for mounting plate (top)	1K52	3	1	1						
5	Dowel for mounting plate (bottom)	1G752	4	1	1						
6	Screw—mounting plate to crankcase	HZS0505	5	7	7						
7	Washer for set screw (spring)	LWZ305	6	7	7						
	CYLINDER FRONT AND SIDE COVERS										
8	**Cover—front (with oil catcher and felt)**	**2A552**	**7**	1	1						
9	Ring (felt)	2K7140	8	1	1						
10	Joint for front cover	1A2093	9	1	1	12					
11	Screw—front cover to mounting plate	HZS0403	10	6	6	36					
12	Washer for set screw (plain)	2K5197	11	6	6	24					
13	Washer for set screw (spring)	LWN204	12	6	6						
14	Screw—cover to mounting plate and crankcase	HZS0505	13	4	4						
15	Washer for screw (plain)	2K7440	14	4	4						
16	Washer for screw (spring)	LWZ305	15	4	4						
17	**Cover for cylinder side—front (with elbow)**	**1A2199**	**16**	1	1						
18	**Cover for cylinder side (rear)**	**2A770**	**17**	1	1						
19	Joint for covers	1A2203	18	2	2	12					
20	Screw for covers	HBZ0515	19	2	2						
21	Washer for set screw	2K4958	20	2	2	36					
22	**Pipe—crankcase vent (with clip)**	**2A118**	**21**	1	1						
23	Screw for vent pipe clip	HZS0505	22	1	1						
24	Washer for set screw (spring)	LWZ205	23	1	1	24					
	CYLINDER DRAIN TAP										
25	Tap—drain	2A816	24	1	1						] Alternatives
26	Tap—drain	2A817		1	1						] Alternatives

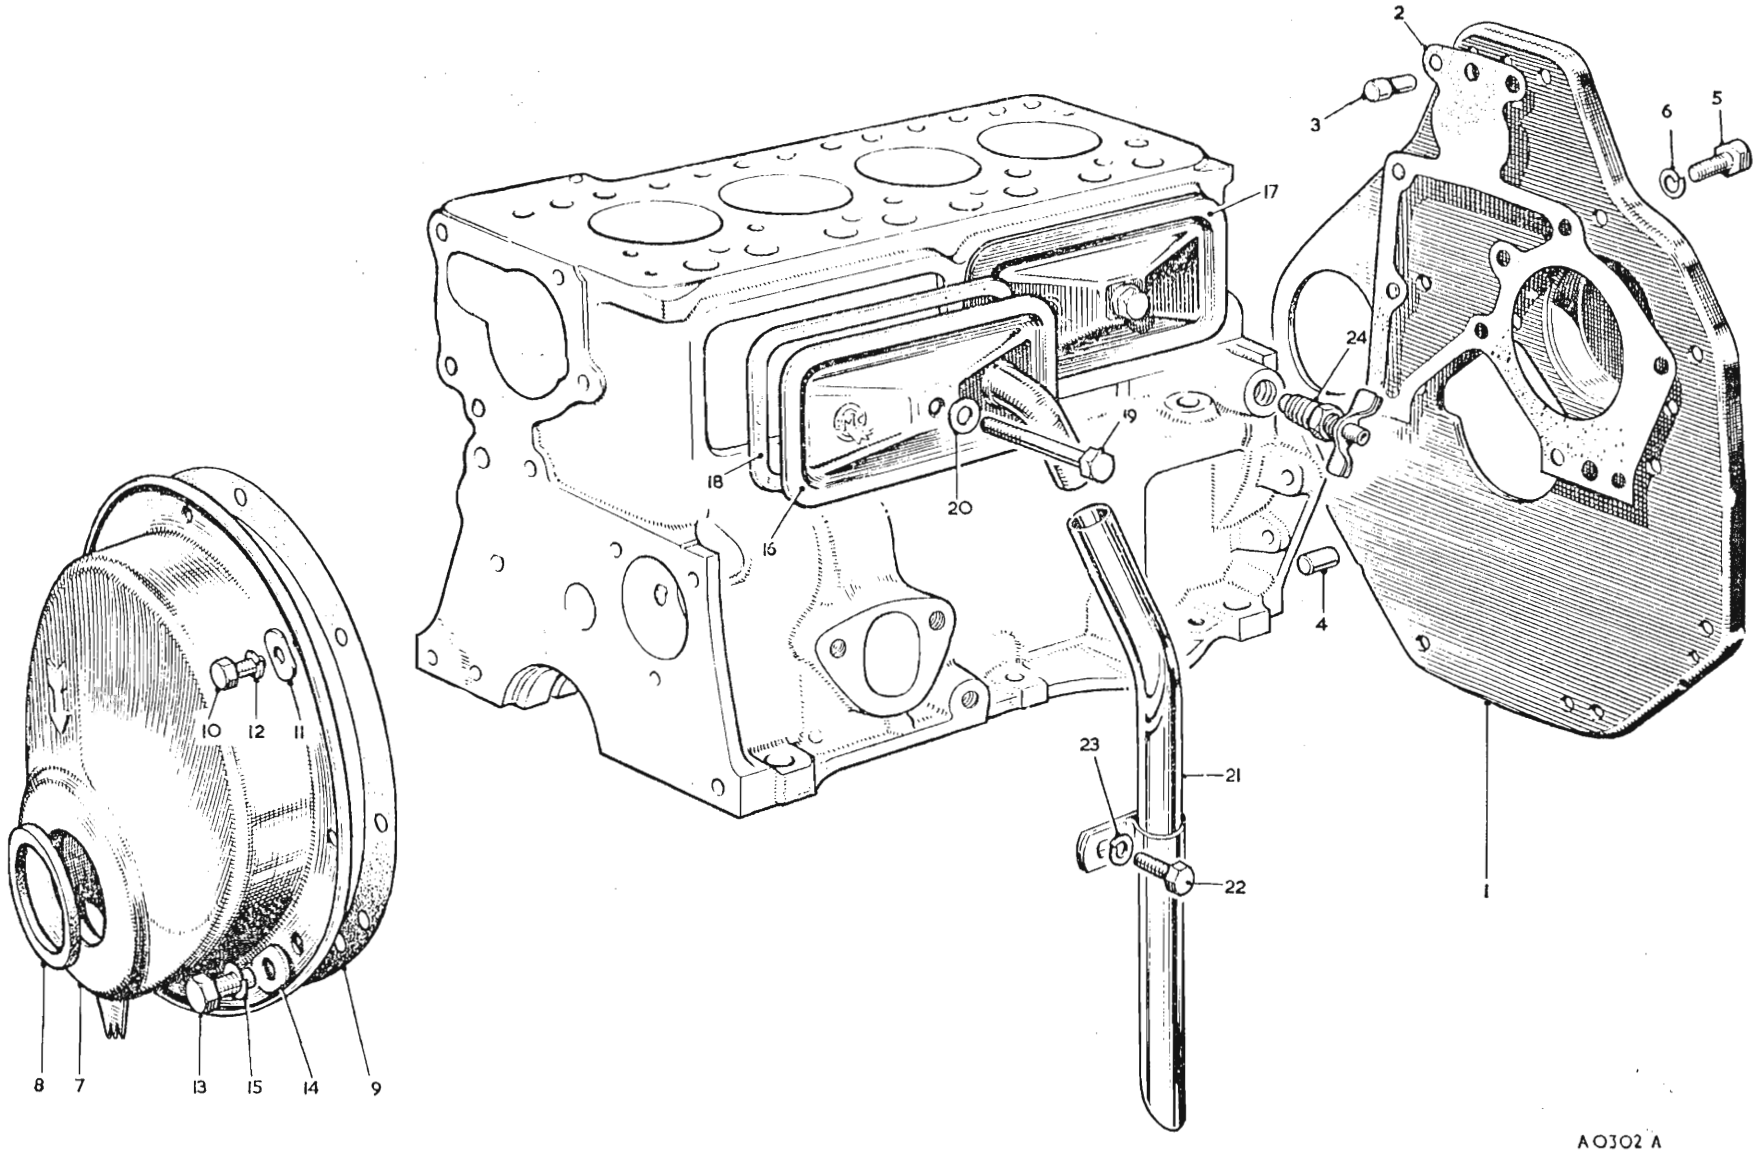


To face page A.6

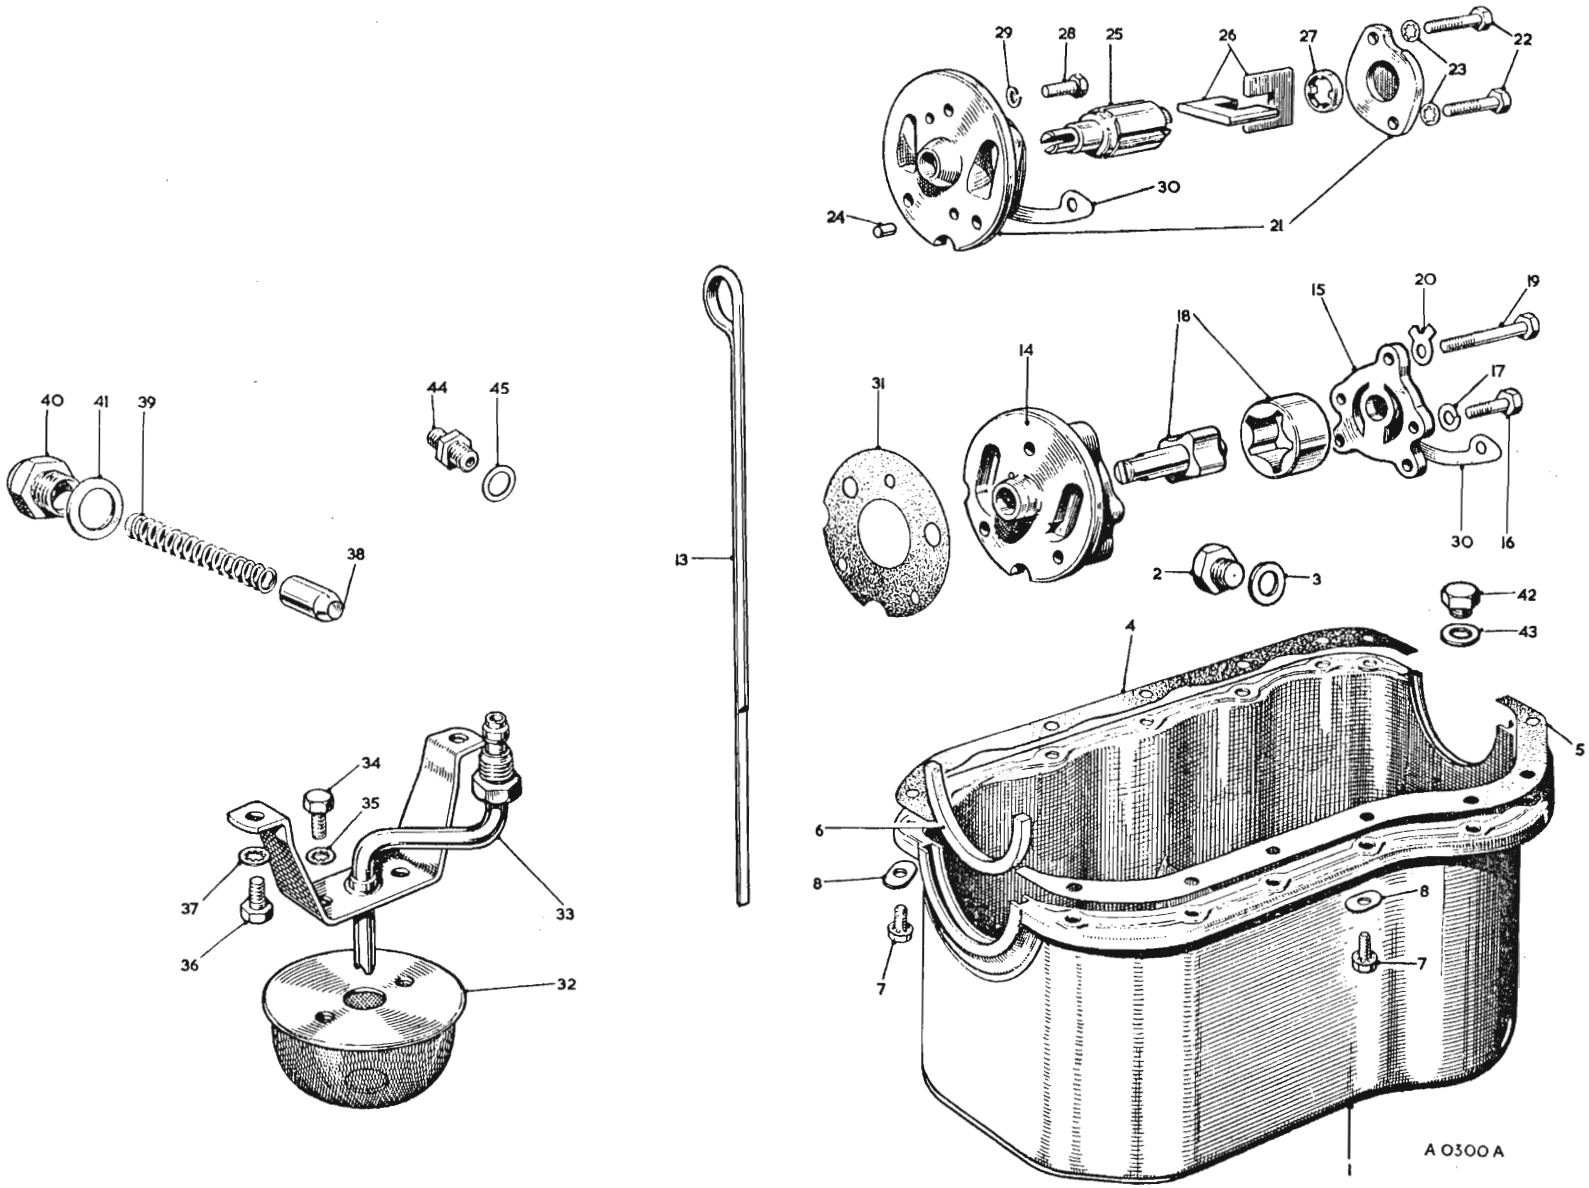


To face page A.7

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SUMP—DIPPER ROD										
1	**Sump—oil**	**2A704**	**1**	1	1						
2	Plug for sump—drain	2F4249	2	1	1						
3	Washer for plug (copper)	6K638	3	1	1	12					
4	Joint—sump to crankcase (R/H)	2A711	4	1	1	12					
5	Joint—sump to crankcase (L/H)	2A98	5	1	1	12					
6	Seal—oil—main bearing cap	2A280	6	2	2	12					
7	Screw (with captive washer)	6K639	7	14	14	12					
8	Washer for set screw	2K5197	8	14	14	24					
9	**Dipper rod**	**2A294**	**13**	1	1						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	OIL PUMP—PIPE—STRAINER—RELEASE VALVE—PRESSURE UNION										
1	**Oil pump (Hobourn) (R)**	**2A341**		**1**	**1**						**Alternative to 2A819**
2	Body	7H1649	14	1	1						
3	Cover	7H1650	15	1	1						
4	Screw—cover to body	51K907	16	2	2						
5	Washer for screw (spring)	2K1210	17	2	2						
6	Shaft—driving (with inner and outer rotors)	C4–96	18	1	1						
7	Screw—pump to crankcase	HBN0414	19	3	3	12					
8	Washer for set screw (lock)	2A339	20	1	1						
9	**Oil pump (Burman) (R)**	**2A819**		**1**	**1**						**Alternative to 2A341**
10	Body and cover assembly	8G8181	21	1	1						
11	Screw—cover to body	7H6795	22	2	2						
12	Washer for set screw (shakeproof)	7H6796	23	2	2						
13	Dowel	7H6813	24	2	2						
14	Rotor	7H6810	25	1	1						
15	Vane for rotor	7H6807	26	2	2						
16	Sleeve for rotor	7H6808	27	1	1						
17	Screw—pump to crankcase	HZS0405	28	3	3						
18	Washer for set screw (spring)	LWN304	29	1	1						
19	Plate for set screws for all pumps (lock)	2A522	30	1	1	12					
20	Joint washer for oil pump (all types)	2A494	31	1	1	12					
21	**Strainer—oil**	**2A668**	**32**	**1**	**1**						
22	**Pipe with oil strainer bracket—suction**	**2A672**	**33**	**1**	**1**						
23	Screw—bracket to oil strainer	HNS0404	34	2	2						
24	Washer for set screw (shakeproof)	2K8607	35	2	2						
25	Screw—bracket to bearing cap	HNS0404	36	2	2						
26	Washer for set screw (shakeproof)	2K8607	37	2	2						
27	Valve—oil release	1G1452	38	1	1	36					
28	Spring for oil release valve	6K853	39	1	1						
29	Nut for oil release valve (cap)	1A2206	40	1	1						
30	Washer for cap nut	2K4982	41	2	2						
31	Plug—oil priming	2K4994	42	1	1						
32	Washer for plug (copper)	6K464	43	1	1	12					
33	Union—oil pressure	2A269	44	1	1						
34	Washer for union (fibre)	2K4956	45	1	1	36					

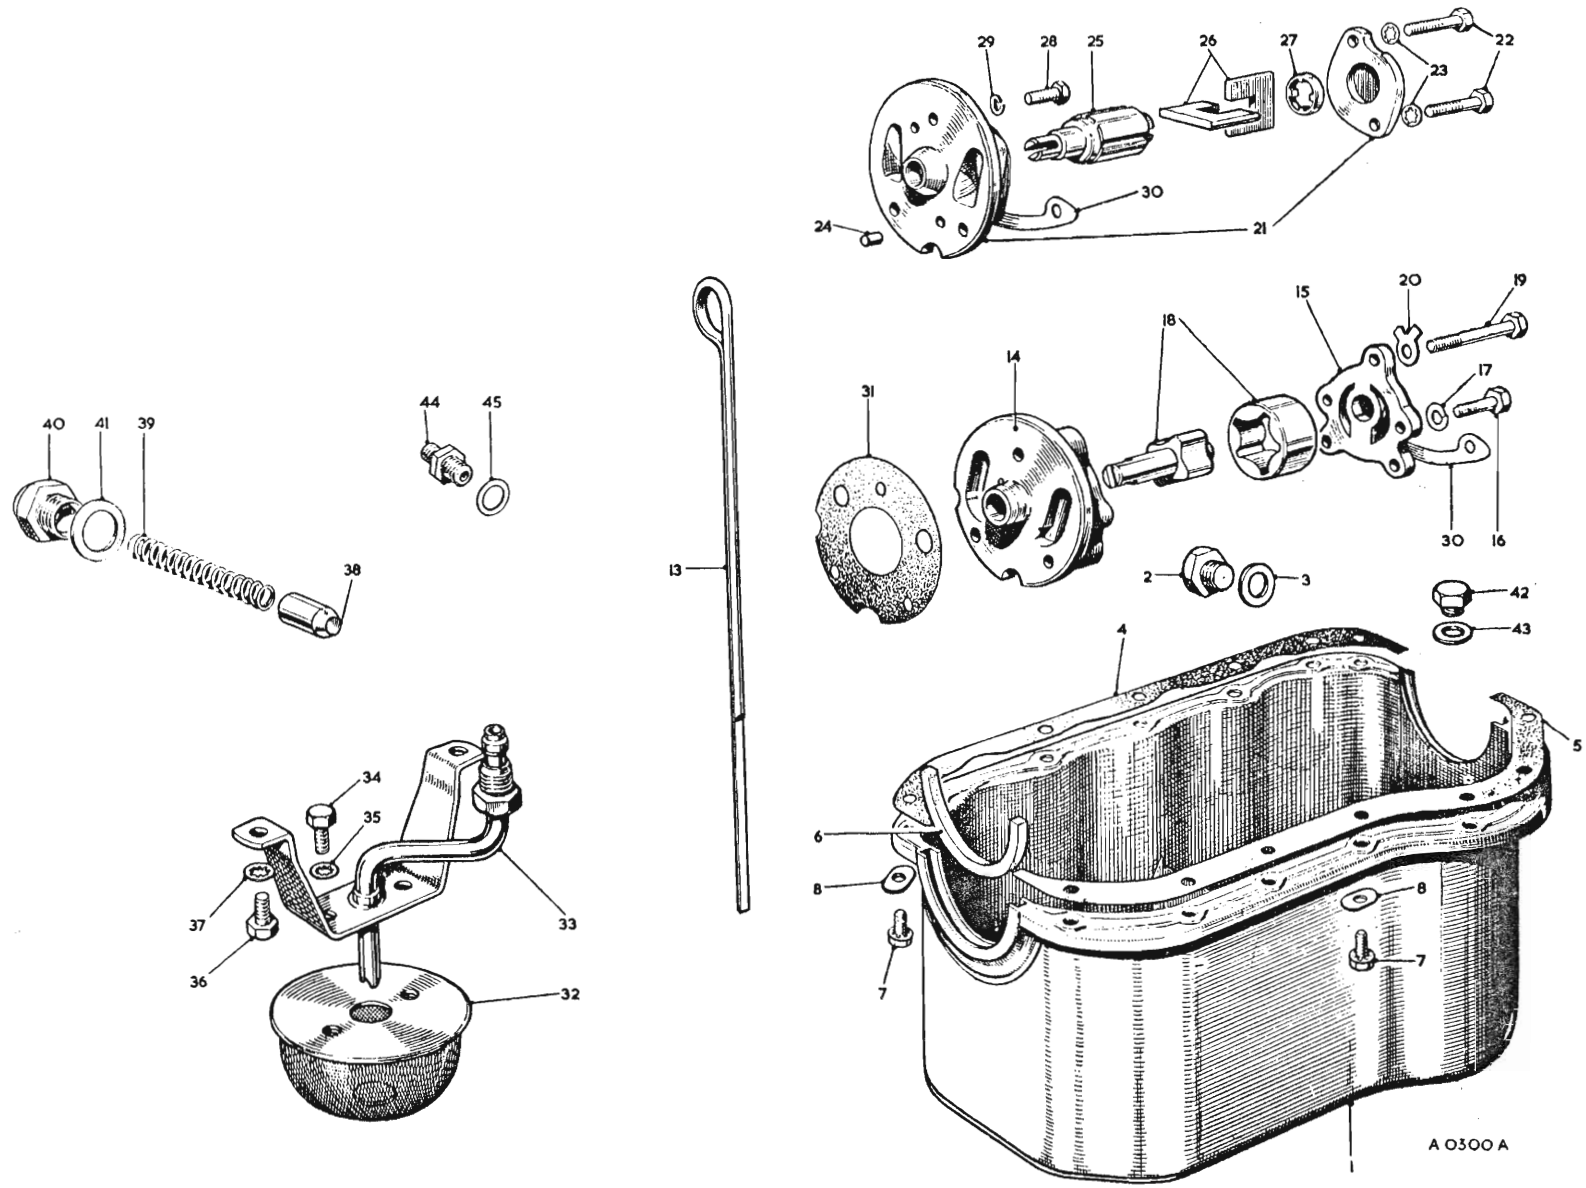


To face page A.8

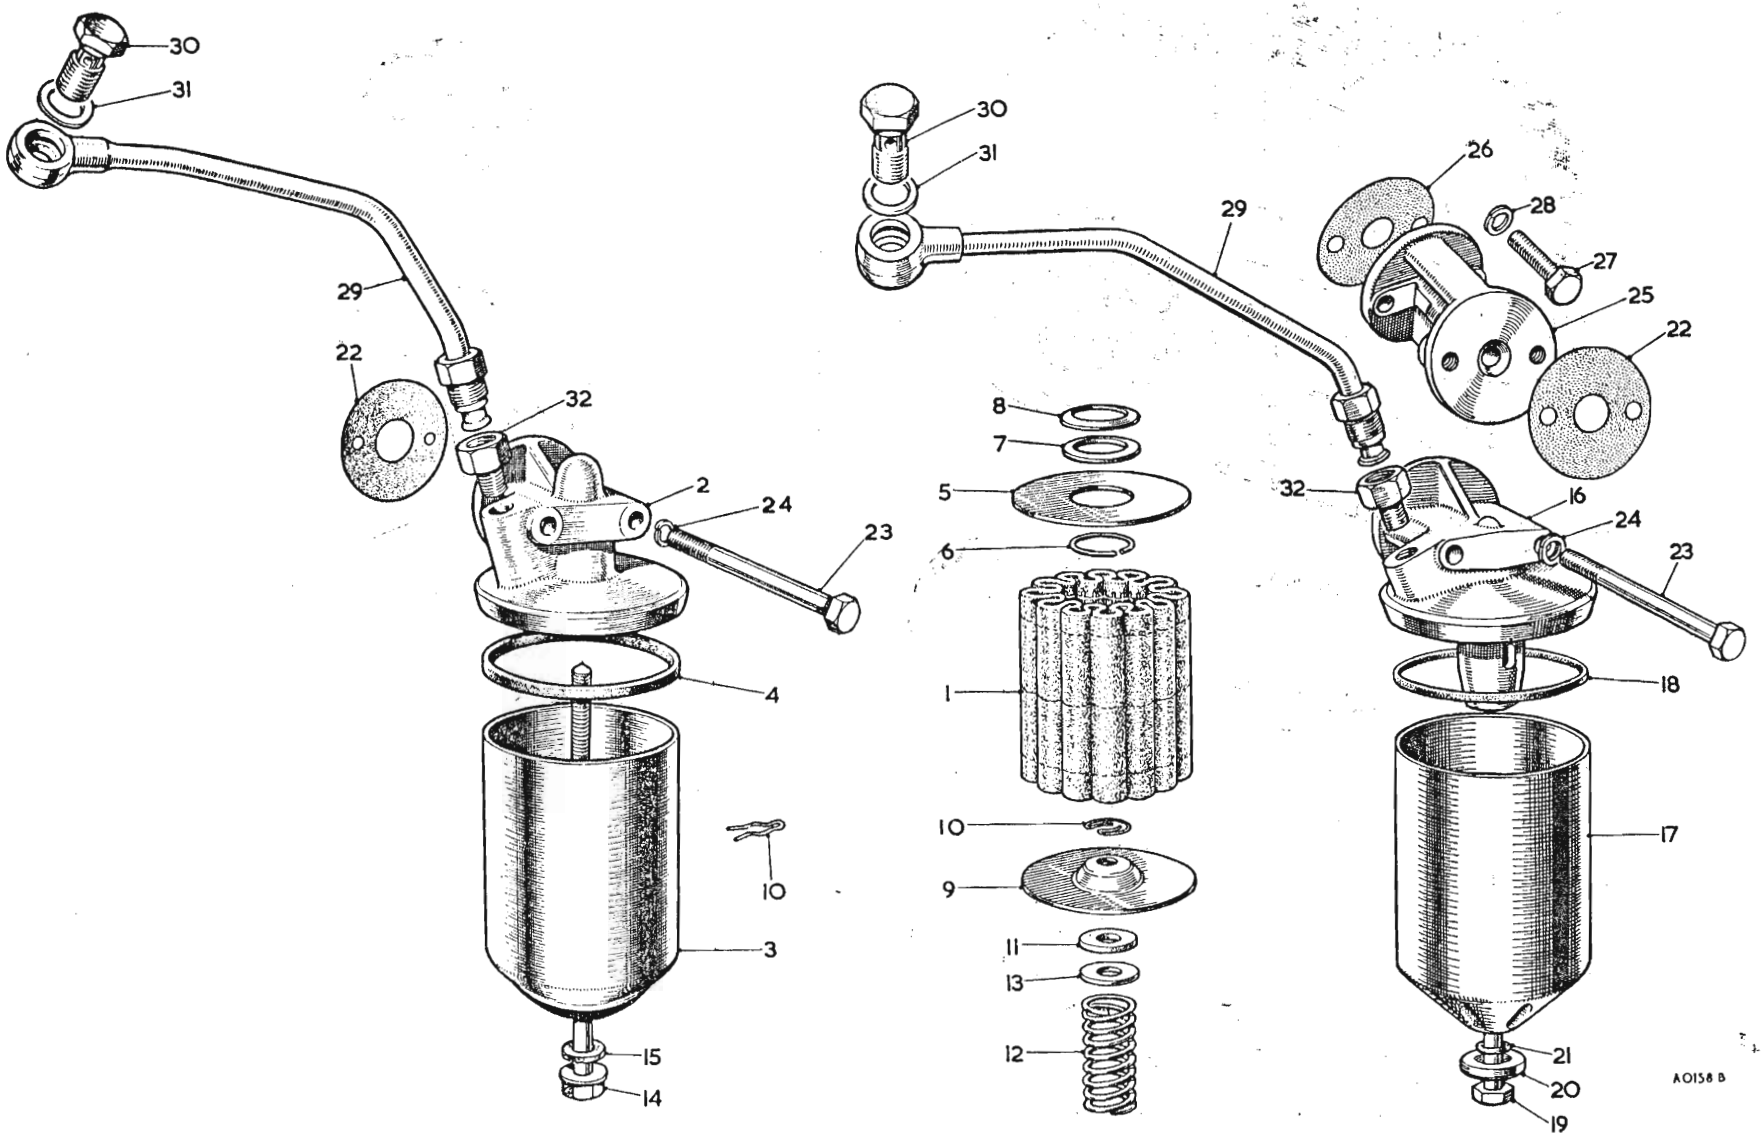


To face page A.9

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	EXTERNAL OIL FILTER—ADAPTOR—PIPE										
1	**Filter—oil (Tecalemit)**	**2A769**		1	1						
2	**Element**	**8G684**	**1**	1	1						**Alternative to 2A788**
3	Head assembly	17H945	2	1	1						
4	Sump	17H944	3	1	1						
5	Seal—sump to head	2A780	4	1	1						
6	Plate—element clamp	7H147	5	1	1						
7	Circlip—plate to head	7H157	6	1	1						
8	Washer for clamp plate (felt)	7H1756	7	1	1						
9	Washer for clamp plate (dished)	7H1761	8	1	1						
10	Plate—pressure	17H942	9	1	1						
11	Circlip—plate to centre bolt	7H1840	10	1	1						
12	Washer for pressure plate (felt)	7H1758	11	1	1						
13	Spring for pressure plate	7H1764	12	1	1						
14	Washer for spring	7H1765	13	1	1						
15	Bolt—centre	17H943	14	1	1						
16	Seal—bolt to sump	7H1759	15	1	1						
17	**Filter—oil (Purolator)**	**2A788**		1	1						
18	**Element**	**8G684**	**1**	1	1						**Alternative to 2A769**
19	Head assembly	17H1170	16	1	1						
20	Sump	17H1169	17	1	1						
21	Seal—sump to head	17H1168	18	1	1						
22	Plate—clamping	17H1150	5	1	1						
23	Circlip—clamp plate to head	17H1167	6	1	1						
24	Gasket—clamp plate to head	17H1152	7	1	1						
25	Plate—pressure	17H1148	9	1	1						
26	Circlip—plate to centre bolt	17H1476	10	1	1						
27	Seal for pressure plate	7H28	11	1	1						
28	Spring for pressure plate	7H25	12	1	1						
29	Washer for spring	7H7553	13	1	1						
30	Bolt—centre	17H1174	19	1	1						
31	Collar for centre bolt	17H1172	20	1	1						
32	Seal—'O' section collar to sump	17H1173	21	1	1						
33	Joint washer—oil filter to adaptor	2A703	22	1	1						
34	Bolt—oil filter to adaptor	HCZ0628	23	2	2						
35	Washer for bolt (spring)	LWZ206	24	2	2						
36	**Adaptor for oil filter**	**AEA305**	**25**	1	1						
37	Joint washer—adaptor to crankcase	2A703	26	1	1						
38	Screw—adaptor to crankcase	NCS0608	27	2	2						
39	Washer for set screw (spring)	LWN206	28	2	2						
40	**Pipe—oil (filter to crankcase)**	**AEA313**	**29**	1	1						
41	Screw for banjo union	2A715	30	1	1						
42	Washer for screw (copper)	2A787	31	2	2						
43	Connection	TCN206	32	1	1						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	WATER PUMP—FAN PULLEY										
1	**Pump assembly—water (R)**	**2A775**		1	1						
2	Body	2A776	1	1	1						
3	Vane	2A664	2	1	1						
4	Seal	8G698	3	1	1	12					] Alternatives
5	Seal	8G697		1	1	12					] Alternatives
6	Bearing (with spindle)	2A777	4	1	1						
7	Wire—bearing locating	2A778	5	1	1						
8	Screw for lubricating point	53K1433	6	1	1						
9	Washer for screw (fibre)	2K4974	7	1	1	12					
10	Joint washer—pump body to crankcase	2A667	8	1	1						
11	Screw—pump to crankcase (long)	HZS0515	9	2	2						
12	Screw—pump body to crankcase (short)	HZS0510	10	2	2						
13	Washer for set screw (spring)	LWN305	11	4	4						
14	Dowel for water pump	2K6124	12	2	2						
15	Hub for pulley	2A665	13	1	1						
16	**Pulley for fan and water pump**	**2A601**	**14**	**1**	**1**						
17	Stiffener for fan blade	2A803	15	1	1						
18	Screw—fan to pulley	HZS0405	16	4	4			HZS0406	From (E) 359		
19	Washer for set screw (spring)	LWN204	17	4	4						
	DYNAMO MOUNTING										
20	**Bracket for dynamo (rear)**	**2A758**	**18**	**1**	**1**						
21	Screw—bracket to crankcase	HZS0507	19	2	2						
22	Washer for set screw (spring)	LWZ305	20	2	2						
23	**Pillar—dynamo adjusting link**	**2A128**	**21**	**1**	**1**						
24	Nut for pillar	FNZ106	22	1	1						
25	Washer for pillar nut (spring)	LWZ306	23	1	1						
26	**Link—dynamo adjusting**	**AEA325**	**24**	**1**	**1**						
27	Nut—adjusting link	LNZ206	25	1	1						
28	Washer for adjusting link nut (plain)	2K9932	26	1	1						
29	Washer for adjusting link nut (spring)	LWZ306	27	1	1						
30	Bolt—dynamo to bracket	HBZ0509	28	1	1						
31	Nut for bolt	LNZ205	29	1	1						
32	Washer for bolt (spring)	2K5319	30	1	1						
33	Bolt—dynamo to water pump	HBZ0513	31	1	1						
34	Nut for bolt	LNZ205	32	1	1						
35	Washer for bolt (spring)	LWZ305	33	1	1						
36	Screw—adjusting link to dynamo	3H2098	34	1	1						
37	Washer for screw (spring)	LWZ305	35	1	1						
38	Fan for dynamo	1G1783	36	1	1						
39	Pulley for dynamo	1H998	37	1	1						
	FAN BELT										
40	Fan	AEA301	38	1/2	1/2						Quantity increased at (E) 359
41	**Belt for fan (wedge type)**	**1G2716**	**39**	**1**	**1**						

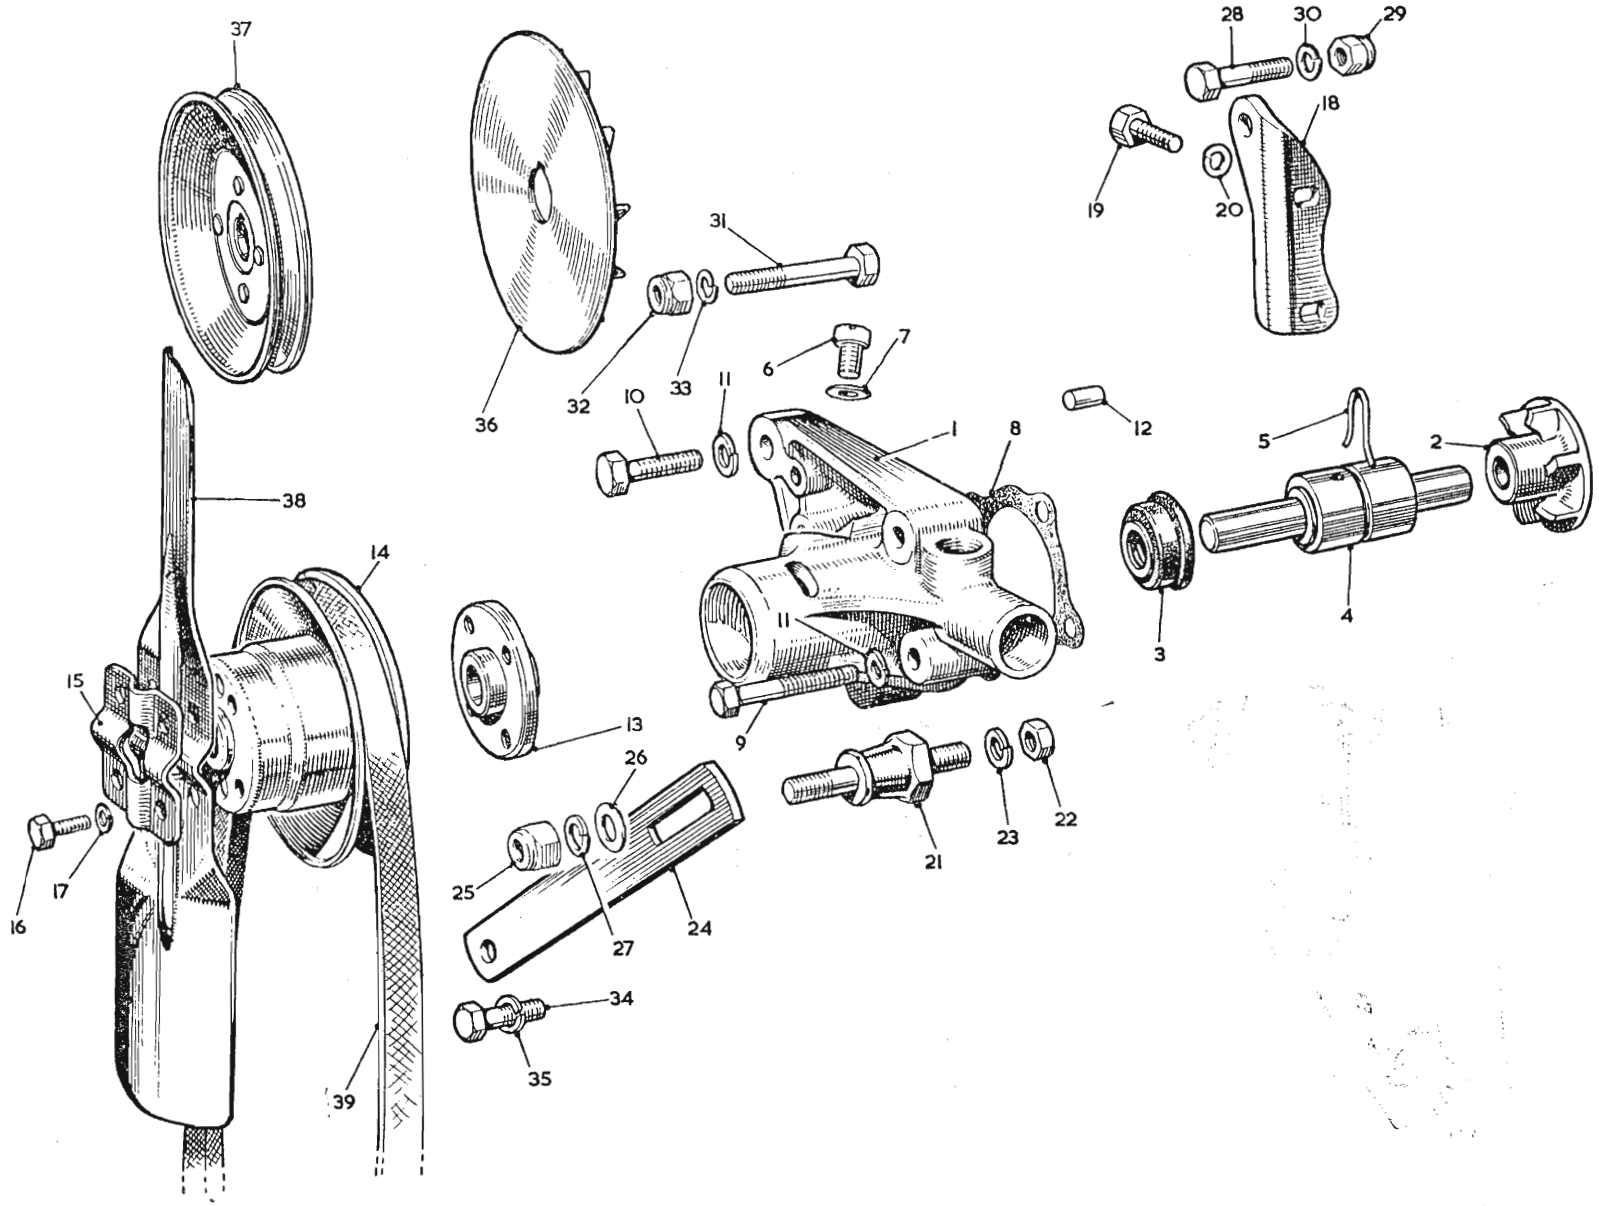

To face page A.10

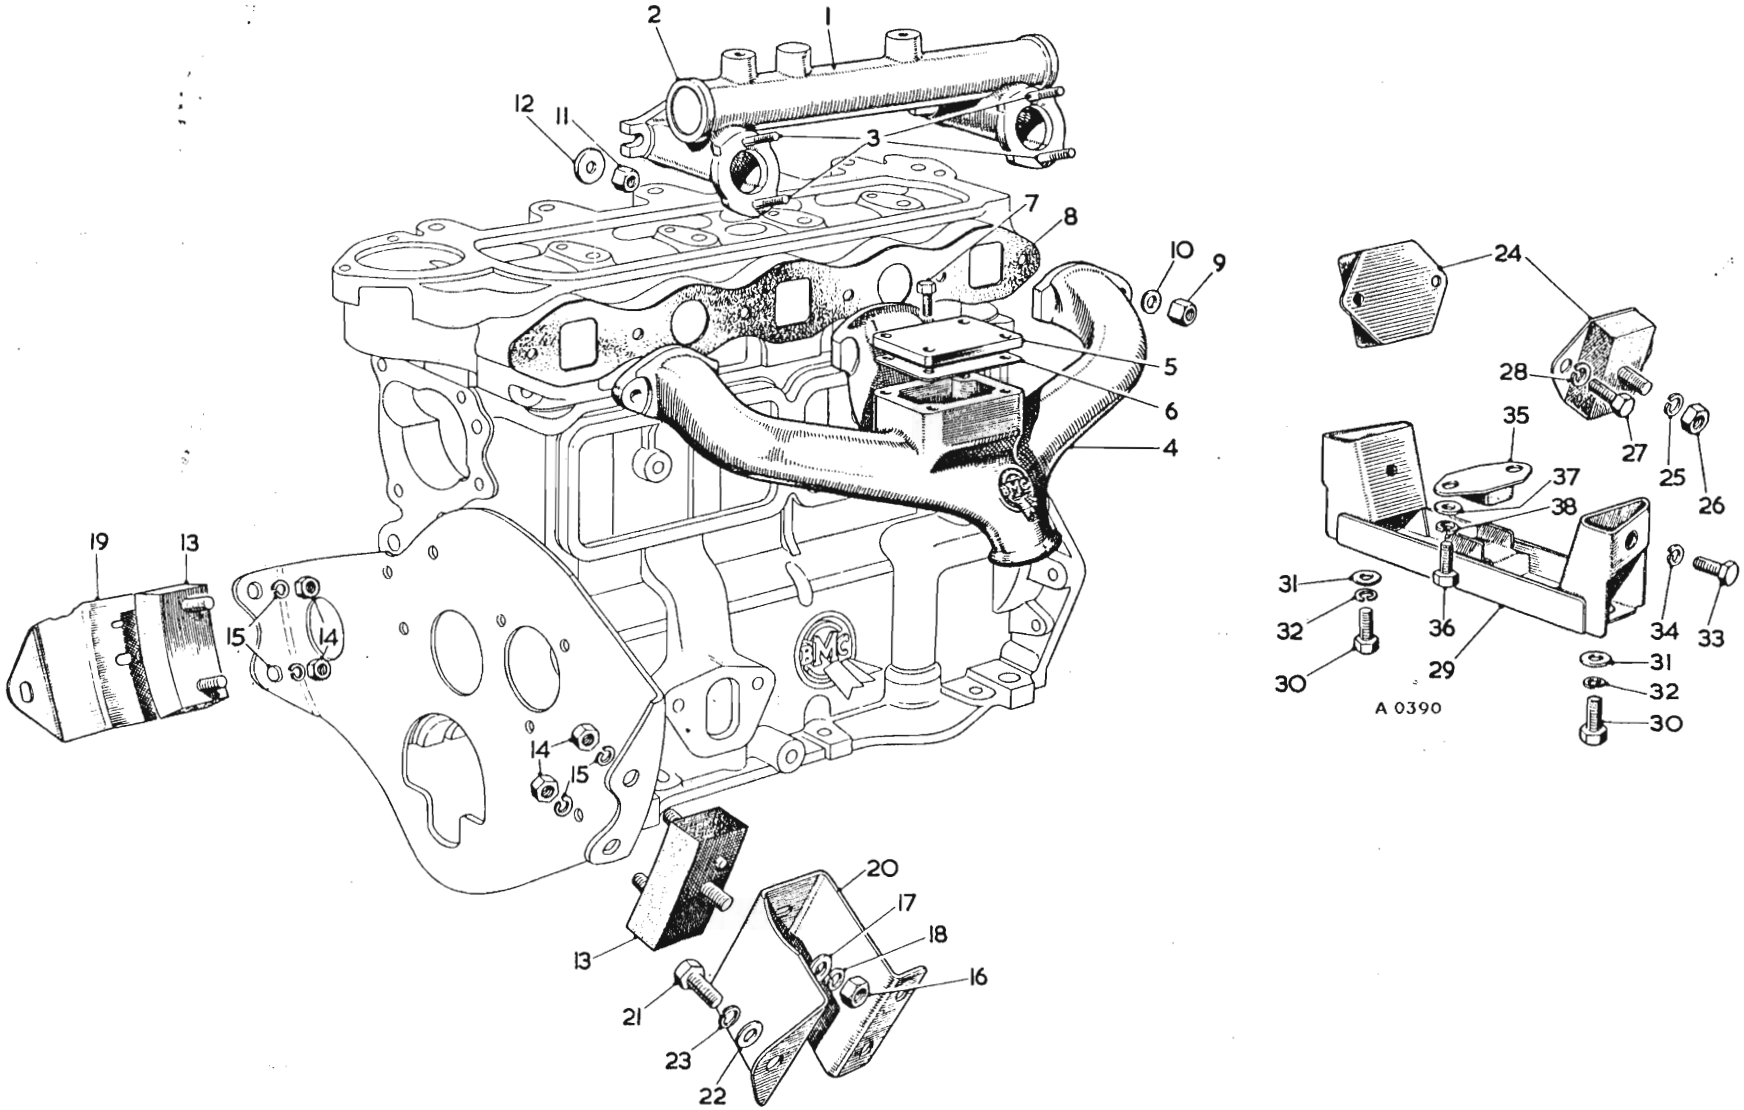


To face page A.11

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CYLINDER LINER										
1	Liner for cylinder block	2A784		4	4						For repair purposes only
	INLET AND EXHAUST MANIFOLDS										
2	**Manifold—inlet (with plug and studs)**	**AEA19**	**1**	**1**	**1**						
3	Plug for inlet manifold	2K8159	2	2	2						
4	Stud—carburetter to manifold	51K448	3	4	4						Use CHS0414 when heater element is fitted
5	**Manifold—exhaust**	**2A102**	**4**	**1**	**1**						
6	Plate for exhaust manifold (blanking)	AEA303	5	1	1						
7	Joint washer for blanking plate	2A106	6	1	1						
8	Screw for blanking plate	HNS0405	7	4	4						
9	Joint—inlet and exhaust manifolds to cylinder head	2A719	8	1	1						
10	Nut for stud—exhaust manifold to cylinder head	BNN105	9	2	2	12					
11	Washer for exhaust manifold stud	2K1203	10	2	2	36					
12	Nut for stud—inlet and exhaust manifolds to cylinder head	BNN105	11	4	4	12					
13	Washer for inlet and exhaust manifold stud	2A110	12	4	4	12					
	ENGINE MOUNTING DETAILS										
14	**Mounting assembly (front)**	**2A305**	**13**	**2**	**2**						
15	Nut—mounting to engine	FNZ105	14	4	4						
16	Washer for mounting nut (spring)	LWZ305	15	4	4						
17	Nut—mounting to bracket	FNZ106	16	2	2						
18	Washer for mounting nut (plain)	2K1204	17	2	2	72					
19	Washer for mounting nut (spring)	LWZ306	18	2	2						
20	Bracket—engine mounting (front R/H)	2A5570	19	1	1						
21	Bracket—engine mounting (front L/H)	2A5571	20	1	1						
22	Bolt—bracket to frame	HZS0505	21	6	6						
23	Washer for bracket bolt (plain)	PWZ105	22	6	6						
24	Washer for bracket bolt (spring)	2K5319	23	6	6						
25	**Mounting assembly (rear)**	**2A5422**	**24**	**2**	**2**						
26	Washer for rear mounting (spring)	LWZ206	25	2	2						
27	Nut for rear mounting	FNZ106	26	2	2						
28	Screw—rear mounting to gearbox	53K154	27	4	4						
29	Washer for rear mounting screw (spring)	LWZ205	28	4	4	24					
30	**Plate assembly—rear mounting support**	**2A5552**	**29**	**1**	**1**						
31	Screw—support plate to cross-member	HBZ0626	30	2	2						
32	Washer for support plate screw (plain)	PWZ106	31	2	2						
33	Washer for support plate screw (spring)	LWZ206	32	2	2						
34	Screw—support plate bracket to gearbox cover	HPZ0505	33	2	2						
35	Washer for bracket screw (spring)	LWZ205	34	2	2	24					
36	Rubber—rear mounting tie	2A5420	35	1	1						
37	Screw—tie rubber to gearbox	53K154	36	2	2						
38	Washer for tie rubber screw (plain)	PWZ105	37	2	2						
39	Washer for tie rubber screw (spring)	LWZ205	38	2	2	24					


Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	OVERSIZE AND UNDERSIZE COMPONENTS										
1	Piston assembly (standard)	8G687		4	4						
2	Piston assembly (·010″ O/S)	8G068710		4	4						
3	Piston assembly (·020″ O/S)	8G068720		4	4						
4	Piston assembly (·030″ O/S)	8G068730		4	4						
5	Piston assembly (·040″ O/S)	8G068740		4	4						
6	Ring—compression—plain (standard)	2A755		4	4						
7	Ring—compression—plain (·010″ O/S)	2A075510		4	4						
8	Ring—compression—plain (·020″ O/S)	2A075520		4	4						
9	Ring—compression—plain (·030″ O/S)	2A075530		4	4						
10	Ring—compression—plain (·040″ O/S)	2A075540		4	4						
11	Ring—compression—tapered (standard)	2A686		8	8						
12	Ring—compression—tapered (·010″ O/S)	2A068610		8	8						
13	Ring—compression—tapered (·020″ O/S)	2A068620		8	8						
14	Ring—compression—tapered (·030″ O/S)	2A068630		8	8						
15	Ring—compression—tapered (·040″ O/S)	2A068640		8	8						
16	Ring—scraper (standard)	2A687		4	4						
17	Ring—scraper (·010″ O/S)	2A068710		4	4						
18	Ring—scraper (·020″ O/S)	2A068720		4	4						
19	Ring—scraper (·030″ O/S)	2A068730		4	4						
20	Ring—scraper (·040″ O/S)	2A068740		4	4						
21	Pin—gudgeon (standard)	2A837		4	4						
22	Pin—gudgeon (·002″ O/S)	2A083702		4	4						
23	Pin—gudgeon (·004″ O/S)	2A083704		4	4						
24	Pin—gudgeon (·006″ O/S)	2A083706		4	4						
25	Bearing—main (standard)	8G2222		1	1	set					
26	Bearing—main (·010″ U/S)	8G222210		1	1	set					
27	Bearing—main (·020″ U/S)	8G222220		1	1	set					
28	Bearing—main (·030″ U/S)	8G222230		1	1	set					
29	Bearing—main (·040″ U/S)	8G222240		1	1	set					
30	Bearing—connecting rod—big-end (standard)	8G2210		1	1	set					
31	Bearing—connecting rod—big-end (·010″ U/S)	8G221010		1	1	set					
32	Bearing—connecting rod—big-end (·020″ U/S)	8G221020		1	1	set					
33	Bearing—connecting rod—big-end (·030″ U/S)	8G221030		1	1	set					
34	Bearing—connecting rod—big-end (·040″ U/S)	8G221040		1	1	set					
35	Bearing—connecting rod—big-end (standard)	8G2198		1	1	set					Alternatives
36	Bearing—connecting rod—big-end (·010″ U/S)	8G219810		1	1	set					
37	Bearing—connecting rod—big-end (·020″ U/S)	8G219820		1	1	set					
38	Bearing—connecting rod—big-end (·030″ U/S)	8G219830		1	1	set					
39	Bearing—connecting rod—big-end (·040″ U/S)	8G219840		1	1	set					

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	ENGINE GASKET SETS										
1	**Decarbonizing gasket set**	**8G2200**		1	1			**8G2268**	**From (E) 1397**		
2	Cylinder head gasket			1	1						
3	Manifold gasket			1	1						
4	Water outlet elbow joint washer			1	1						
5	Valve rocker cover joint washer			1	1						
6	Valve oil seals			8	8						
7	Carburetter joint washers			2	2						
8	Exhaust manifold blanking plate joint washer			1	1						
9	Cover-plate for heater tap hole joint washer			1	1						
10	**Supplementary gasket set**	**8G2232**		1	1						**Use with relevant gasket set for complete engine overhaul**
11	Main bearing cap strips			2	2						
12	Front plate joint washer			1	1						
13	Front cover joint washer			1	1						
14	Side cover joint washer			2	2						
15	Oil pump joint washer			1	1						
16	Sump joint washer (R/H)			1	1						
17	Sump joint washer (L/H)			1	1						
18	Water pump joint washer			1	1						
19	Petrol pump joint washer			1	1						
20	Gearbox mounting plate to crankcase joint washer			1	1						
21	Oil priming plug gasket			1	1						
22	Sump drain plug gasket			1	1						
23	Crankcase rear cover joint washer			1	1						
24	Oil filter to adaptor and adaptor to crankcase joint										
25	washer			2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	EXHAUST SYSTEM										
1	**Exhaust pipe**	**2A2089**	**1**	1	1						
2	Clamp—pipe to manifold	2A237	2	2	2						
3	Bolt—clamp	HZS0518	3	2	2						
4	Washer for clamp bolt	2K5806	4	4	4	12					
5	Nut for clamp bolt	AHH5171	5	2	2						
6	Bracket—exhaust mounting (to clutch housing)	AHA5238	6	1	1						
7	Clip—support—exhaust pipe	AHA5239	7	1	1						
8	Screw—clip to bracket	HZS0506	8	2	2						
9	Washer for screw (plain)	PWZ105	9	4	4						
10	Washer for screw (spring)	LWZ205	10	2	2	24					
11	Nut for screw	FNZ105	11	2	2						
12	Screw—clip to pipe	HZS0508	12	1	1						
13	Washer for screw (spring)	LWZ205	13	1	1	24					
14	Nut for screw	FNZ205	14	1	1						
15	Clip—support—exhaust pipe	2A2091	15	1	1						
16	Bolt—clip to pipe	HZS0406	16	1	1						
17	Washer for clip bolt (spring)	LWZ204	17	1	1						
18	Nut for clip bolt	FNZ104	18	1	1						
19	Mounting—exhaust pipe (rubber)	3H3076	19	1	1						
20	Bolt—pipe clip to mounting	HZS0505	20	1	1						
21	Washer for clip bolt (spring)	LWZ205	21	1	1	24					
22	Nut for clip bolt	FNZ105	22	1	1						
23	Screw—rubber mounting to cross-member	HZS0505	23	2	2						
24	Washer for mounting screw (spring)	LWZ205	24	2	2	24					
25	**Silencer assembly**	**2A2090**	**25**	1	1						] **Alternatives**
26	**Silencer assembly**	**ARA79**		1	1						
27	Clip—silencer to exhaust pipe	AHA5354	26	1	1						
28	Screw fixing clip	HZS0507		1	1						
29	Nut for screw	FNZ105		1	1						
30	Washer for nut (spring)	LWZ205		1	1						
31	Bush—silencer support (rubber)	2A2092	27	2	2						
32	Washer for rubber bushes	PWZ205	28	1	1						
33	Locknut for rubber bushes	LNZ205	29	1	1						

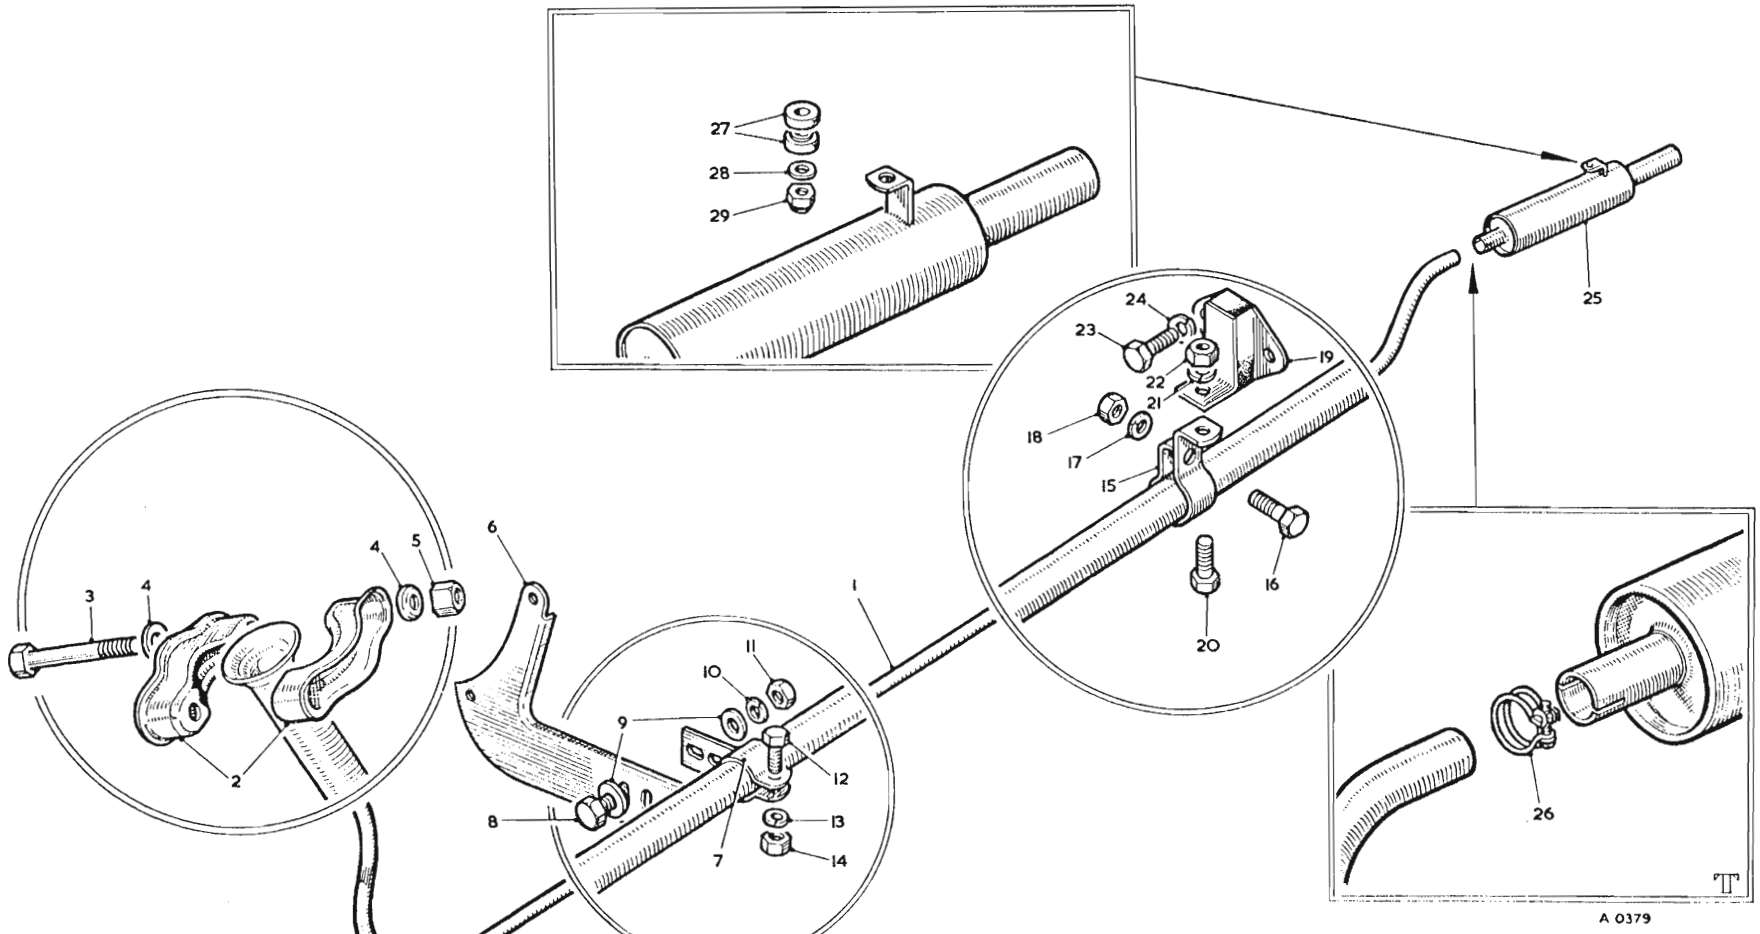

To face page A.14

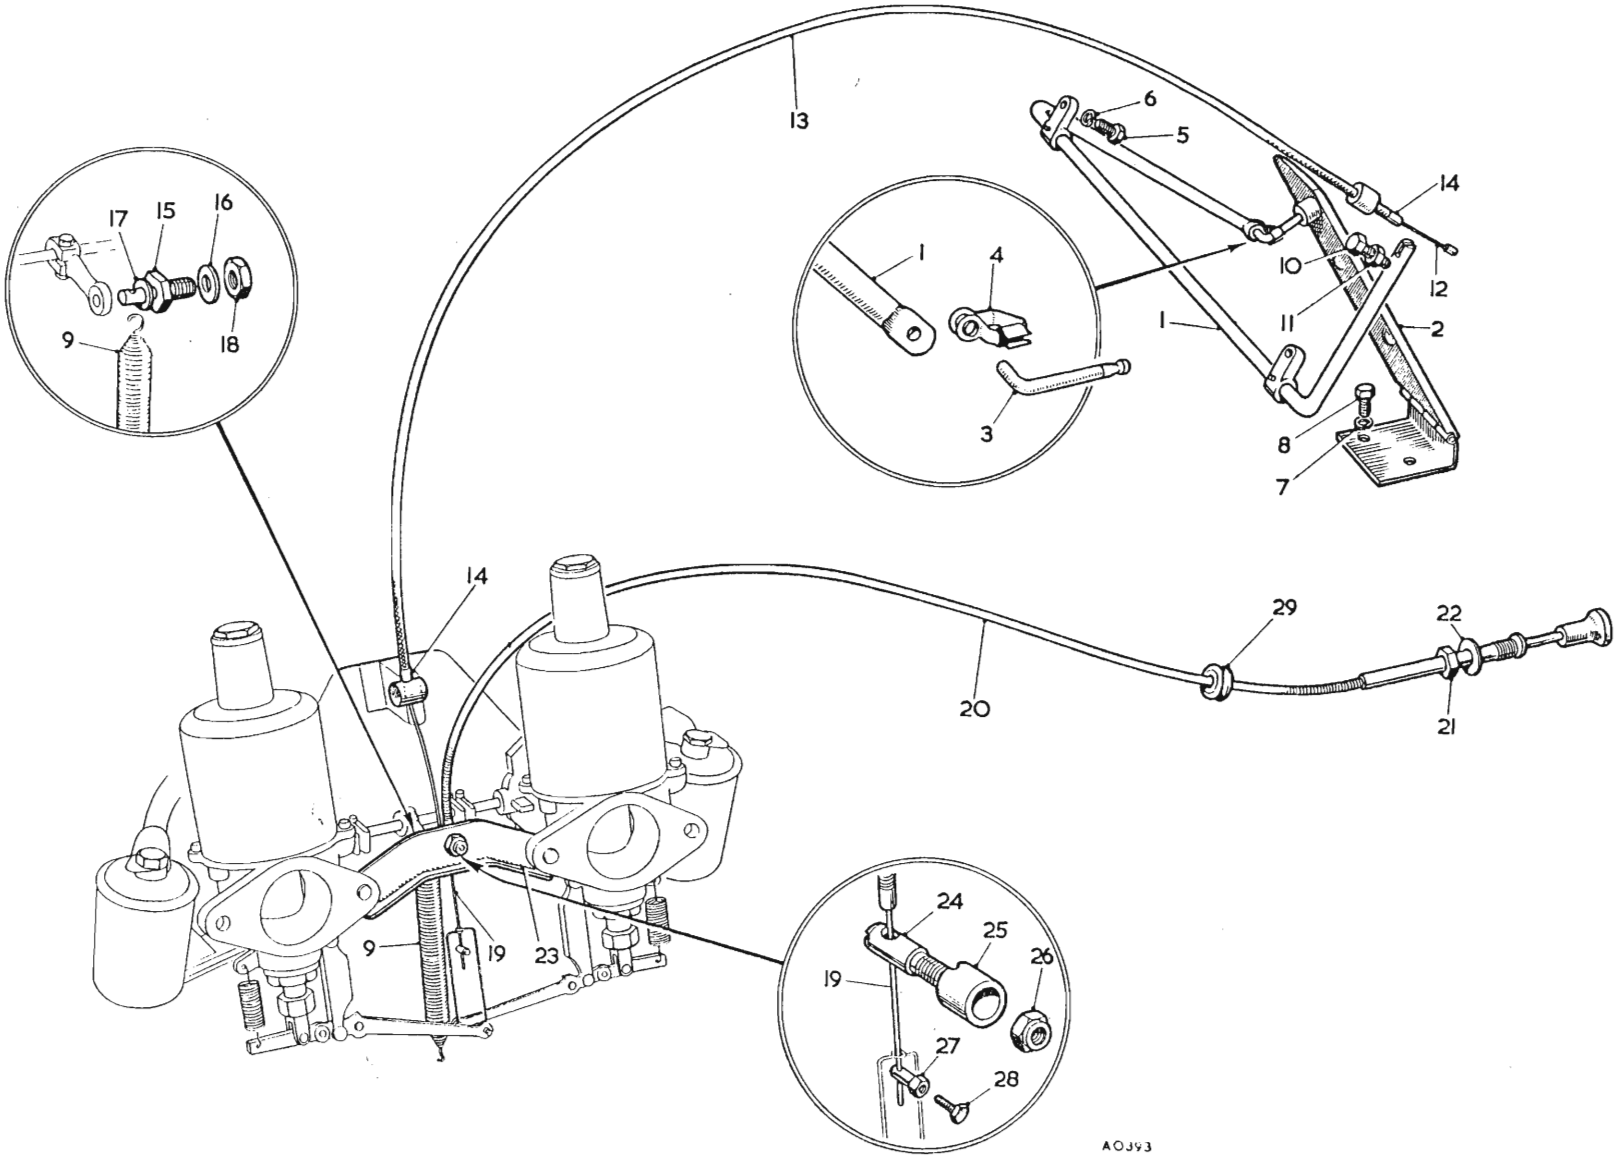


To face page A.15

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	ENGINE CONTROLS										
	ACCELERATOR CONTROL										
1	**Lever—pedal**	**2A2077**	1	1	1						
2	Pedal	11G2034	2	1	1						
3	Link—pedal	2A2079	3	1	1						
4	Clip—link to lever	13H72	4	1	1						
5	Screw—lever bracket to foot-well	HZS0407	5	2	2						
6	Washer for bracket screw (spring)	LWZ204	6	2	2						
7	Screw—pedal to floor	HZS0404	7	2	2						
8	Washer for pedal to floor screw (spring)	LWZ204	8	2	2						
9	Spring—return	ACH8393	9	1	1						
10	Screw—pedal lever stop	HZS0407	10	1	1						
11	Locknut for lever stop screw	FNZ204	11	1	1						
12	**Cable assembly**	**21G5077**		1	1						
13	Cable (inner)	21G5078	12	1	1						
14	Cable (outer)	ACA5322	13	1	1						
15	Ferrule for cable	ACA5416	14	2	2						
16	Pin—cable to carburetter lever	ACC5062	15	1	1						
17	Washer for cable to lever pin—large (plain)	PWZ203	16	1	1						
18	Washer for cable to lever pin—small (plain)	PWZ104	17	1	1	12					
19	Nut—cable to lever pin	FNZ104	18	1	1						
	MIXTURE CONTROL										
20	**Cable assembly—control**	**2A2086**		1	1						
21	Cable—inner (complete with knob)	97H2074	19	1	1						
22	Cable (outer)	97H2075	20	1	1						
23	Nut	97H2076	21	1	1						
24	Washer—control to dash (plain)	PWZ106	22	1	1						
25	Bracket—control to carburetter	2A850	23	1	1						
26	Pin—control to bracket	11B542	24	1	1						
27	Distance piece for pin	11B543	25	1	1						
28	Locknut for pin	53K1392	26	1	1						
29	Trunnion—cable to carburetter lever	1B2697	27	1	1						
30	Bolt—cable trunnion	53K1023	28	1	1						
31	Grommet—control through dash	RFN303	29	1	1						


IGNITION EQUIPMENT

DISTRIBUTOR

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Distributor**	**2A721**		**1**	**1**						
2	Plate assembly—clamping	3H2138	1	1	1						
3	Cap (less cables)	17H5422	2	1	1						
4	Brush and spring	17H5065	3	1	1						
5	Rotor arm	7H5086	4	1	1						
6	Contacts	17H5423	5	1	1	set					
7	Condenser	17H5421	6	1	1						
8	Plate—contact breaker base	17H5469	7	1	1						
9	Terminal with bush and lead—low-tension	37H5409	8	1	1						
10	Lead—earth	17H5531	9	1	1						
11	Cam	17H5066	10	1	1						
12	Springs—automatic advance	37H5440	11	1	1	set					
13	Toggles	17H5069	12	2	2						
14	Weight assembly	17H5095	13	2	2						
15	Shaft and action plate	37H5439	14	1	1						
16	Vacuum unit with actuating arm	37H5438	15	1	1						
17	Bushing	17H5071	16	1	1						
18	Clip—cap retaining	17H5064	17	2	2						
19	Dog—driving	17H5118	18	1	1						
20	Sundry parts	17H5106		1	1	set					
21	Cable—high-tension—Nos. 1, 2, 3, and 4	45223		1	1	100'					
22	Cable—coil to distributor	45223		1	1						
23	Ferrule for cable No. 1	3H1655	19	1	1						
24	Ferrule for cable No. 2	3H1656	20	1	1						
25	Ferrule for cable No. 3	3H1657	21	1	1						
26	Ferrule for cable No. 4	3H1658	22	1	1						
27	Connector for sparking plug	8G616	23	4	4						
28	Spacer for high-tension cables—4-way	1G2673	24	1	1						
29	Screw—clamping plate to distributor housing	6K639	25	2	2	12					
30	**Pipe with clip—vacuum ignition control**	**AEA346**	**26**	**1**	**1**						
31	Clip for vacuum pipe	1B2121	27	1	1			ACH9009	From (E) 245		

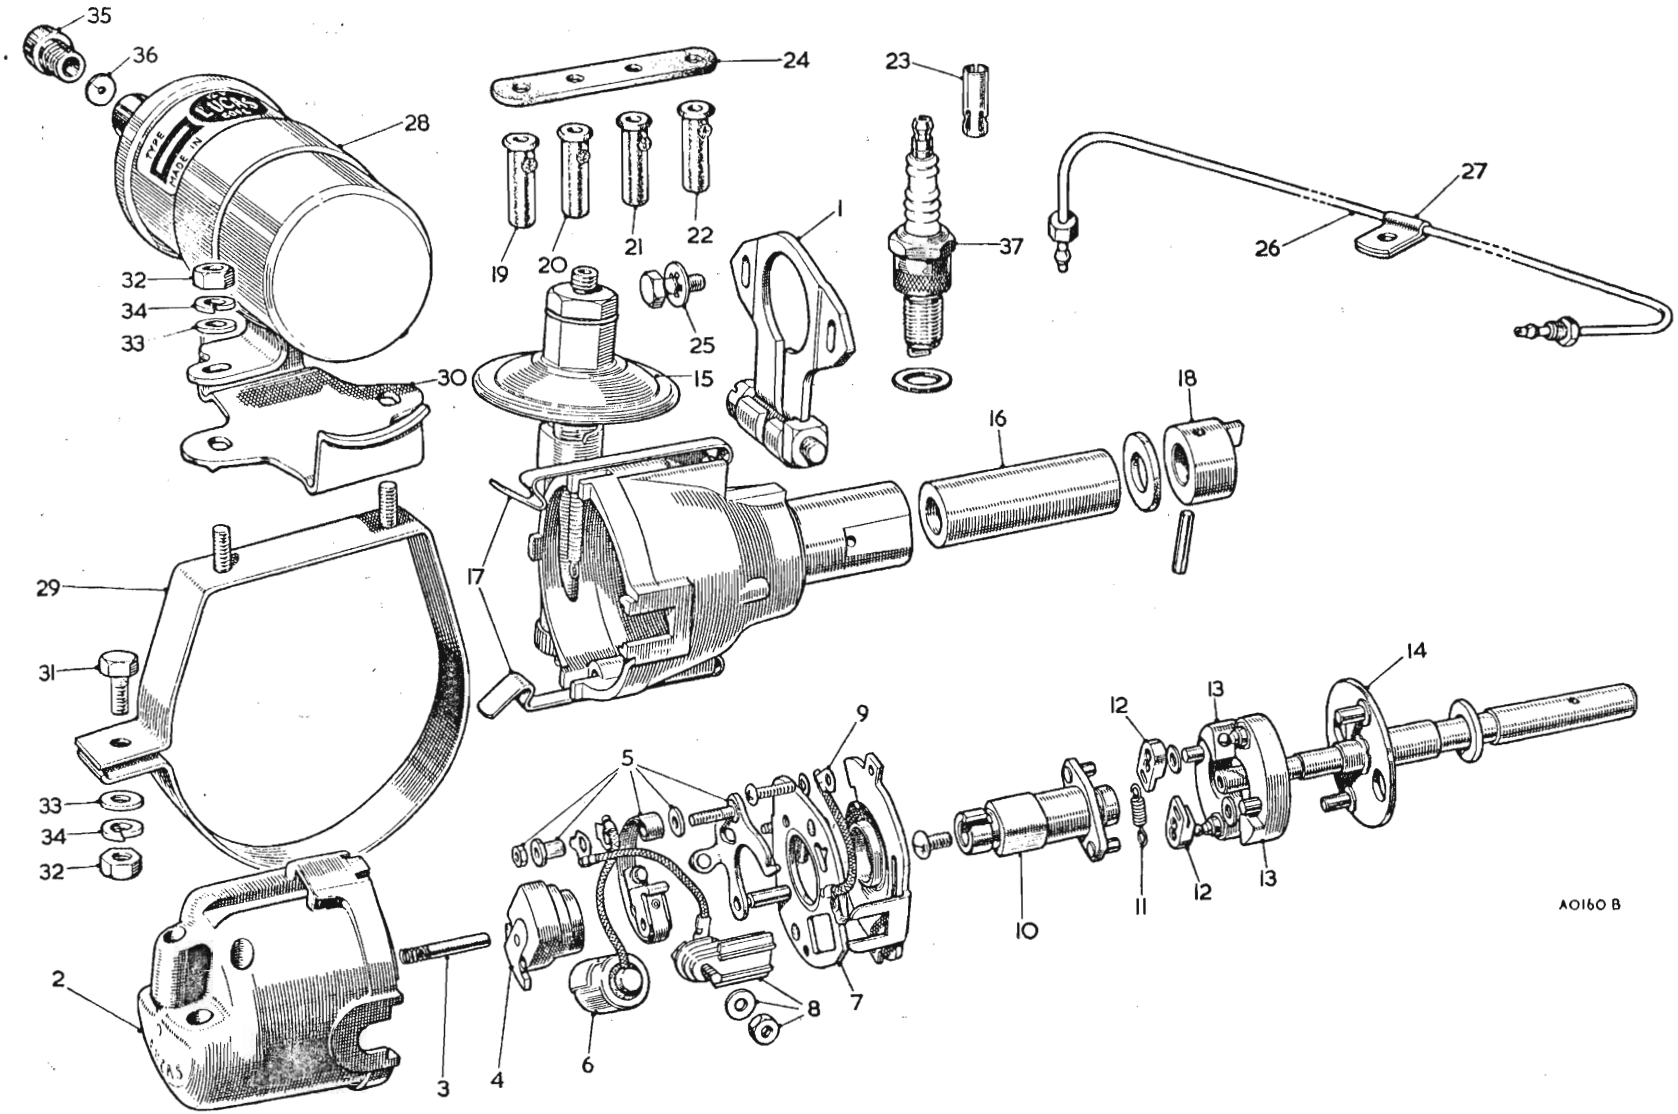

To face page B.1

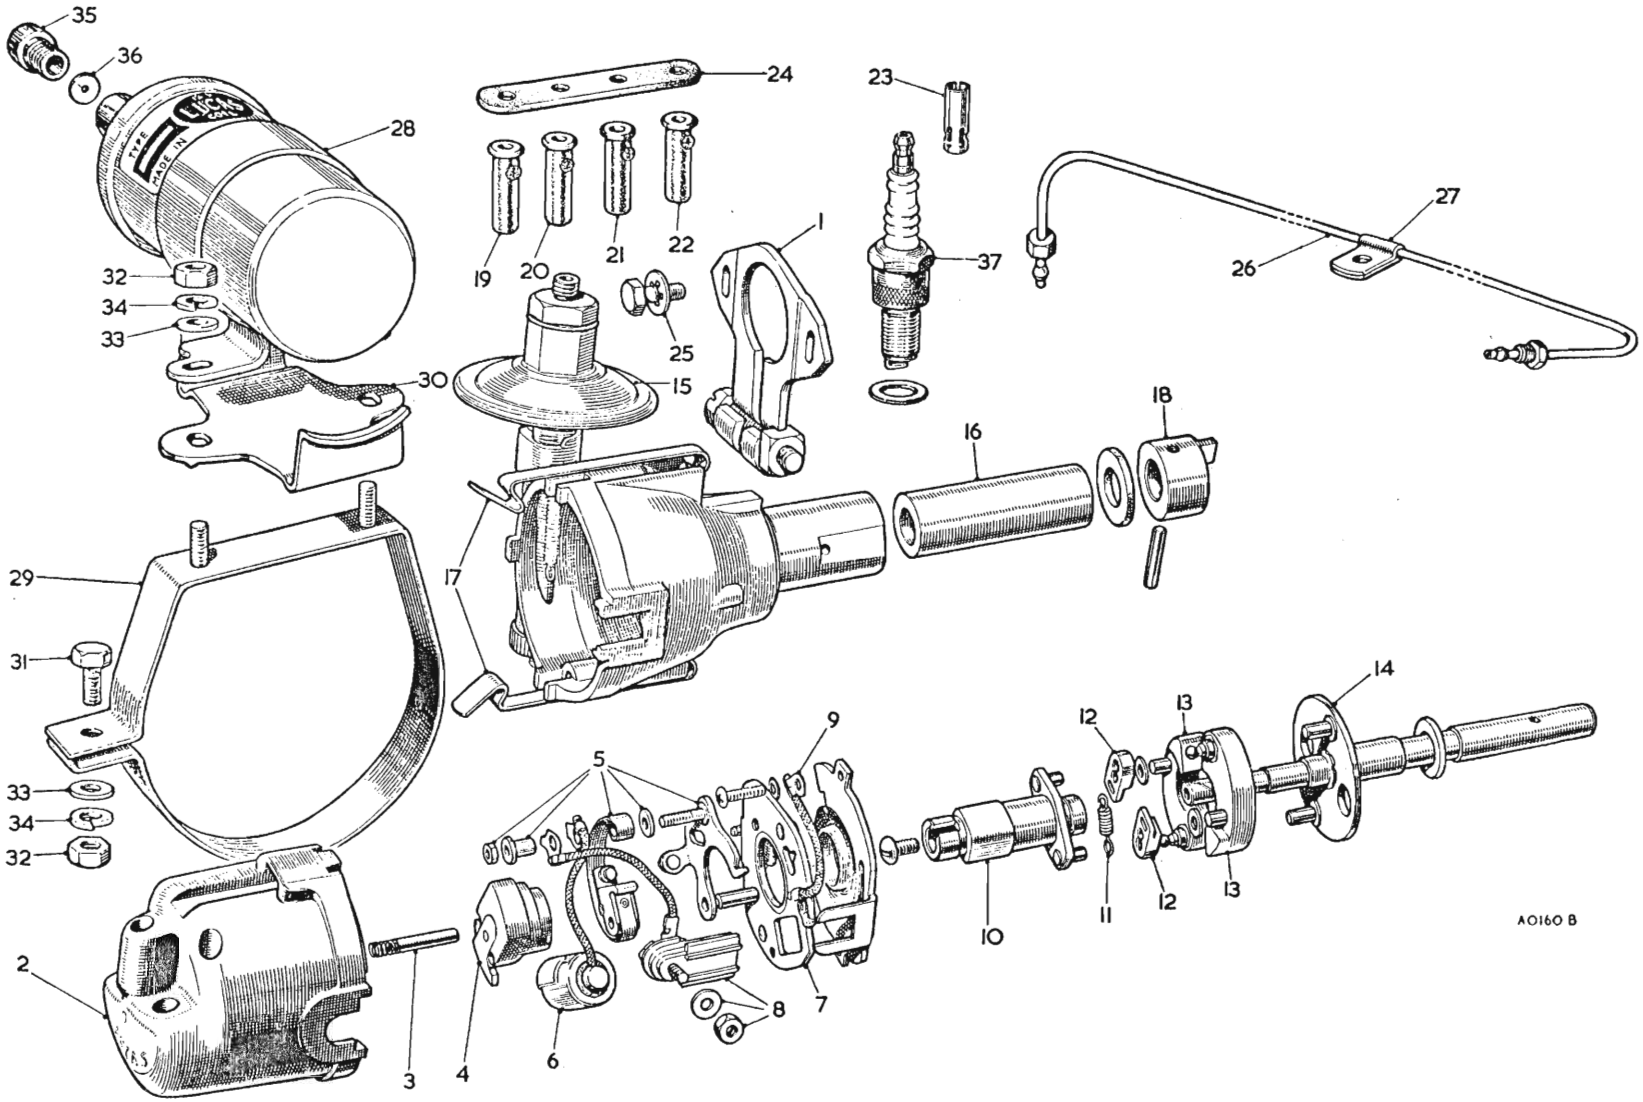


To face page B.2


Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	COIL										
1	**Coil—ignition**	**2A536**	**28**	**1**	**1**						
2	Bracket—coil to dynamo	1H1070	29	1	1						
3	Plate for coil—steady	11G221	30	1	1						
4	Bolt for bracket—clamp	HZS0406	31	1	1						
5	Nut for bolt	FNZ104	32	3	3						
6	Washer for bolt (plain)	PWN204	33	3	3						
7	Washer for bolt (spring)	LWN304	34	3	3						
8	Terminal—high-tension	3H2695	35	1	1						
9	Washer for terminal	3H2696	36	1	1						
	SPARKING PLUGS										
10	Sparking plug	3H2006	37	4	4						
11	Sparking plug	2A375		4	4						When short-wave radio is fitted

COOLING SYSTEM

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Radiator assembly**	**ARA73**	**1**	**1**	**1**						
2	Cap—filler	ARH1039	2	1	1						
3	Tap—drain—radiator	3H2724	3	1	1						] Alternatives
4	Tap—drain—radiator	13H82		1	1						
5	Bracket—radiator to wheel arch (R/H)	2A5591	4	1	1						
6	Bracket—radiator to wheel arch (L/H)	2A5592	5	1	1						
7	Screw—bracket to wheel arch	HZS0405	6	4/3	4/3						] Quantity reduced when screen washer is fitted
8	Washer for bracket screw (plain)	PWZ204	7	4/3	4/3						
9	Washer for bracket screw (spring)	LWZ204	8	4/3	4/3						
10	Screw—radiator to bracket	HZS0404	9	4	4						
11	Washer for radiator screw (plain)	PWZ104	10	4	4	12					
12	Washer for radiator screw (spring)	LWZ304	11	4	4						
13	Nut for screw	FNZ104	12	4	4						
14	Hose—radiator to pump	2A2083	13	1	1						
15	Hose—radiator to pump	2A2084	14	1	1						When heater is fitted
16	Hose—outlet elbow to radiator	2A2082	15	1	1						
17	Clip—hose	8G550	16	4	4						
18	**Grille assembly—radiator**	**14A4715**	**17**	**1**	**1**						
19	Push-on fixes—grille to bonnet	BHA4082	18	13	13						

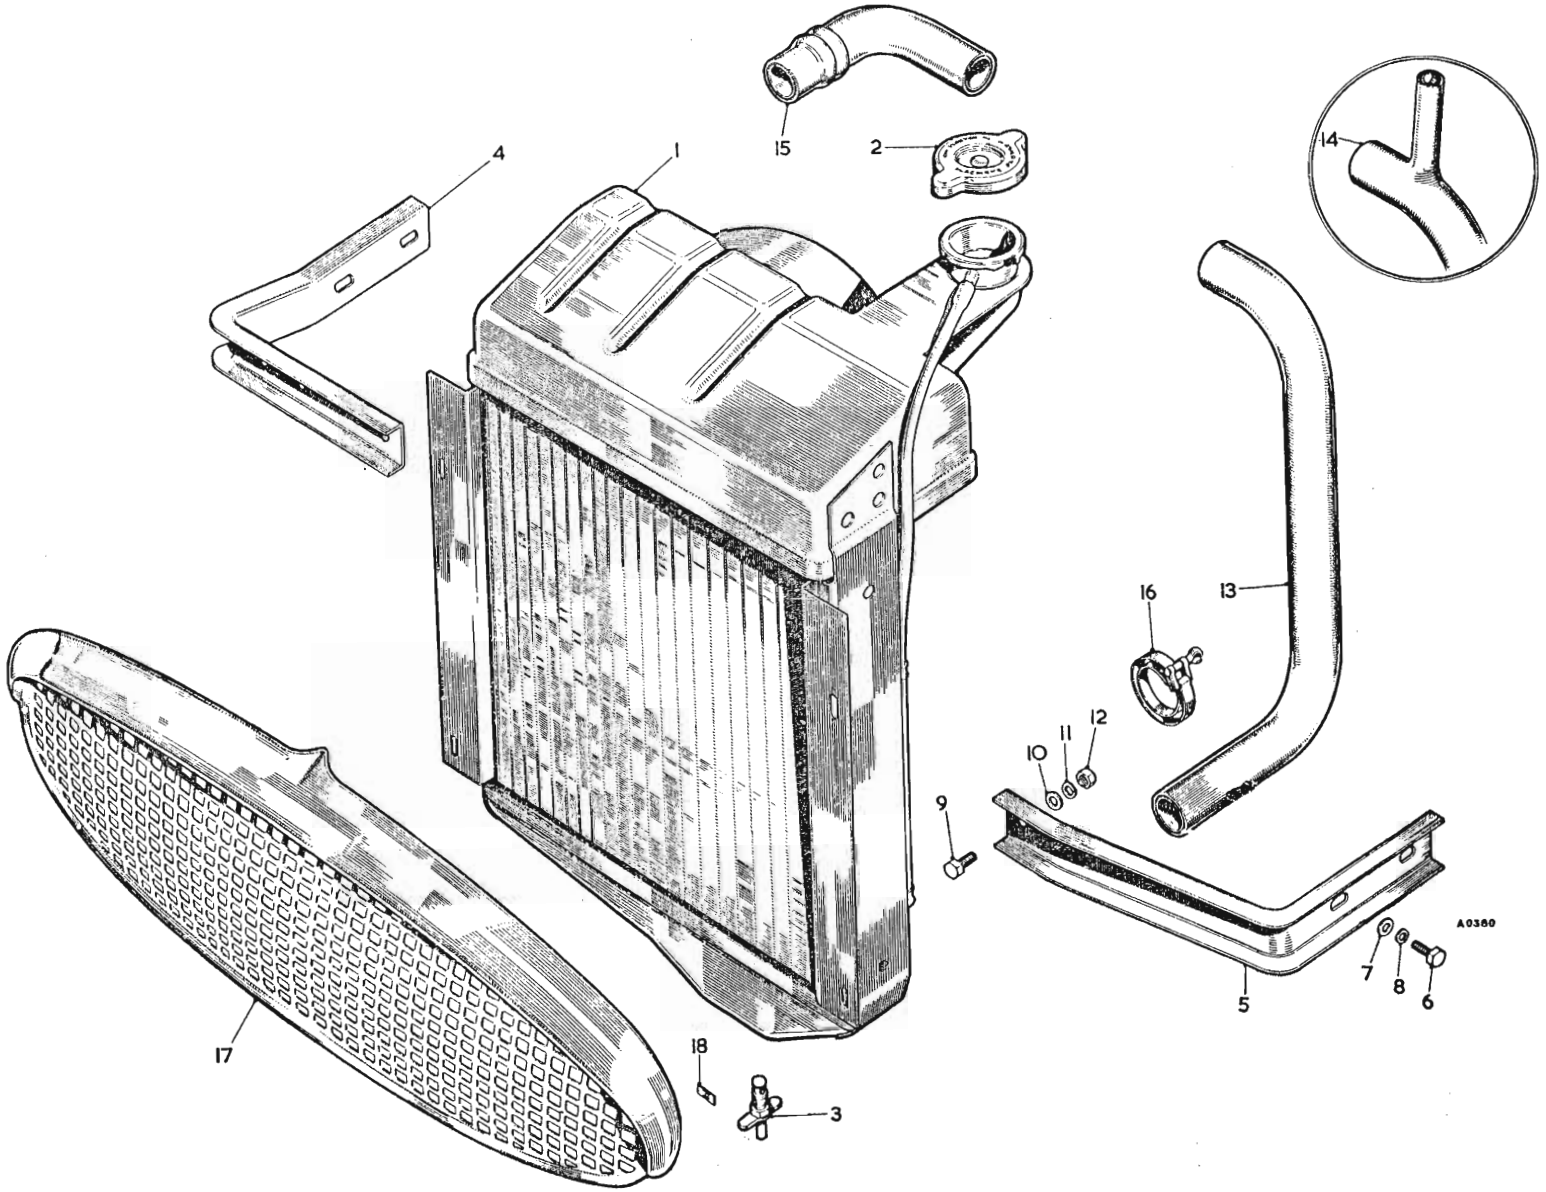

To face page C.1

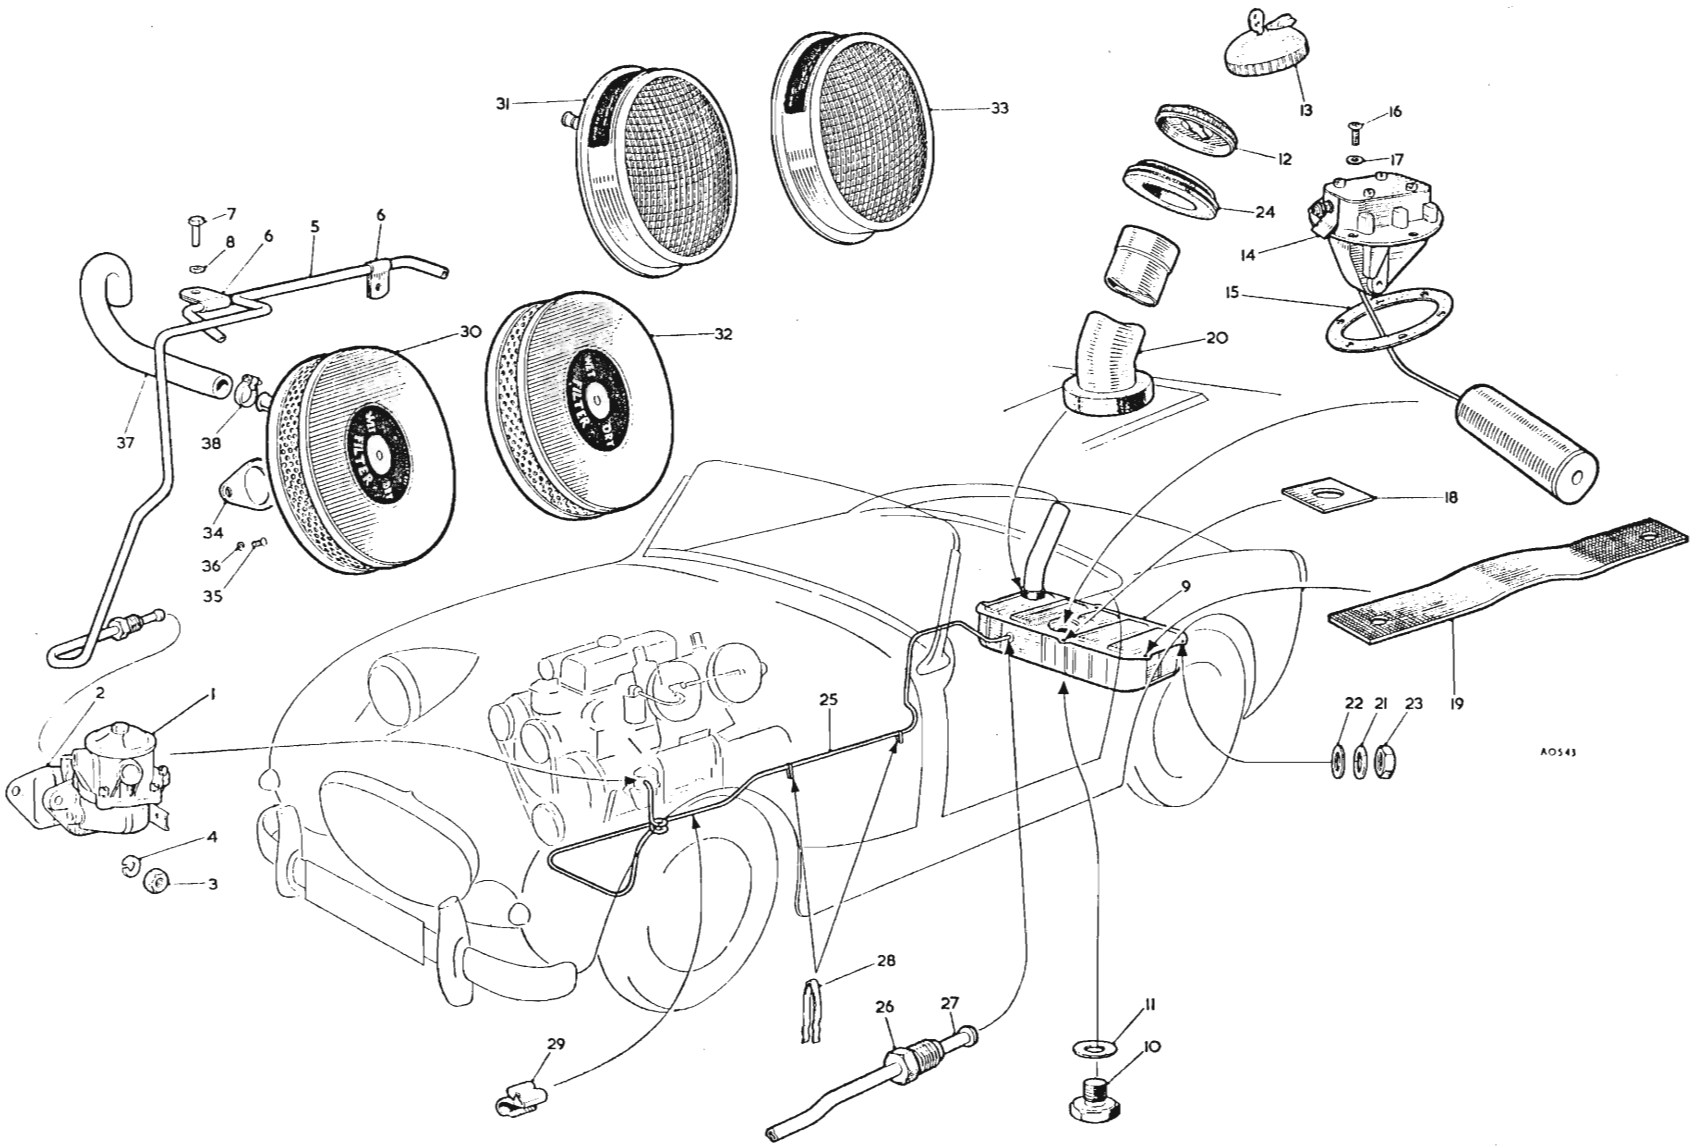


To face page D.1


FUEL SYSTEM

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Pump—petrol (R)**	**17H98**	**1**	1	1						
2	Joint washer—pump to crankcase	2A113	2	1	1						
3	Nut for petrol pump stud	FNZ105	3	2	2						
4	Washer for stud (spring)	LWN205	4	2	2						
5	**Pipe assembly—petrol (pump to carburetter feed pipe)**	**AEA342**	**5**	1	1						
6	Clip for petrol pipe	PCR0409	6	2	2						
7	Screw for clip	ZCS0404	7	2	2						
8	Washer for screw (plain)	PWZ104		2	2						
9	Washer for screw (spring)	LWZ204	8	2	2						
10	**Petrol tank complete with filler tube**	**ARA77**	**9**	1	1						
11	Plug—drain—petrol tank	ARH672	10	1	1						
12	Washer for drain plug	ARA949	11	1	1	12					
13	Cap—filler	8G654	12	1	1	12					
14	Cap—filler (complete with lock)	2A504	13	1	1						Optional extra
15	Unit—tank—petrol gauge	2A404	14	1	1						
16	Washer for tank unit (joint)	2H1082	15	1	1						
17	Screw—tank unit to tank	53K165	16	6	6						
18	Washer for tank unit screw	2A2088	17	6	6						
19	Washer for tank mounting (small)	2A2070	18	2	2						
20	Washer for tank mounting (large)	2A2071	19	2	2						
21	Ring—sealing (tank to floor)	2A2069	20	1	1						
22	Washer—tank to floor (shakeproof)	2K8606	21	6	6						
23	Washer—tank to floor (plain)	PWZ105	22	6	6						
24	Nut—tank to floor	FNZ105	23	6	6						
25	Collar for tank filler (rubber)	ALH2459	24	1	1						
26	**Pipe—tank to pump**	**2A5638**	**25**	1	1						
27	Nut for pipe	6K648	26	2	2						
28	Olive for pipe	6K685	27	2	2						
29	Clip for pipe	6K35	28	2	2						
30	Clip for pipe	17H9525	29	3	3						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	PETROL PUMP REPAIR KITS										
1	**Petrol pump repair kit (primary)**	**8G2205**		1	1						
2	**Petrol pump repair kit (major)**	**8G2206**		1	1						
3	Diaphragm and pull-rod assembly	N.S.P.		1	1						Primary kit
4	Filter cover gasket (cork)	N.S.P.		1	1						Primary kit
5	Filter screw gasket (fibre)	N.S.P.		1	1						Primary kit
6	Valve assembly	N.S.P.		2	2						Primary kit
7	Valve retainer gasket	N.S.P.		1	1						Primary kit
8	Joint washer	N.S.P.		1	1						Primary kit
9	Filter gauze	N.S.P.		1	1						Primary kit
10	Link	N.S.P.		1	1						Major kit
11	Rocker arm pin	N.S.P.		1	1						Major kit
12	Rocker pin clip	N.S.P.		1	1						Major kit
13	Rocker pin washer	N.S.P.		2	2						Major kit
14	Rocker arm spring	N.S.P.		1	1						Major kit
15	Oil seal washer (fabric)	N.S.P.		1	1						Major kit
16	Oil seal washer (metal)	N.S.P.		1	1						Major kit
17	Valve retainer	N.S.P.		1	1						Major kit
18	Valve retainer screws	N.S.P.		2	2						Major kit
19	Rocker arm	N.S.P.		1	1						Major kit
	AIR CLEANER—DETAILS										
20	**Cleaner—air (front)**	**2A835**	**30**	1	1						**Alternatives**
21	Cleaner—air (front)	2A848	31	1	1						**Alternatives**
22	**Cleaner—air (rear)**	**2A836**	**32**	1	1						**Alternatives**
23	Cleaner—air (rear)	2A849	33	1	1						**Alternatives**
24	Joint—air cleaner to carburetter	ACA5071	34	2	2						
25	Screw—air cleaner to carburetter	HZS0506	35	4	4						
26	Washer for air cleaner screw (spring)	LWZ305	36	4	4						
27	**Hose—air cleaner to rocker cover**	**1H529**	**37**	1	1						
28	Clip—hose	8G531	38	2	2						

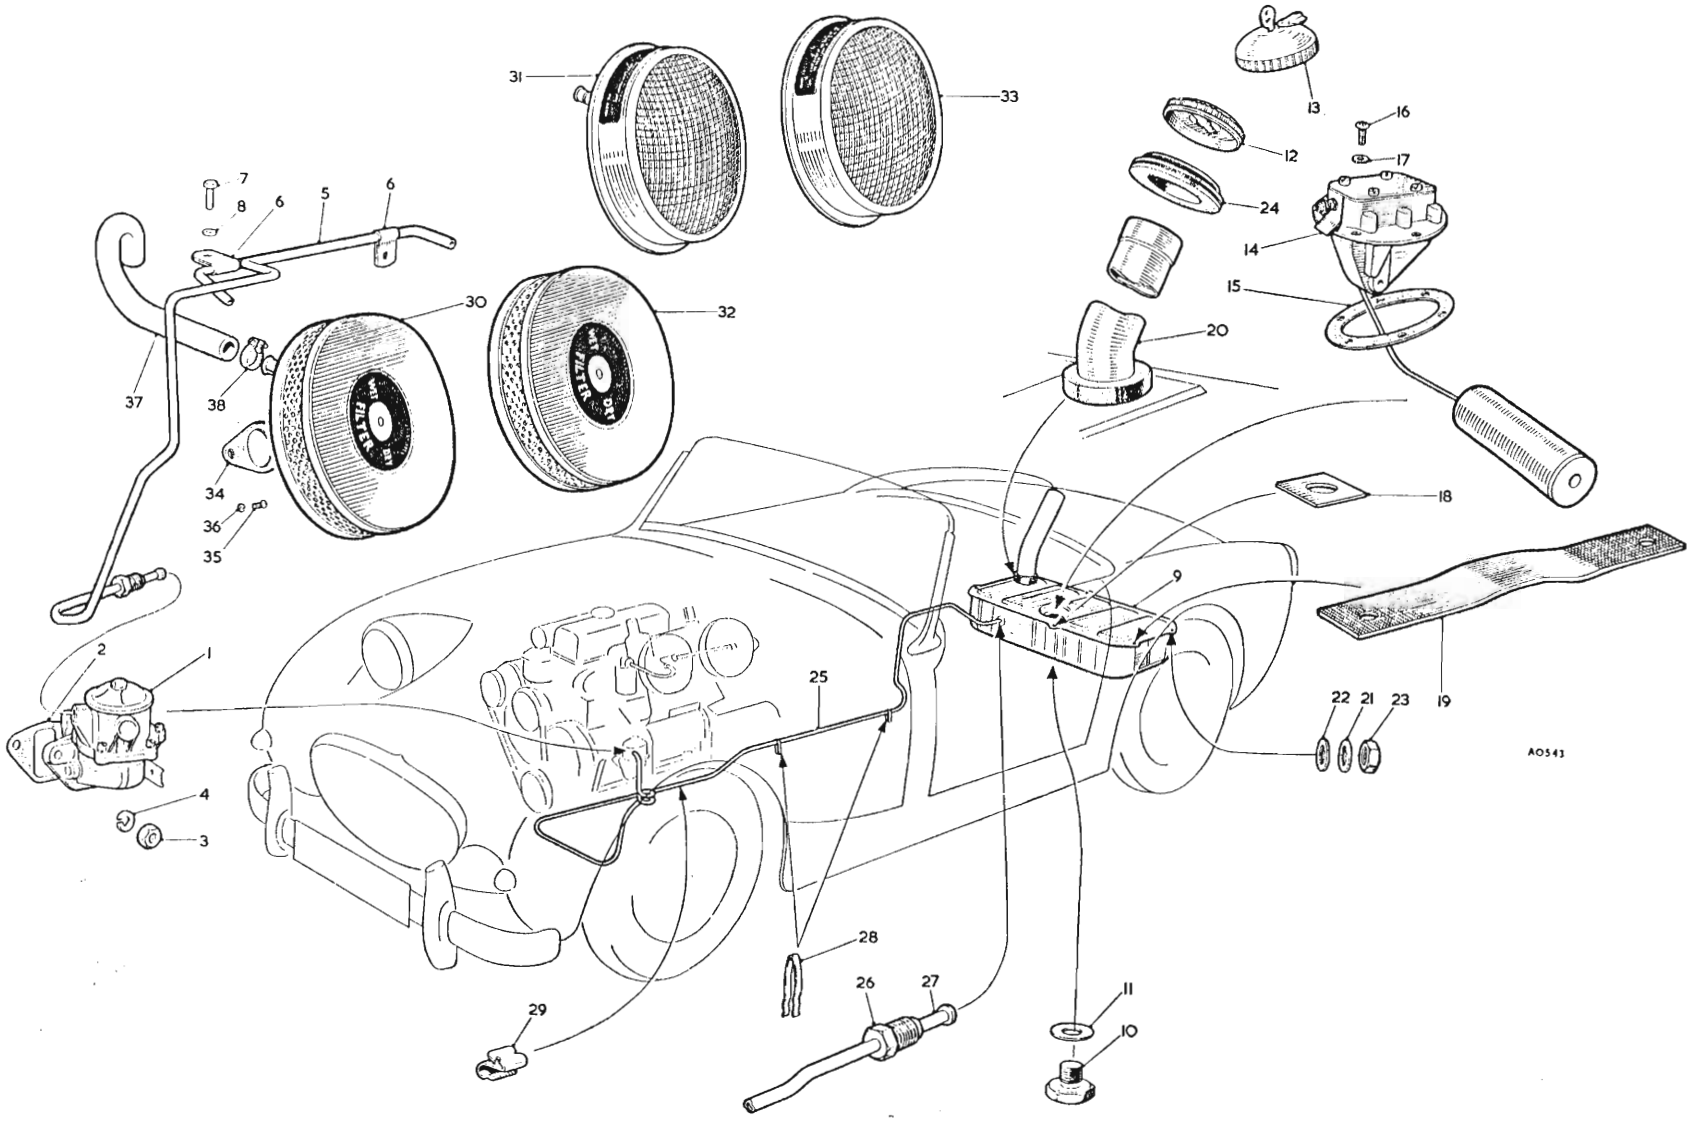


To face page D.2

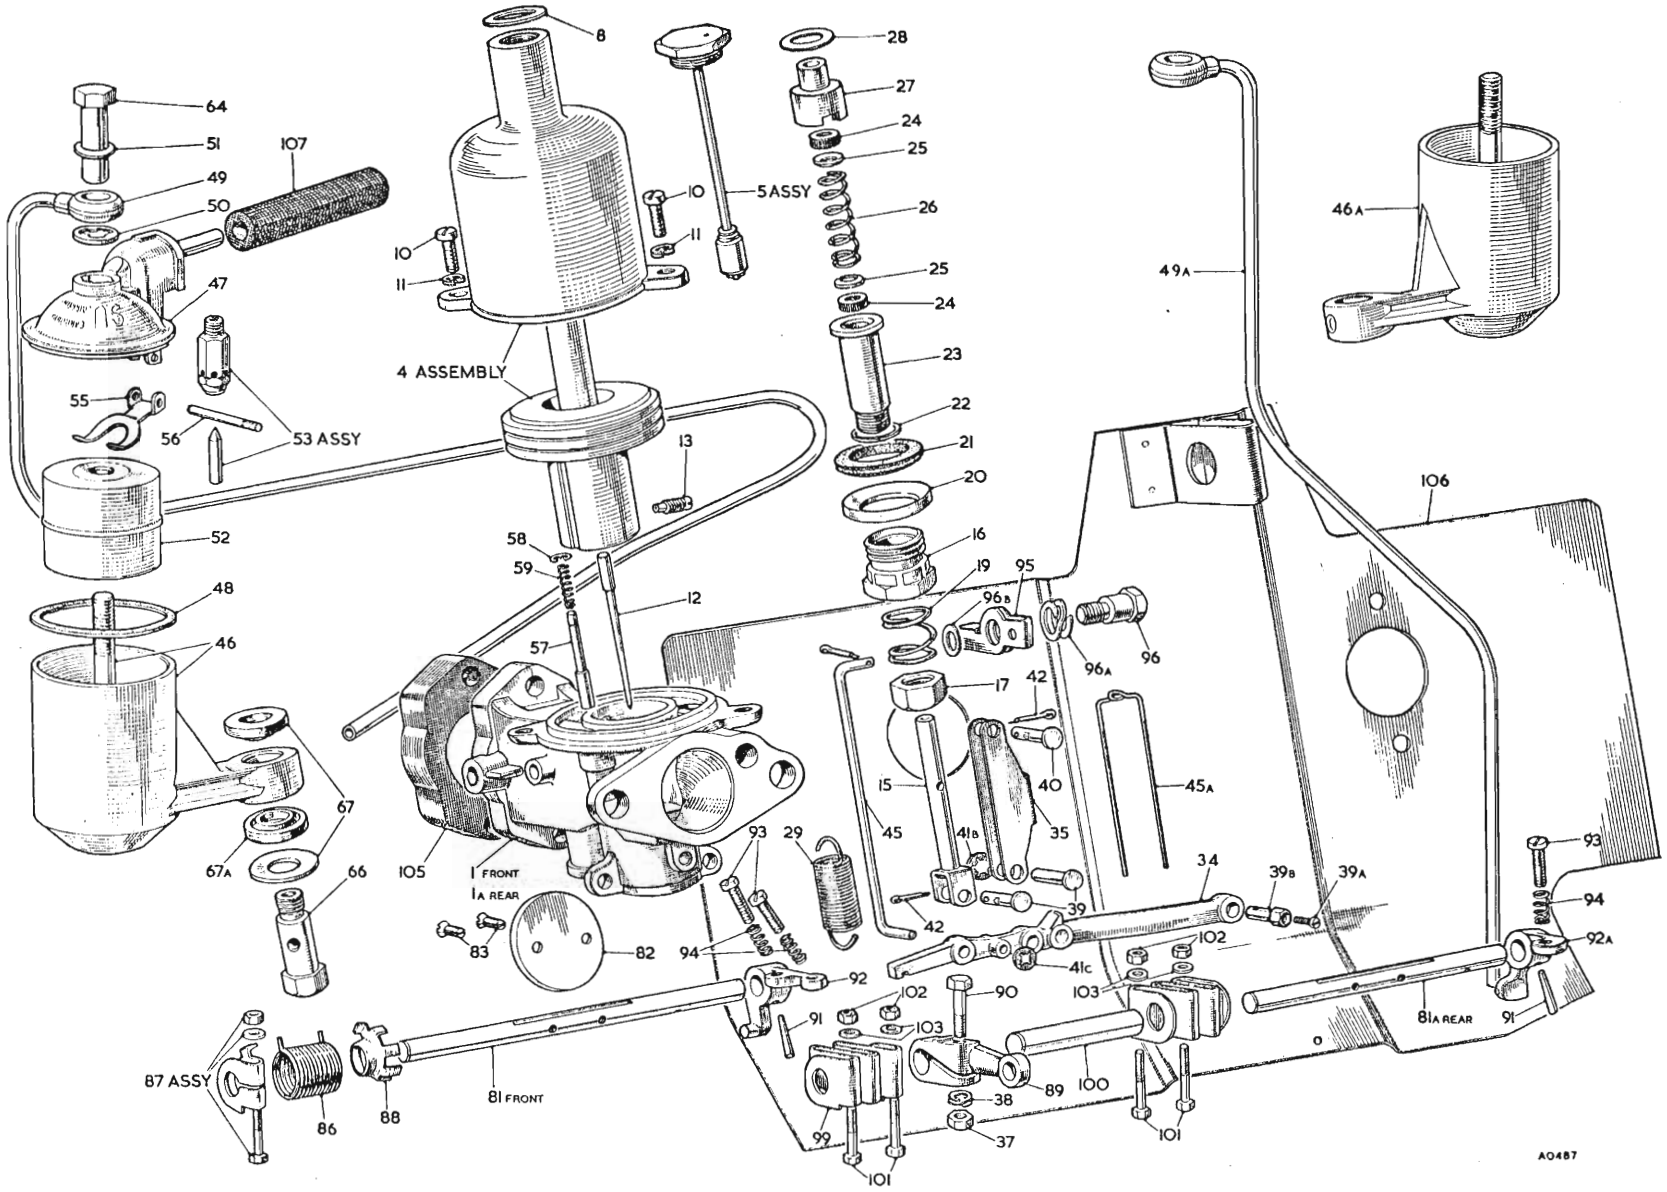


To face page D.3

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CARBURETTERS										
1	**Carburetter assembly (front)**	**AUC9050**		1	1						
2	**Carburetter assembly (rear)**	**AUC9051**		1	1						
3	Body for carburetter (front)	AUC6012	1	1	1						
4	Body for carburetter (rear)	AUC6017	1A	1	1						
5	Pin—piston lifting	AUC1249	57	2	2						
6	Spring for lifting pin	AUC1151	59	2	2						
7	Circlip for lifting pin	AUC1250	58	2	2						
8	Chamber and piston assembly	AUC8000	4	2	2						
9	Cap and damper assembly	AUC8103	5	2	2						
10	Washer for cap (fibre)	AUC4900	8	2	2						
11	Screw—chamber to body	AUC5156	10	4	4						
12	Washer for screw (double-coil)	AUA1086	11	4	4						
13	**Jet assembly**	**AUC8182**	**15**	**2**	**2**						
14	Nut—adjusting	AUC2121	17	2	2						
15	Spring for adjusting nut	AUC2114	19	2	2						
16	Nut—gland sealing	AUC3232	16	2	2						
17	Ring—sealing (brass)	AUC2117	20	2	2						
18	Ring—sealing (cork)	AUC2118	21	2	2						
19	Washer for jet bearing (bottom)	AUC3233	22	2	2						
20	Bearing (bottom)	AUC3231	23	2	2						
21	Washer for jet bearing (top)	AUC2122	28	2	2						
22	Bearing (top)	AUC3230	27	2	2						
23	Washer—gland (brass)	AUC2119	25	4	4						
24	Washer—gland (cork)	AUC2120	24	4	4						
25	Spring—gland	AUC1158	26	2	2						
26	**Needle**	**AJH5292**	**12**	**2**	**2**						**For sizes see Workshop Manual**
27	Screw for needle	AUC2383	13	2	2						
28	Lever—jet	AUC4045	34	2	2						
29	Spring—lever return	AUC4667	29	2	2						
30	Link—lever to body	AUC4719	35	2	2						
31	Screw—cable clamp	AUC5047	39A	2	2						
32	Pin—pivot	AUC5058	39B	2	2						
33	Stirrup	AUC1025	45A	1	1						
34	Pin—pivot (short)	AUC2381	39	4	4						
35	Pin—pivot	AUC5009	40	2	2						
36	Washer (starlock)	AUC5004	41B	2	2						
37	Pin (split)	AUC2109	42	6	6						
38	Rod—link	AUC3501	45	1	1						
39	Washer (starlock)	AUC5002	41C	2	2						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Carburetters—*continued*										
1	**Spindle—throttle (front)**	**AUC1045**	**81**	**1**	**1**						
2	**Spindle—throttle (rear)**	**AUC8404**	**81A**	**1**	**1**						
3	Disc—throttle	AUC2103	82	2	2						
4	Screw for disc	AUC1358	83	4	4						
5	Spring—throttle spindle return (front)	AUC4781	86	1	1						
6	Plate—throttle spring anchor	AUC4880	88	1	1						
7	Clip—end	AUC4881	87	1	1						
8	Lever—throttle	AUC1501	89	1	1						
9	Throttle stop (front)	AUC3446	92	1	1						
10	Lever—rocker (front)	AUC3503	95	1	1						
11	Bolt—pivot (front)	AUC3471	96	1	1						
12	Washer (spring)	AUC3472	96A	1	1						
13	Washer (plain)	AUC4848	96B	1	1						
14	Throttle stop (rear)	AUC2197	92A	1	1						
15	Pin—taper	AUC2106	91	2	2						
16	Screw—adjusting	AUC3464	93	3	3						
17	Spring for adjusting screw	AUC3465	94	3	3						
18	Coupling	AUC5134	99	2	2						
19	Rod—throttle spindle connecting	AUC2411	100	1	1						
20	Bolt	AUC2669	101	6	6						
21	Nut for bolt	AUC2673	102	6	6						
22	Washer for bolt	AUC4612	103	6	6						
23	Bolt	AUC2694	90	1	1						
24	Nut for bolt	AUC2156	37	1	1						
25	Washer for bolt (spring)	AUC2246	38	1	1						
26	Float-chamber with fixing stud (front)	AUC8402	46	1	1						
27	Float-chamber with fixing stud (rear)	AUC8403	46A	1	1						
28	Lid for float-chamber	AUC5117	47	2	2						
29	Nut for lid (cap)	AUC1163	64	2	2			AUC1867			
30	Pipe—front overflow		49	1	1			AUC8484	From (E) 1551		
31	Pipe—rear overflow		49A	1	1			AUC8485			
32	Washer for pipe (fibre)		50	2	2			AUC1928			
33	Cover cap	AUC1606		2	2						Finished at (E) 1550
34	**Float**	**AUC1223**	**52**	**2**	**2**						
35	Needle and seat assembly	AUC8170	53	2	2						
36	Washer for float-chamber lid	AUC1412	48	2	2						
37	Lever—hinged	AUC1981	55	2	2						
38	Pin for hinged lever	AUC1152	56	2	2						
39	Washer—packing (aluminium)	AUC1557	51	2	2						
40	Bolt—holding-up	AUC1135	66	2	2						
41	Washer for holding-up bolt (steel)	AUC1137	67	2	2						
42	Grommet for holding-up bolt (rubber)	AUC1134	67A	4	4						
43	Joint washer for carburetters	3H2687		2	2						
44	Washer for carburetters—insulating	3H2686	105	2	2						
45	**Heat shield for carburetter**	**AEA339**	**106**	**1**	**1**						
46	Joint washer for heat shield	3H2687		4	4						
47	Nut for carburetter stud	FNZ104		4	4						
48	Washer for stud (spring)	LWZ204		4	4						
49	**Pipe—carburetter feed**	**AEA338**	**107**	**2**	**2**						
50	Clip for overflow pipe			1	1			AEH550	From (E) 1551		

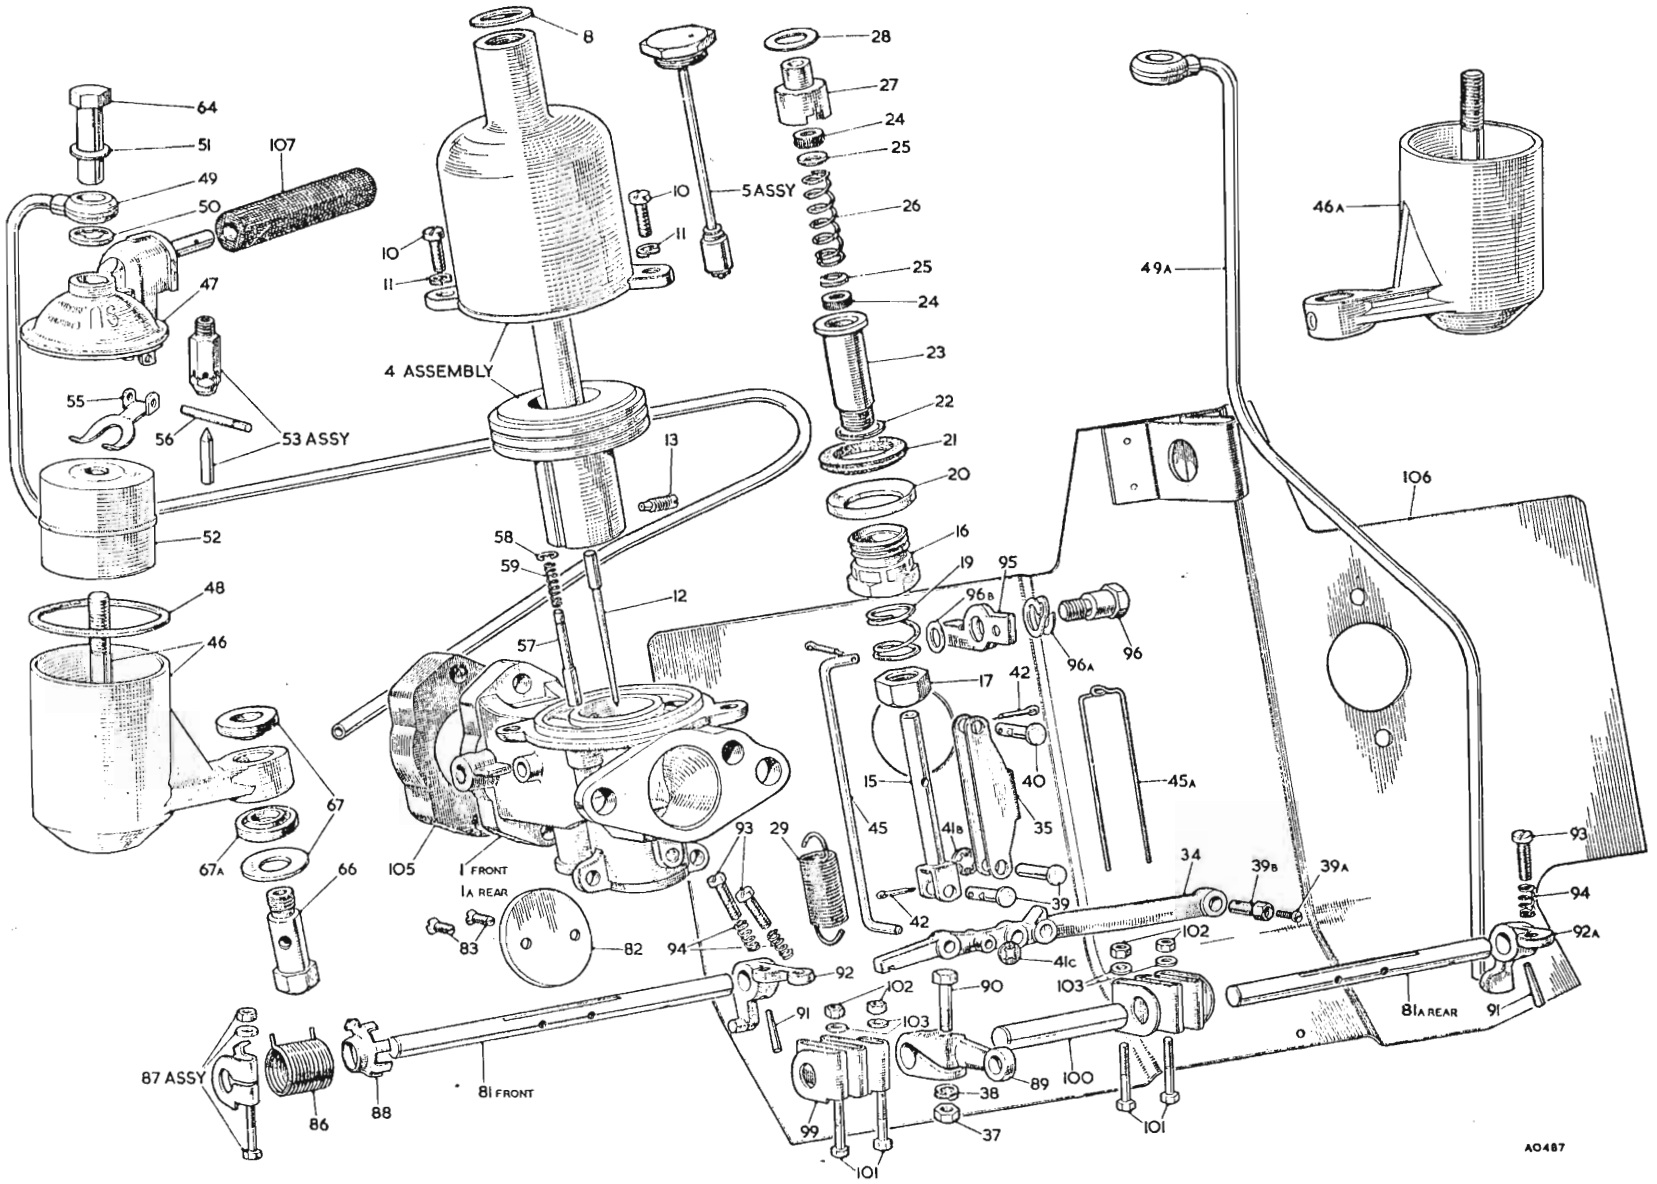


To face page D.4

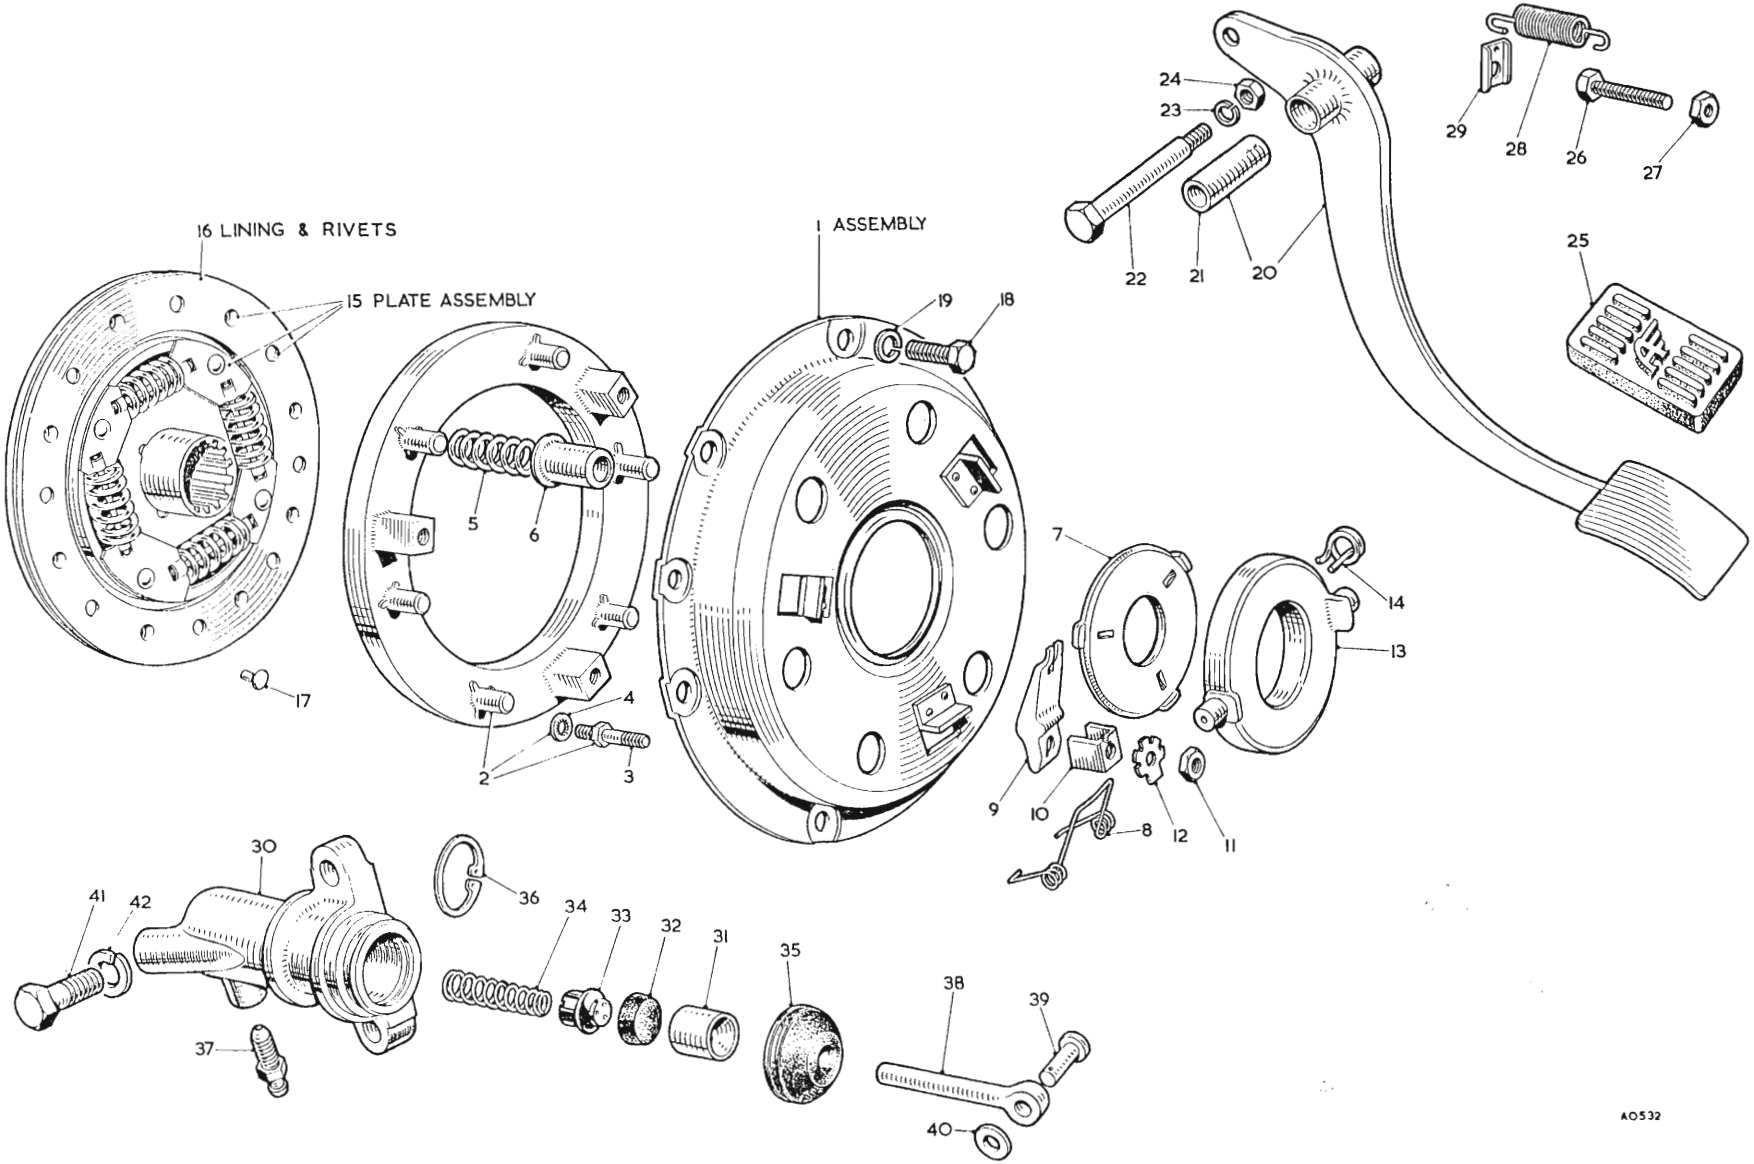


To face page E.1

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CLUTCH										
	CLUTCH COMPONENTS										
1	**Cover assembly**	**27H3183**	**1**	1	1						
2	Plate with studs—pressure	7H3036	2	1	1						
3	Studs for pressure plate	7H3028	3	3	3						
4	Washer for stud (shakeproof)	7H7462	4	3	3						
5	Springs—thrust (yellow)	27H3101	5	6	6						
6	Cups for thrust springs	7H3221	6	6	6						
7	Plate—thrust	27H3177	7	1	1						
8	Retainers for thrust plate	7H3025	8	3	3						
9	Levers—release	7H3029	9	3	3						
10	Plate—bearing (for release levers)	7H3181	10	3	3	12					
11	Nuts for pressure plate studs	7H3031	11	3	3	12					
12	Washer for nut (tab)	7H3222	12	3	3	12					
13	**Bearing and cup assembly—release**	**7H3166**	**13**	1	1						
14	Springs for release bearing—retaining	7H3185	14	2	2						
15	**Plate with linings—friction (R)**	**27H3102**	**15**	1	1						
16	Linings and rivets—friction plate	27H3103	16	1	1	set					
17	Rivet	7H3004	17	18	18						
18	Screw—clutch to flywheel	51K2036	18	6	6						
19	Washer for screw (spring)	2K5319	19	6	6						
	PEDAL										
20	**Pedal (with bush)**	**2A5566**	**20**	1	1			AHA5431	From (C) 4996		
21	Bush	2A5564	21	1	1						
22	Bolt—pedal	2A5568	22	1	1						
23	Washer for pedal bolt (spring)	LWZ205	23	1	1	24					
24	Nut—bolt	FNZ105	24	1	1						
25	**Pad for pedal (rubber)**	**2A5562**	**25**	1	1						
26	Screw—pedal adjustment	HZS0410	26	1	1						
27	Locknut for screw	FNZ204	27	2	2						
28	**Spring—pedal return**	**2A5574**	**28**	1	1						
29	Retainer—return spring	2A5573	29	1	1						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CLUTCH CYLINDER										
1	**Cylinder—hydraulic (R)**	**13H80**		**1**	**1**						
2	Body	N.S.P.	30	1	1						
3	Piston	17H7539	31	1	1						
4	Cup—piston	7H7923	32	1	1	12					
5	Filler—piston cup	17H7540	33	1	1						
6	Spring—cup filler	17H7541	34	1	1						
7	Boot	17H7268	35	1	1						
8	Circlip	17H7266	36	1	1						
9	Screw—bleeder	3H2428	37	1	1						
10	**Repair kit—cylinder**	**8G8146**		**1**	**1**						
11	Cup—piston			1	1						
12	Boot			1	1						
13	**Push-rod**	**13H21**	**38**	**1**	**1**						
14	Pin—clevis (push-rod to clutch withdrawal lever)	CLZ0517	39	1	1						
15	Washer for clevis pin (plain)	PWZ105	40	1	1						
16	Bolt—cylinder to gearbox	53K152	41	2	2						
17	Washer for bolt (spring)	LWZ305	42	2	2						

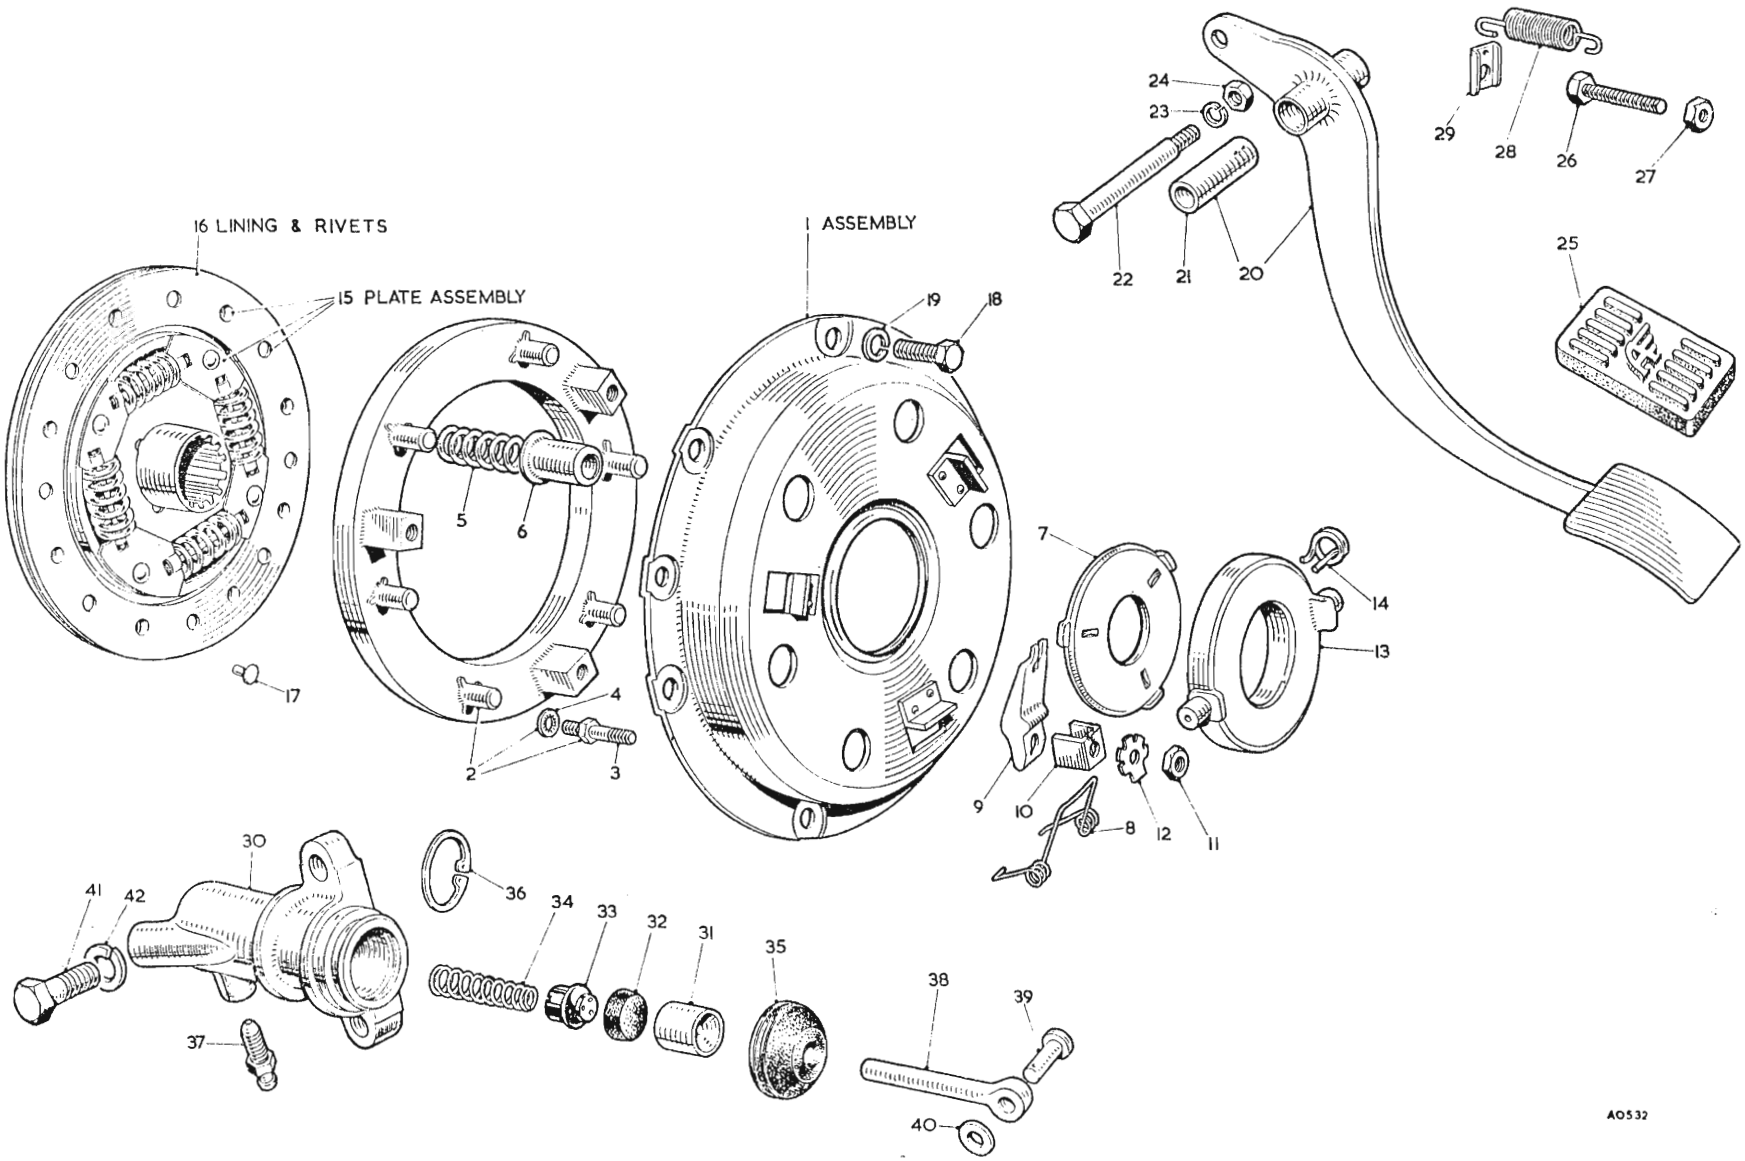

To face page E.2

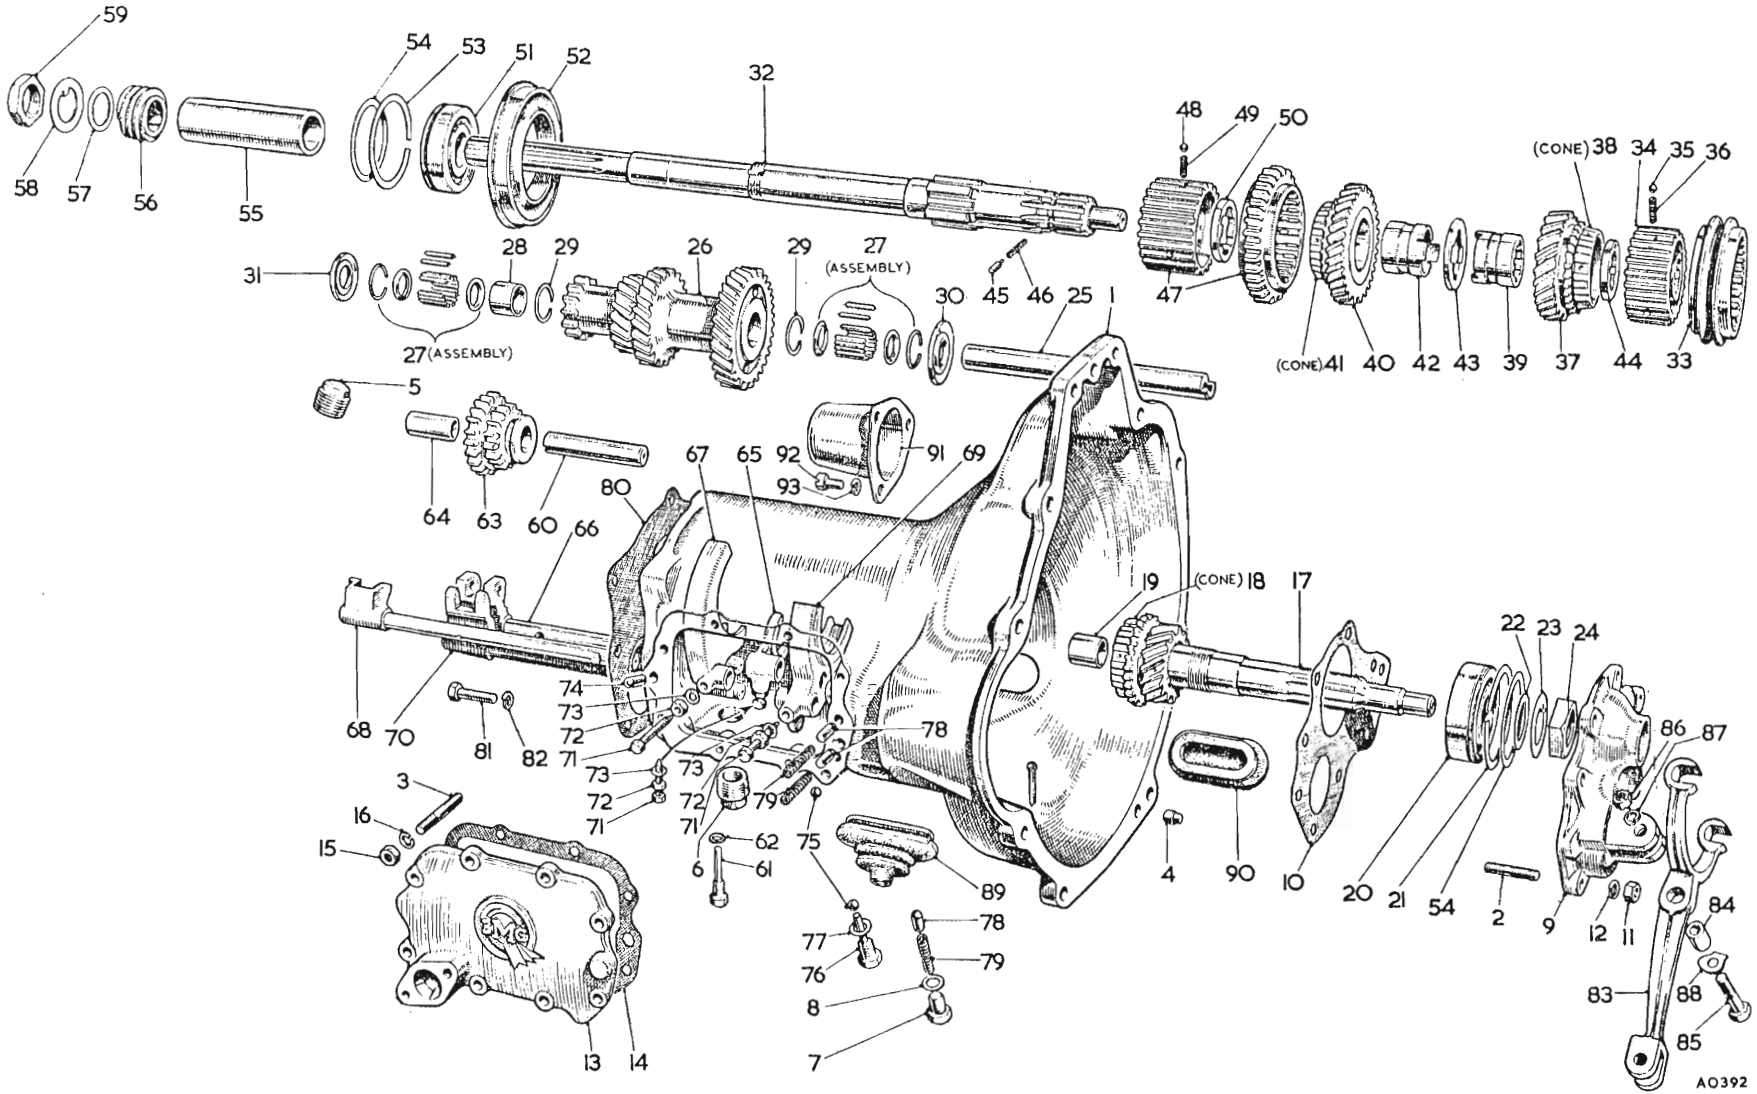

To face page F.1

GEARBOX

*Cones are machine-finished after being shrunk on gears. Supplied loose where facilities for these operations exist. (Assemblies must always be supplied for Export).


GEARBOX—REMOTE CONTROL

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Gearbox assembly (R)**	**2A3413**		1	1						
2	**Case assembly**	**28G87**	**1**	1	1						
3	Stud for gearbox front cover	53K463	2	7	7						
4	Stud for side cover	53K463	3	8	8						
5	Dowel	1G752	4	1	1						
6	Plug—filler	2K5830	5	1	1						
7	Plug—drain	2K5830	6	1	1						
8	Plug for reverse plunger spring	6K643	7	1	1						
9	Washer for plug	2K4956	8	1	1	36					
10	**Cover (front)**	**2A3087**	**9**	1	1						
11	Joint washer for front cover	2A3007	10	1	1						
12	Nut for front cover stud	FNZ104	11	7	7						
13	Washer for stud (spring)	LWN304	12	7	7						
14	**Cover (side)**	**2A3285**	**13**	1	1						
15	Joint washer for side cover	2A3286	14	1	1	12					
16	Nut for side cover stud	FNZ104	15	8	8						
17	Washer for stud (spring)	LWN204	16	8	8						
18	**1st motion shaft with cone and bush**	**2A3359**	**17**	1	1						
19	Cone—synchronizing	*2A3147	18	1	1	6					
20	Bush for 3rd motion shaft	2A3034	19	1	1						
21	Bearing—ball journal (for 1st motion shaft)	2A3245	20	1	1						
22	Ring for ball journal bearing (spring)	6K558	21	1	1						
23	Washer for shaft	6K559	22	1	1						
24	Washer for shaft (lock)	2A3035	23	1	1						
25	Nut for shaft	2K6677	24	1	1						
26	**Layshaft**	**8G664**	**25**	1	1						
27	Laygear	2A3358	26	1	1						
28	Bearing—needle-roller (with spring ring)	3H2113	27	2	2						
29	Distance piece for rear bearing	2A3168	28	1	1						
30	Ring for needle-roller bearing (spring)	2A3366	29	2	2						
31	Washer—thrust (front)	2A3023	30	1	1						
32	Washer (·123 to ·124″)—thrust (rear)	2A3024	31	1	1						Alternatives
33	Washer (·125 to ·126″)—thrust (rear)	2A3025		1	1						Alternatives
34	Washer (·127 to ·128″)—thrust (rear)	2A3026		1	1						Alternatives
35	Washer (·130 to ·131″)—thrust (rear)	2A3027		1	1						Alternatives
36	**3rd motion shaft**	**2A3224**	**32**	1	1						
37	Sleeve—3rd and 4th speed coupling	2A3145	33	1	1						Finished at (G) 945
38	Synchronizer—3rd and 4th speed	2A3220	34	1	1						Finished at (G) 945
39	Ball for synchronizer	BLS107	35	3	3						Finished at (G) 945
40	Spring for synchronizer ball	2A3142	36	3	3						Finished at (G) 945
41	Synchronizer assembly—3rd and 4th speed			1	1			2A3226	From (G) 946		
42	Ball for synchronizer			3	3			BLS107	From (G) 946		
43	Spring for synchronizer ball			3	3			2A3142	From (G) 946		


Gearbox—Remote Control —*continued*

*Cones are machine-finished after being shrunk on gears. Supplied loose where facilities for these operations exist. (Assemblies must always be supplied for Export).

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**3rd speed gear with cone**	**2A3361**	**37**	**1**	**1**						
2	Cone—synchronizing	*2A3147	38	1	1	6					
3	Bush for 3rd speed gear	2A3290	39	1	1						
4	**2nd speed gear (with cone)**	**2A3330**	**40**	**1**	**1**						
5	Cone—synchronizing	*2A3147	41	1	1	6					
6	Bush for 2nd speed gear	2A3298	42	1	1						
7	Ring—interlocking (for 2nd and 3rd speed gear bushes)	2A3045	43	1	1						
8	Washer (·214 to ·215″)—thrust (front)	2A3217	44	1	1						Alternatives
9	Washer (·216 to ·217″)—thrust (front)	2A3218		1	1						
10	Washer (·218 to ·219″)—thrust (front)	2A3219		1	1						
11	Peg for thrust washer	2A3160	45	1	1						
12	Spring for thrust washer peg	2A3161	46	1	1	12					
13	1st speed wheel with synchronizer and balls	2A3333	47	1	1						
14	1st speed wheel	N.S.P.		1	1						
15	Synchronizer—2nd speed	N.S.P.		1	1						
16	Ball for synchronizer	BLS107	48	2	2						
17	Spring for synchronizer ball	2A3142	49	3	3						
18	Washer—thrust (rear)	2A3042	50	1	1						
19	Bearing—ball journal (for 3rd motion shaft)	2A3245	51	1	1						
20	Housing for bearing	2A3085	52	1	1						
21	Ring for bearing (spring)	6K558	53	1	1						
22	Washer—packing (·004″—for bearing)	2K8737	54	2 or A/R	2 or A/R						Alternatives
23	Washer—packing (·006″—for bearing)	2K8738		2 or A/R	2 or A/R						
24	Washer—packing (·010″—for bearing)	2K8739		2 or A/R	2 or A/R						
25	Distance piece for 3rd motion shaft	2A3057	55	1	1						
26	Wheel—speedometer	2A3371	56	1	1						
27	Washer	6K559	57	1	1						
28	Washer (lock)	2A3035	58	1	1						
29	Nut for 3rd motion shaft	2K6677	59	1	1						

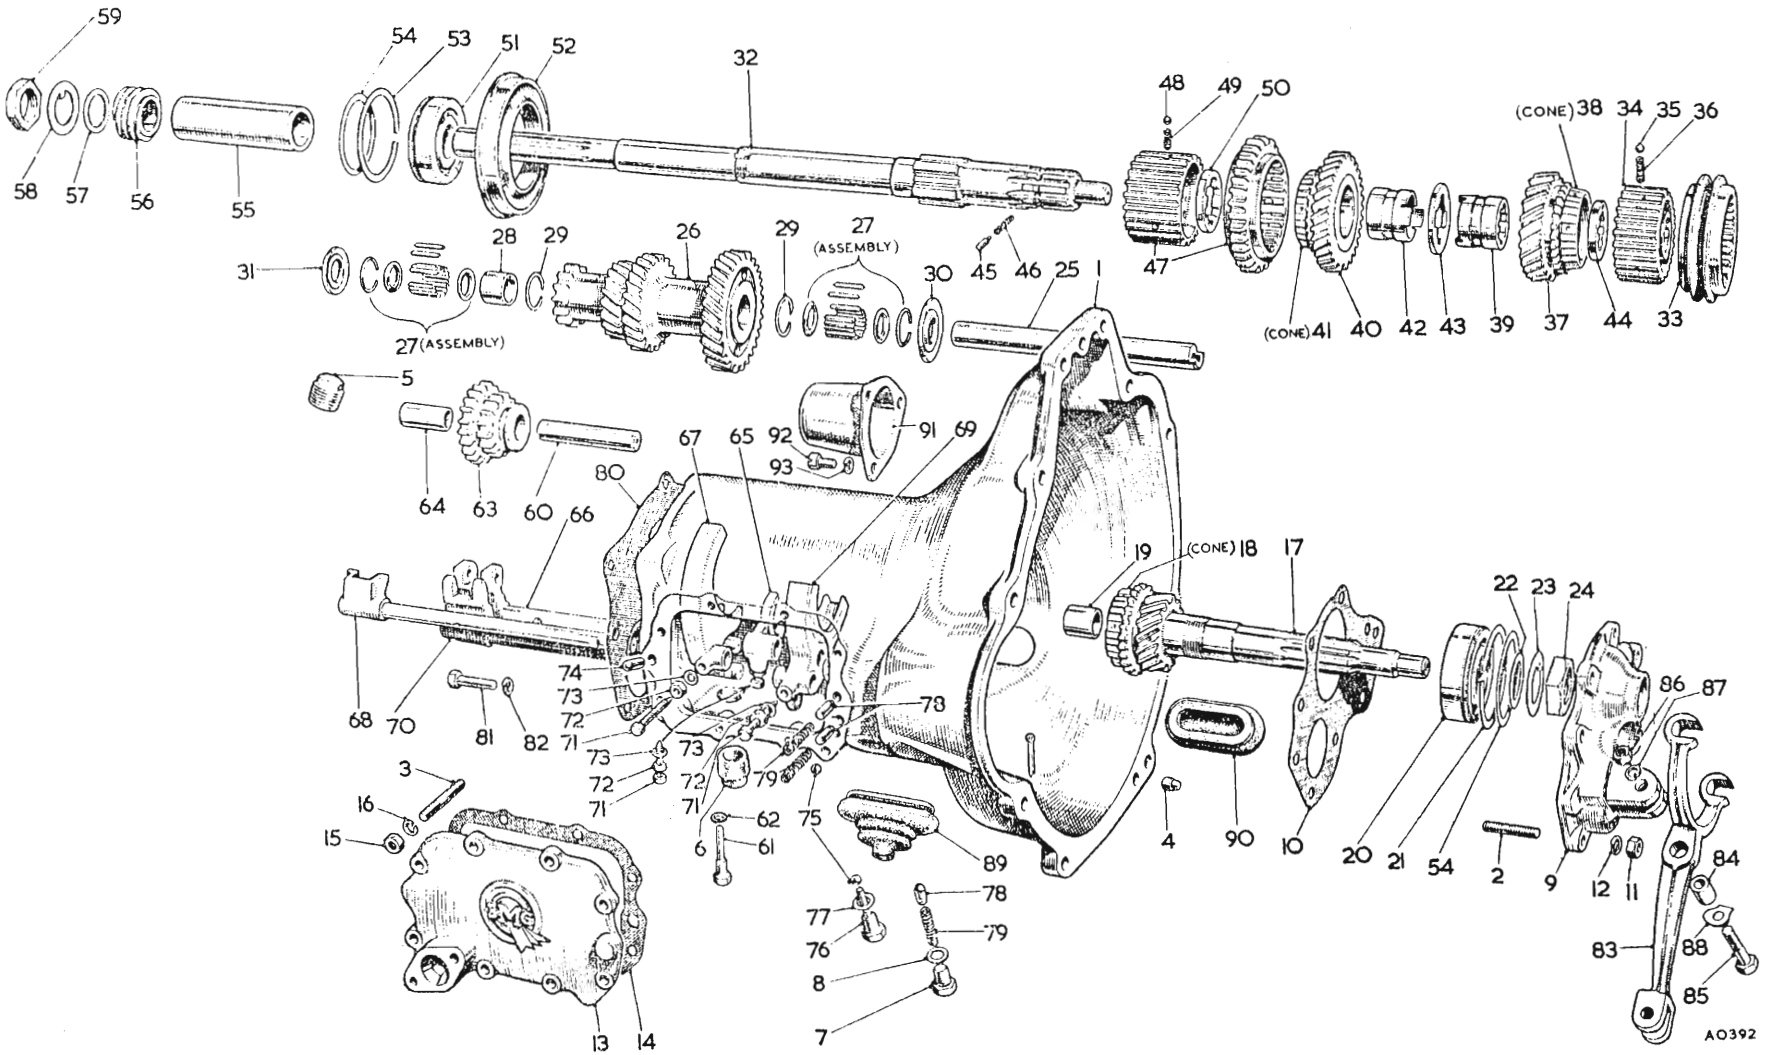


To face page F.2

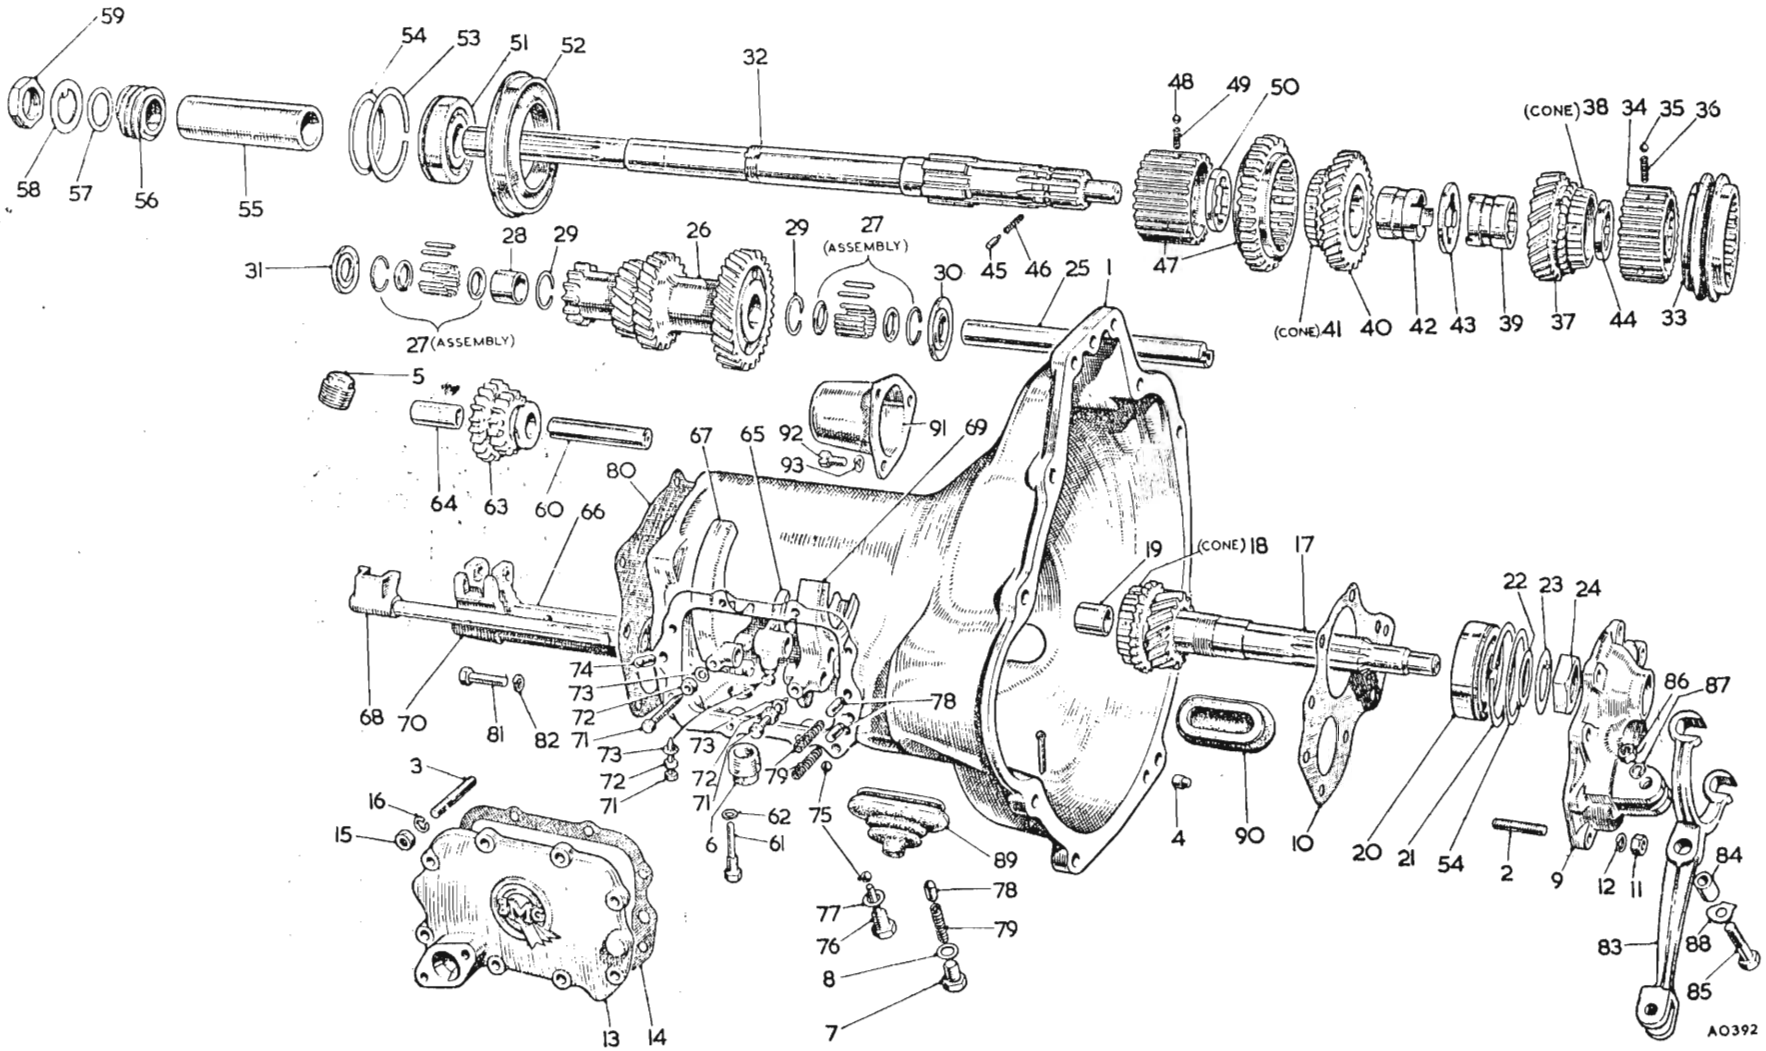


To face page F.3

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Gearbox—Remote Control—*continued*										
1	**Reverse shaft**	**2A3283**	**60**	**1**	**1**						
2	Screw for reverse shaft (locking)	2A3028	61	1	1						
3	Washer for locking screw (spring)	LWN204	62	1	1						
4	**Reverse wheel (with bush)**	**2A3363**	**63**	**1**	**1**						
5	Bush for reverse wheel	2A3282	64	1	1						
6	**Fork—reverse**	**2A3284**	**65**	**1**	**1**						
7	Rod—reverse fork	2A3357	66	1	1						
8	**Fork—1st and 2nd speed**	**2A3019**	**67**	**1**	**1**						
9	Rod—1st and 2nd speed fork	2A3305	68	1	1						
10	**Fork—3rd and 4th speed**	**2A3021**	**69**	**1**	**1**						
11	Rod—3rd and 4th speed fork	2A3347	70	1	1						
12	Screw—fork locating	2A3141	71	3	3						
13	Nut for fork locating screw	51K1671	72	3	3						
14	Washer for screw (shakeproof)	2K8607	73	3	3						
15	Plunger—interlock	2A3110	74	1	1						
16	Ball—interlock	BLS110	75	2	2	12					
17	Plug for interlock ball hole	2A3253	76	1	1						
18	Washer for plug	2K4956	77	1	1	36					
19	Plunger for fork rods	2A3108	78	3	3						
20	Spring for plunger	2K4909	79	3	3	36					
21	Joint washer—gearbox extension to gearbox	2A3295	80	1	1	12					
22	Screw—rear extension to gearbox	HZS0407	81	9	9						
23	Washer for set screw (spring)	LWN204	82	9	9						
24	**Lever—clutch withdrawal (with bush)**	**2A3406**	**83**	**1**	**1**						
25	Bush for lever	2A3006	84	1	1						
26	Bolt for clutch withdrawal lever	2A3289	85	1	1						
27	Nut for bolt	FNZ105	86	1	1						
28	Washer for bolt (spring)	2K5319	87	1	1						
29	Washer for bolt (lock)	2K5813	88	1	1						
30	**Cover—dust (for clutch withdrawal lever)**	**2A3084**	**89**	**1**	**1**			**1G3667**	**From (E) 320**		
31	Cover—dust (for bell housing)	2A3076	90	1	1						
32	**Cover for starter pinion**	**1B3346**	**91**	**1**	**1**						
33	Screw—pinion cover to bell housing	53K1435	92	3	3						
34	Washer for set screw (spring)	LWN204	93	3	3						

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Gearbox—remote control—*continued*										
1	**Extension for gearbox with bush, oil seal, and felt**										
2	**ring (rear)**	**2A3367**	**1**	**1**	**1**						
3	Seal—oil	2A3061	2	1	1	12					
4	Bush for propeller shaft sliding joint	2A3325	3	1	1						
5	Joint for seal	2A3278	4	1	1						
6	Stud for remote control housing (short)	53K528	5	2	2						
7	Stud for remote control housing (long)	53K535	6	6	6						
8	**Shaft—control**	**2A3350**	**7**	**1**	**1**						
9	Lever—control	2A3384	8	1	1						
10	Peg for lever—locating	1H3101	9	1	1						
11	Washer for peg (spring)	LWZ204	10	1	1						
12	**Speedometer pinion**	**2A3372**	**11**	**1**	**1**						
13	Bush for speedometer pinion	2A3256	12	1	1						
14	Seal—oil (for speedometer pinion)	2A3254	13	1	1						
15	Ring—oil seal retaining	2A3255	14	1	1						
16	Joint washer—speedometer pinion bush (copper)	51K3169	15	1	1						] Alternatives
17	Joint washer—speedometer pinion bush (copper)	11G3084		1	1						] **Alternatives**
18	**Casing—remote control**	**2A3411**	**16**	**1**	**1**						
19	**Casing—remote control**	**2A3380**		**1**	**1**						
20	Joint washer—casing to gearbox extension (front)	2A3344	17	1	1						
21	Joint washer—casing to gearbox extension (rear)	2A3345	18	1	1						
22	**Cover for change speed lever tower (bottom)**	**2A3340**	**19**	**1**	**1**						
23	Joint washer for bottom cover	2A3341	20	1	1						
24	Screw for bottom cover	HZS0404	21	4	4						
25	Washer for set screw (spring)	LWZ204	22	4	4						
26	**Cover for change speed lever seat**	**2A3339**	**23**	**1**	**1**						
27	Screw for cover	HZS0405	24	3	3						
28	Washer for set screw (spring)	LWZ304	25	3	3						

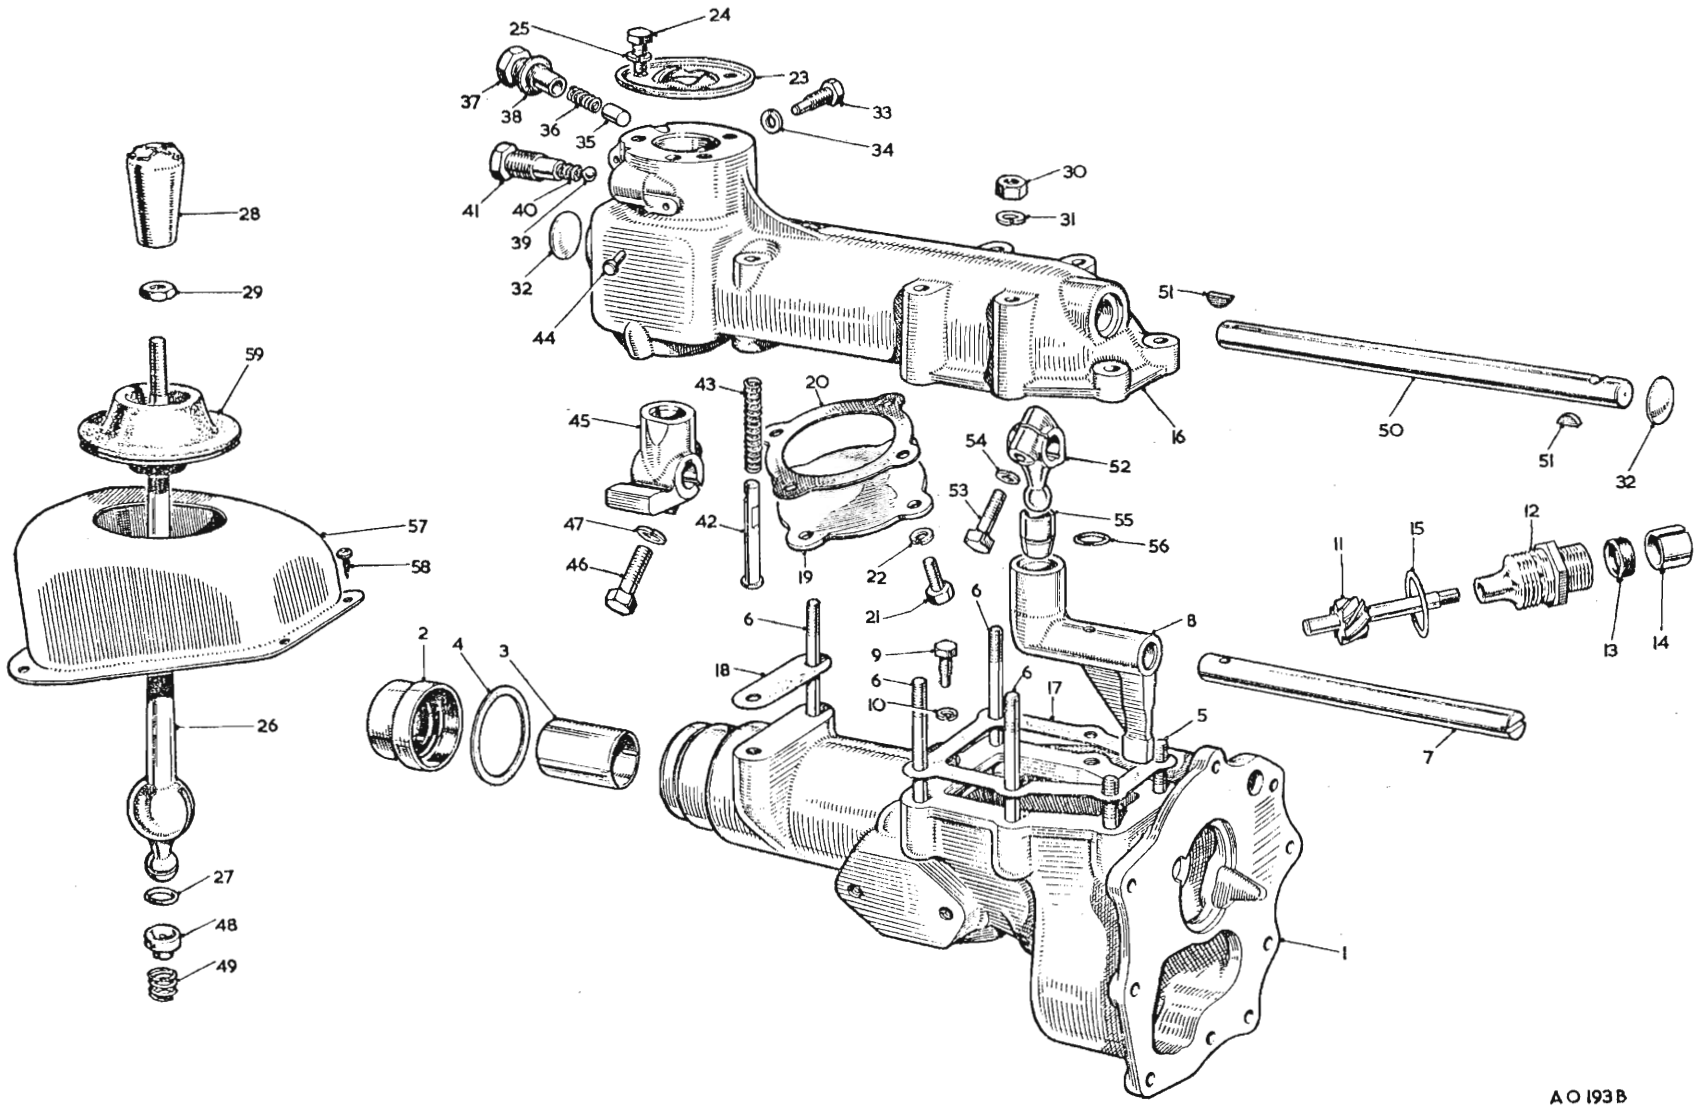

To face page F.4

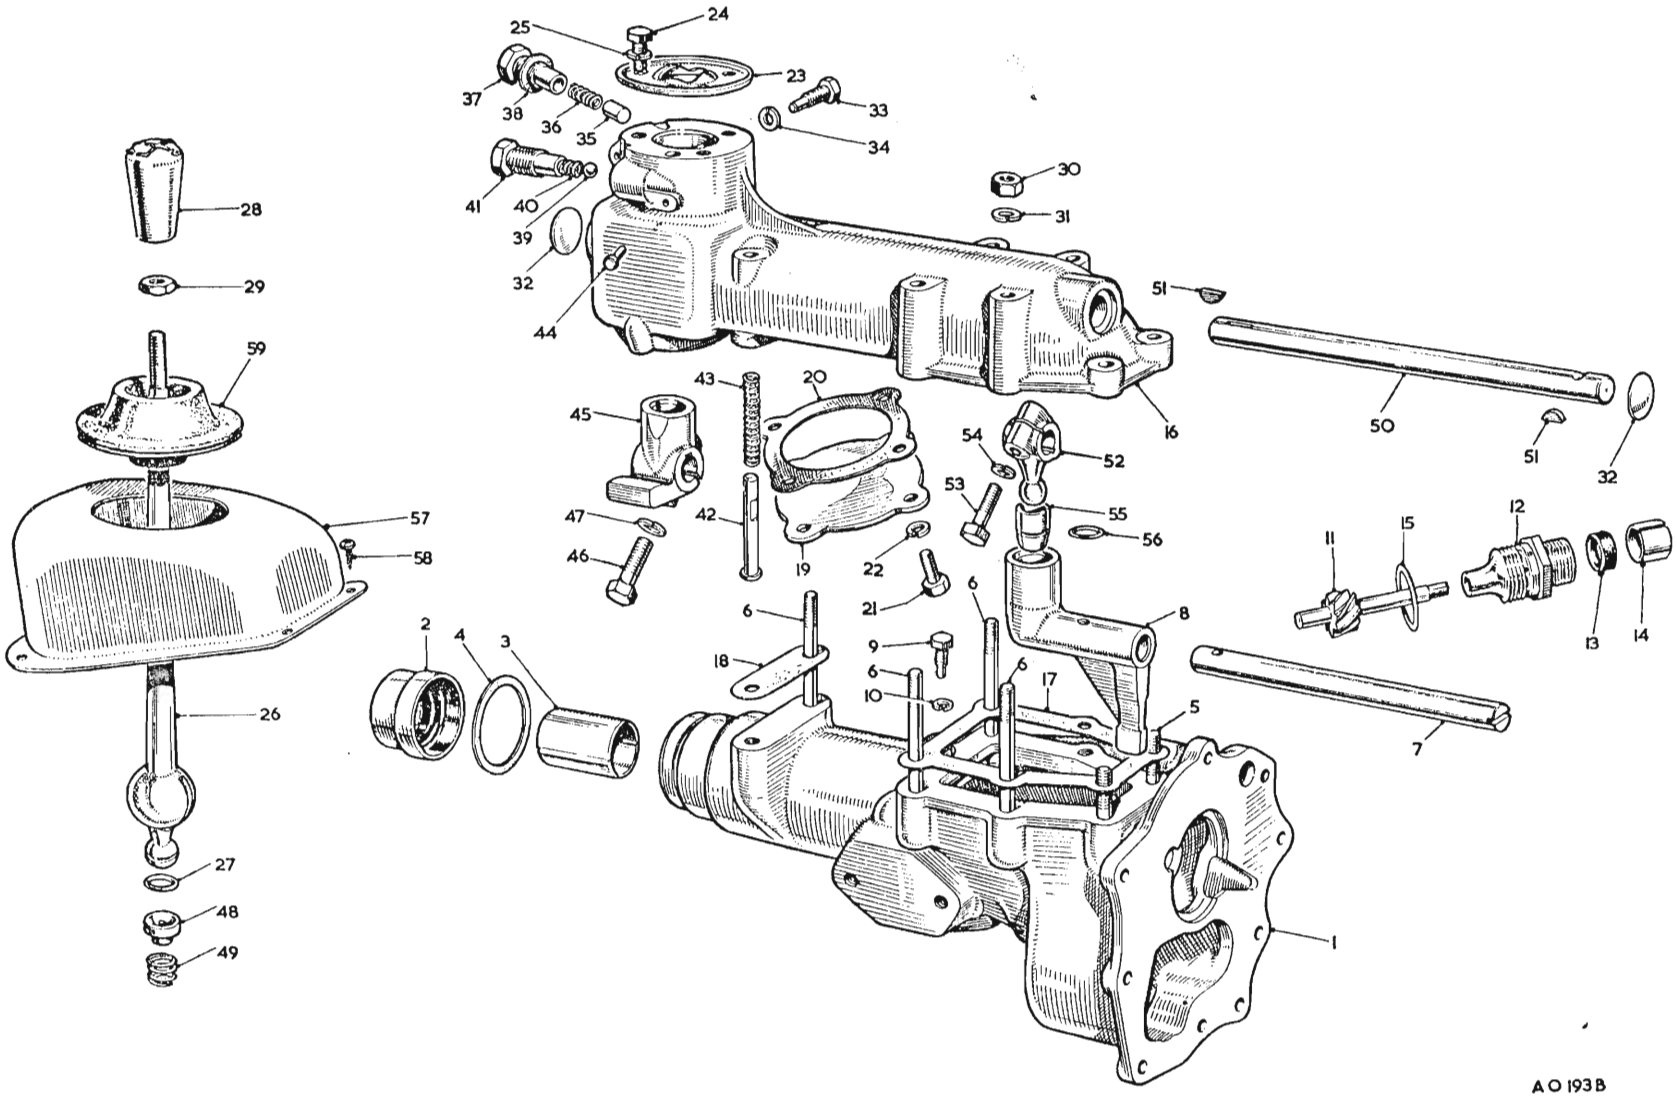


To face page F.5

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Gearbox—remote control—*continued*										
1	**Lever—change speed**	**2A3416**	**26**	**1**	**1**						
2	Ring for change speed lever (rubber)	2A3394	27	1	1						
3	Knob for lever	2A3383	28	1	1						
4	Nut for knob (lock)	53K1722	29	1	1						
5	Nut for stud—remote control to gearbox extension	FNZ105	30	8	8						
6	Washer for nut (spring)	LWZ305	31	8	8						
7	Plug for remote control casing (welch)	2K8158	32	2	2						
8	Peg—change speed lever locating	1H3101	33	1	1						
9	Washer for locating peg (spring)	LWZ304	34	1	1						
10	Plunger—anti-rattle	AEG3124	35	1	1						
11	Spring for plunger	AEG3123	36	1	1						
12	Cap—spring retaining	2A3354	37	1	1						
13	Washer for spring retaining cap	AEG3122	38	1	1						
14	Ball—reverse selector plunger	BLS110	39	1	1	12					
15	Spring—reverse selector plunger detent	2K4909	40	1	1	36					
16	Plug—reverse plunger	2A3379	41	1	1						
17	Plunger—reverse selector	1G3707	42	1	1						
18	Spring for plunger	1G3863	43	1	1						
19	Pin—locating (for reverse selector plunger)	2A3378	44	1	1						
20	**Lever—rear selector**	**2A3388**	**45**	**1**	**1**						
21	Screw for rear selector lever	2A3335	46	1	1						
22	Washer for screw (spring)	LWZ205	47	1	1	24					
23	Thrust button for rear selector lever	2A3389	48	1	1						
24	Spring for thrust button	2A3390	49	1	1						
25	**Shaft—remote control**	**2A3375**	**50**	**1**	**1**						
26	Key—selector levers to control shaft	WKN404	51	2	2						
27	**Lever—front selector**	**2A3385**	**52**	**1**	**1**						
28	Screw for selector lever (front)	2A3352	53	1	1						
29	Washer for screw (spring)	LWZ204	54	1	1						
30	Bush for selector lever—front (in halves)	2A3377	55	1	1						
31	Circlip for bush	1G3709	56	1	1						
32	Bolt—gearbox to mounting plate	HBZ0509		3	3						
33	Nut for bolt	FNZ105		3	3						
34	Washer for bolt (spring)	2K5319		3	3						
35	Screw—gearbox to mounting plate	HBZ0509		5	5						
36	Washer for set screw (spring)	2K5319		5	5						
37	Cover—remote control—gearbox	BLA768	57	1	1						
38	Screw for remote control cover	PTZ803	58	4	4						
39	Grommet for gear lever	ACA5208	59	1	1						


TRANSMISSION

PROPELLER SHAFT

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Shaft assembly (R)**	**2A7272**		**1**	**1**						
2	Tubular shaft assembly	17H3919	1	1	1						
3	Flange—yoke	17H3828	2	1	1						
4	Sleeve—yoke	17H3894	3	1	1						
5	**Journal and needle kit set**	**8G3000**	**4**	**2**	**2**						
6	Gasket for journal	17H3818	5	8	8						
7	Retainer—gasket	17H3819	6	8	8						
8	Bearing assembly—needle	7H3874	7	8	8						
9	Snap ring	7H3877	8	8	8						
10	Lubricator—journal	7H3858	9	2	2	36					
11	Bolt—shaft to pinion flange	HBZ0510	10	4	4						
12	Washer for flange bolt (spring)	LWZ305	11	4	4						
13	Nut for bolt	LNZ205	12	4	4						

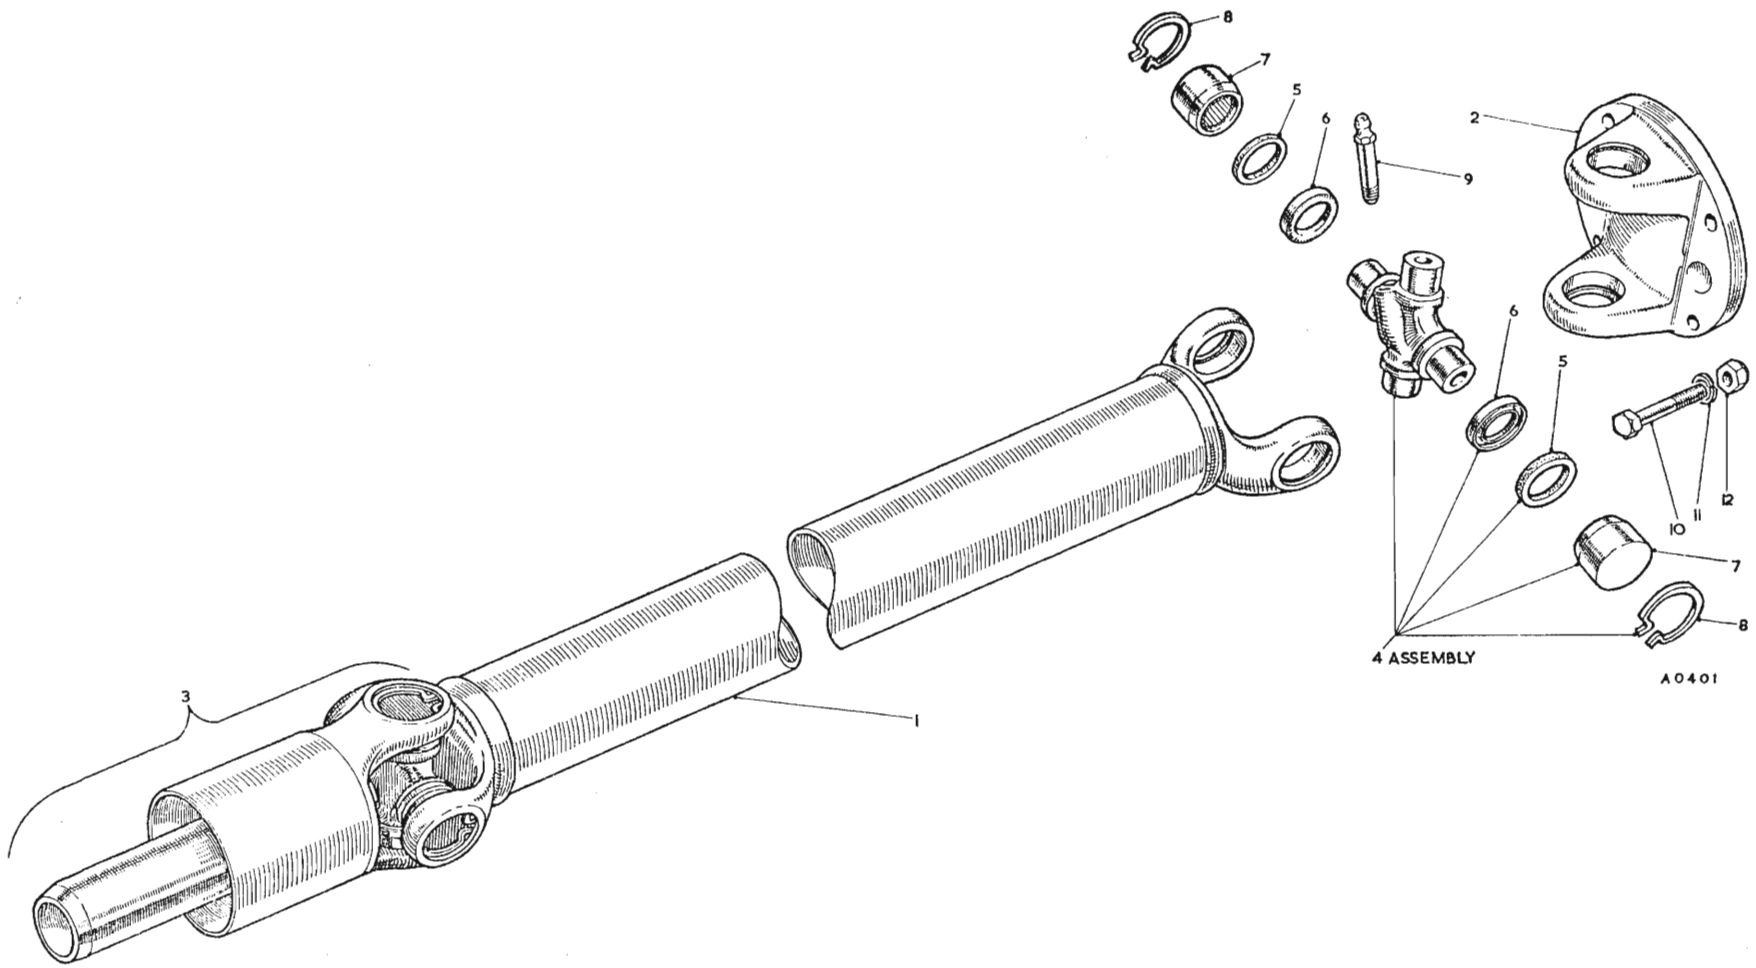

To face page G.1

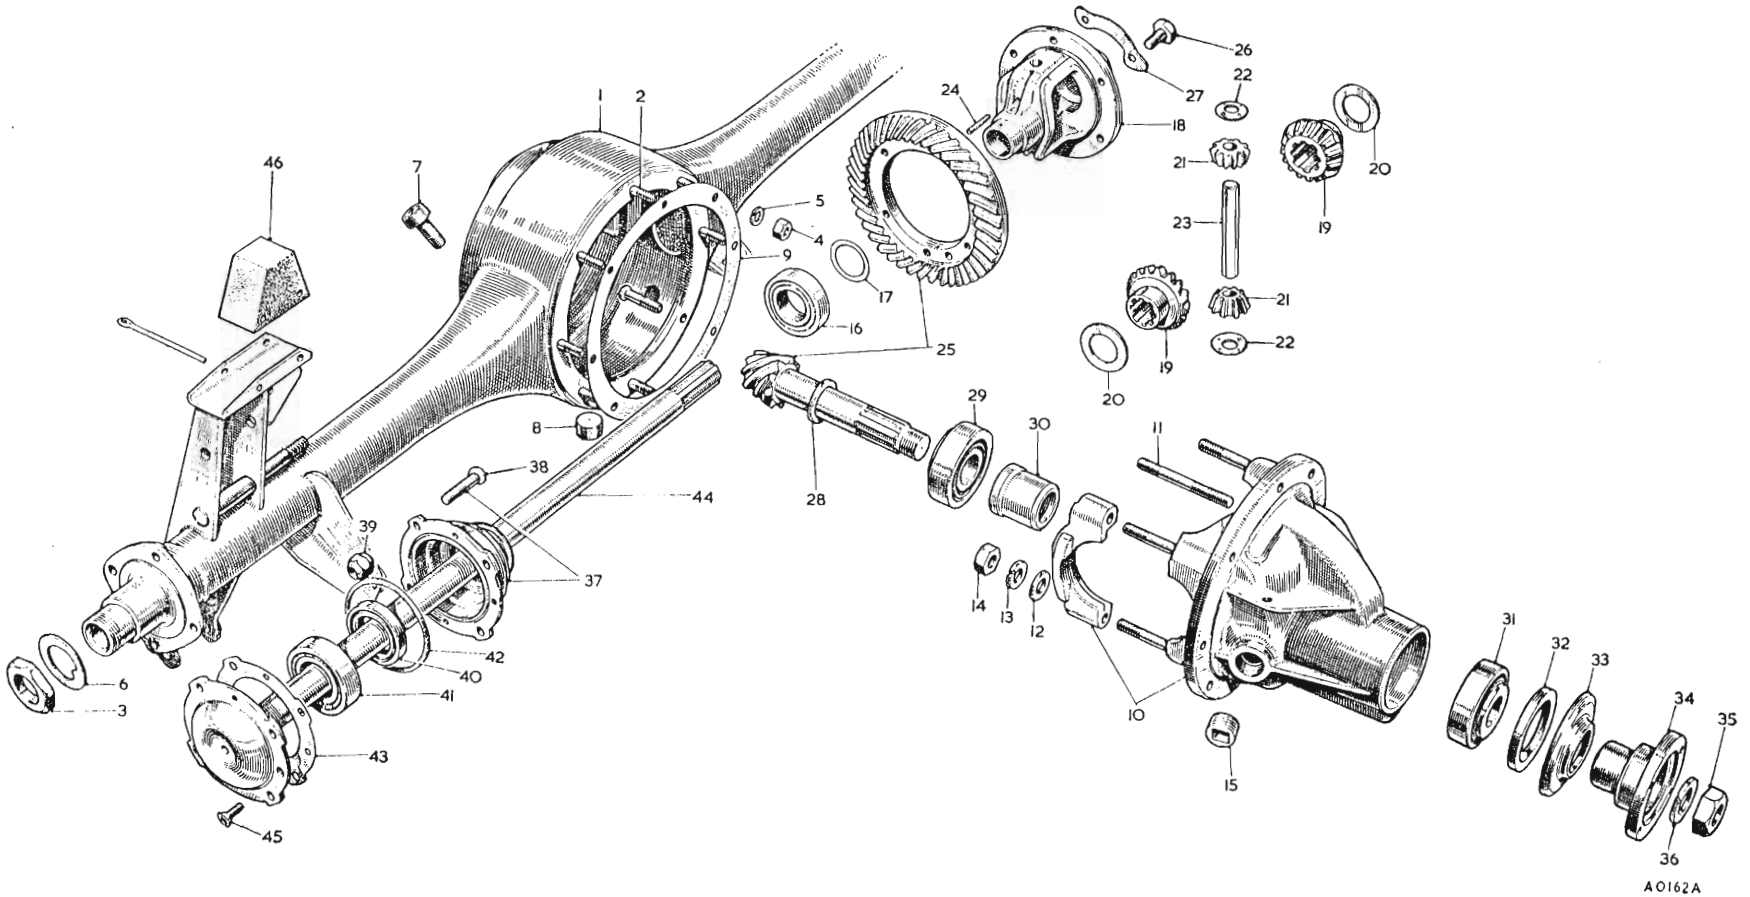


To face page H1

REAR AXLE AND SUSPENSION


REAR AXLE

Item No.	DESCRIPTION	Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Commencing (C) 501										
1	**Rear axle assembly**	**N.S.P.**		1	1						
2	**Case assembly**	**ATA7329**	1	1	1			**ATA7618**	**From (C) 4333 except 4471, 4622, 4680, 4684**		
3	Stud for differential carrier	2A7226	2	8	8						
4	Nut—bearing retaining (RHT)	2A7103	3	1	1						
5	Nut—bearing retaining (LHT)	1G3584		1	1						
6	Nut for differential carrier stud	FNZ105	4	8	8	24					
7	Washer for nut (spring)	LWZ205	5	8	8	12					
8	Washer for bearing retaining nut (lock)	2A7250	6	2	2						
9	Breather assembly	1G3668	7	1	1						
10	Plug—oil drain	6K499	8	1	1						
11	Plug—oil filler	6K499		1	1						
12	Joint—differential carrier to axle case	2A7027	9	1	1	12					
13	**Differential assembly (R)**	**ATA7326**		1	1						
14	**Carrier assembly**	**ATA7032**	10	1	1						
15	Stud—cap	51K886	11	4	4						
16	Washer for nut (plain)	PWN107	12	4	4						
17	Washer for nut (spring)	LWN207	13	4	4						
18	Nut	FNN107	14	4	4						
19	Plug—filler	6K499	15	1	1						
20	Bearing—differential	2K5943	16	2	2						
21	Washer—bearing packing (·002″)	2K7779	17	A/R	A/R						
22	Washer—bearing packing (·003″)	ATA7269		A/R	A/R						
23	Washer—bearing packing (·004″)	2K7778		A/R	A/R						
24	Washer—bearing packing (·010″)	2A7271		A/R	A/R						
25	Cage—differential	ATA7036	18	1	1						
26	Gear	ATA7037	19	2	2						
27	Washer for gear (thrust)	ATA7296	20	2	2						
28	Pinion	2A7015	21	2	2						
29	Washer for pinion (thrust)	ATA7297	22	2	2						
30	Pin for pinion	2A7016	23	1	1						
31	Peg for pinion pin	6K631	24	1	1	12					
32	**Crown wheel and pinion**	**ATA7266**	25	1	1						
33	Bolt—crown wheel to cage	ATA7043	26	6	6						
34	Washer for bolt (lock)	ATA7044	27	3	3	36					
35	Washer—pinion thrust (·130″)	ATA7123	28	1	1						One used of selected size
36	Washer—pinion thrust (·128″)	ATA7124		1	1						
37	Washer—pinion thrust (·126″)	ATA7125		1	1						
38	Washer—pinion thrust (·124″)	ATA7126		1	1						
39	Washer—pinion thrust (·122″)	ATA7127		1	1						
40	Washer—pinion thrust (·120″)	ATA7128		1	1						
41	Washer—pinion thrust (·118″)	ATA7129		1	1						
42	Washer—pinion thrust (·116″)	ATA7130		1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Rear Axle—*continued*										
1	Bearing—pinion inner	ATA7328	29	1	1						
2	Distance piece for bearing	ATA7219	30	1	1						
3	Bearing—pinion outer	2A7213	31	1	1						
4	Seal—oil	ATA7047	32	1	1	6					
5	Cover—dust	1G7439	33	1	1						
6	Flange—universal joint	ATA7056	34	1	1						
7	Nut—flange to pinion	FNZ612	35	1	1						
8	Washer for nut (spring)	LWZ212	36	1	1						
9	**Hub assembly**	**2A7087**	**37**	**2**	**2**						
10	Stud—wheel	2A7089	38	8	8	12					
11	Nut for wheel stud	2A8012	39	8	8	12					
12	Seal—oil	3H2118	40	2	2	12					
13	Bearing—hub	6K584	41	2	2						
14	Ring—oil seal	ATA7225	42	2	2	12					
15	Joint—shaft to hub	2A7091	43	2	2	12					
16	Shaft—axle	2A7085	44	2	2						
17	Screw—shaft to hub	CMZ0410	45	2	2						
18	Bumper (rubber)	2A7142	46	2	2						

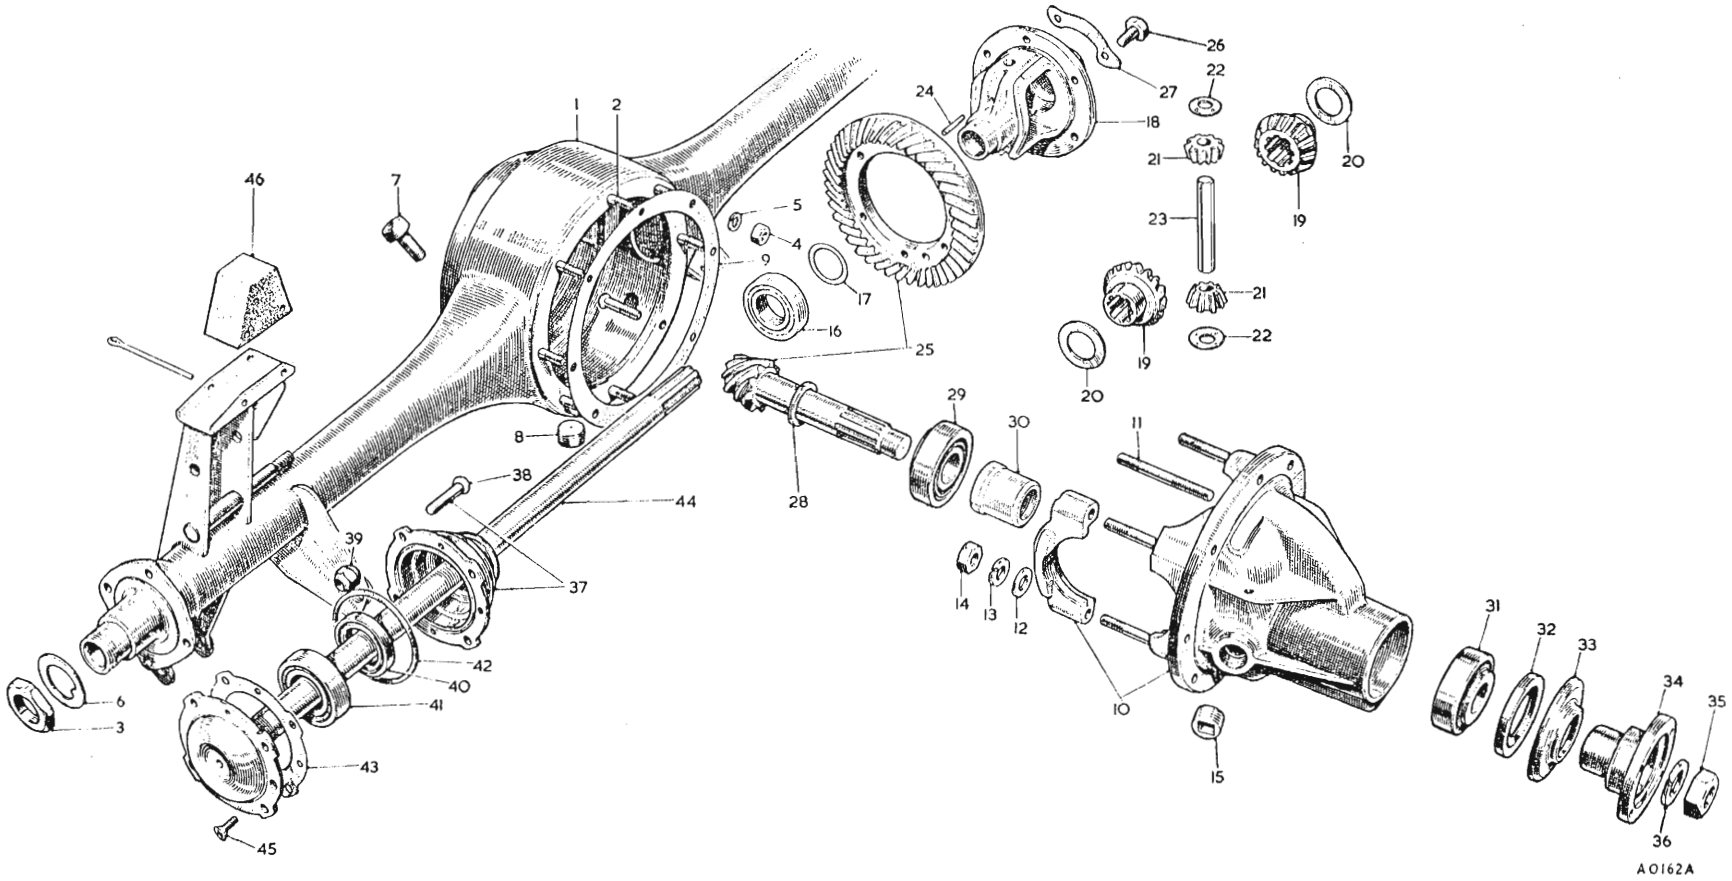


To face page H.2

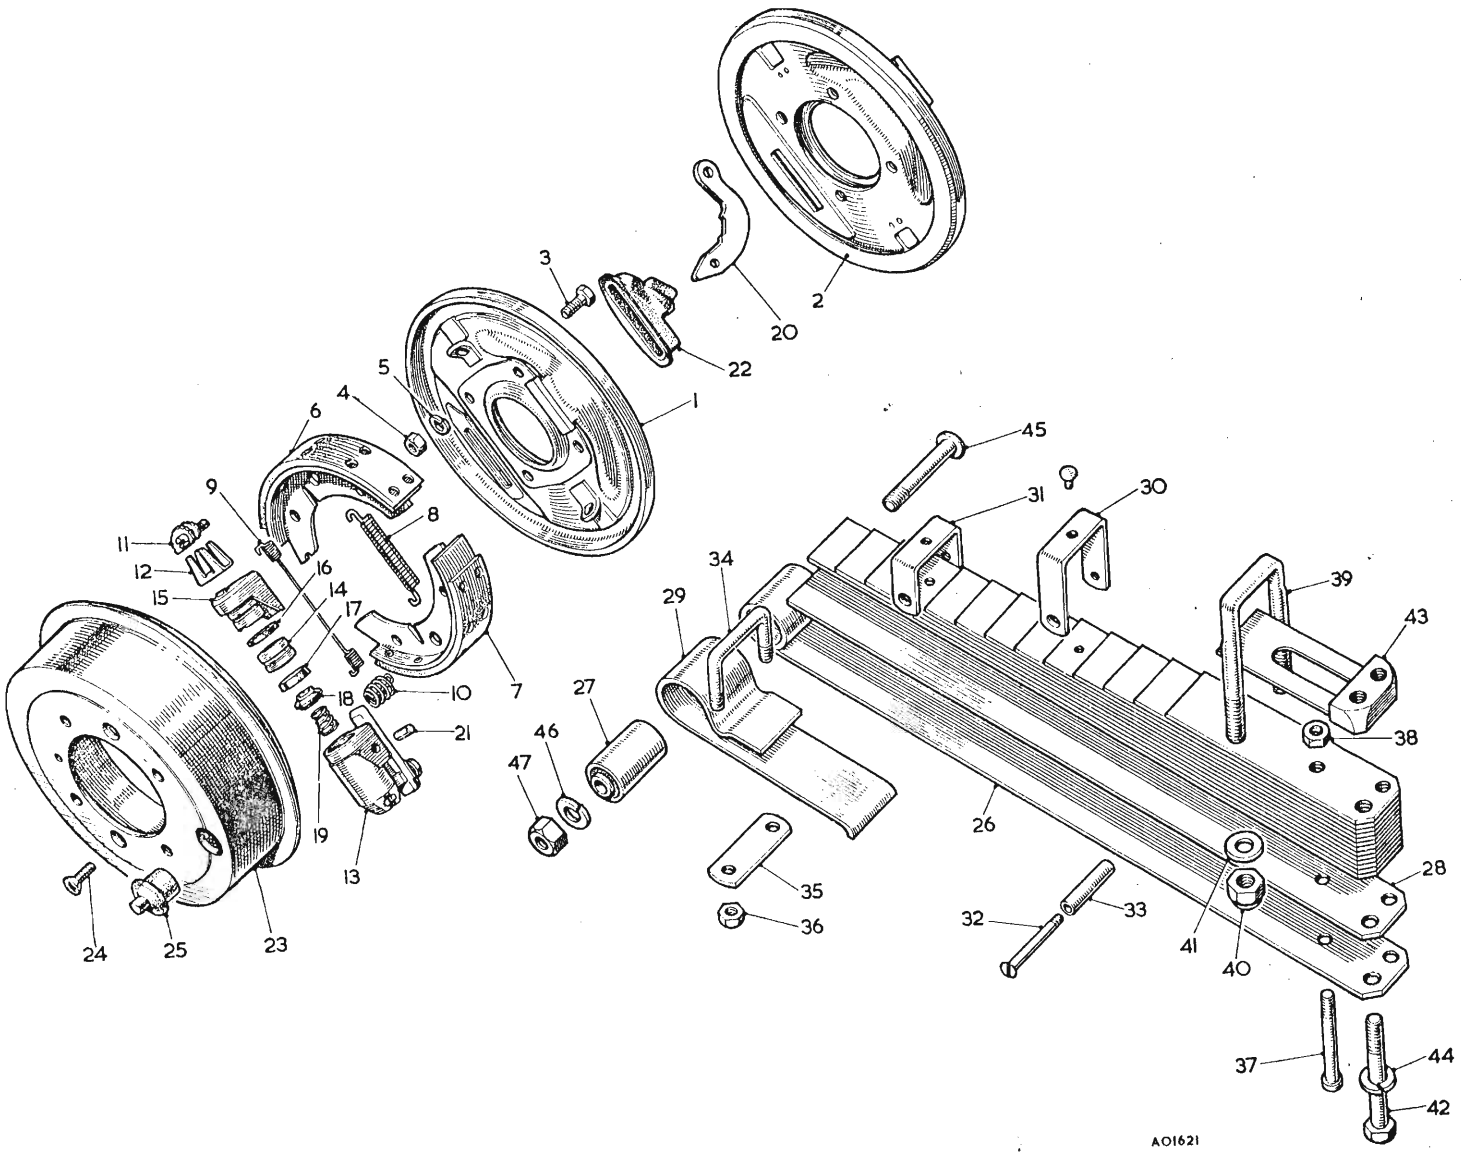


To face page H.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BRAKES										
1	**Plate—brake (R/H)**	**ATA7076**	**1**	**1**	**1**						
2	**Plate—brake (L/H)**	**ATA7077**	**2**	**1**	**1**						
3	Bolt—brake-plate to axle case	HZS0506	3	8	8						
4	Nut for bolt	FNZ105	4	8	8						
5	Washer for nut (spring)	LWZ205	5	8	8	24					
6	**Shoe assembly—brake**	**AJA5086**	**6**	**2**	**2**	**set**					
7	**Liner (with rivets)**	**300826**	**7**	**1**	**1**	**set**					
8	Rivets	7H7398		28	28						
9	Spring—brake-shoe pull-off (lower)	301633	8	2	2						
10	Spring—brake-shoe pull-off (upper)	301634	9	2	2						
11	Spring—steady	301020	10	4	4						
12	Adjuster	68648	11	2	2						
13	Mask—adjuster	68643	12	2	2						
14	**Cylinder assembly—wheel**	**301622**		**2**	**2**						
15	Body (with abutment strip)	7H7942	13	2	2						
16	Piston—hydraulic	7H7928	14	2	2						
17	**Piston (with dust cover)**	**AJA5008**	**15**	**2**	**2**						
18	Seal	7H7957	16	2	2						
19	Cup	7H7923	17	2	2						
20	Filler—cup	7H7940	18	2	2						
21	Spring—cup filler	7H7939	19	2	2						
22	Lever—hand brake	27H7395	20	2	2						
23	Pin—lever pivot	7H7929	21	2	2						
24	Boot for wheel cylinder	7H7943	22	2	2						
25	**Drum—brake**	**2A7168**	**23**	**2**	**2**						
26	Screw—drum to hub	CMZ0410	24	4	4						
27	Plug for drum (rubber)	2A7228	25	2	2	12					
28	**Kit set for wheel cylinder (repair)**	**17H7046**		**2**	**2**	**set**					
29	Seal			2	2						
30	Cup			2	2						
31	Boot			2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	REAR SPRING										
1	**Spring assembly**	**2A7309**		2	2						
2	Leaf—main	AHA5331	26	2	2						
3	Bush	2H4605	27	2	2						
4	Leaf—second	AHA5332	28	2	2						
5	Leaf—third	N.S.P.		2	2						
6	Leaf—fourth	N.S.P.		2	2						
7	Leaf—fifth	N.S.P.		2	2						
8	Leaf—sixth	N.S.P.		2	2						
9	Leaf—seventh	N.S.P.		2	2						
10	Leaf—eighth	N.S.P.		2	2						
11	Leaf—ninth	N.S.P.		2	2						
12	Leaf—tenth	N.S.P.		2	2						
13	Leaf—eleventh	N.S.P.		2	2						
14	Leaf—twelfth	N.S.P.		2	2						
15	Leaf—thirteenth	N.S.P.		2	2						
16	Leaf—fourteenth	N.S.P.		2	2						
17	Leaf—fifteenth	N.S.P.		2	2						
18	Clip—safety	AHA5350	29	2	2						
19	Clip—spring (long)	AHA5346	30	2	2						
20	Clip—spring (short)	AHA5347	31	2	2						
21	Screw—spring clip	AHA5348	32	4	4						
22	Tube—distance clip	AHA5349	33	4	4						
23	Clip—safety clip to spring	AHA5351	34	2	2						
24	Plate for clip	AHA5352	35	2	2						
25	Nut for clip	FNZ105	36	4	4						
26	Bolt—locating	AHA5353	37	2	2						
27	Nut for bolt	FNZ205	38	2	2						
28	Clip—spring to frame	AHA5221	39	2	2						
29	Nut for spring clip	LNZ108	40	4	4						
30	Washer for spring clip nut (plain)	PWZ108	41	4	4						
31	Bolt—rear spring to frame	HBZ0626	42	4	4						
32	**Plate—spring attachment**	**AHA5222**	**43**	**2**	**2**						
33	Washer for spring to frame bolt (spring)	LWZ306	44	4	4						
34	Pin—spring	2A7279	45	2	2						
35	Washer for spring pin (spring)	LWZ307	46	2	2						
36	Nut—spring pin	FNZ107	47	2	2						

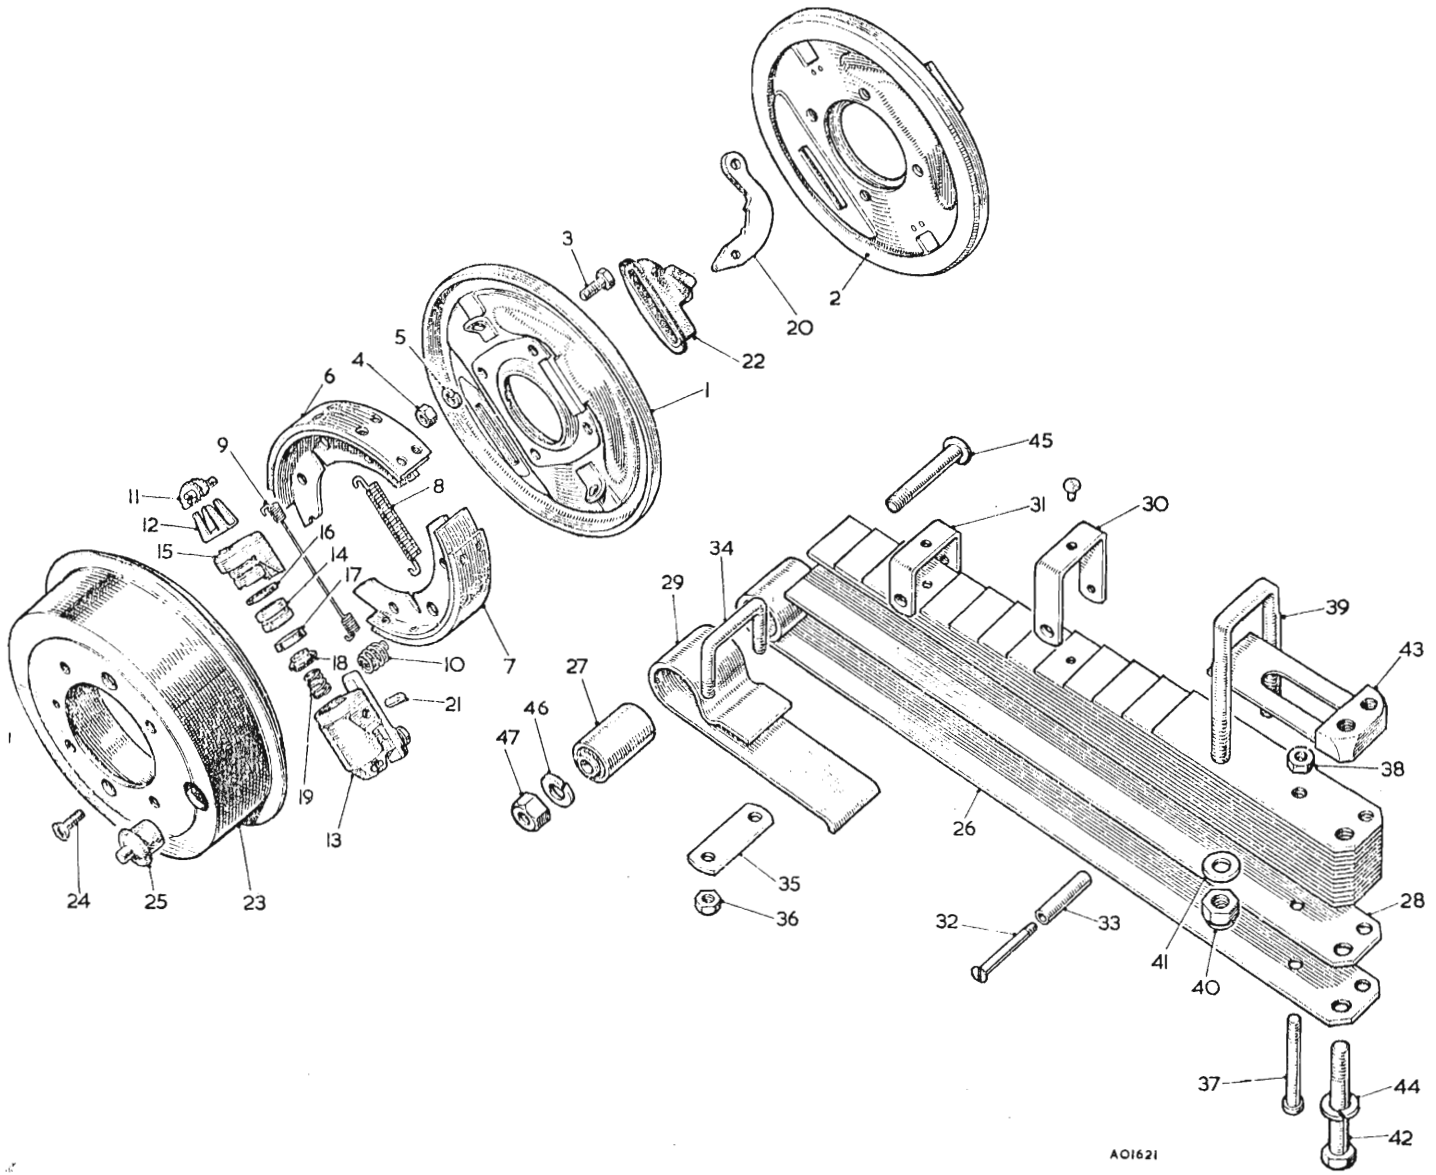

To face page H.4

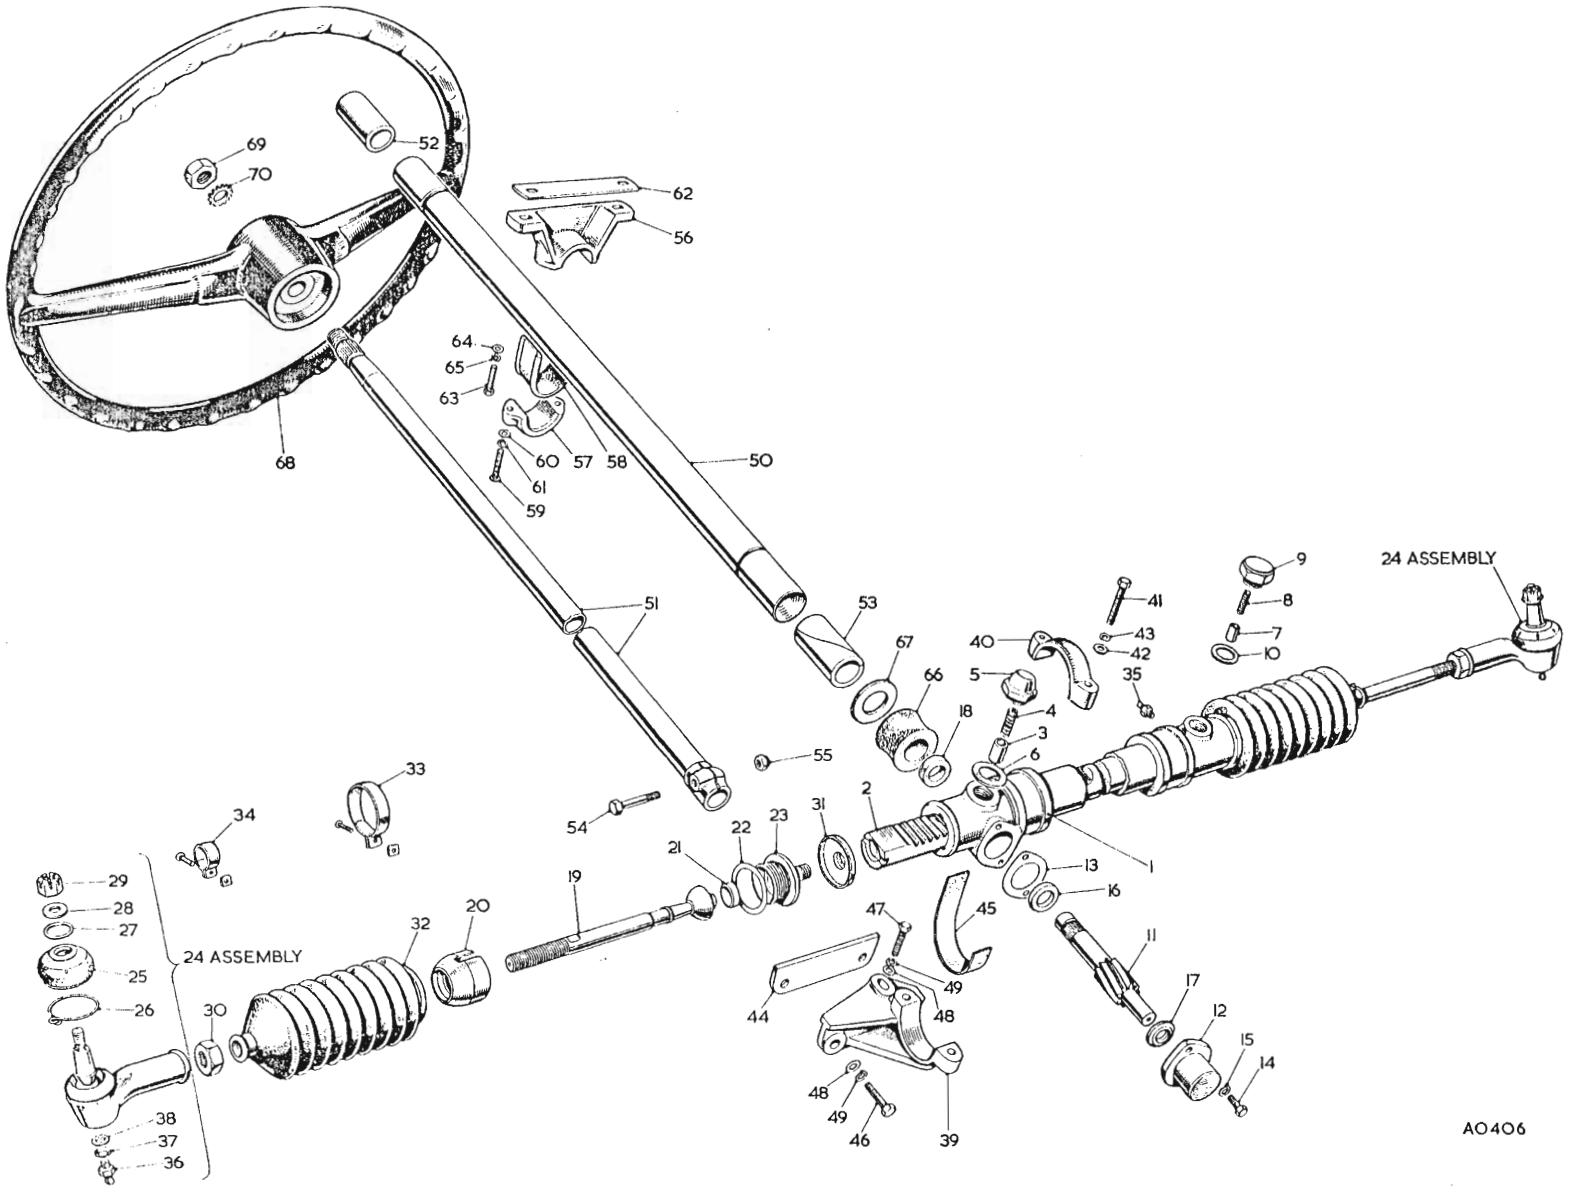


To face page J.1


STEERING

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Rack assembly**	**ACG6010**		1							
2	**Rack assembly**	**ACG6009**			1						
3	Housing	ACA6020	1	1							
4	Housing	ACA6019			1						
5	**Rack**	**ACA6026**	2	1	1						
6	Pad—damper	ACA5244	3	1	1	12					
7	Spring—pad	ACA5248	4	1	1						
8	Housing—pad	ACA5245	5	1	1						
9	Shim for housing (·003″)	ACA5249	6	A/R	A/R						
10	Shim for housing (·010″)	ACA5275		A/R	A/R						
11	Pad—secondary damper	ACA5284	7	1	1						
12	Spring—secondary damper	ACA5286	8	1	1						
13	Housing—secondary damper	ACA5285	9	1	1						
14	Washer for housing	ACA5283	10	1	1						
15	**Pinion**	**ACA6028**	11	1							
16	**Pinion**	**ACA6027**			1						
17	Bearing—pinion tail	ACA5307	12	1	1						
18	Shim for tail bearing (·003″)	ACA5259	13	A/R	A/R						
19	Shim for tail bearing (·005″)	ACA5260		A/R	A/R						
20	Shim for tail bearing (·010″)	ACA5320		A/R	A/R						
21	Screw—bearing to rack housing	AJD6155Z	14	2	2						
22	Washer for screw (spring)	LWZ204	15	2	2						
23	Washer—pinion—top (thrust)	ACA5257	16	1	1						
24	Washer—pinion—bottom (thrust)	ACA5258	17	1	1						
25	Seal—pinion	ACA5261	18	1	1						
26	**Tie-rod assembly**	**ACA6018**		2	2						
27	Tie-rod	ACA6015	19	2	2						
28	Ball housing—female	ACA5304	20	2	2						
29	Seal—ball	ACA5246	21	2	2						
30	Shim (·002″)	ACA6017	22	A/R	A/R						
31	Shim (·003″)	ACA5301		A/R	A/R						
32	Shim (·005″)	ACA5302		A/R	A/R						
33	Shim (·010″)	ACA5303		A/R	A/R						
34	Ball housing—male	ACA6031	23	2	2						
35	**Socket assembly—ball (outer)**	**ACH6168**	24	2	2						**When supplying ACH6168 for vehicles prior to (C) 1308 supply in addition 1 off each ACH6170 washer (dished) and ACH6173 washer (fibre)**
36	Boot	7H3564	25	2	2						
37	Clip—boot to body	7H3565	26	2	2						
38	Ring—boot to ball pin	ACA6004	27	2	2						
39	Washer for ball pin (plain)	PWZ107	28	2	2						
40	Nut for ball pin	FNZ407	29	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Steering—*continued*										
1	Locknut for ball socket	FNZ201	30	2	2						
2	Washer for ball housing (lock)	ACA5247	31	2	2						
3	Seal—rack housing	ACA6029	32	2	2						
4	Clip for seal (inner)	ACA6030	33	2	2						
5	Clip for seal (outer)	ACA5118	34	2	2						
6	Lubricator for rack	UHN305	35	1	1						
7	Lubricator for ball socket	UHN305	36	2	2						
8	Washer for ball socket (dished)		37	2	2			ACH6170	From (C) 1308		
9	Washer for ball socket (fibre)		38	2	2			ACH6173			
10	**Bracket and cap assembly—rack mounting (R/H)**	**2A6145**		**1**	**1**			**AHA5391**	**From (C) 4968**		
11	**Bracket and cap assembly—rack mounting (L/H)**	**2A6146**		**1**	**1**			**AHA5392**			
12	Screw—cap to bracket	HCZ0512	41	4	4						
13	Washer for cap screw (plain)	PWZ105	42	4	4						Finished at (C) 4967
14	Washer for cap screw (spring)	LWZ205	43	4	4	24					
15	Seating—mounting bracket—rack	2A6128	44	2	2						
16	Packing—mounting bracket—rack	2A6129	45	A/R	A/R						Alternatives
17	Packing—mounting bracket—rack	2A6130		A/R	A/R						
18	Packing—mounting bracket—rack	2A6131		A/R	A/R						
19	Screw—mounting bracket to suspension housing support	HZS0506	46	4	4						
20	Screw—mounting bracket to suspension housing support	HZS0508	47	2	2						
21	Washer for mounting bracket screw (plain)	PWZ105	48	6	6						
22	Washer for mounting bracket screw (spring)	LWZ205	49	6	6	24					
23	**Column—steering (outer)**	**2A6140**	**50**	**1**	**1**						
24	Tube—steering column (inner)	2A6136	51	1	1						
25	Bearing—felt (top)	ACA5297	52	1	1						
26	Bearing—felt (bottom)	ACA5398	53	1	1						
27	Bolt—column tube to pinion clamping	53K1013	54	1	1						
28	Nut for bolt	LNZ104	55	1	1						
29	**Bracket—steering column mounting**	**2A6132**	**56**	**1**	**1**						
30	Cap—bracket column mounting	2A6133	57	1	1						
31	Shim—mounting bracket	2A6144	58	A/R	A/R						
32	Screw—cap to bracket	53K2599	59	2	2						
33	Washer for cap screw (plain)	PWZ104	60	2	2	12					
34	Washer for cap screw (spring)	LWZ204	61	2	2						
35	Seating—column mounting bracket	4B2502	62	1	1						
36	Screw—mounting bracket to foot-well	HZS0406	63	2	2						
37	Washer for bracket screw (plain)	PWZ104	64	2	2	12					
38	Washer for bracket screw (spring)	LWZ204	65	2	2						
39	Seal—dust (outer tube to foot-well)	2A6141	66	1	1						
40	Washer—retaining—dust seal	2K8122	67	1	1						
41	**Wheel—steering**	**2A6156**	**68**	**1**	**1**						
42	Nut for wheel	2A6142	69	1	1						
43	Washer for wheel nut (shakeproof)	6K694	70	1	1						

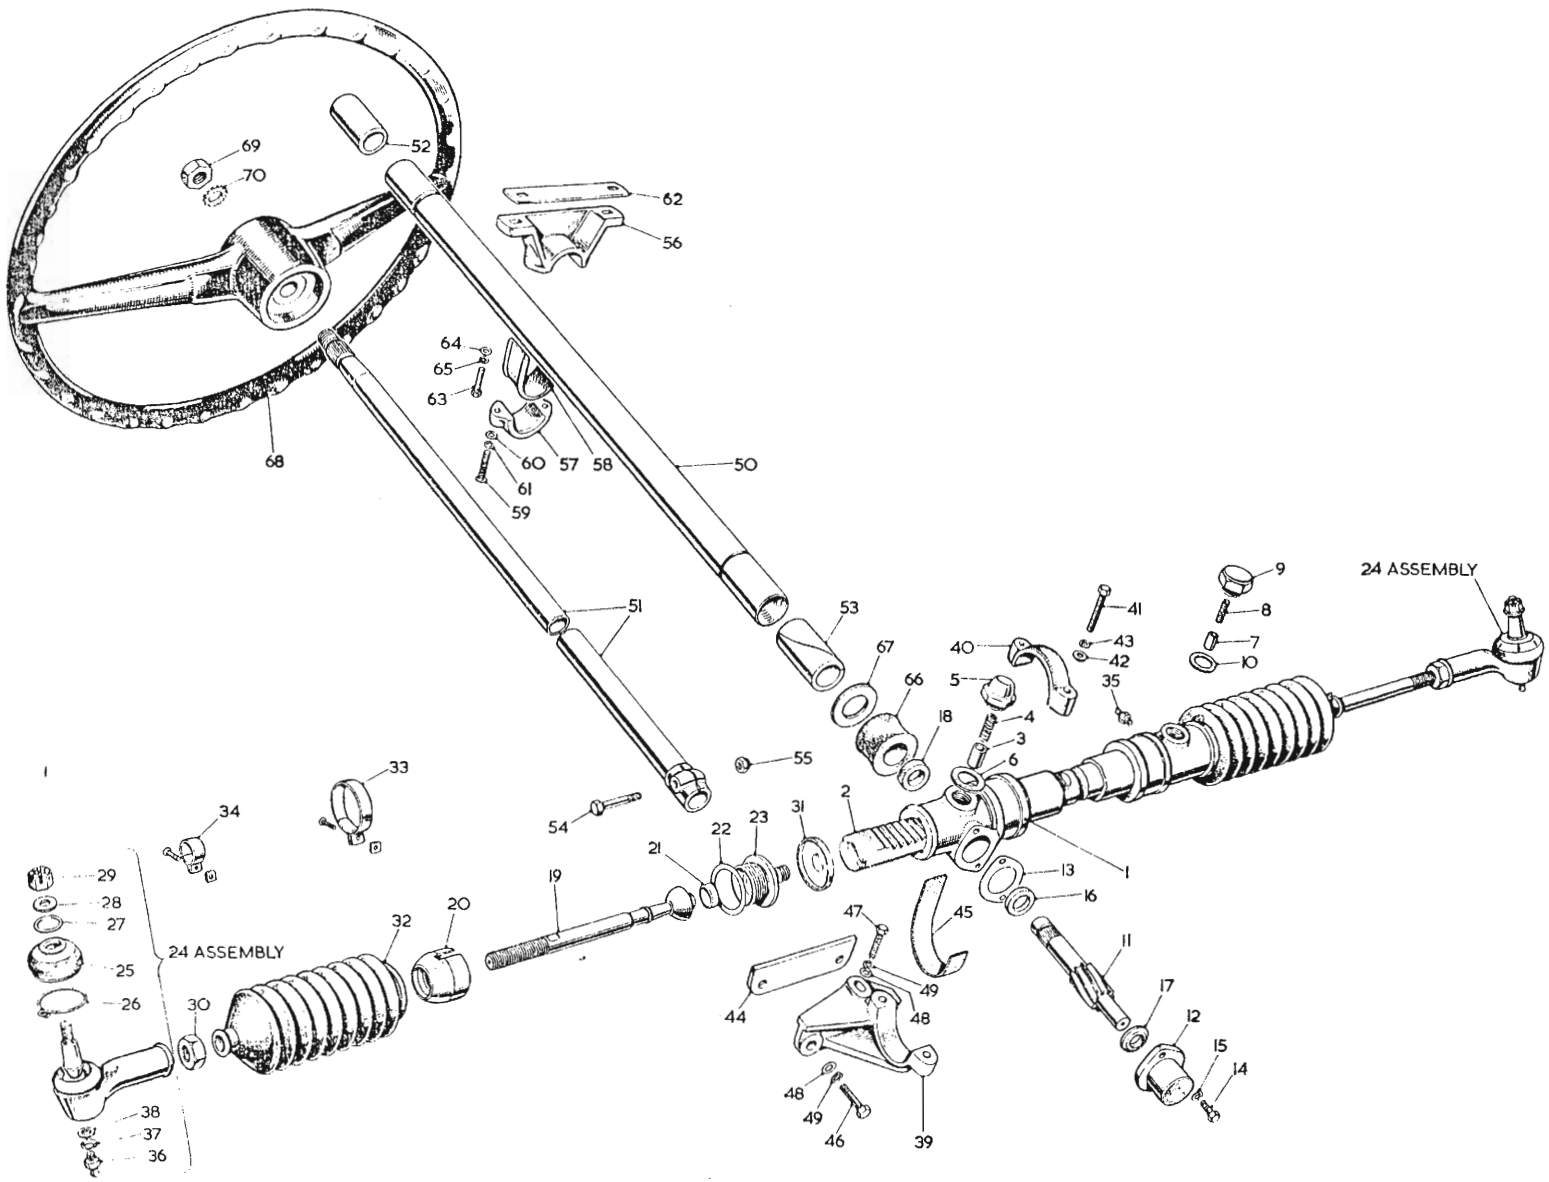

To face page J.2

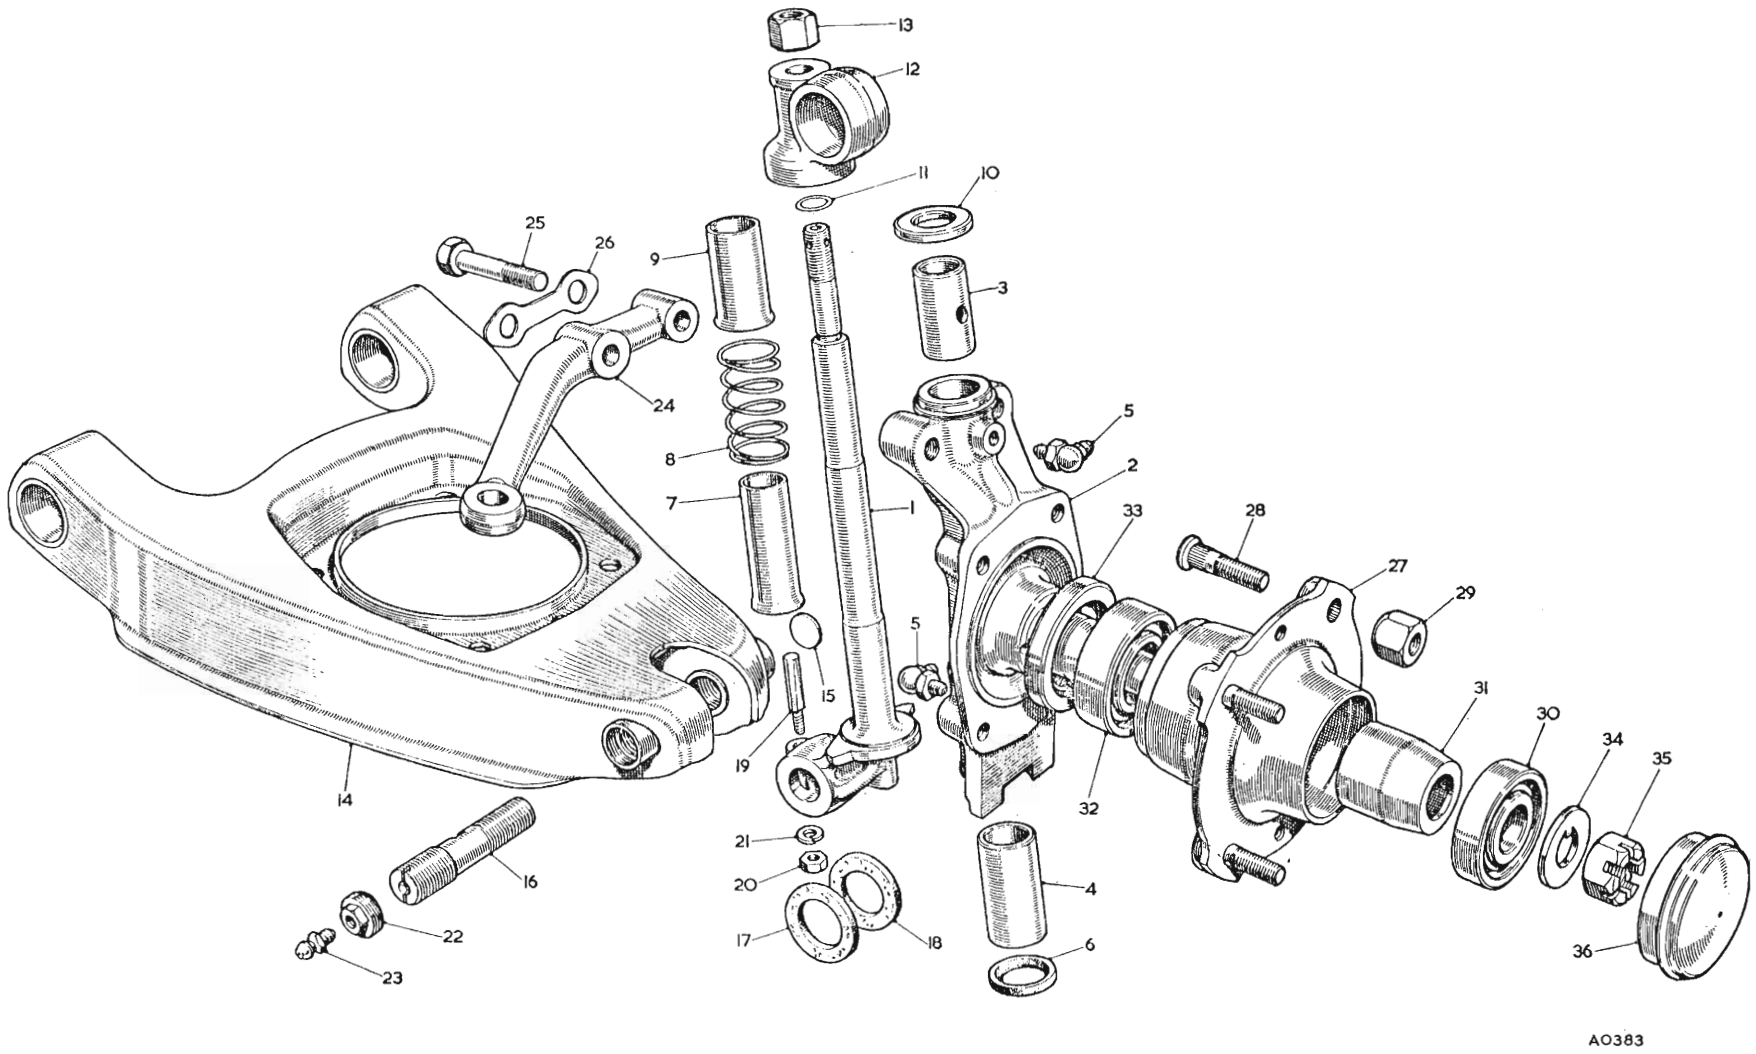


To face page K.1


FRONT AXLE AND SUSPENSION

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Front suspension assembly (R/H)**	**N.S.P.**		1	1						
2	**Front suspension assembly (L/H)**	**N.S.P.**		1	1						
3	Pin—swivel	2A4004	1	2	2						
4	**Axle assembly—swivel**	**2A4129**	**2**	**2**	**2**						
5	Bush (top)	2A4176	3	2	2	6					
6	Bush (bottom)	1A4744	4	2	2	12					
7	Lubricator for swivel axle bushes	3H2192	5	4	4						
8	Ring—sealing	2A4009	6	2	2	12					
9	Tube—dust excluder (bottom)	2A4011	7	2	2						
10	Spring for dust excluder	6K653	8	2	2						
11	Tube—dust excluder (top)	2A4010	9	2	2						
12	Washer (thrust)	2A4006	10	2	2						
13	Washer—adjustment (·012")	2A4008	11	A/R	A/R						
14	Washer—adjustment (·008")	2A4007		A/R	A/R						
15	Washer—adjustment (·003")	2A4168		A/R	A/R						
16	Trunnion—suspension link	2A4005	12	2	2						
17	Nut—trunnion to swivel pin	FNZ307	13	2	2						
18	**Link—lower**	**2A4169**	**14**	**2**	**2**						
19	Plug for fulcrum pin small bush (blanking)	51K3424	15	2	2						
20	Pin—fulcrum	2A4020	16	2	2						
21	Ring for fulcrum pin (large)	2A4206	17	2	2						
22	Ring for fulcrum pin (small)	2A4205	18	2	2						
23	Pin—cotter (fulcrum pin to swivel pin)	51K1769	19	2	2						
24	Nut for cotter pin	FNZ103	20	2	2						
25	Washer for nut (spring)	LWZ203	21	2	2						
26	Plug for fulcrum pin large bush (screwed)	8G589	22	2	2						
27	Lubricator	3H1709	23	2	2						
28	Lever—steering (R/H)	2A4212		1	1			ATA4130	From (C) 4800		
29	Lever—steering (L/H)	2A4213	24	1	1			ATA4131	From (C) 4800		
30	Screw—steering lever to swivel axle	53K1370	25	4/2	4/2						Quantity reduced at (C) 4799
31	Screw—steering lever to swivel axle							ATA4132	From (C) 4800		
32	Washer for screw (lock)	2K5377	26	2	2						
33	**Hub assembly**	**2A4137**	**27**	**2**	**2**						
34	Stud—wheel	2A4066	28	8	8						
35	Nut for wheel stud	2A8012	29	8	8	12					
36	Bearing for hub (outer)	2A4148	30	2	2						
37	Distance piece for bearing	2A4146	31	2	2						Alternatives
38	Distance piece for bearing	ATA4064		2	2						
39	Bearing for hub (inner)	2A4147	32	2	2						
40	Seal—oil	ACA4000	33	2	2	12					
41	Washer—bearing retaining	2A4003	34	2	2						
42	Nut to swivel axle	51K328	35	2	2						
43	Cap—oil retaining	2A4067	36	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Front Axle and Suspension — *continued*										
1	**Plate—brake (R/H)**	**17H7543**		**1**	**1**						
2	**Plate—brake (L/H)**	**17H7544**	**1**	**1**	**1**						
3	Screw—brake plate to swivel axle	51K1368	2	8	8						
4	Washer for screw (shakeproof)	2K8606	3	8	8						
5	**Shoe assembly—brake**	**AJA5085**	**4**	**2**	**2**	**set**					
6	**Liner (with rivets)**	**300826**	**5**	**1**	**1**	**set**					
7	Rivets	7H7398	6	28	28						
8	Spring—brake-shoe pull-off	301627	7	4	4						
9	Adjuster—Micram	68640	8	2	2						
10	Mask	68643	9	2	2						
11	**Cylinder assembly—wheel (R/H)**	**7H7949**		**2**	**2**						
12	**Cylinder assembly—wheel (L/H)**	**7H7950**	**10**	**2**	**2**						
13	Body (R/H)	N.S.P.		2	2						
14	Body (L/H)	N.S.P.	11	2	2						
15	Piston (with dust cover)	7H7941	12	4	4						
16	Cup	7H7924	13	4	4						
17	Filler—cup	7H7938	14	4	4						
18	Spring for cup filler	7H7939	15	4	4						
19	Ring—sealing	7H7753	16	4	4						
20	Screw—wheel cylinder fixing (small)	7H7520	17	4	4						
21	Washer for screw (shakeproof)	7H7367	18	4	4						
22	Screw—wheel cylinder fixing (large)	7H7636	19	4	4						
23	Washer for screw (spring)	7H7368	20	4	4						
24	Screw—bleeder	3H2428	21	2	2						
25	**Drum—brake**	**2A7168**	**22**	**2**	**2**						
26	Screw—drum to hub	CMZ0407	23	4	4						
27	Plug for brake drum	2A7228	24	2	2	12					
28	**Kit for wheel cylinder (repair)**	**17H7050**		**4**	**4**	**set**					
29	Cup			4	4						
30	Ring—sealing			4	4						
31	**Absorber—shock (R/H)**	**2A4172**		**1**	**1**						
32	**Absorber—shock (L/H)**	**2A4174**	**25**	**1**	**1**						
33	Screw—shock absorber to frame	53K1364	26	6	6						
34	Washer for screw (plain)	PWZ106	27	6	6						
35	Washer for screw (spring)	LWZ306	28	6	6						
36	Pin—fulcrum (shock absorber to trunnion)	2A4028	29	2	2						
37	Bearing	2A4027	30	4	4						] Alternatives
38	Bearing	2A4163		4	4						
39	Nut for fulcrum pin	FNZ306	31	2	2						
40	Bolt—clamping fulcrum pin to shock absorber arm	53K1389	32	2	2						
41	Washer for bolt (shakeproof)	2K8606	33	2	2						

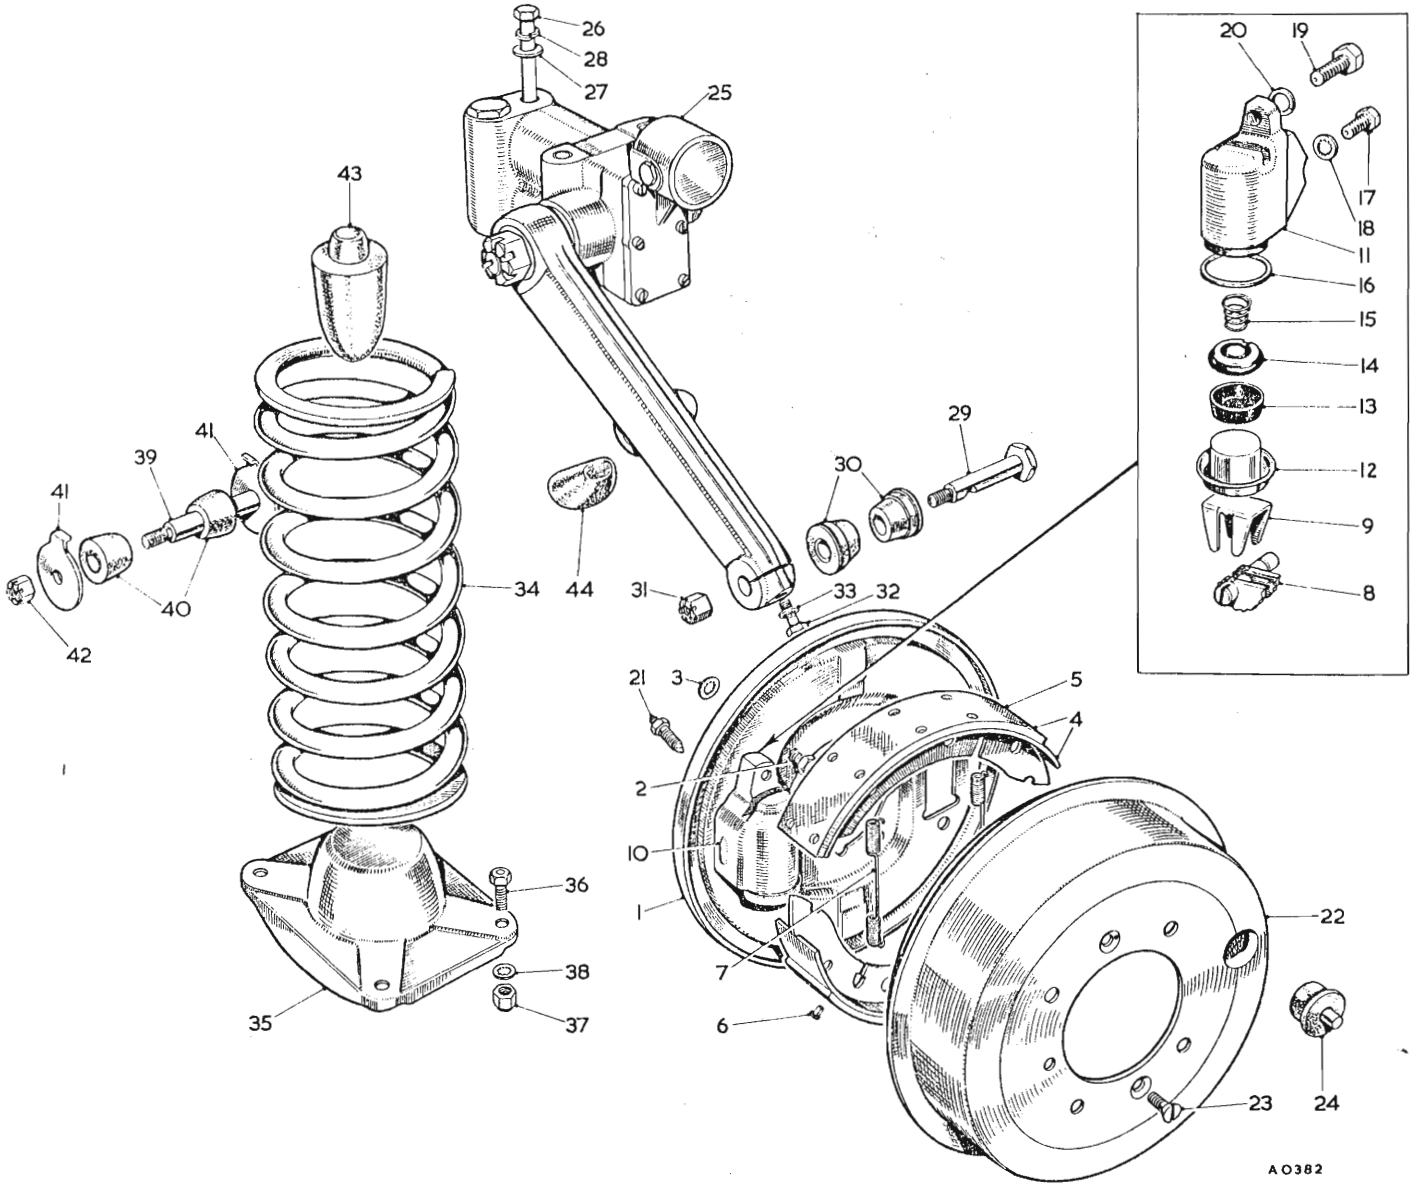

To face page K.2

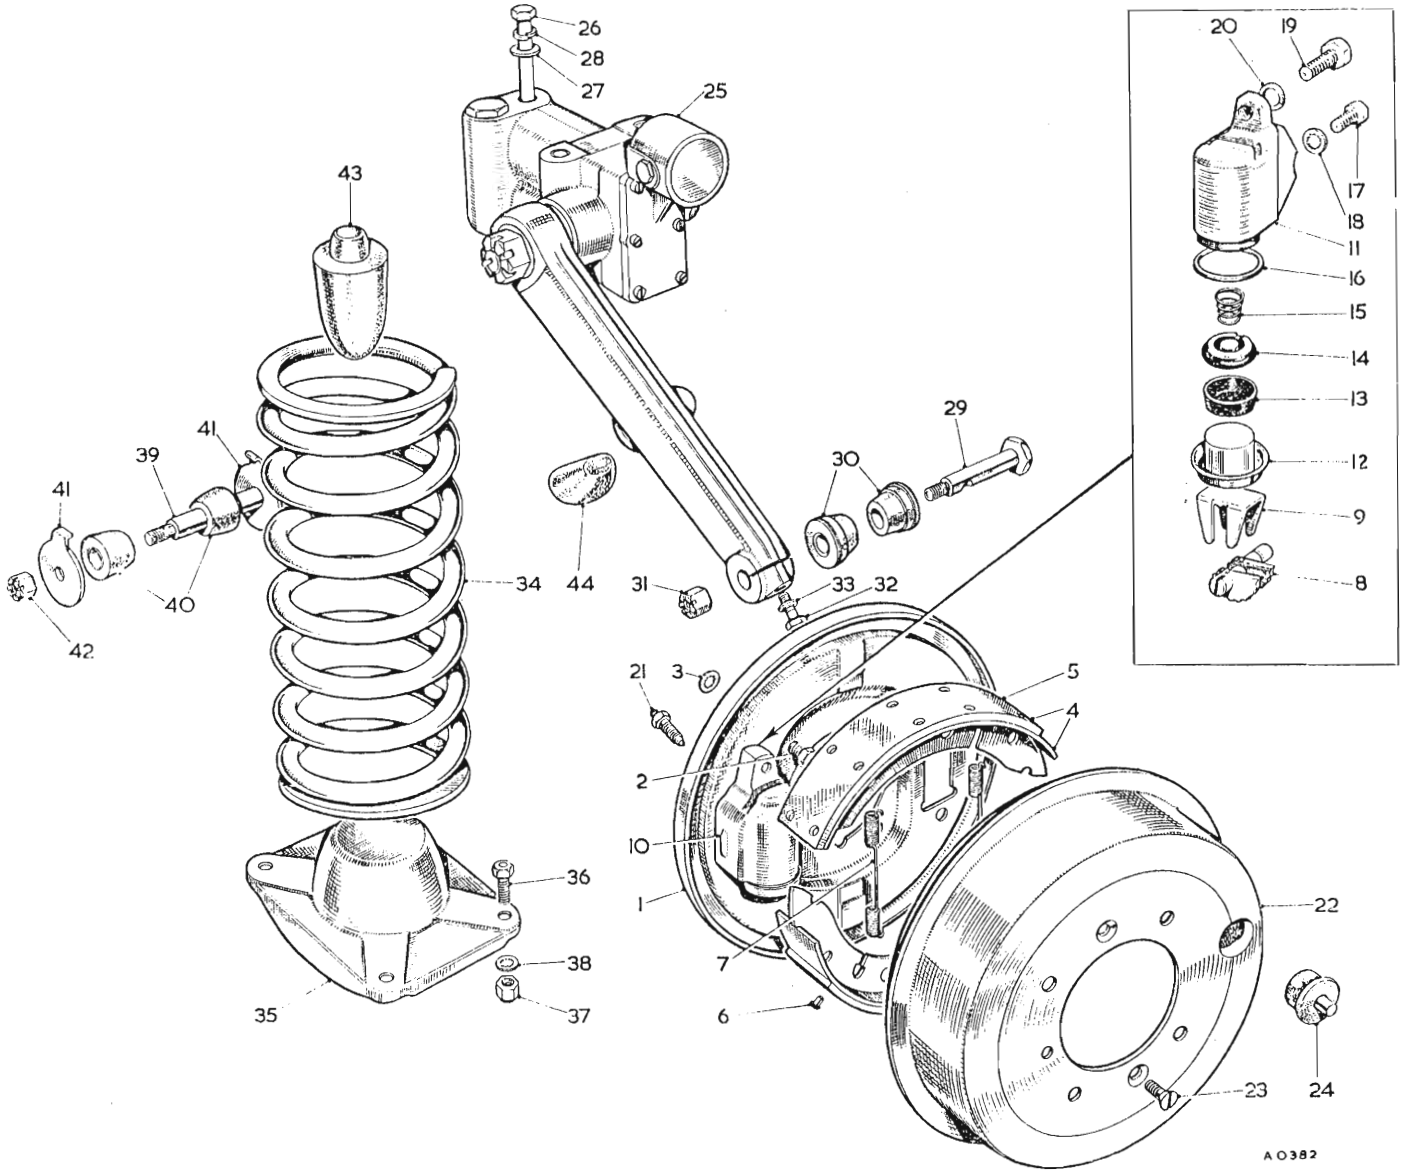


To face page K.3


Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Commencing (C) 501 Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Front Axle and Suspension—*continued*										
1	**Spring—road (coil)**	**2A4214**	**34**	**2**	**2**						
2	Seat—spring	2A4031	35	2	2						
3	Bolt—spring seat to lower link	53K1368	36	8	8						
4	Nut for bolt	LNZ205	37	8	8						
5	Washer for nut (shakeproof)	2K8606	38	8	8						
6	Pin—fulcrum (lower link to frame)	2A4021	39	4	4						
7	Bearing for lower link	8G621	40	8	8	12					
8	Washer for fulcrum pin (special)	2A4024	41	4	4						
9	Nut for fulcrum pin	FNZ306	42	4	4						
10	Buffer—suspension	2A4029	43	2	2						
11	Buffer—rebound	2A4082	44	2	2						

REAR SHOCK ABSORBERS

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Absorber assembly (R/H—rear)**	**2A7298**		1	1			**AHA5312**	**From (C) 4333 except 4471, 4622, 4680, 4684**		
2	**Absorber assembly (L/H—rear)**	**2A7299**	1	1	1			**AHA5311**			
3	Link—shock absorber	2A7303		2	2						
4	Rubber for shock absorber link (top)	97H222		2	2						
5	Screw—absorber body to frame	HZS0609	2	4	4						Finished at (C) 4332 except 4471, 4622, 4680, 4684
6	Washer for screw (spring)	LWZ306	3	4	4						
7	Nut for screw	FNZ106	4	4	4						
8	Bolt—absorber to bracket (3¾")			2	2			HBZ0630			
9	Bolt—absorber to bracket (1½")			2	2			HBZ0612	From (C) 4333 except 4471, 4622, 4680, 4684		
10	Nut for bolt			4	4			LNZ106			
11	Washer for nut (plain)			4	4			PWZ106			
12	Washer for nut (spring)			4	4			LWZ306			
13	Nut—absorber link to axle bracket	FNZ107	5	2	2						
14	Washer for nut (spring)	LWZ307	6	2	2						
15	**Link—top**	**2A7310**	7	2	2						
16	Bush (rubber)	2A7278	8	4	4						
17	Distance piece—bush—top link	AHA5224	9	4	4						Finished at (C) 4332 except 4471, 4622, 4680, 4684
18	Pin—top link to axle bracket	2A7279	10	2	2						
19	Washer for pin (spring)	LWZ307	11	2	2						
20	Nut for pin	FNZ107	12	2	2						
21	Bracket—mounting—link (R/H)	2A7314		1	1						Finished at (C) 4332 except 4471, 4622, 4680, 4684
22	Bracket—mounting—link (L/H)	2A7315	13	1	1						
23	Bracket—mounting—link and absorber (R/H)			1	1			AHA5305	From (C) 4333 except 4471, 4622, 4680, 4684		
24	Bracket—mounting—link and absorber (L/H)			1	1			AHA5306			
25	Bolt—top link to mounting bracket	HBZ0732	14	2	2						
26	Washer for bracket bolt (plain)	PWZ107	15	2	2						
27	Washer for bracket bolt (spring)	LWZ307	16	2	2						
28	Nut for bolt	FNZ107	17	2	2						
29	Screw—mounting bracket to rear cross-member	HZS0610	18	6	6						
30	Washer for bracket screw (spring)	LWZ206	19	6	6						
31	**Check strap—axle**	**AHH5081**	20	2	2						
32	Distance tube—strap	2A7306	21	2	2						
33	Bolt—strap to floor bracket	HBZ0618	22	2	2						
34	Nut for bolt	LNZ206	23	2	2						
35	Washer—strap to axle spindle (plain)	PWZ206	24	2	2						
36	Washer—strap to axle spindle (spring)	LWZ206	25	2	2						
37	Nut—strap to axle spindle	FNZ106	26	2	2						

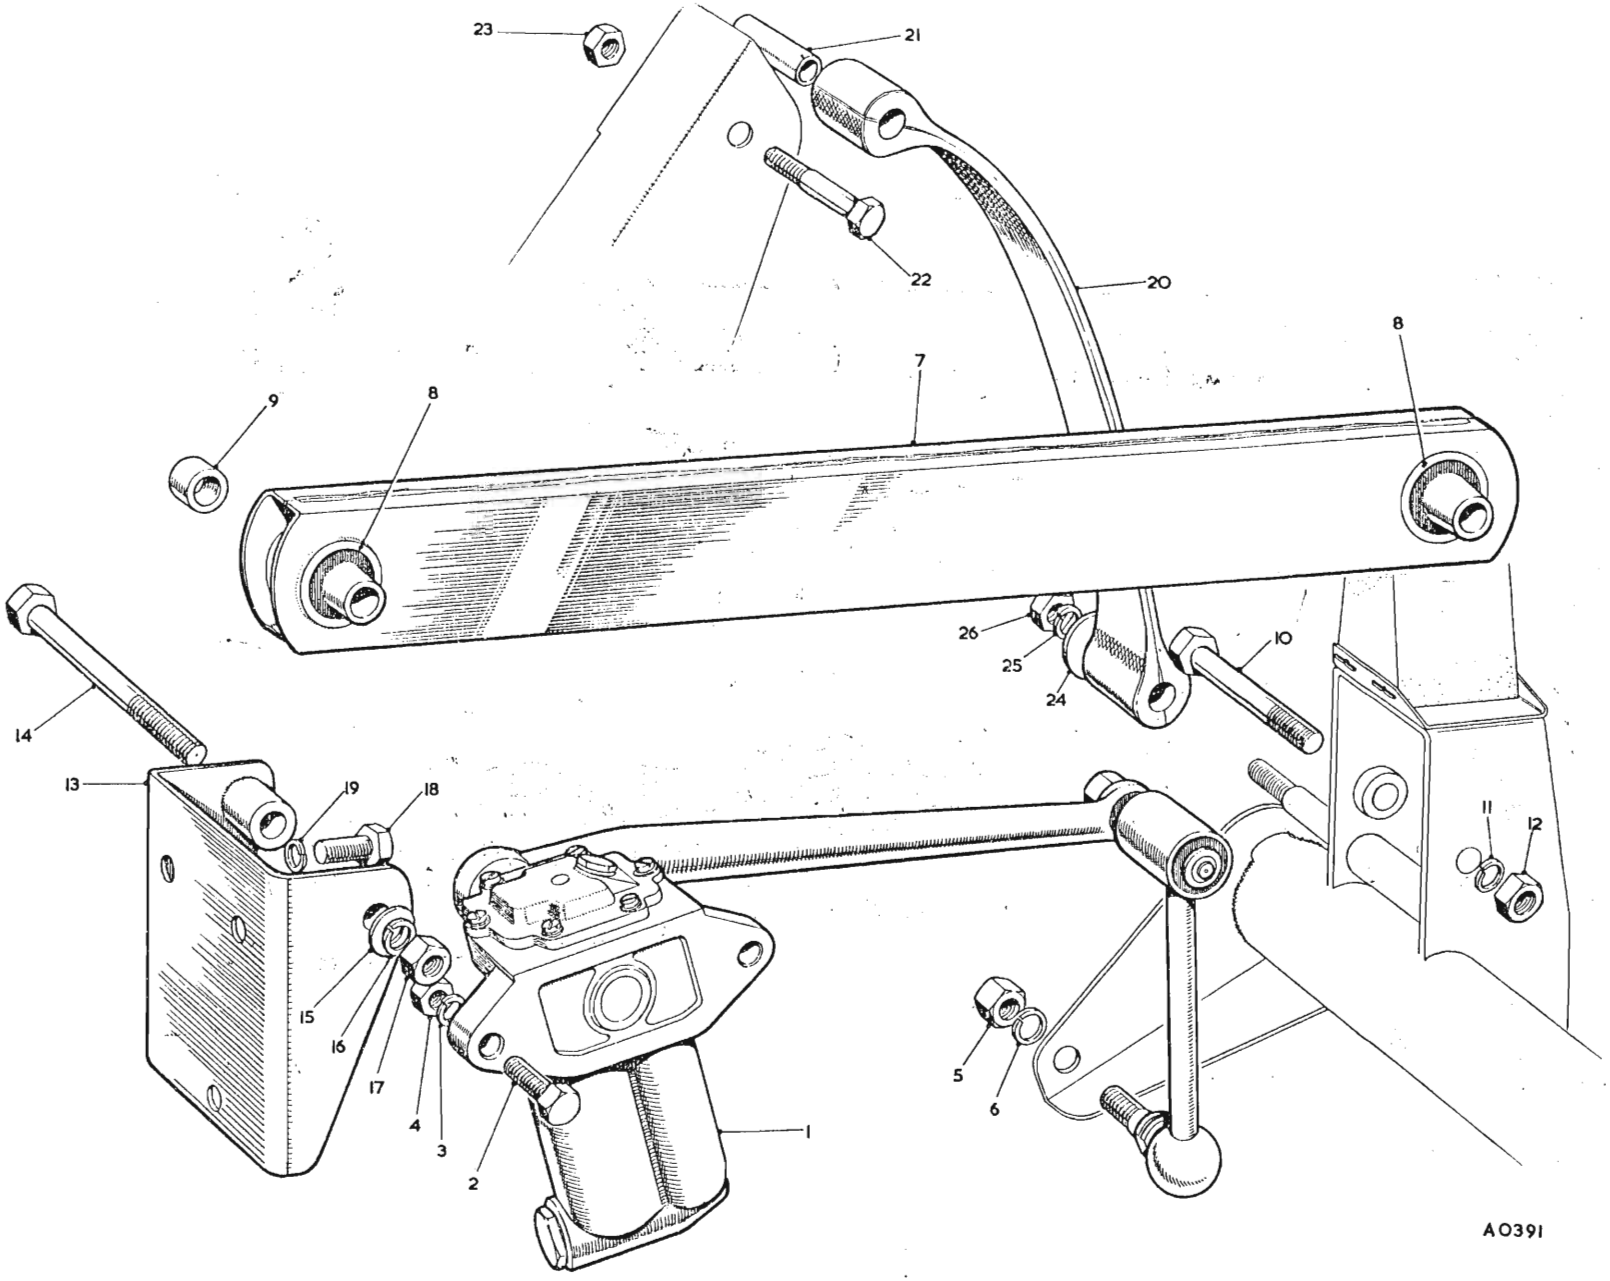


To face page L.1

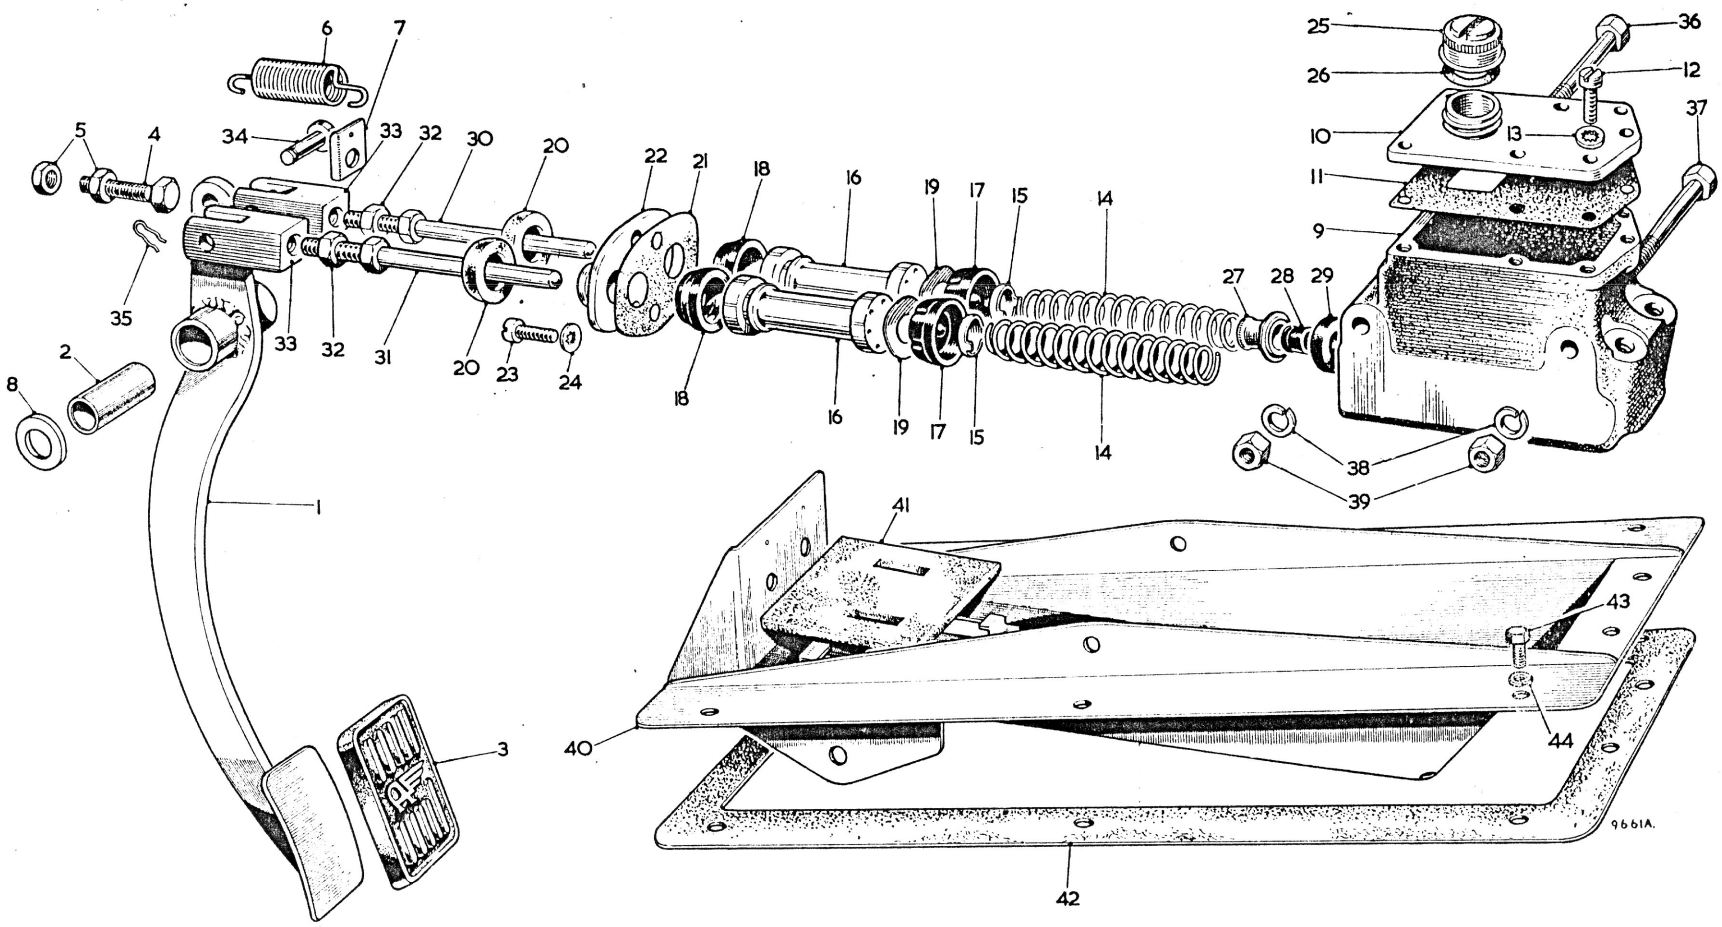

6
7
5
4
34
33
32
30
20
22
21
18
16
19
17
15
14
25
36
26
12
10
13
37
11
9
27
28
29
35
2
8
1
3
41
43
40
44
42
38
39
9661A.

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BRAKE CONTROLS										
	PEDAL										
1	**Pedal (with bush)**	**2A5559**	**1**	1	1						
2	Bush	2A5564	2	1	1						
3	**Pad for pedal rubber**	**2A5562**	**3**	1	1						
4	Screw—pedal adjustment	HZS0410	4	1	1						
5	Locknut for screw	FNZ204	5	2	2						
6	**Spring—pedal return**	**2A5574**	**6**	1	1						
7	Retainer—return spring	2A5573	7	1	1						
8	Washer for brake and clutch pedal (distance)	2A5565	8	1	1						
	MASTER CYLINDER DETAILS										
9	**Cylinder and supply tank assembly (R)**	**AJH5128**		1	1						
10	Body	N.S.P.	9	1	1						
11	Cover—body	AJH5085	10	1	1						
12	Gasket for cover	AJH5086	11	1	1						
13	Screw—cover to body	301551	12	5	5						
14	Washer for cover screw (shakeproof)	AJD7624	13	5	5						
15	Spring—piston return	AJH5083	14	2	2						
16	Retainer—spring	7H7487	15	2	2						
17	Piston	7H7925	16	2	2						
18	Cup—primary—piston	7H7485	17	2	2	12					
19	Cup—secondary—piston	17H7109	18	2	2						
20	Washer—primary cup to piston	7H7484	19	2	2						
21	Boot—push-rod	AJH5084	20	2	2						
22	Gasket—boot fixing plate	301550	21	1	1						
23	Plate—boot fixing	301549	22	1	1						
24	Screw for plate	301551	23	2	2						
25	Washer for plate screw (shakeproof)	AJD7624	24	2	2						
26	**Cap—filler**	**AJG5006**	**25**	1	1						
27	Seal	AJG5016	26	1	1						
28	**Valve assembly**	**39731**		1	1						
29	Body	7H7488	27	1	1						
30	Cup	7H7022	28	1	1						
31	Washer	7H7489	29	1	1						
32	**Repair kit—master cylinder**	**17H7054**		1	1						
33	Cup—primary			1	1						
34	Cup—secondary			1	1						
35	Cup—valve			1	1						
36	Washer for valve			1	1						
37	Boot—push-rod			1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Master Cylinder Details—*continued*										
1	**Push-rod—cylinder—brake**	**2A5587**	**30**	1	1						
2	**Push-rod—cylinder—clutch**	**2A5588**	**31**	1	1						
3	Locknut for push-rod	FNZ205	32	2	2						
4	Fork end—push-rod	2A5576	33	2	2						
5	Pin—clevis (fork end to pedal)	2A5575	34	2	2						
6	Circlip—fork end to pedal	1B3498	35	2	2						
7	Bolt—master cylinder to pedal box	HBZ0624	36	1	1						
8	Bolt—master cylinder to pedal box	HBZ0626	37	1	1						
9	Washer for bolt (spring)	LWZ206	38	2	2						
10	Nut for bolt	FNZ106	39	2	2						
11	Fluid (8 fl. oz.)	17H7533		1	1						
12	Fluid (pint)	17H7534		1	1						
13	Fluid (32 fl. oz.)	17H7535		1	1						
	BRAKE AND CLUTCH PEDAL BOX										
14	**Box assembly—pedal**	**2A5538**	**40**	1	1						
15	**Draught excluder—pedal box**	**2A5572**	**41**	1	1						
16	Washer—joint (pedal box to foot-well)	2A5549	42	1	1						
17	Screw—pedal box to foot-well	HZS0405	43	9	9						
18	Screw—pedal box to foot-well	HZS0408		1	1						
19	Washer for pedal box screw (spring)	LWZ304	44	10	10						

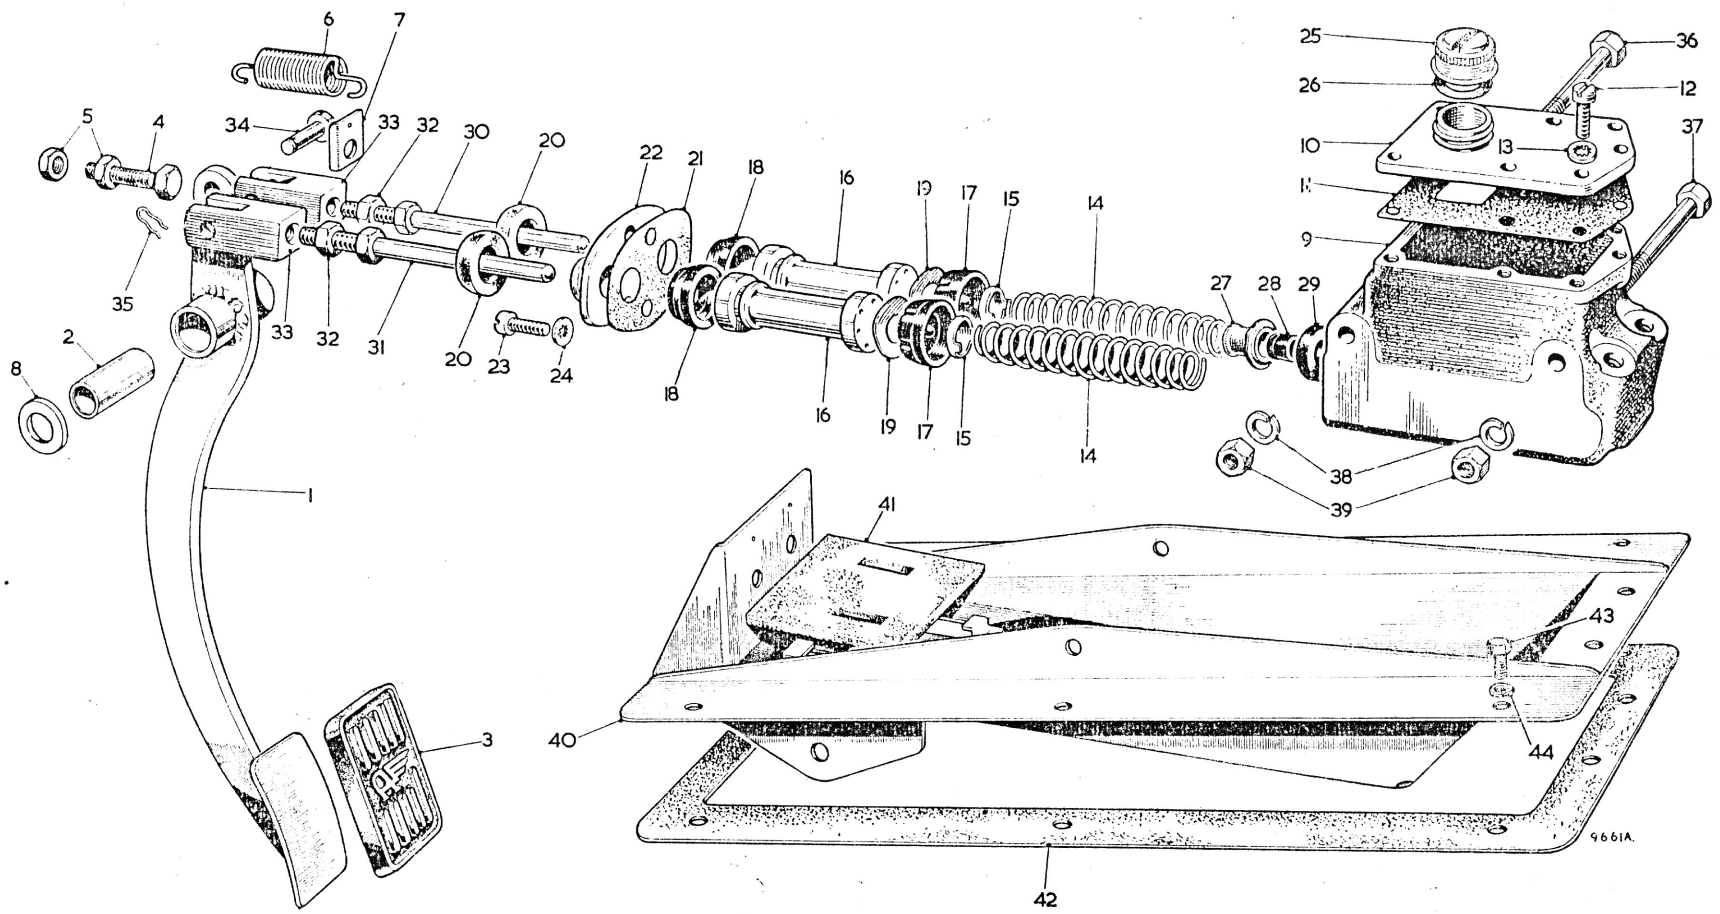


To face page M.2

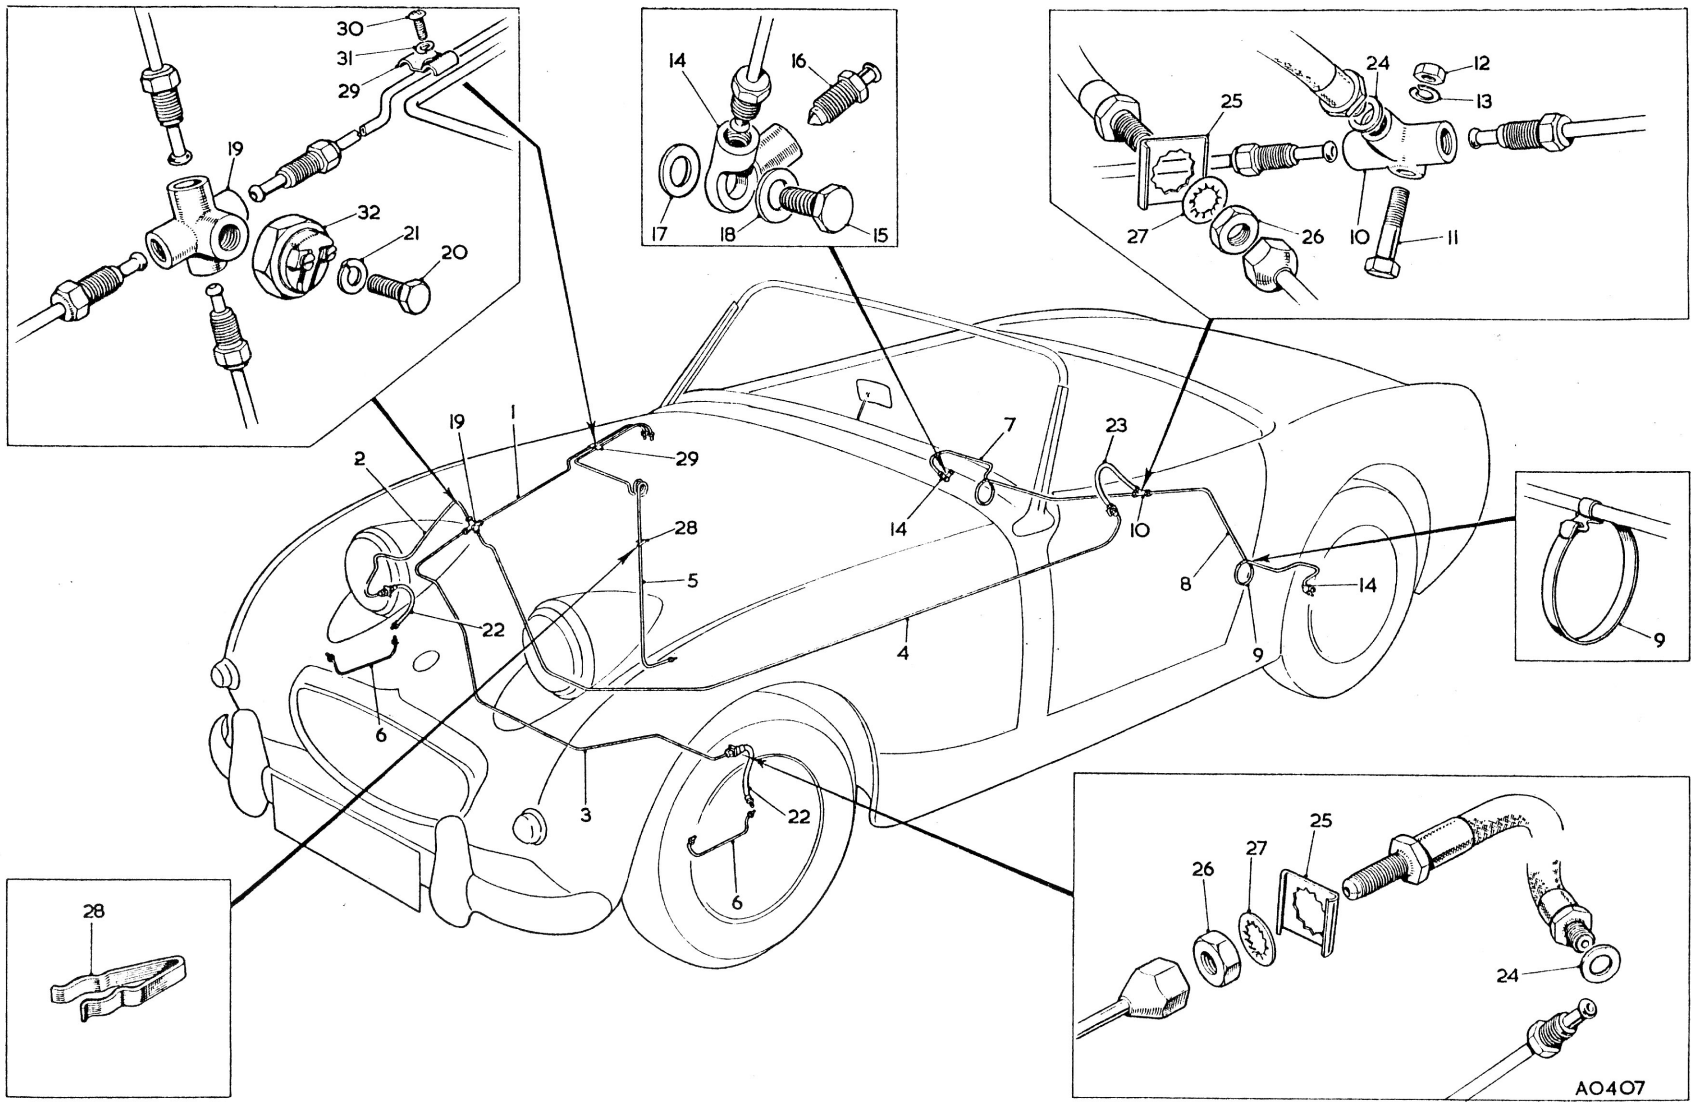


To face page M.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BRAKE AND CLUTCH PIPES										
1	**Pipe—master cylinder to 4-way connection**	**2A5605**	**1**	**1**							
2	Pipe—master cylinder to 4-way connection	2A5619			1						
3	Pipe—4-way connection to R/H front brake hose	2A5607	2	1	1						
4	Pipe—4-way connection to L/H front brake hose	2A5609	3	1	1						
5	Pipe—4-way connection to rear brake hose	2A5611	4	1	1						
6	Pipe—master cylinder to clutch cylinder	2A5615	5	1							
7	Pipe—master cylinder to clutch cylinder	2A5617			1						
8	Pipe—bridge—front cylinder	AHA5198	6	2	2						
9	**Pipe—3-way to R/H brake (rear)**	**17H7531**	**7**	**1**	**1**						
10	**Pipe—3-way to L/H brake (rear)**	**17H7532**	**8**	**1**	**1**						
11	Strap for pipe	ACA5375	9	2	2						
12	Connection—3-way	3H2424	10	1	1						
13	Bolt—3-way connection to gear carrier	HBZ0409	11	1	1						
14	Nut for bolt	FNZ104	12	1	1						
15	Washer for nut (spring)	LWZ204	13	1	1						
16	**Connection—banjo**	**AHH5634**	**14**	**2**	**2**						
17	Bolt for banjo connection	7H7847	15	2	2						
18	Screw—bleeder	3H2428	16	2	2						
19	Gasket for bolt (small)	3H2287	17	2	2						
20	Gasket for bolt (large)	3H550	18	2	2						
21	Connection—4-way	AHH5283	19	1	1						
22	Screw—connection to wheel arch	HBZ0408	20	1	1						
23	Washer for connection screw (spring)	LWZ204	21	1	1						
24	**Hose—front brake**	**13H83**	**22**	**2**	**2**						
25	**Hose—rear brake**	**BCA4031**	**23**	**1**	**1**						
26	Gasket for brake hoses	3H2287	24	3	3						
27	Locking plate for brake hoses	1G9198	25	3	3						
28	Locknut—hose to frame bracket	FNZ106	26	3	3						
29	Washer for hose locknut (shakeproof)	2K7131	27	3	3						
30	Clip—pipe to frame	6K35	28	5	5						
31	Clip—pipes to foot-well panel	2H400	29	1							
32	Clip—pipes to dash	CHR0307			4						
33	Screw for clip	PMZ0305			4						
34	Nut for screw	FNZ103			4						
35	Washer for nut (spring)	LWZ203			4						
36	Clip—pipes to cover-plate	PCR0311			3						
37	Screw—pipes to foot-well clip	PMZ0305	30	1	1						
38	Washer for clip screw (spring)	LWZ203	31	1	1						
39	**Switch—stop light**	**3H1894**	**32**	**1**	**1**						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HAND BRAKE MECHANISM										
1	**Hand brake assembly**	**2A7290**		1	1						
2	Handle assembly	7H5944	1	1	1						
3	Plunger—thumb	7H5948	2	1	1						
4	Spring for plunger	7H5950	3	1	1						
5	Washer for plunger (rubber)	7H5951	4	1	1						
6	Pin for plunger	7H5952	5	1	1						
7	Rod—pawl	7H5945	6	1	1						
8	Pawl	7H5946	7	1	1						
9	Ratchet and tube	7H5947	8	1	1						
10	Link for main spindle	7H5949	9	1	1						
11	Nut for main spindle	FNZ106	10	1	1						
12	Washer for nut (plain)	PWZ106	11	1	1						
13	Washer for nut (shakeproof)	LWZ406	12	1	1						
14	Screw—hand brake to bracket	1B8859	13	2	2						
15	Bracket—hand brake	2A7291	14	1	1						
16	Screw—hand brake and bracket to tunnel	HZS0505	15	3	3						
17	Washer for screw (spring)	LWZ205	16	3	3	24					
18	**Cable assembly—hand brake**	**2A7308**	**17**	1	1						
19	Locknut for cable	1B7364	18	3	3						
20	Nipple—grease—cable	UHN105	19	1	1						
21	Pin—clevis (cable to hand brake lever)	CLZ0515	20	1	1						
22	Washer for clevis pin	PWZ105	21	1	1						
23	Pin—clevis (cable to balance lever)	CLZ0414	22	1	1						
24	Washer for clevis pin	PWZ104	23	1	1	12					
25	Support—balance lever	ATA7320	24	1	1						
26	Carrier—lever	2A7058	25	1	1						
27	Lever—balance	2A7057	26	1	1						
28	Washer (felt)	2K5820	27	1	1						
29	Lubricator	3H2192	28	1	1						
30	Bolt—balance lever support to axle	HZS0506	29	2	2						
31	Washer for bolt (plain)	PWZ105	30	2	2						
32	Washer for bolt (spring)	LWZ205	31	2	2	24					
33	Nut for bolt	FNZ105	32	2	2						
34	**Rod—cross—R/H (long)**	**ATA7458**	**33**	1	1						
35	**Rod—cross—L/H (short)**	**ATA7459**	**34**	1	1						
36	Ferrule for rod steady	1B5329	35	1	1						
37	Pin—rod to lever (short)	6K689	36	1	1						
38	Pin—rod to lever (long)	6K870	37	1	1						
39	Washer for pin (plain)	6K9695	38	1	1						
40	Washer (felt)	6K690	39	4	4						
41	Pin—rod to brake	CLZ0514	40	2	2						
42	Washer (felt)	ATA7187	41	4	4						

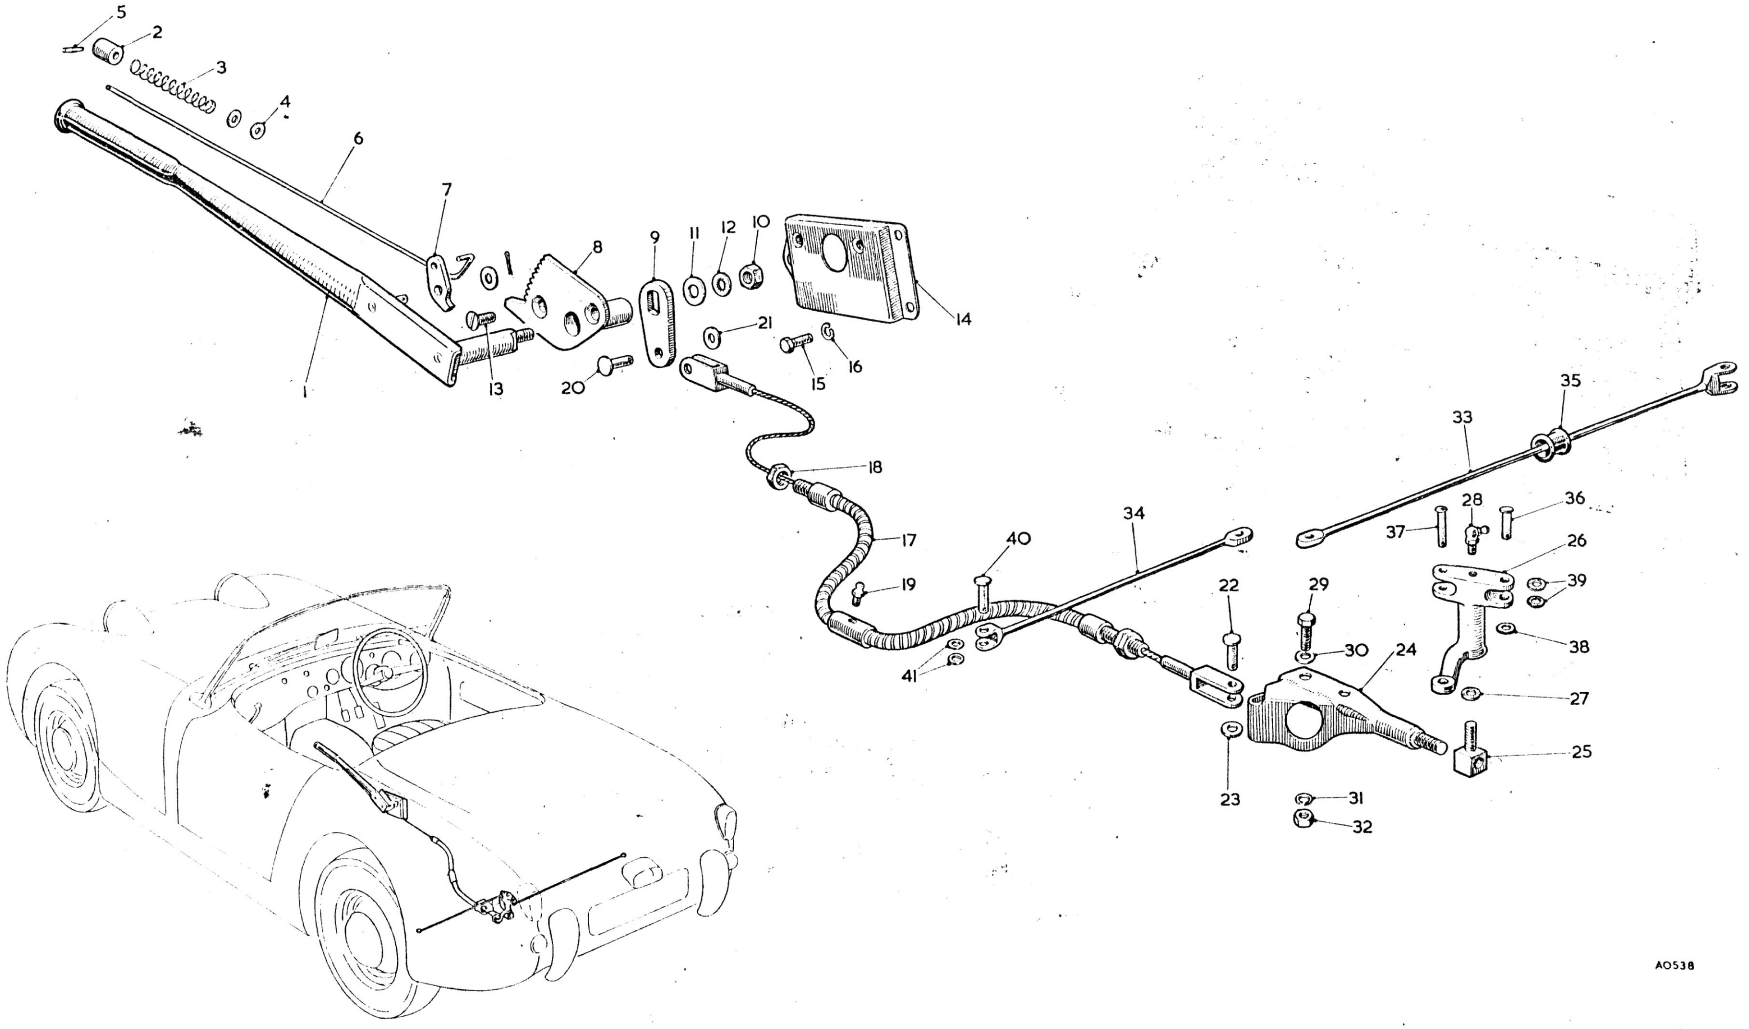

To face page M.4

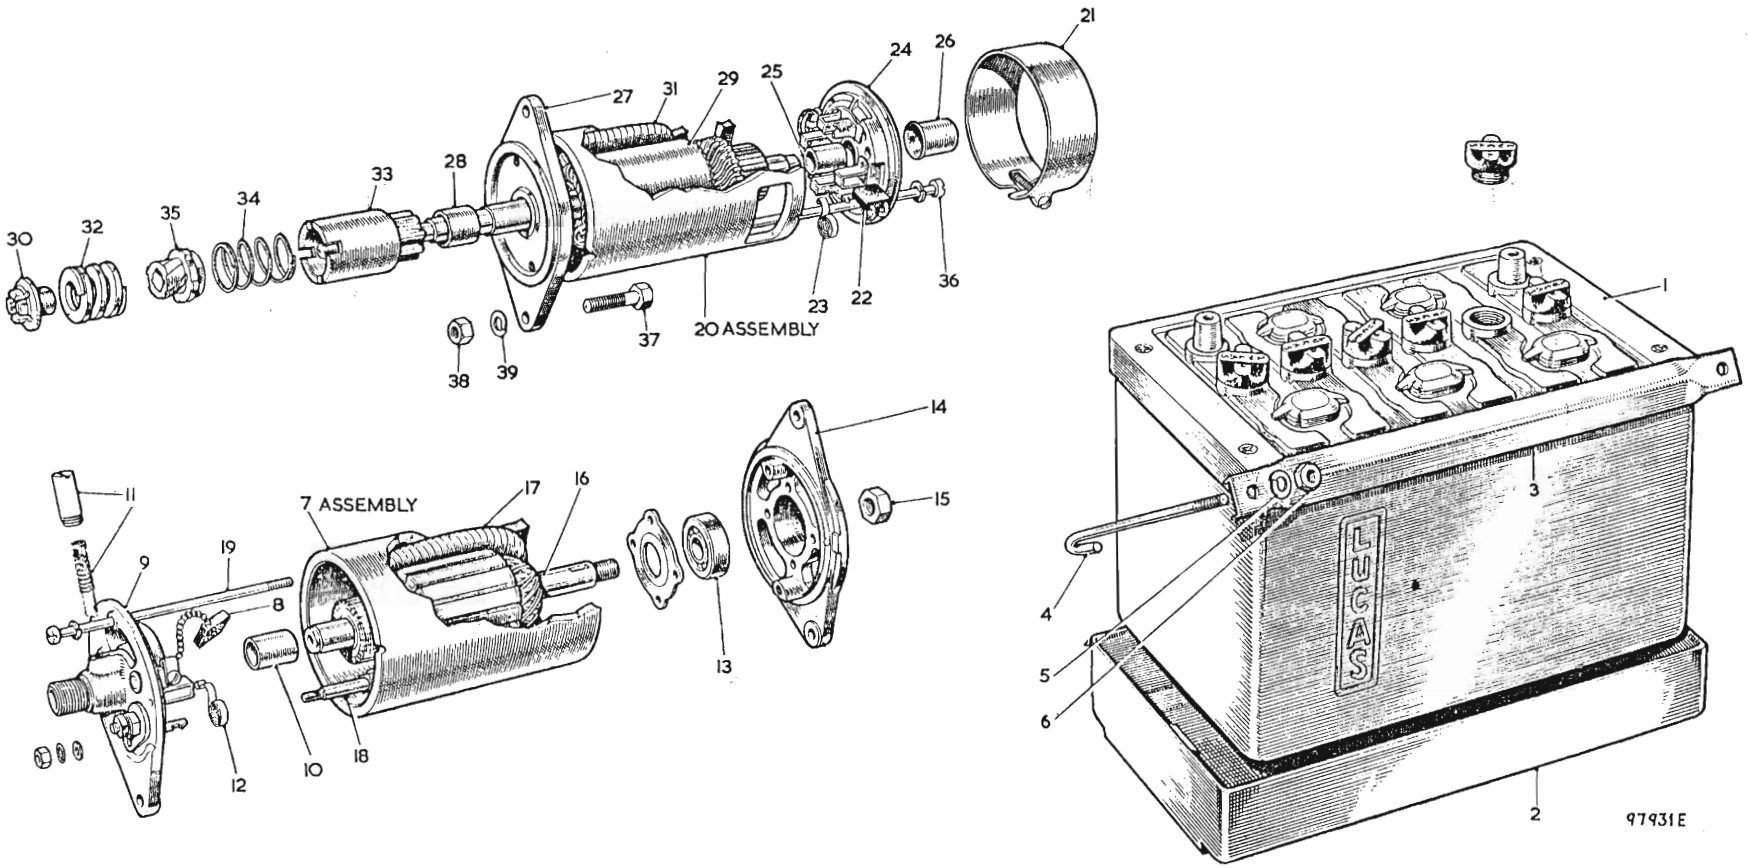


To face page N.1


ELECTRICAL EQUIPMENT

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Battery—wet**	**BMK37**	**1**	1	1						
2	**Battery—dry-charged (Not U.K.)**	**13H88**		1	1						
3	Tray—battery	4G6680	2	1	1						
4	Clamp for battery	14G5508	3	1	1						
5	Rod—battery fixing	14A4667	4	2	2						
6	Washer for battery fixing rod (spring)	LWZ204	5	2	2						
7	Nut for battery fixing rod	FNZ104	6	2	2						
8	**Dynamo assembly (less pulley and fan)**	**AEA309**	**7**	1	1						
9	Brushes	7H5028	8	1	1	set					
10	Bracket assembly (commutator end)	27H5420	9	1	1						
11	Bearing—bushing	17H5407	10	1	1						
12	Oiler assembly	7H5527	11	1	1						
13	Spring—brush tension	7H5031	12	1	1	set					
14	Bearing (drive end)	97H626	13	1	1						
15	Bracket assembly (drive end)	7H5388	14	1	1						
16	Nut for shaft	7H5034	15	1	1						
17	Armature assembly	37H5207	16	1	1						
18	Coils—field	7H5071	17	1	1	set					
19	Terminal assembly	17H5433	18	1	1						
20	Bolt—through fixing	17H5217	19	2	2						
21	Sundry parts	7H5376		1	1	set					
22	**Starter**	**3H952**	**20**	1	1						
23	Band—cover	7H5038	21	1	1						
24	Brushes	7H5040	22	1	1	set					
25	Spring for brush	7H5043	23	1	1	set					
26	Bracket (commutator end)	7H5041	24	1	1						
27	Bush for bracket	7H5042	25	1	1						
28	Cap for shaft	7H5039	26	1	1						
29	Bracket (driving end)	7H5048	27	1	1						
30	Bush for bracket	7H5049	28	1	1						
31	Armature	7H5050	29	1	1						
32	Nut for armature shaft	7H5044	30	1	1						
33	Coil—field	7H5051	31	1	1	set					
34	Spring—main	7H5045	32	1	1						
35	Pinion and barrel assembly	7H5046	33	1	1						
36	Spring—pinion retaining	7H5047	34	1	1						
37	Sleeve with control nut (screwed)	7H5529	35	1	1						
38	Bolt—through fixing	17H5444	36	2	2						
39	Sundry parts	7H5156		1	1	set					
40	Bolt—starter to rear plate	HBZ0613	37	2	2						
41	Nut for bolt	FNZ106	38	2	2						
42	Washer for bolt (spring)	LWZ306	39	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SWITCHES AND CONTROL BOX										
1	**Switch—starter**	**3H949**	**1**	1	1						
2	Coupling—starter switch to control	3H950	2	1	1						
3	Bootee—starter switch terminal	8G548	3	1	1						
4	**Control assembly—starter switch**	**2A2085**	**4**	1	1						
5	Cable—inner (complete with knob)	97H2071	5	1	1						
6	Cable (outer)	97H2072	6	1	1						
7	Nut	97H2073	7	1	1						
8	Washer—control to dash (plain)	PWZ106	8	1	1						
9	Grommet—starter control through dash	RFN303	9	1	1						
10	**Switch—lighting and ignition**	**3H1557**	**10**	1	1						
11	Knob—lighting and ignition switch	3H1558	11	1	1						
12	**Lock—barrel—lighting and ignition switch**	**7H9830**	**12**	1	1						
13	Key for barrel lock	ANK4646	13	2	2						
14	**Switch—panel light**	**3H3100**	**14**	1	1						
15	Screw—panel light switch to fascia	6K9588	15	2	2						
16	Washer for switch to fascia screw (spring)	LWZ202	16	2	2						
17	**Switch—windscreen wiper**	**3H3095**	**17**	1	1						
18	Knob—windscreen wiper switch	11K9101	18	1	1						
19	**Switch—headlamp dipper**	**11G2007**	**19**	1	1						
20	Pad—insulating	AHA5235	20	1	1						
21	Screw—dipper switch to bracket	PMZ0307	21	2	2						
22	Washer for dipper switch screw (spring)	LWZ203	22	2	2						
23	Bracket—headlamp dipper switch	2A9102	23	1	1						
24	Screw—dipper switch bracket to foot-well	PMZ0408	24	2	2						
25	Washer for switch bracket screw (spring)	LWZ204	25	2	2						
26	Switch—direction indicator	2A9074	26	1	1						
27	**Control box**	**3H1835**	**27**	1	1						
28	Resistance (63-ohm)	7H5066	28	1	1						
29	Cover—control box	7H5522	29	1	1						
30	Clip—control box cover	7H5128	30	1	1						
31	Screw—control box to panel	PMZ0320	31	2	2						
32	Washer for control box screw (spring)	LWZ203	32	2	2						
33	**Fusebox**	**1G2613**	**33**	1	1						
34	Fuse (35-amp.)	7H5067	34	4	4						
35	Screw—fusebox to panel	PMZ0310	35	2	2						
36	Washer for fusebox screw (spring)	LWZ203	36	2	2						

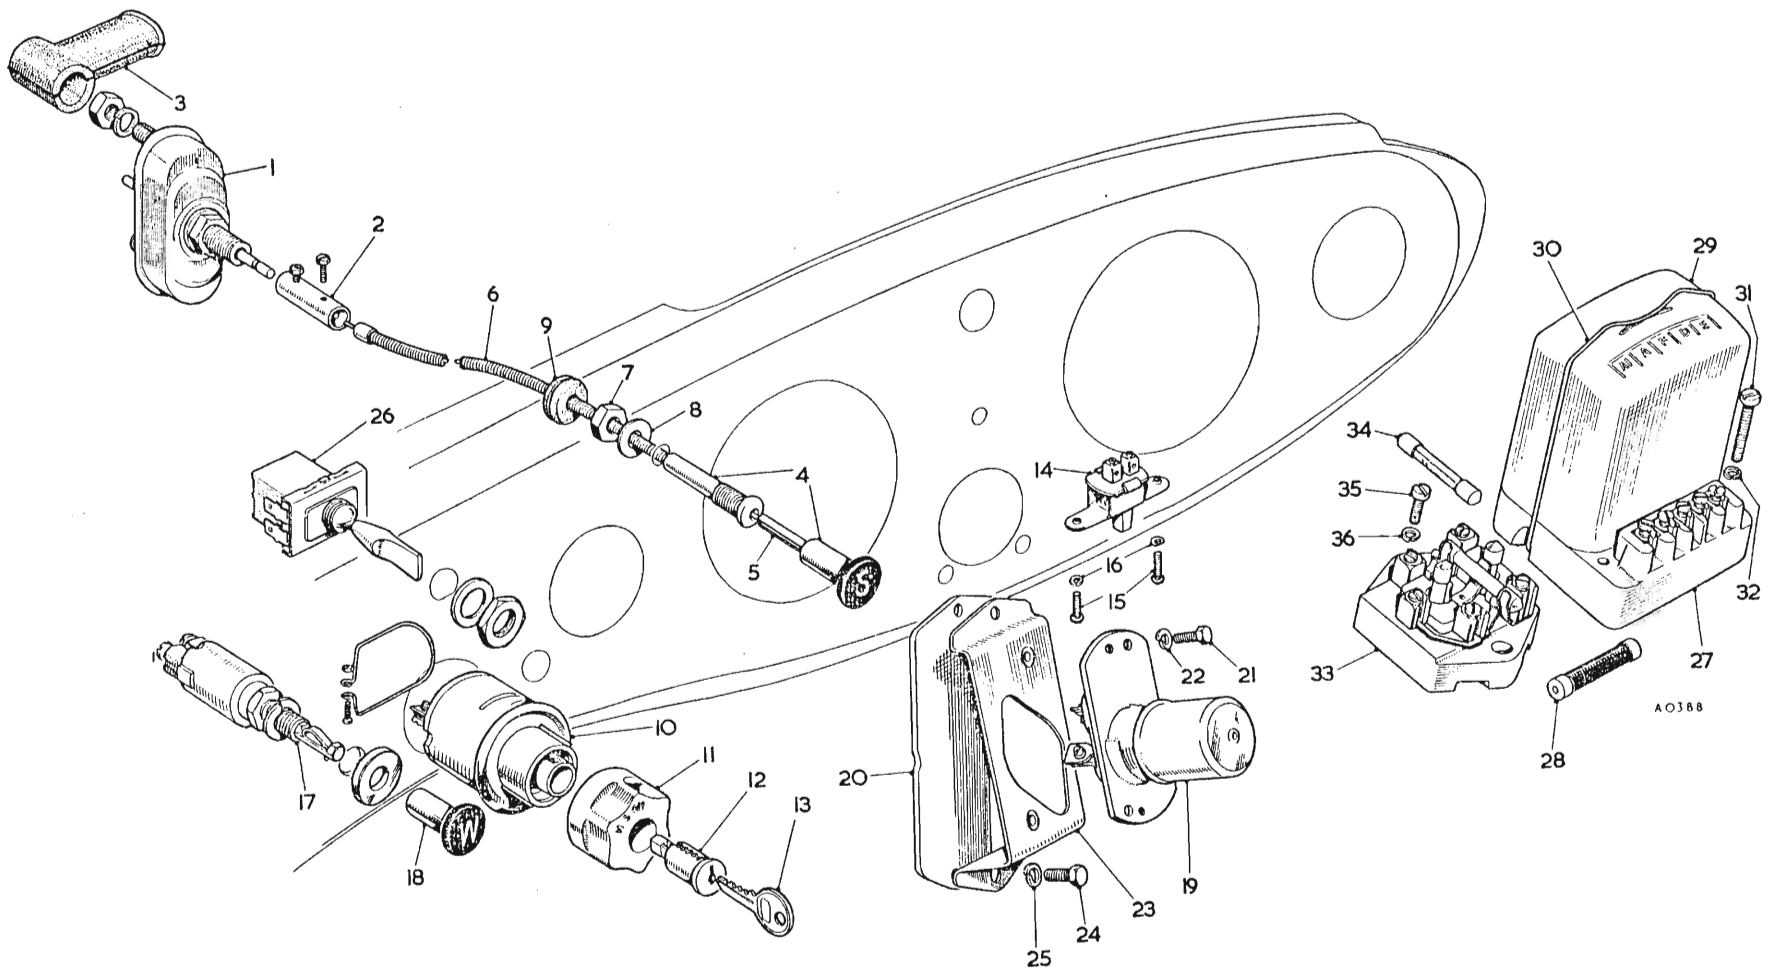


To face page N.2

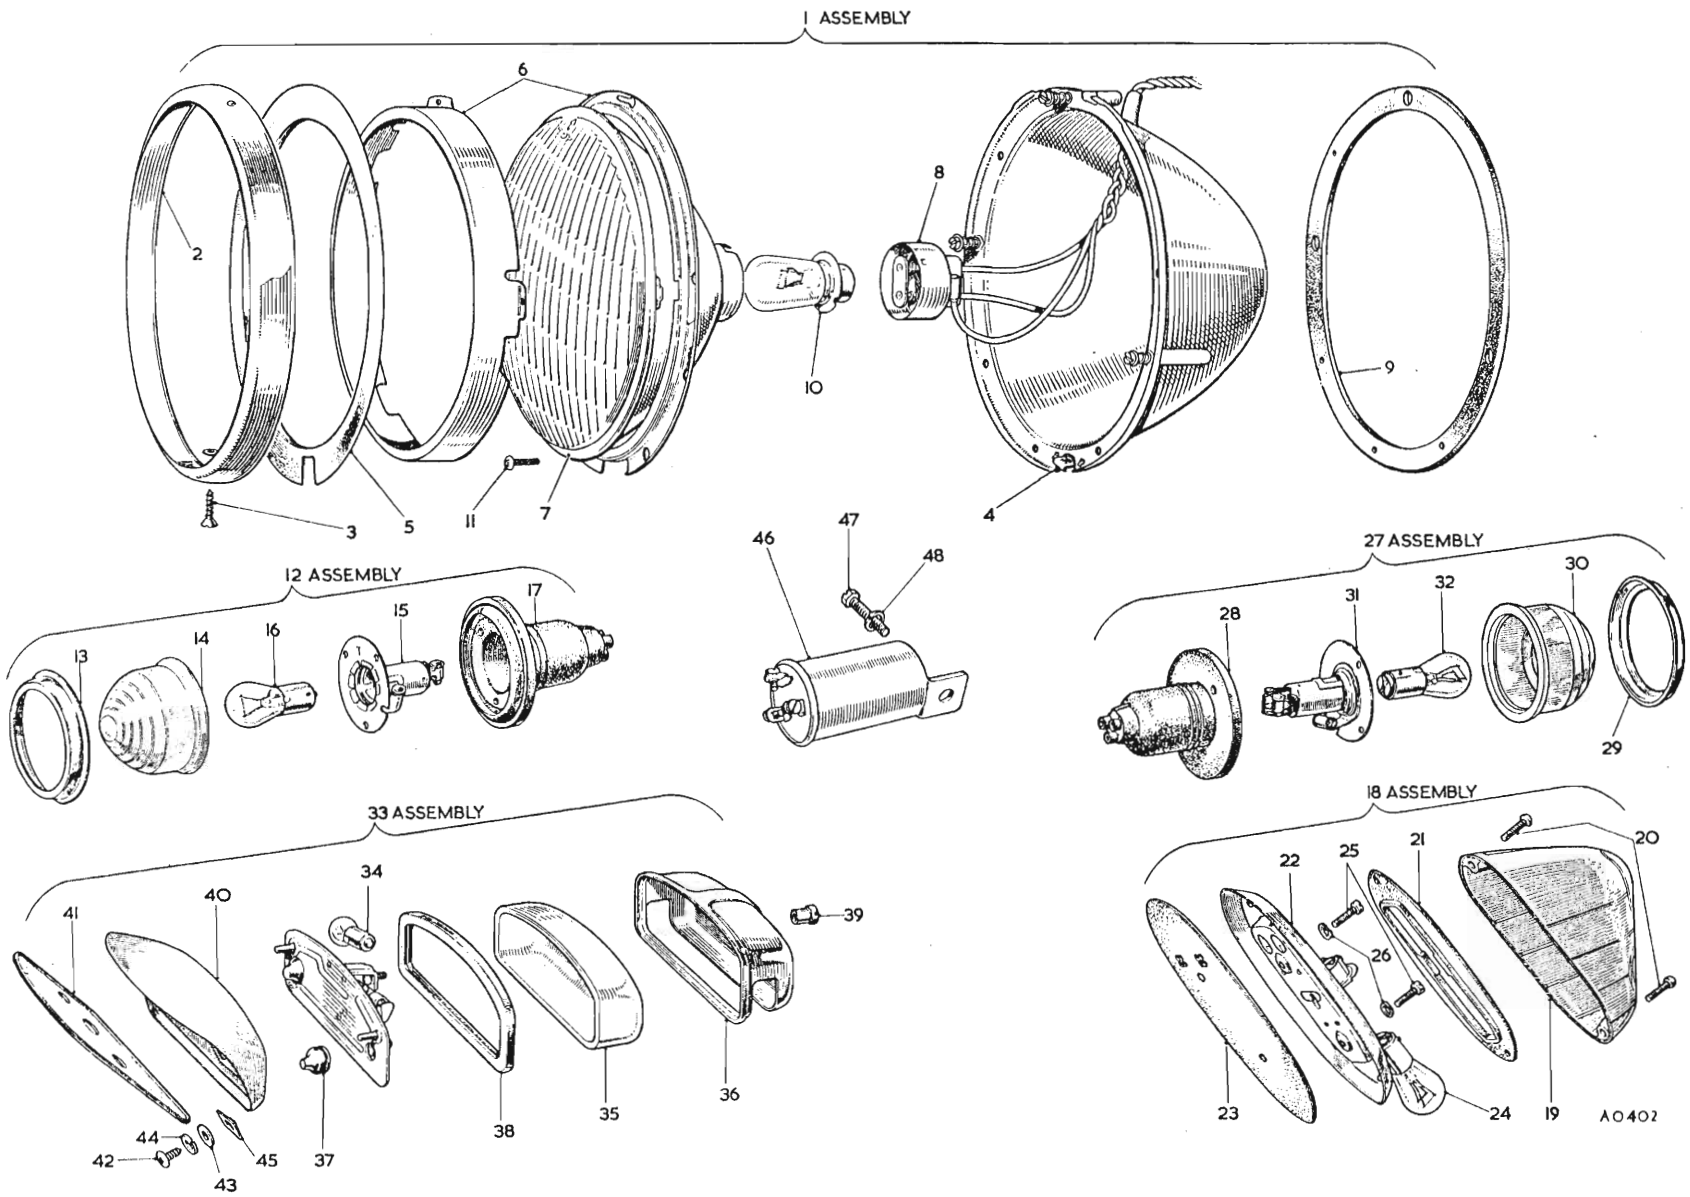


To face page N.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	LAMPS										
1	**Headlamp—left dip**	**47H5251**	**1**	**2**							**Except Europe**
2	**Headlamp—right dip (Not U.K.)**	**17H5543**			**2**						**Except Europe and France**
3	**Headlamp—vertical dip (Not U.K.)**	**3H2520**		**2**	**2**						**Europe except France**
4	**Headlamp (less bulb) (FRANCE)**	**17H5330**			**2**						
5	**Rim assembly**	**17H5147**	**2**	**2**	**2**						
6	Screw—rim fixing	AJA5081	3	2	2						
7	Nut for rim fixing screw	27H5354	4	2	2						
8	Excluder—dust	3H2962	5	2	2						
9	Rim and base assembly (inner)	17H5205	6	2	2						
10	**Light unit—left dip**	**7H5483**	**7**	**2**							
11	**Light unit—right dip**	**17H5375**			**2**						
12	**Light unit—vertical dip**	**7H5485**		**2**	**2**						
13	**Light unit (FRANCE)**	**7H5486**			**2**						
14	**Back-shell assembly (FRANCE)**	**17H5146**			**2**						
15	Bulb holder (FRANCE)	7H5062			2						
16	Sleeve—terminal (FRANCE)	7H5582			6						
17	Bulb holder	17H5306	8	2	2						
18	Sleeve—terminal	7H5582		2	2						
19	Adaptor (complete with cables) (N. AMERICA)	17H5244			2						
20	Adaptor—conversion (N. AMERICA)	17H5546			2						
21	Gasket (rubber)	3H1031	9	2	2						
22	Sleeve—sealing	27H5253		6	6						
23	**Bulb—left dip**	**13H140**	**10**	**2**							
24	**Bulb—right dip**	**3H1893**			**2**						
25	**Bulb—vertical dip**	**3H921**		**2**	**2**						
26	Screw—headlamp to body	PMZ0312	11	8	8						
27	**Sidelamp assembly**	**1B9100**	**12**	**2**	**2**						
28	Rim—sidelamp	7H5182.	13	2	2						
29	Glass—sidelamp	37H5519	14	2	2						
30	Bulb holder	27H5545	15	2	2						
31	Bulb holder—interior	17H5427		2	2						
32	Bulb	1F9026	16	2	2						
33	Body—sidelamp	37H5527	17	2	2						
34	Screw—sidelamp to body	PTZ604		6	6						
35	Nut for sidelamp screw	PFS326		6	6						
36	**Lamp—stop/tail and reflex assembly**	**ADA1613**	**18**	**2**	**2**						
37	Lens and reflex assembly	AJA5069	19	2	2						
38	Screw—lens fixing	37H5410	20	4	4						
39	Rubber—lens seating	AJA5071	21	2	2						
40	**Rim and rubber holder assembly**	**AJA5072**	**22**	**2**	**2**						
41	Sleeve—terminal	37H5271		6	6						
✳ 42	Rubber—lamp seating	AJA5073	23	2	2						
43	Bulb	1F9026	24	2	2						
44	Screw—lamp to body	PMZ0308	25	4	4						
45	Washer for lamp to body screw (spring)	LWZ203	26	4	4						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Lamps—*continued*										
1	**Lamp—flasher (rear)**	**2A9013**	**27**	**2**	**2**						
2	**Lamp—flasher (rear) (N. AMERICA)**	**2A9040**			**2**						
3	Body (rubber)	37H5527	28	2	2						
4	Rim	7H5182	29	2	2						
5	Lens—amber	37H5520	30	2	2						
6	Lens—red (N. AMERICA)	37H5531			2						
7	**Bulb holder and plate assembly**	**37H5528**	**31**	**2**	**2**						
8	Interior—bulb holder	AJH5100		2	2						
9	Bulb	1F9012	32	2	2						
10	Screw—rear flasher lamp to body	PTZ604		6	6						
11	Nut for flasher lamp to body screw	PFS326		6	6						
12	**Lamp—number-plate**	**3H1813**	**33**	**1**	**1**						
13	Bulb	2H4817	34	1	1						
14	Window for lamp	7H5121	35	1	1						
15	Cover for lamp	7H5185	36	1	1						
16	Grommet—lamp cable	7H5164	37	1	1						
17	Gasket for lamp base (rubber)	7H5122	38	1	1						
18	Screw—lamp cover to base	68739	39	1	1						
19	Sundry parts	7H5123		1	1	set					
20	Bracket—number-plate lamp mounting	14A4615	40	1	1						
21	Rubber—mounting—number-plate lamp	14A4743	41	1	1						
22	Screw—number-plate lamp mounting to body	PJZ1006	42	2	2						
23	Washer for mounting to body screw (plain)	PWZ203	43	2	2						
24	Washer for mounting to body screw (spring)	LWZ203	44	2	2						
25	Nut for mounting to body screw	PFS510	45	2	2						
26	**Flasher unit**	**11G9093**	**46**	**1**	**1**						
27	Screw—flasher unit to dash	PMZ0406	47	1	1						
28	Washer for flasher unit screw (spring)	LWZ204	48	1	1						

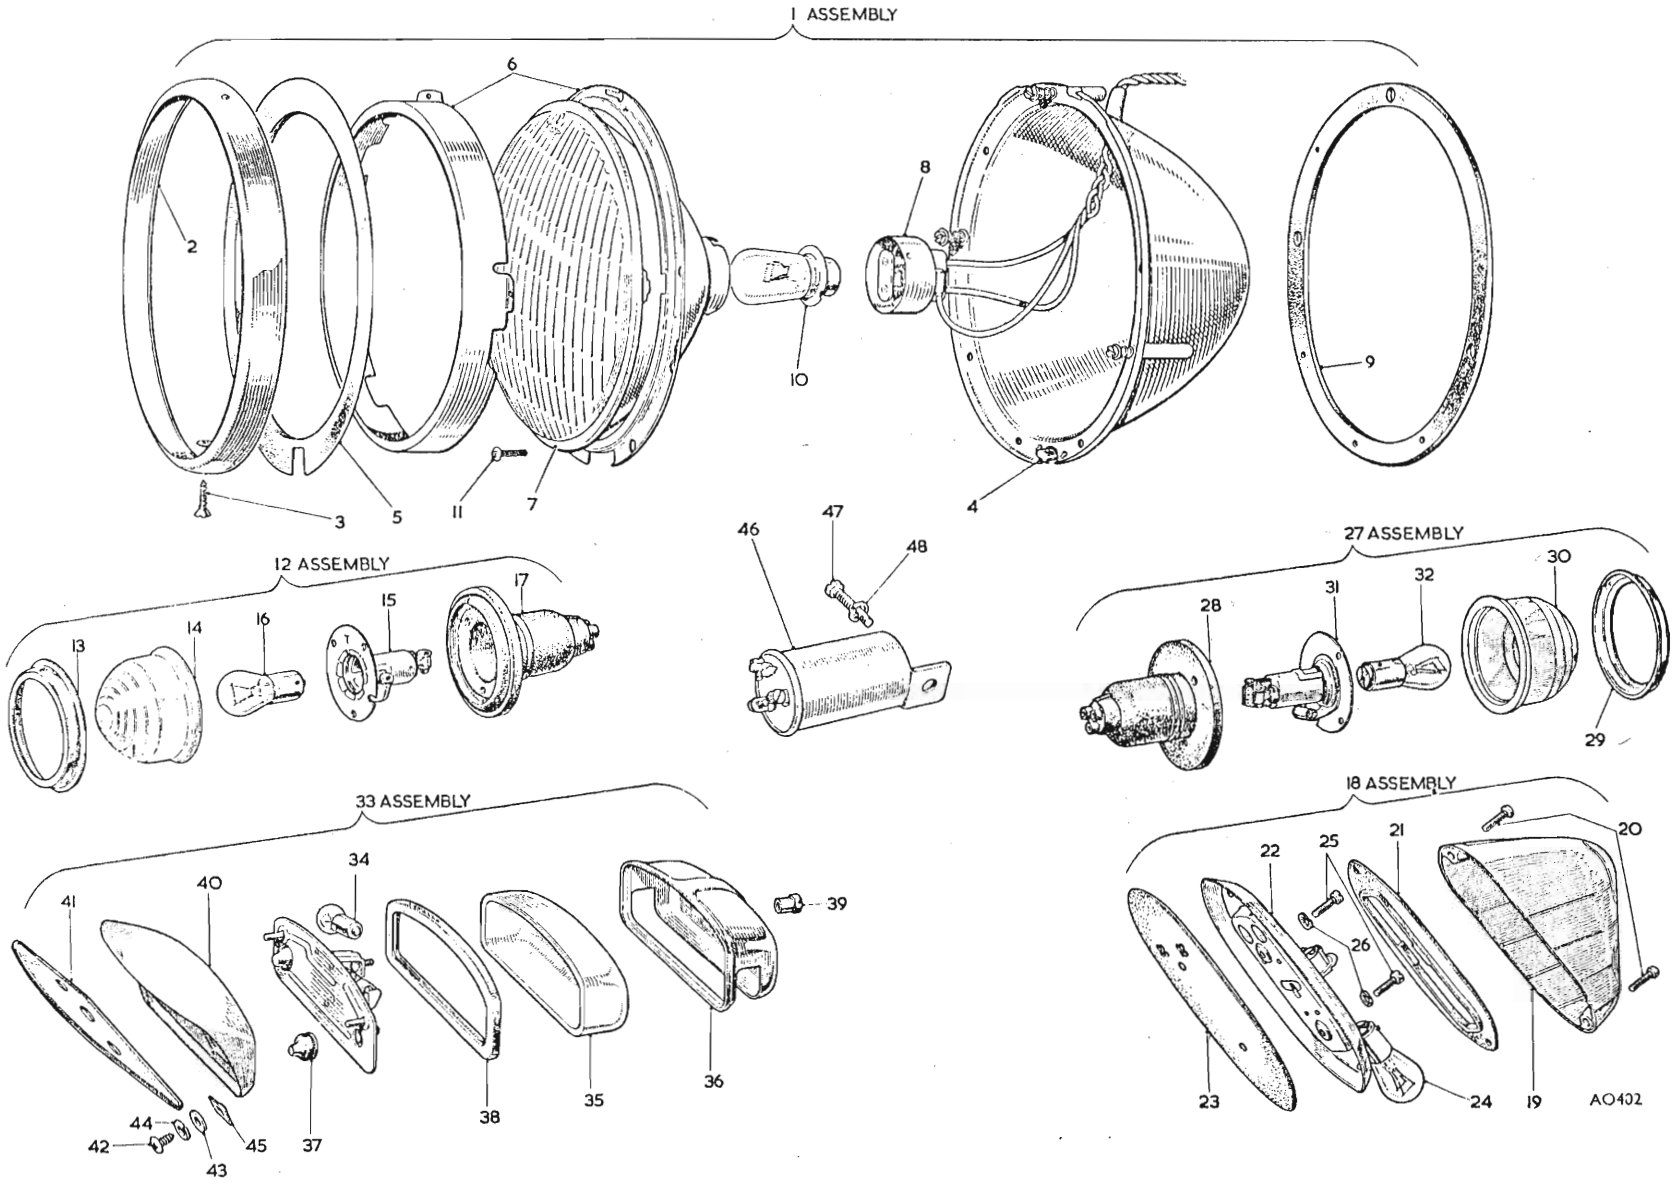


To face page N.4

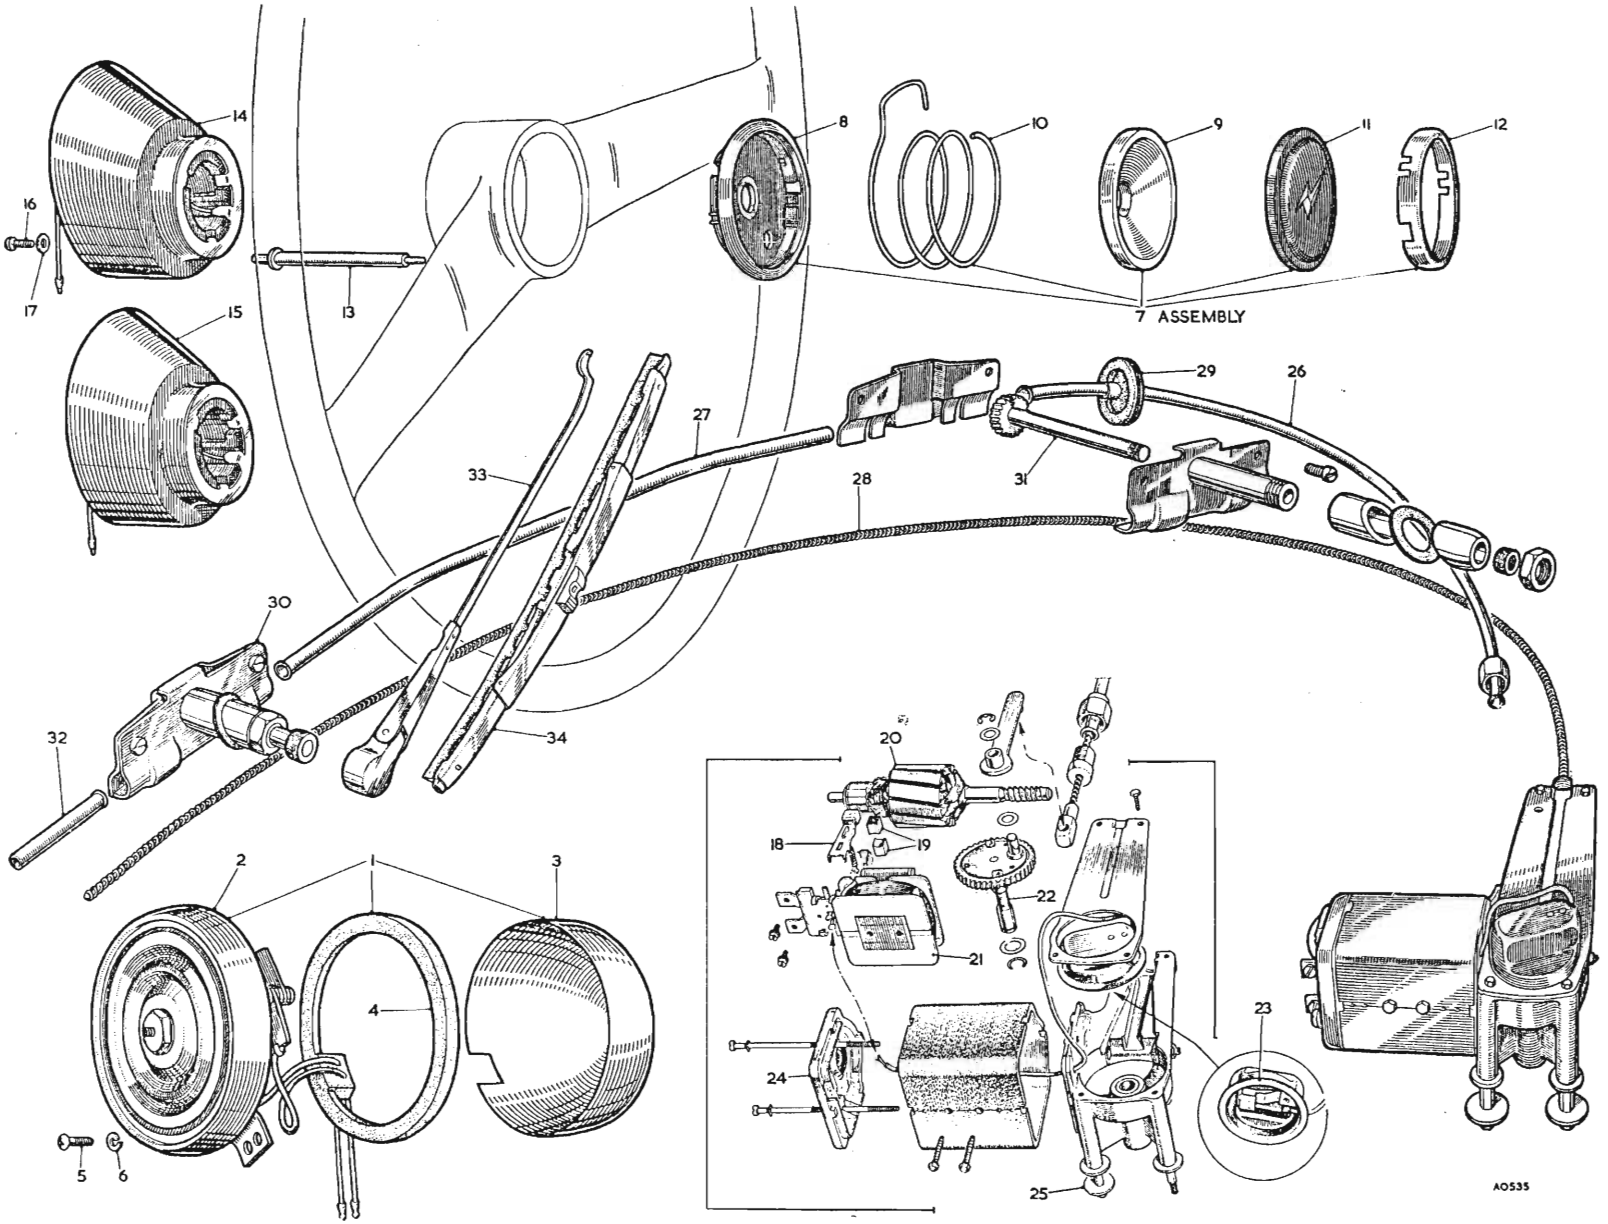

To face page N.5

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HORN—WIPER MOTOR										
1	**Horn**	**13H69**	**1**	1	1						
2	Disc—tone	27H5581	2	1	1						
3	Cover	27H5582	3	1	1						
4	Ring—cover sealing	27H5583	4	1	1						
5	Screw—horn to R/H radiator mounting bracket	PMZ0308	5	2	2						
6	Washer for horn fixing screw (spring)	LWZ203	6	2	2						
7	**Horn-push assembly**	**2A6157**	**7**	1	1						
8	Contact (bottom)	27H5572	8	1	1						
9	Contact (top)	27H5569	9	1	1						
10	Spring for push knob	27H5570	10	1	1						
11	Knob—horn-push	27H5559	11	1	1						
12	Bezel—horn-push	27H5568	12	1	1						
13	**Brush assembly**	**2A6162**	**13**	1	1						
14	Slip-ring and moulding assembly	2A6158	14	1							
15	Slip-ring and moulding assembly	2A6161	15		1						
16	Screw—slip-ring and moulding to fascia	PMZ0205	16	3	3						
17	Washer for ring and moulding screw	6K9388	17	3	3						
18	**Motor—windscreen wiper**	**17H5361**		1	1						
19	Brush gear—wiper motor	17H5396	18	1	1						
20	Brush	7H5130	19	1	1	set					
21	Armature—motor	17H5255	20	1	1						
22	Coil—motor	37H5288	21	1	1						
23	Fixing parts	17H5431		1	1	set					
24	Shaft and gear—motor	17H5443	22	1	1						
25	Switch—adjusting	17H5442	23	1	1						
26	End cover	27H5554	24	1	1						
27	Sundry parts	17H5441		1	1	set					
28	Washer for fixing bolt	7H5563	25	2	2						
29	**Cable—wiper motor to wheelbox (outer)**	**14A4801**	**26**	1	1						
30	**Cable—wheelbox to wheelbox (outer)**	**14A4802**	**27**	1	1						
31	**Cable (inner)**	**47H5023**	**28**	1	1						
32	Grommet for cable through dash	ADG1869	29	1	1						
33	Wheelbox—windscreen wiper	14B5588	30	2	2						
34	Spindle and gear—wheelbox	17H5388	31	2	2						
35	End tube—wheelbox	14G3722	32	1	1						
36	**Arm—windscreen wiper**	**13H66**	**33**	**2**							
37	**Arm—windscreen wiper**	**13H68**			**2**						
38	**Blade—windscreen wiper**	**17H5512**	**34**	**2**	**2**						


Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	CABLES AND CONNECTIONS										
1	**Harness—main**	**2A9071**		**1**	**1**						
2	**Harness—body**	**2A9072**		**1**	**1**						
3	**Harness—forward lighting**	**2A9073**		**1**	**1**						
4	Clip—lighting harness to bonnet hinge	PCR0607		1	1						
5	Screw for lighting harness clip	PMZ0306		1	1						
6	Washer for harness clip screw (spring)	LWZ203		1	1						
7	Nut for harness clip screw	FNZ103		1	1						
8	Clip—main harness to front valance	PCR1007		1	1						
9	Screw—clip to valance	PMZ0310		1	1						
10	Washer for screw (spring)	LWZ203		1	1						
11	Nut for screw	FNZ103		1	1						
12	Cable—positive (battery to earth)	1B2802		1	1						
13	Bolt—earth cable to dash	HZS0504		1	1						
14	Washer for earth cable bolt (spring)	LWZ305		1	1						
15	Cable—battery—negative (to starter switch)	2A9076		1	1						
16	Clip—negative cable to foot-well	PCR0607		1	1						
17	Screw for negative cable clip	PMZ0307		1	1						
18	Washer for clip screw (spring)	LWZ203		1	1						
19	Screw for cables to battery	2K8645		2	2						
20	**Cable—engine to earth**	**2K6167**		**1**	**1**						
21	Bolt—engine earth cable to frame	HZS0605		1	1						
22	Washer for earth cable bolt (spring)	LWZ306		1	1						
23	**Cable—starter to switch**	**2A9075**		**1**	**1**						
24	Clip—main harness to wheel arch	PCR0407		2	2						
25	Clip—main harness to radiator	PCR0409		2	2						
26	Clip—body harness to sill (R/H)	CHR0405		2	2						
27	Screw for harness clip	PTZ603		2	2						
28	Clip—forward lighting harness to foot-well	PCR0609		1	1						
29	Clip—headlamp cables to bonnet flange	6K490		2	2						
30	Grommet—tank unit cable through rear floor	RFN303		1	1						
31	Grommet—main harness through dash	RFN303		1	1						
32	Grommet—number-plate lamp cable through rear panel	RFN303		1	1						
33	Grommet—dipper switch cable through foot-well	RFN305		1	1						
34	Grommet—wiper motor cable through dash	RFN305		1	1						

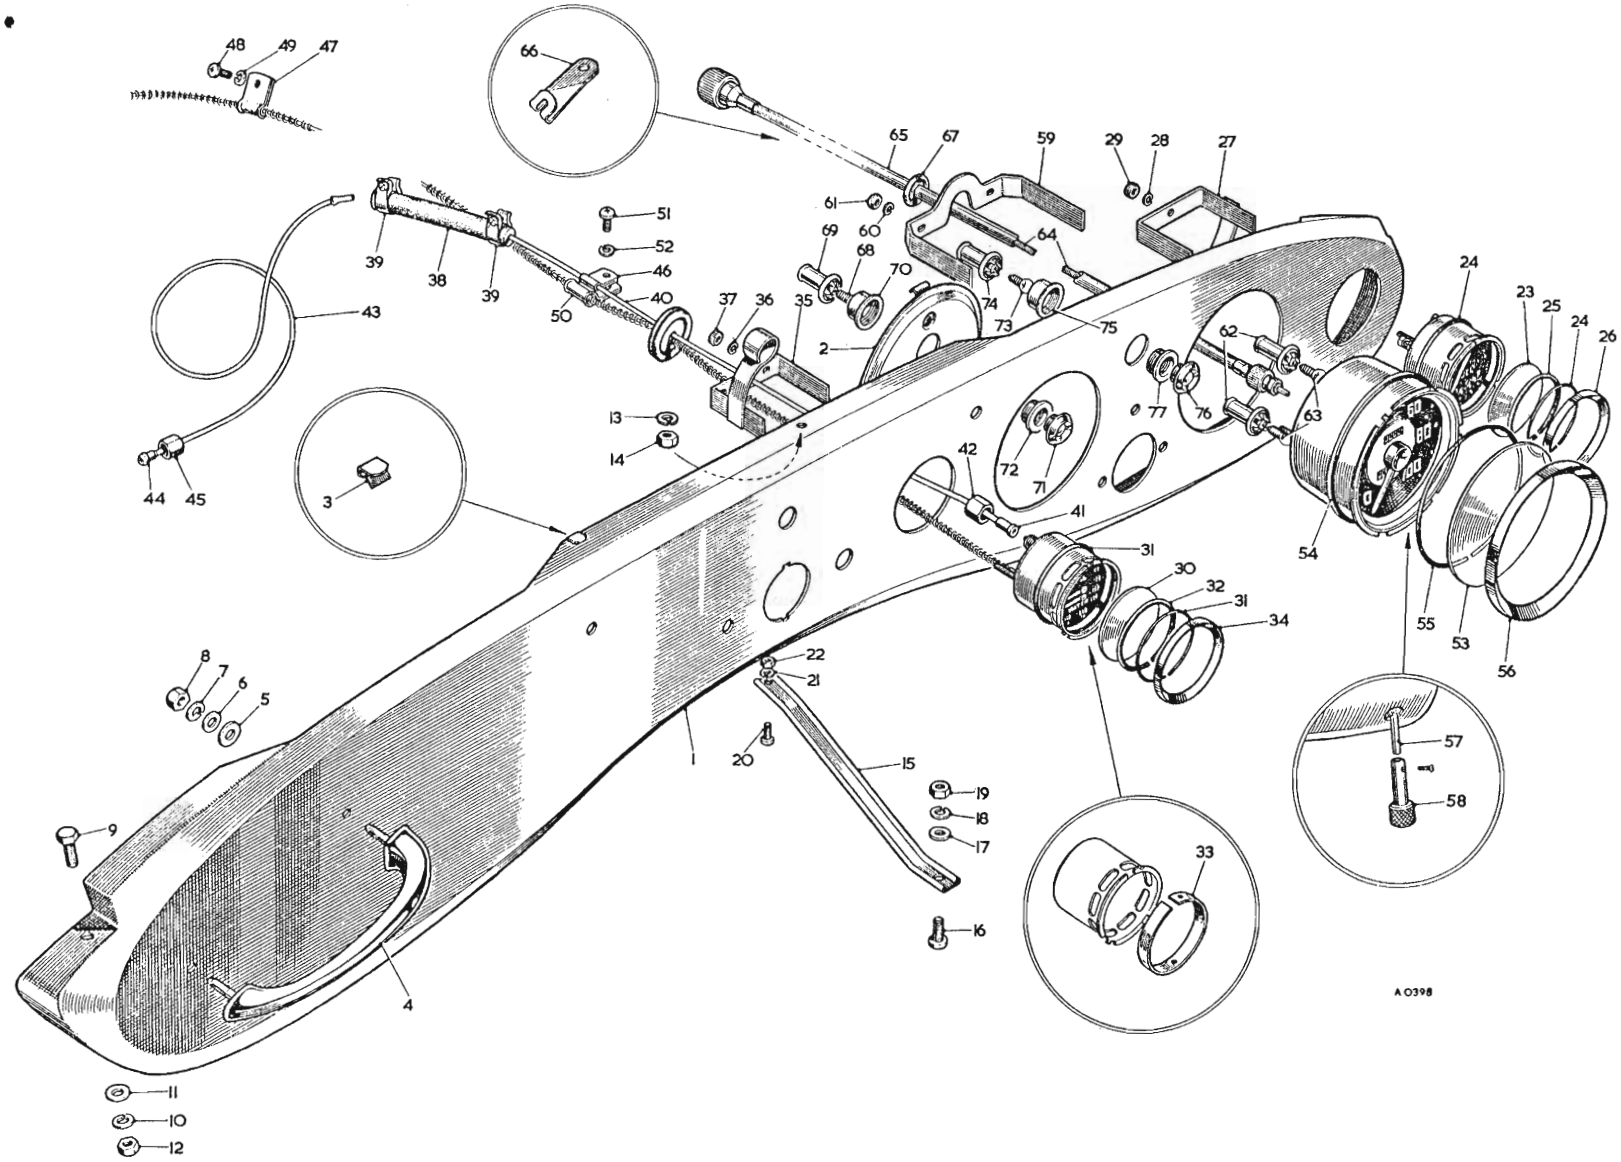


To face page 0.1

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	FASCIA AND INSTRUMENTS										
1	**Panel—fascia**	**14A4656**	**1**	1							
2	**Panel—fascia**	**14A4657**			1						
3	Plate assembly—blanking	14A4744	2	1	1						Not required when revolution counter is fitted
4	Clip—trim	14A4497	3	24	24						
5	**Grab handle**	**14B1729**	**4**	1	1						
6	Washer for handle—large (plain)	PWZ204	5	2	2						
7	Washer for handle—small (plain)	PWZ104	6	2	2	12					
8	Washer for handle (spring)	LWZ204	7	2	2						
9	Nut—handle to fascia	FNZ104	8	2	2						
10	Screw—fascia to 'A' post	HZS0405	9	2	2						
11	Washer for fascia screw (spring)	LWZ204	10	2	2						
12	Washer for fascia screw (plain)	PWZ104	11	2	2	12					
13	Nut for screw	FNZ104	12	2	2						
14	Washer—fascia screw to dash (spring)	LWZ204	13	1	1						
15	Nut—fascia to dash	FNZ104	14	1	1						
16	Stay—fascia (bottom)	14A4706	15	2	2						
17	Screw—stay to fascia	PMP0410	16	2	2						
18	Washer for stay screw (plain)	PWZ104	17	2	2	12					
19	Washer for stay screw (spring)	LWZ204	18	2	2						
20	Nut for screw	FNZ104	19	2	2						
21	Screw—stay to dash	PMZ0206	20	2	2						
22	Washer for stay screw (spring)	LWZ202	21	2	2						
23	Nut for screw	CNZ102	22	2	2						
24	**Gauge—fuel**	**2A9069**		1	1						
25	Glass	17H1068	23	1	1						
26	Ring (rubber)	17H1642	24	2	2						
27	Tube (rubber)	17H1821	25	1	1						
28	Bezel	AJH5182	26	1	1						
29	Strap—instrument fixing	17H1822	27	1	1						
30	Washer for thumb nut (spring)	27H387	28	1	1						
31	Nut—thumb	17H932	29	1	1						
32	**Gauge—combined oil pressure and radiator thermometer**	**2A9070**		1	1						
33	Glass	17H1068	30	1	1						
34	Ring (rubber)	17H1642	31	2	2						
35	Grommet	17H1479	32	1	1						
36	Strip—window	17H1481	33	1	1						
37	Bezel	AJH5182	34	1	1						
38	Strap—instrument fixing	17H1480	35	1	1						
39	Washer for thumb nut (spring)	27H387	36	2	2						
40	Nut—thumb	17H932	37	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Fascia and Instruments—*continued*										
1	**Pipe—flexible**	**ACA5420**	**38**	**1**	**1**						
2	Clip—flexible pipe	3H688	39	2	2						
3	**Pipe—gauge to flexible pipe**	**2A5635**	**40**	**1**							
4	**Pipe—gauge to flexible pipe**	**2A5640**			**1**						
5	Union	51K2824	41	1	1						
6	Nut	11B2037	42	1	1						
7	**Pipe—engine to flexible pipe**	**2A5637**	**43**	**1**	**1**						
8	Nipple	ACA5422	44	1	1						
9	Nut	ACA5421	45	1	1						
10	Clip—oil gauge pipe to R/H foot-well	1C166	46	1	1						
11	Clip—radiator thermometer capillary to R/H front wheel arch inner	PCR0307	47	2	2						
12	Screw—capillary clip to wheel arch inner	PMZ0306	48	2	2						
13	Washer for capillary clip screw (spring)	LWZ203	49	2	2						
14	Clip—radiator thermometer capillary to R/H foot-well	PCR0307	50	2	2						
15	Screw—capillary clip to foot-well	PMZ0306	51	1	1						
16	Washer for capillary clip screw (spring)	LWZ203	52	2	2						
17	**Speedometer (miles)**	**2A9067**		**1**	**1**						
18	**Speedometer (kilometres)** **(Not U.K.)**	**2A9077**		**1**	**1**						
19	Glass	AJH5177	53	1	1						
20	Ring (rubber)	AJH5178	54	1	1						
21	Ring—slip	27H406	55	1	1						
22	Bezel	27H397	56	1	1						
23	Spindle—trip setting	17H1478	57	1	1						
24	Knob—trip spindle	AJH5179	58	1	1						
25	Strap—speedometer fixing	27H429	59	1	1						
26	Washer for thumb nut (spring)	27H387	60	2	2						
27	Nut—thumb	17H1304	61	2	2						
28	Bulb holder	3H914	62	2	2						
29	Bulb	2H4732	63	2	2						
30	**Cable assembly—speedometer**	**1H9049**		**1**							
31	Cable (inner)	17H844	64	1							
32	Cable (outer)	17H1496	65	1							
33	**Cable assembly—speedometer**	**2A9039**			**1**			1H9047	From (C) 3689		
34	Cable (inner)	17H689	64		1			17H843			
35	Cable (outer)	17H690	65		1			17H1669			

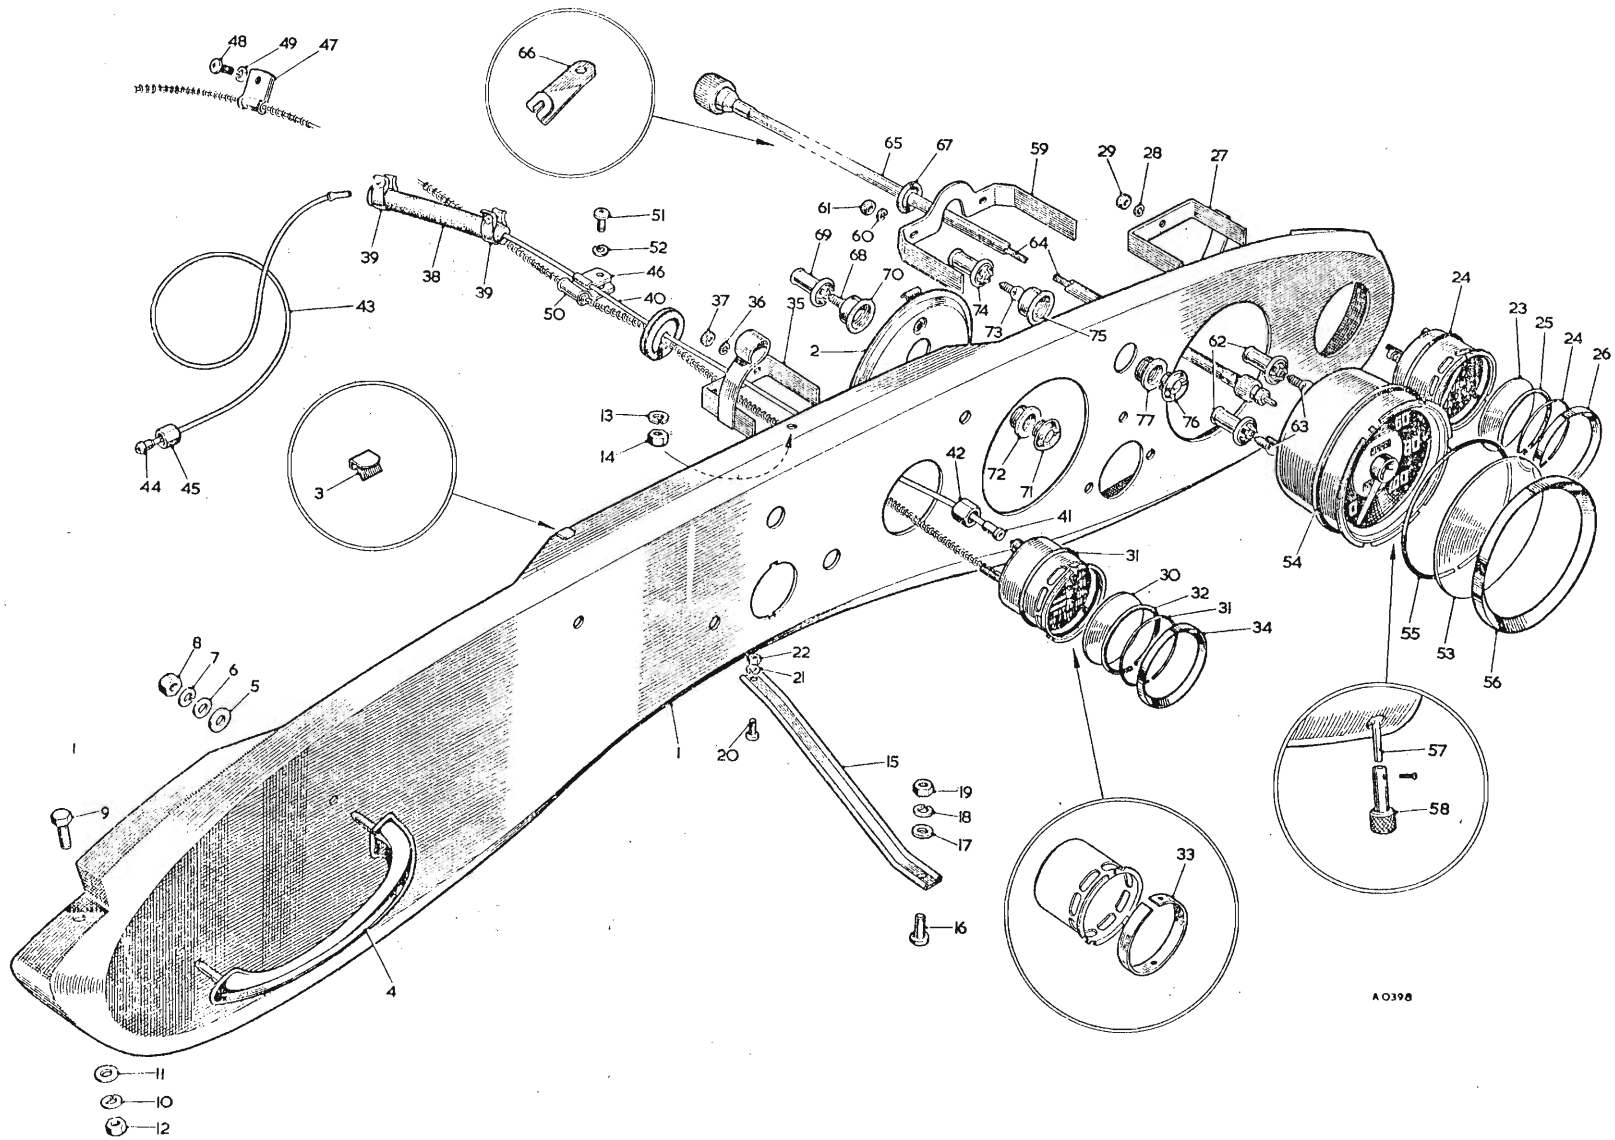
48
49
47
66
65
67
59
29
28
27
61
60
69
68
70
64
74
73
75
51
52
46
40
37
36
35
2
39
38
39
50
43
44
45
3
13
14
42
72
71
41
31
30
32
31
34
62
77
76
63
24
23
25
24
26
54
55
53
56
57
58
33
22
21
20
15
19
18
17
16
8
7
6
5
1
9
4
11
10
12
A0398

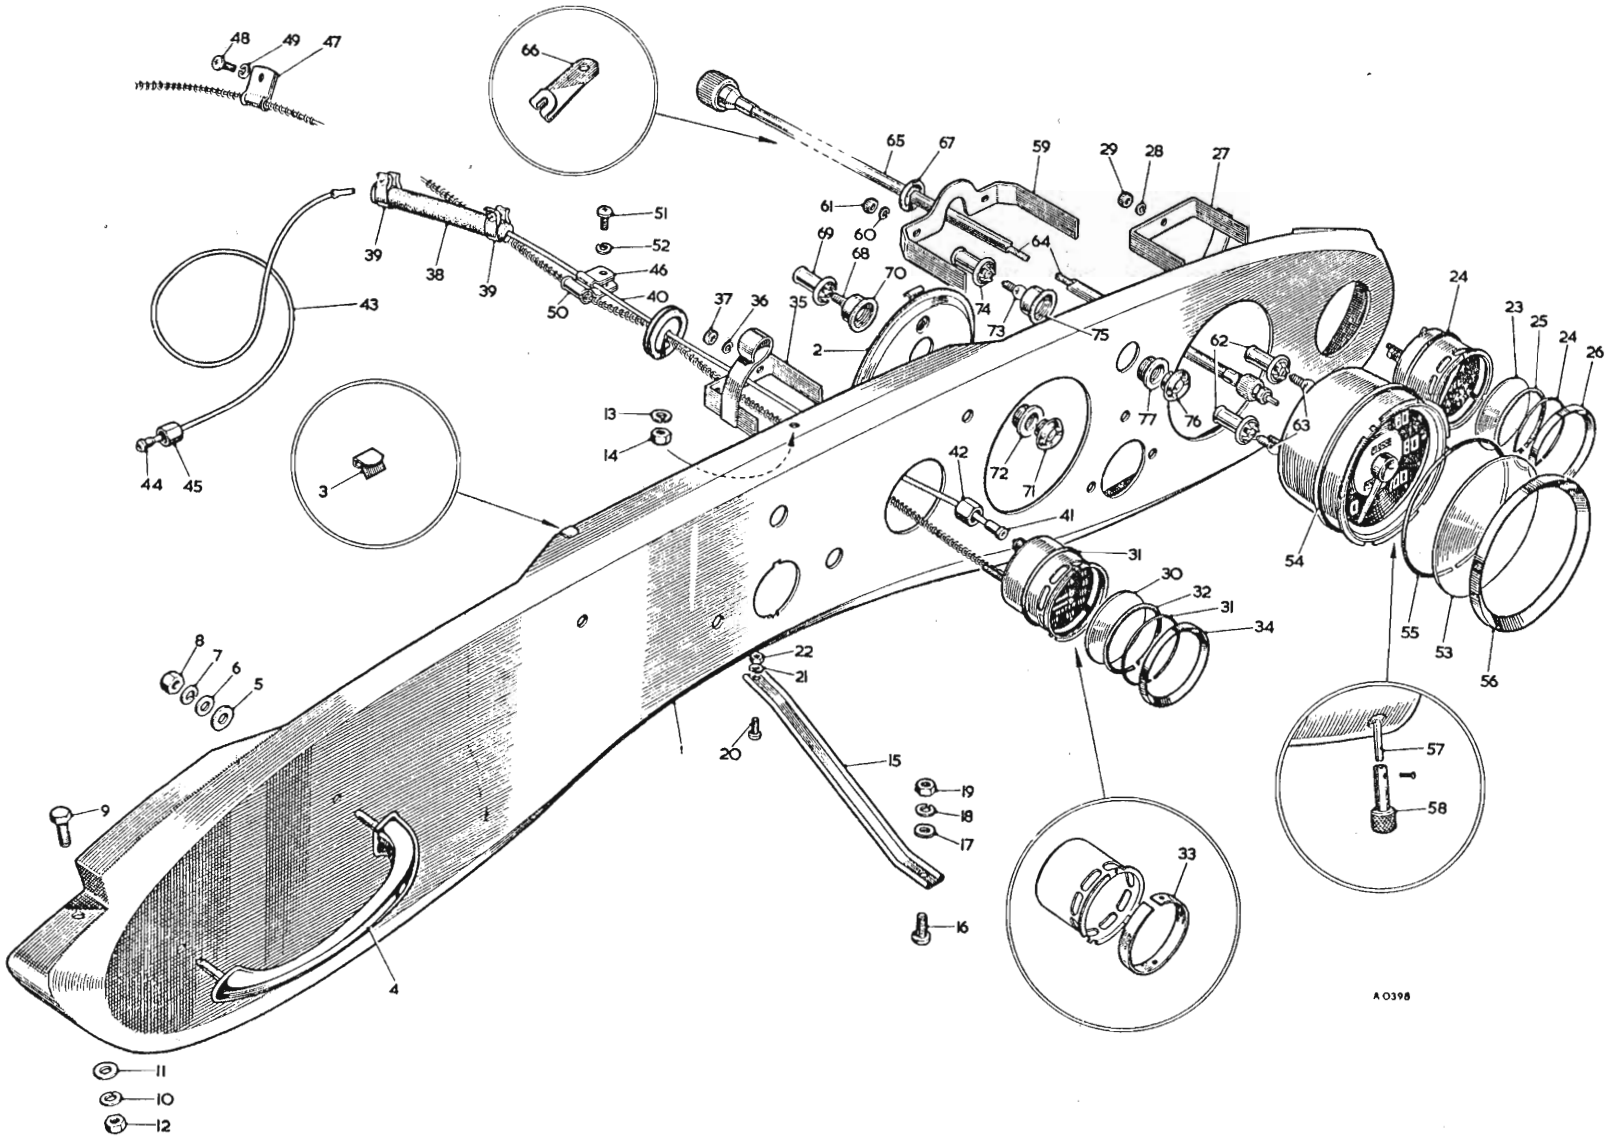


To face page 0.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Fascia and Instruments—*continued*										
1	Clip—speedometer cable to bulkhead	PCR0709		1							
2	Sleeve for clip (rubber)	ACH8529		1							
3	Screw—clip to bulkhead	HZS0408		1							
4	Washer for screw (spring)	LWZ204		1							
5	Nut for screw	FNZ104		1							
6	Clip for speedometer cable	1B9132	66	1							
7	Grommet—speedometer cable through foot-well	RFN305	67	1	1						
8	**Lamp—headlamp beam warning**	**27H5562**		**1**	**1**						**Not required when tachometer is fitted**
9	Bulb	2H4732	68	1	1						
10	Bulb holder	37H5181	69	1	1						
11	Body—lamp	27H5565	70	1	1						
12	Cover and window (red)	27H5566	71	1	1						
13	Nut for body	27H5564	72	1	1						
14	**Lamp—flasher warning**	**27H5596**		**1**	**1**						
15	Bulb	2H4732	73	1	1						
16	Bulb holder	37H5181	74	1	1						
17	Body—lamp	27H5565	75	1	1						
18	Cover and window (green)	27H5597	76	1	1						
19	Nut for body	27H5564	77	1	1						

ROAD WHEEL—SPARE


WHEEL STRAP

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Road wheel**	**2A8060**	1	5	5						
2	Valve assembly—tyre	BCA4163	2	5	5						
3	Cap—road wheel	2A8055	3	4	4						
4	Strap—spare wheel	AHA5217	4	1	1						
5	Strap assembly—bracer—spare wheel	AHA5218	5	1	1						
6	Packing—spare wheel (felt)	AHH5459	6	3	3						

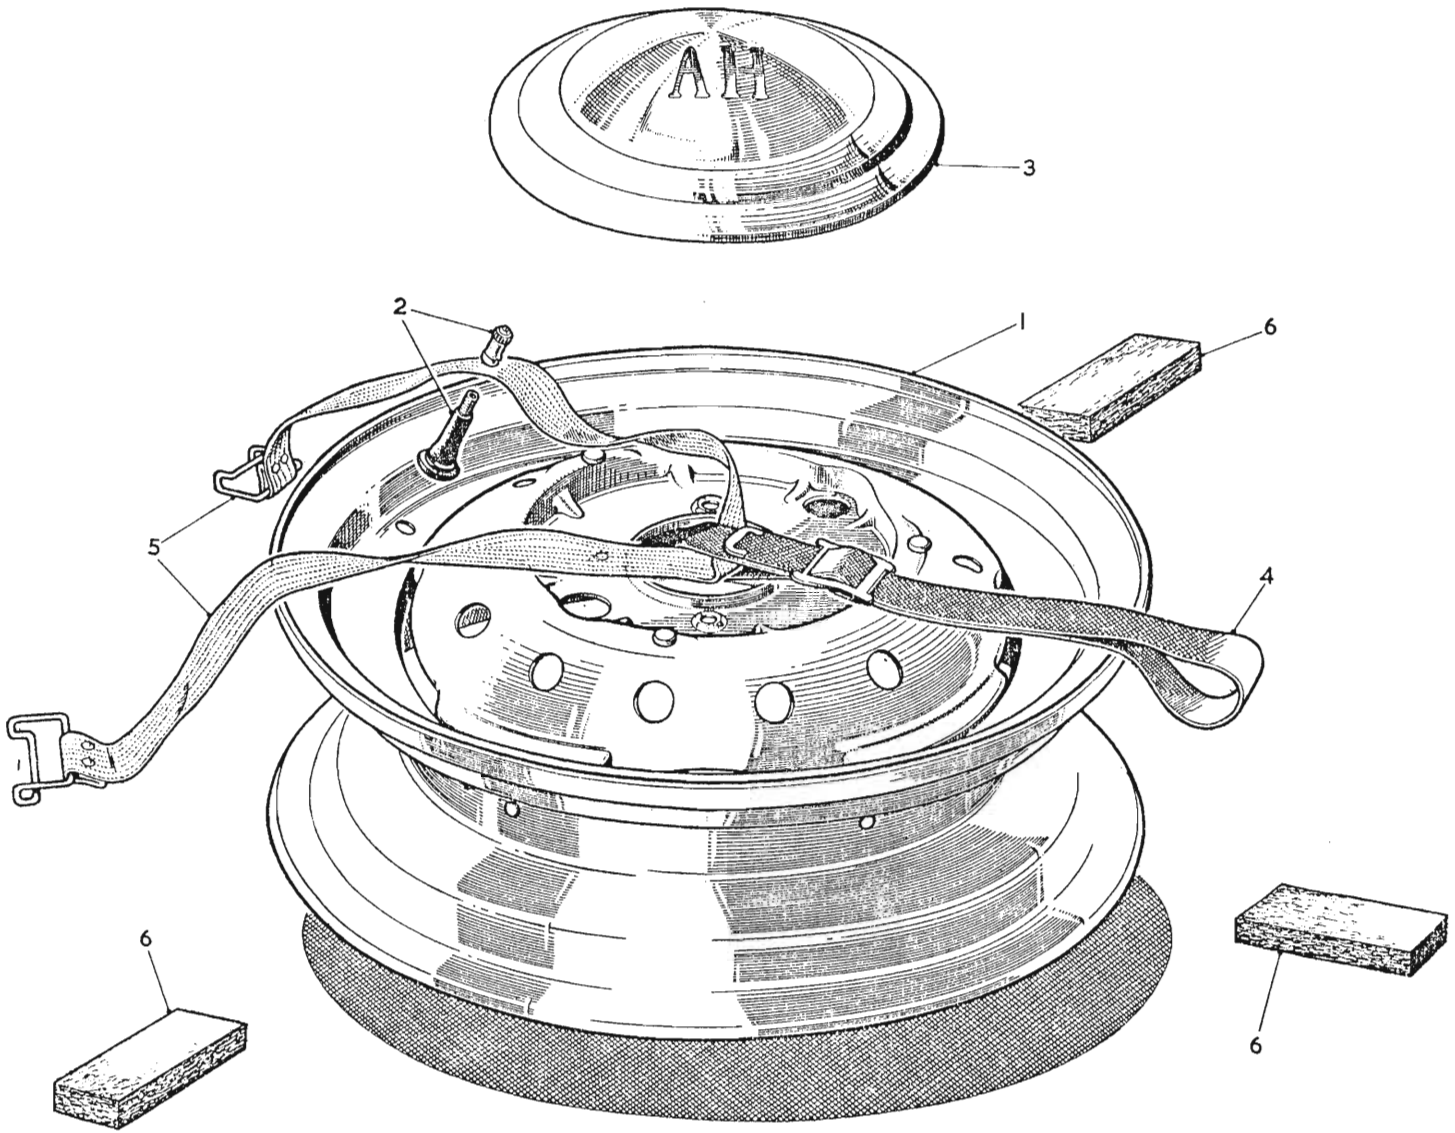

A 0389


To face page P.1

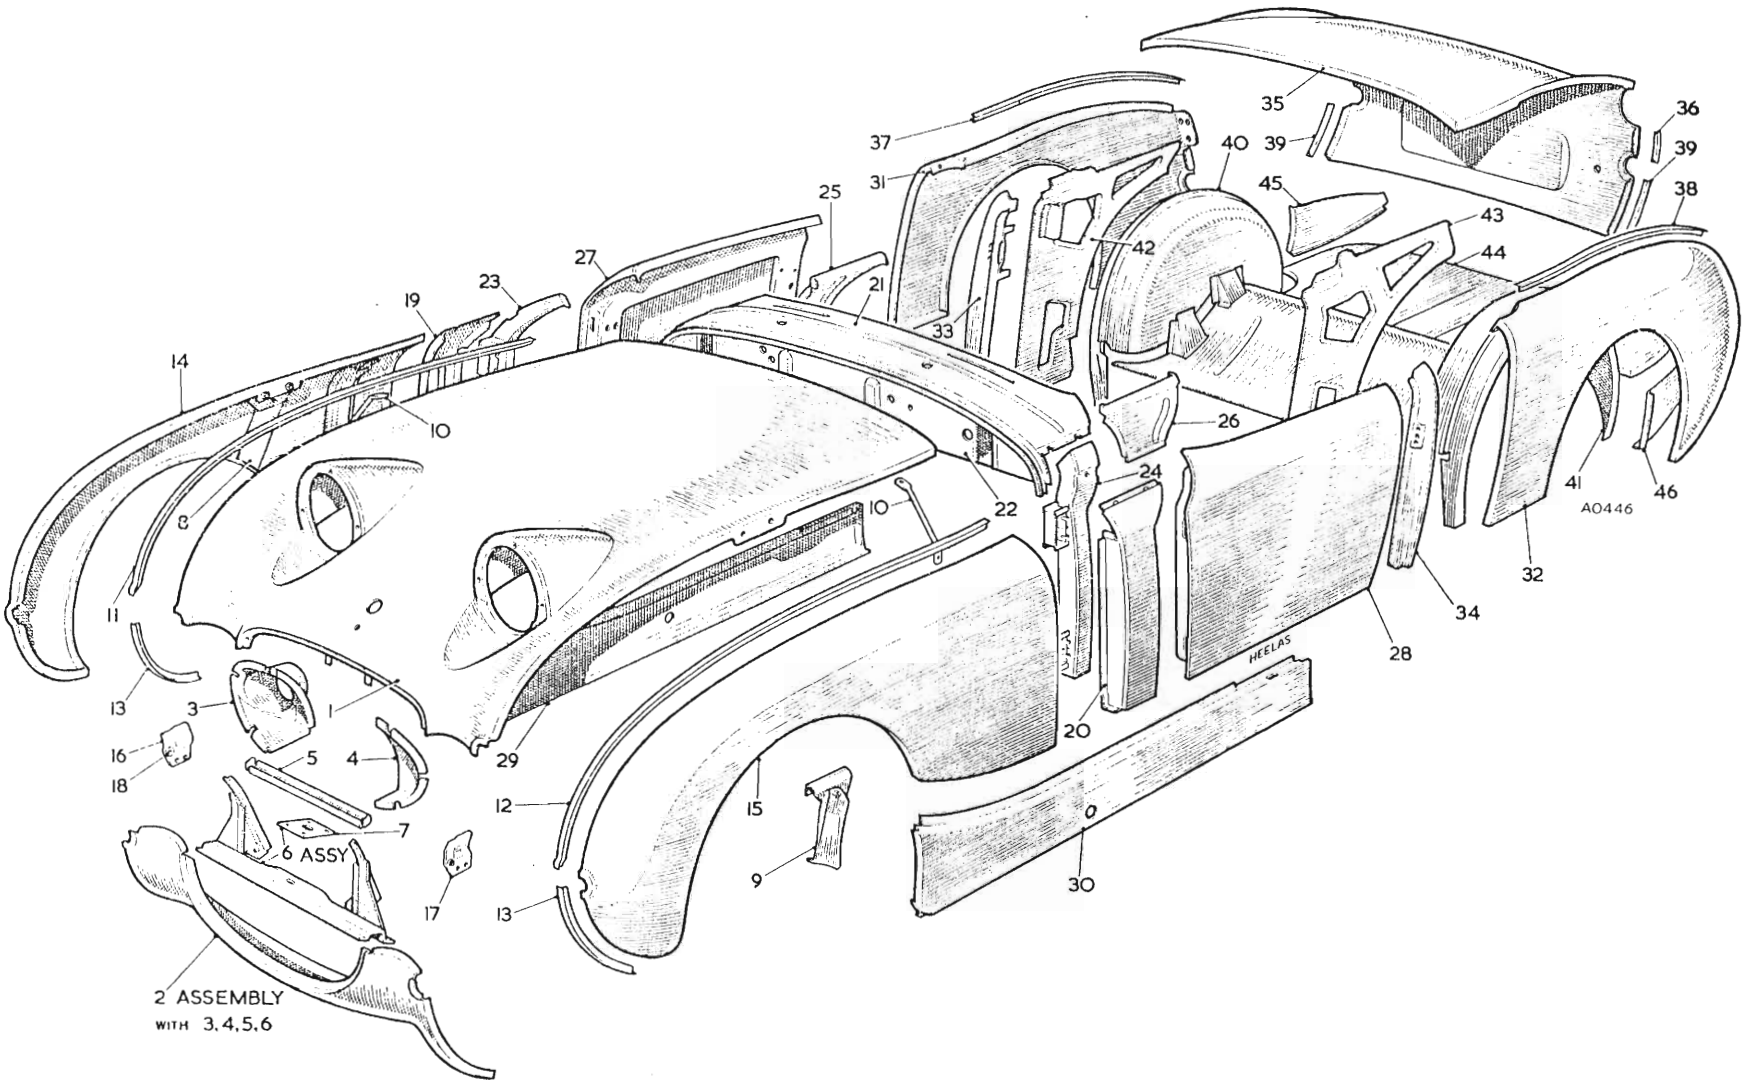


To face page R.1

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BODY										
	BODY SHELL AND UNDERFRAME DETAILS										
1	**Body shell and underframe assembly**	**AHA5025**		1	1						
2	**Bonnet assembly**	**14A84**		1	1						
3	**Panel assembly—bonnet top**	**8G9043**	1	1	1			**AHA5154**	**From (C) 4695**		
4	Panel assembly—bonnet front—bottom	8G9044	2	1	1			AHA5155			
5	Baffle assembly—grille (R/H)	AHA5156	3	1	1						
6	Baffle—grille (L/H)	14A4671	4	1	1						
7	Channel—support—grille baffle	14A5506	5	1	1						
8	Reinforcement assembly—bonnet front—bottom	AHA5157	6	1	1						
9	Plate assembly—bonnet lock	14A3410	7	1	1						
10	Panel—lower—air intake			1	1			AHA5393			For cars prior to 4695 see Austin Service Journal A/55
11	Panel—side—air intake (R/H)			1	1			AHA5394			
12	Panel—side—air intake (L/H)			1	1			AHA5395	From (C) 4695		
13	Panel—front—air intake (R/H)			1	1			AHA5396			
14	Panel—front—air intake (L/H)			1	1			AHA5397			
15	Channel—support—bonnet			1	1			AHA5398			
16	Bracket assembly—bonnet stay (R/H)	AHA5164	8	1	1						
17	Bracket assembly—bonnet stay (L/H)	AHA5165	9	1	1						
18	Strut—bonnet	14A4776	10	2	2						
19	**Wing assembly—front (R/H)**	**AHA5162**	**14**	1	1						
20	**Wing assembly—front (L/H)**	**AHA5163**	**15**	1	1						
21	Moulding—bonnet top (R/H)	14A4773	11	1	1						
22	Moulding—bonnet top (L/H)	14A4774	12	1	1						
23	Moulding—bonnet—lower	14A4775	13	2	2						
24	Hinge assembly—bonnet	14A4684		2	2						
25	Packing—bonnet hinge	14A4687		2	2						
26	Lock assembly—bonnet	14A4712		1	1						
27	**Bracket assembly—bonnet lock striker (R/H)**	**AHA5150**	**16**	1	1						
28	**Bracket assembly—bonnet lock striker (L/H)**	**AHA5151**	**17**	1	1						
29	Bush—striker plate	14A4714	18	2	2						
30	Panel assembly—shroud side (R/H)	AHA5174	19	1	1						
31	Panel assembly—shroud side (L/H)	AHA5175	20	1	1						
32	**Panel assembly—shroud and dash top**	**AHA5173**	**21**	1	1						
33	Panel assembly—dash front top	14A3413	22	1	1						
34	'A' post assembly (R/H)	AHA5176	23	1	1						
35	'A' post assembly (L/H)	AHA5177	24	1	1						
36	Extension—'A' post to scuttle (R/H)	14A4635	25	1	1						
37	Extension—'A' post to scuttle (L/H)	14A4636	26	1	1						
38	**Door assembly—less lock (R/H)**	**14A81**	**27**	1	1						**When supplying 14A81 and 14A82 for vehicles prior to (C) 1606 always supply in addition 2 off screw AHA5263**
39	**Door assembly—less lock (L/H)**	**14A82**	**28**	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Body Shell and Underframe—*continued*										
1	Panel—sill outer (R/H)	14A4593	29	1	1						
2	Panel—sill outer (L/H)	14A4594	30	1	1						
3	**Panel assembly—body rear**	**AHA5179**		**1**	**1**						
4	**Wing assembly—rear (R/H)**	**AHA5182**	**31**	**1**	**1**						
5	**Wing assembly—rear (L/H)**	**AHA5183**	**32**	**1**	**1**						
6	'B' post assembly (R/H)	AHA5184	33	1	1						
7	'B' post assembly (L/H)	AHA5185	34	1	1						
8	Moulding—rear wing to panel—top (R/H)	14A4769	37	1	1						
9	Moulding—rear wing to panel—top (L/H)	14A4770	38	1	1						
10	Panel—body rear	14A4587	35	1	1						
11	Moulding—rear wing to panel (intermediate)	14A4771	36	2	2						
12	Moulding—lower (rear)	14A4772	39	2	2						
13	Panel assembly—rear wheel arch (R/H)	AHA5148	40	1	1						
14	Panel assembly—rear wheel arch (L/H)	AHA5149	41	1	1						
15	Reinforcement assembly—'B' post to wheel arch (R/H)	14A89	42	1	1						
16	Reinforcement assembly—'B' post to wheel arch (L/H)	14A90	43	1	1						
17	Panel assembly—luggage floor	AHA5147	44	1	1						
18	Panel assembly—luggage floor to wing (R/H)	14A4611	45	1	1						
19	Panel assembly—luggage floor to wing (L/H)	14A4612	46	1	1						

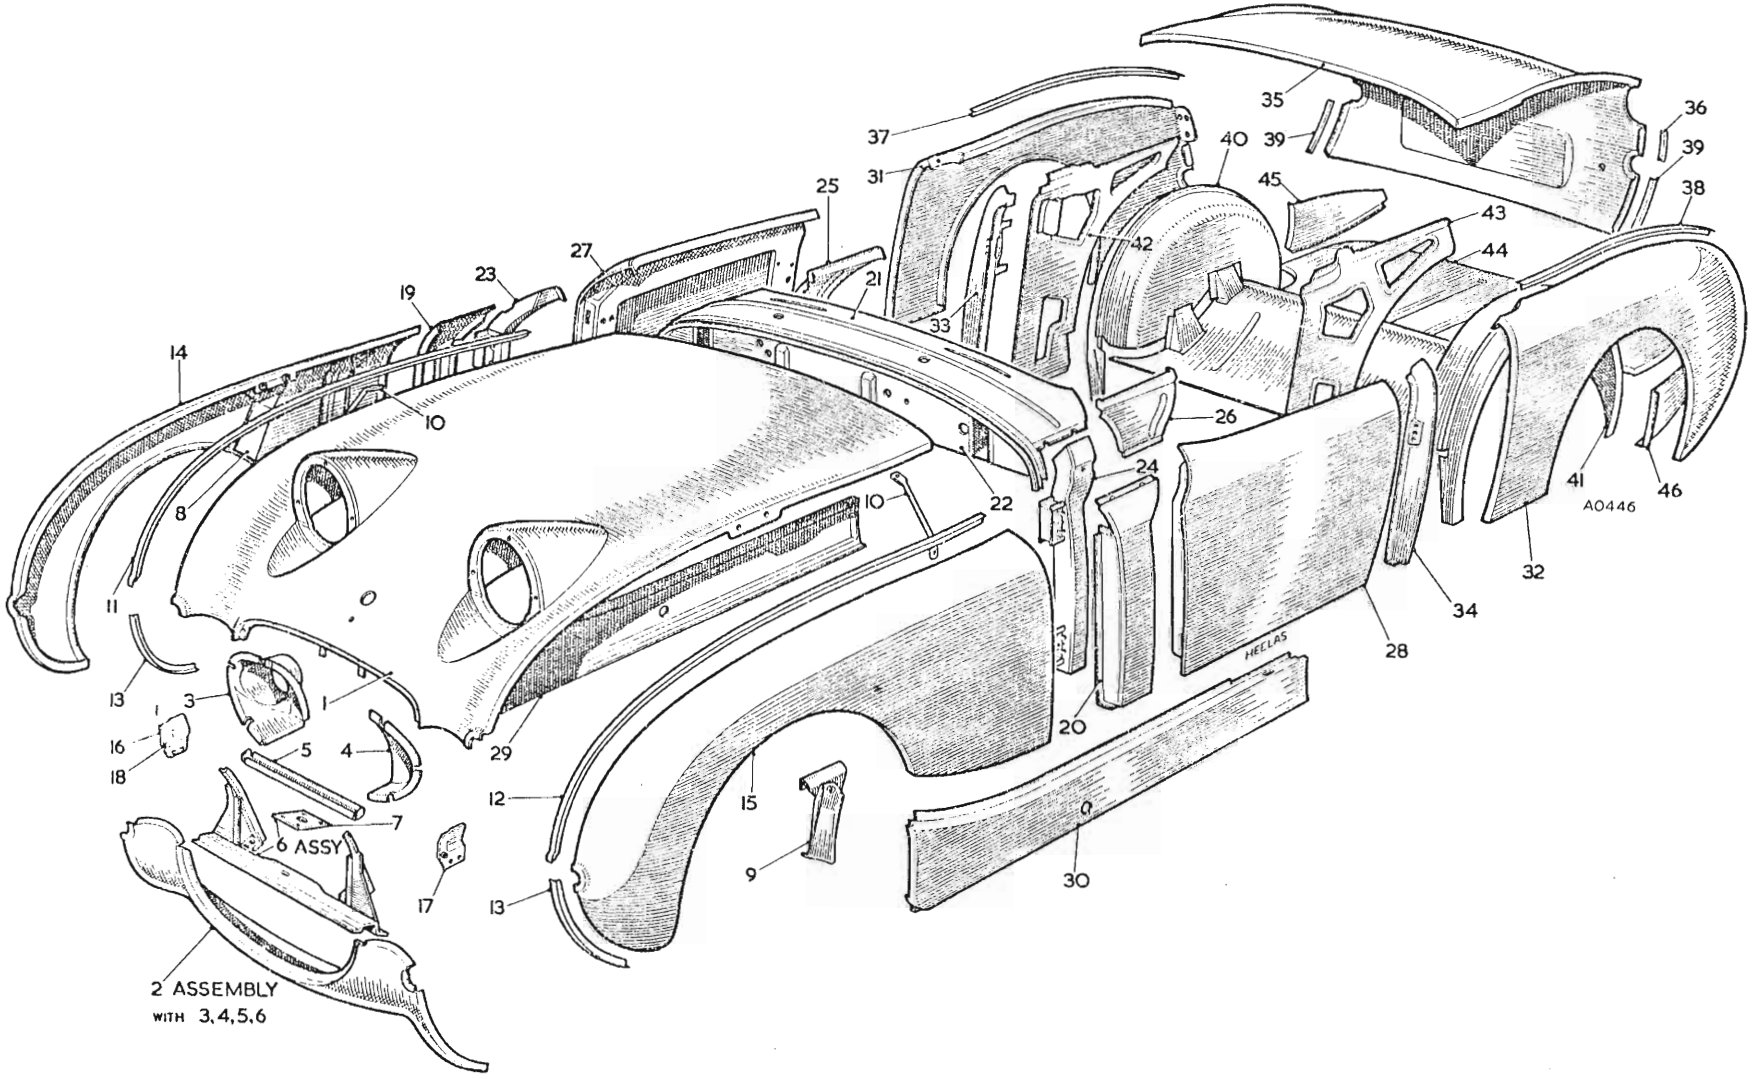


To face page R.2

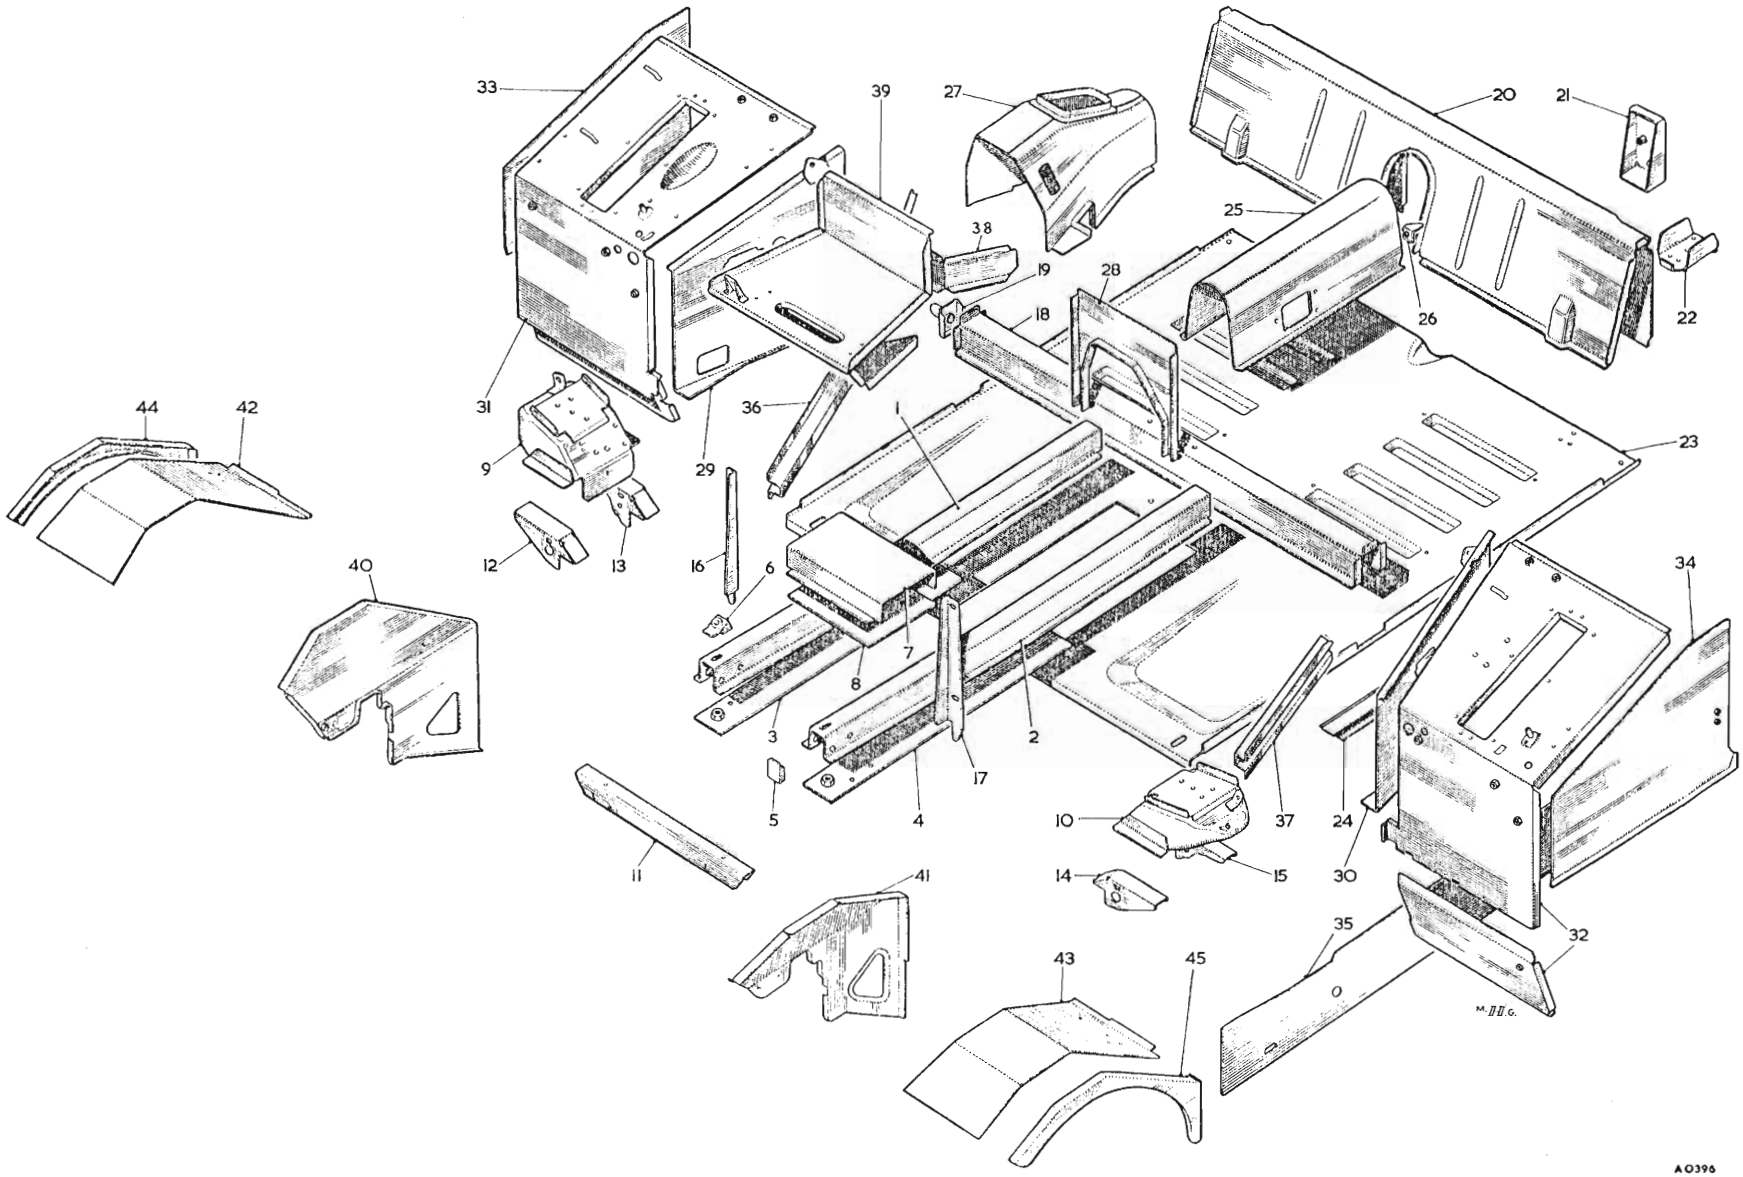


To face page R.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Commencing (C) 501 Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Body Shell and Underframe—*continued*										
1	**Underframe assembly**	**N.S.P.**		1	1						
2	**Member assembly—frame side (R/H)**	**2A5534**	**1**	1	1						
3	**Member assembly—frame side (L/H)**	**2A5535**	**2**	1	1						
4	Plate assembly—closing—side-member (R/H)	2A5590	3	1	1						
5	Plate assembly—closing—side-member (L/H)	2A5623	4	1	1						
6	Plate—end closing—side-member	2A5475	5	2	2						
7	Bracket—bonnet locating	2A5537	6	2	2						
8	**Cross-member (front)**	**2A5467**	**7**	1	1						
9	Plate—closing—front cross-member	2A5468	8	1	1						
10	**Spring bracket assembly—front suspension (R/H)**	**2A5457**	**9**	1	1						
11	**Spring bracket assembly—front suspension (L/H)**	**2A5458**	**10**	1	1						
12	Support assembly—suspension housing	2A5469	11	1	1						
13	Bracket—front—front suspension link (R/H)	2A5462	12	1	1						
14	Bracket—rear—front suspension link (R/H)	2A5463	13	1	1						
15	Bracket—front—front suspension link (L/H)	2A5463	14	1	1						
16	Bracket—rear—front suspension link (L/H)	2A5462	15	1	1						
17	**Bracket assembly—radiator mounting (R/H)**	**2A5612**	**16**	1	1						
18	Bracket assembly—radiator mounting (L/H)	2A5465	17	1	1						
19	**Cross-member assembly (centre)**	**2A5478**	**18**	1	1						
20	Support assembly—jack tube	2A5483	19	2	2						
21	**Cross-member assembly (rear)**	**2A5488**	**20**	1	1						
22	Bracket assembly—shock absorber mounting (R/H)	2A5628		1	1						
23	Bracket assembly—shock absorber mounting (L/H)	2A5630	21	1	1						
24	Plate—spring mounting	2A5497	22	2	2						
25	**Floor assembly—main**	**2A5596**	**23**	1	1						
26	Channel assembly—stiffening—main floor	2A5507	24	2	2						
27	Tunnel assembly	2A5499	25	1	1						
28	Bracket—hand brake abutment	2A5509	26	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Body Shell and Underframe—*continued*										
1	**Cover assembly—gearbox**	**2A5510**	**27**	**1**	**1**						
2	Panel—tunnel front	2A5523	28	1	1						
3	Panel assembly—inner side—foot-well (R/H)	2A5594	29	1	1						
4	Panel assembly—inner side—foot-well (L/H)	2A5595	30	1	1						
5	Panel assembly—foot-well front and roof (R/H)	2A5530	31	1	1						
6	Panel assembly—foot-well front and roof (L/H)	2A5529	32	1	1						
7	Panel assembly—outer—foot-well (R/H)	2A5527	33	1	1						
8	Panel assembly—outer—foot-well (L/H)	2A5528	34	1	1						
9	Sill assembly (front R/H)	2A5550		1	1						
10	Sill assembly (front L/H)	2A5551		1	1						
11	Plate—side—sill (R/H)	AHA5299		1	1						
12	Plate—side—sill (L/H)	AHA5300	35	1	1						
13	Strut—front suspension (R/H)	2A5558	36	1	1						
14	Strut—front suspension (L/H)	2A5557	37	1	1						
15	Support—heater platform	2A5524	38	1	1						
16	Platform assembly—heater	2A5533	39	1	1						
17	Wheel arch assembly—inner (front R/H)	2A5582	40	1	1						
18	Wheel arch assembly—inner (front L/H)	2A5583	41	1	1						
19	Wheel arch assembly—top (front R/H)	2A5577	42	1	1						
20	Wheel arch—top (front L/H)	AHA5282	43	1	1						
21	Wheel arch—outer (front R/H)	2A5580	44	1	1						
22	Wheel arch—outer (front L/H)	2A5581	45	1	1						

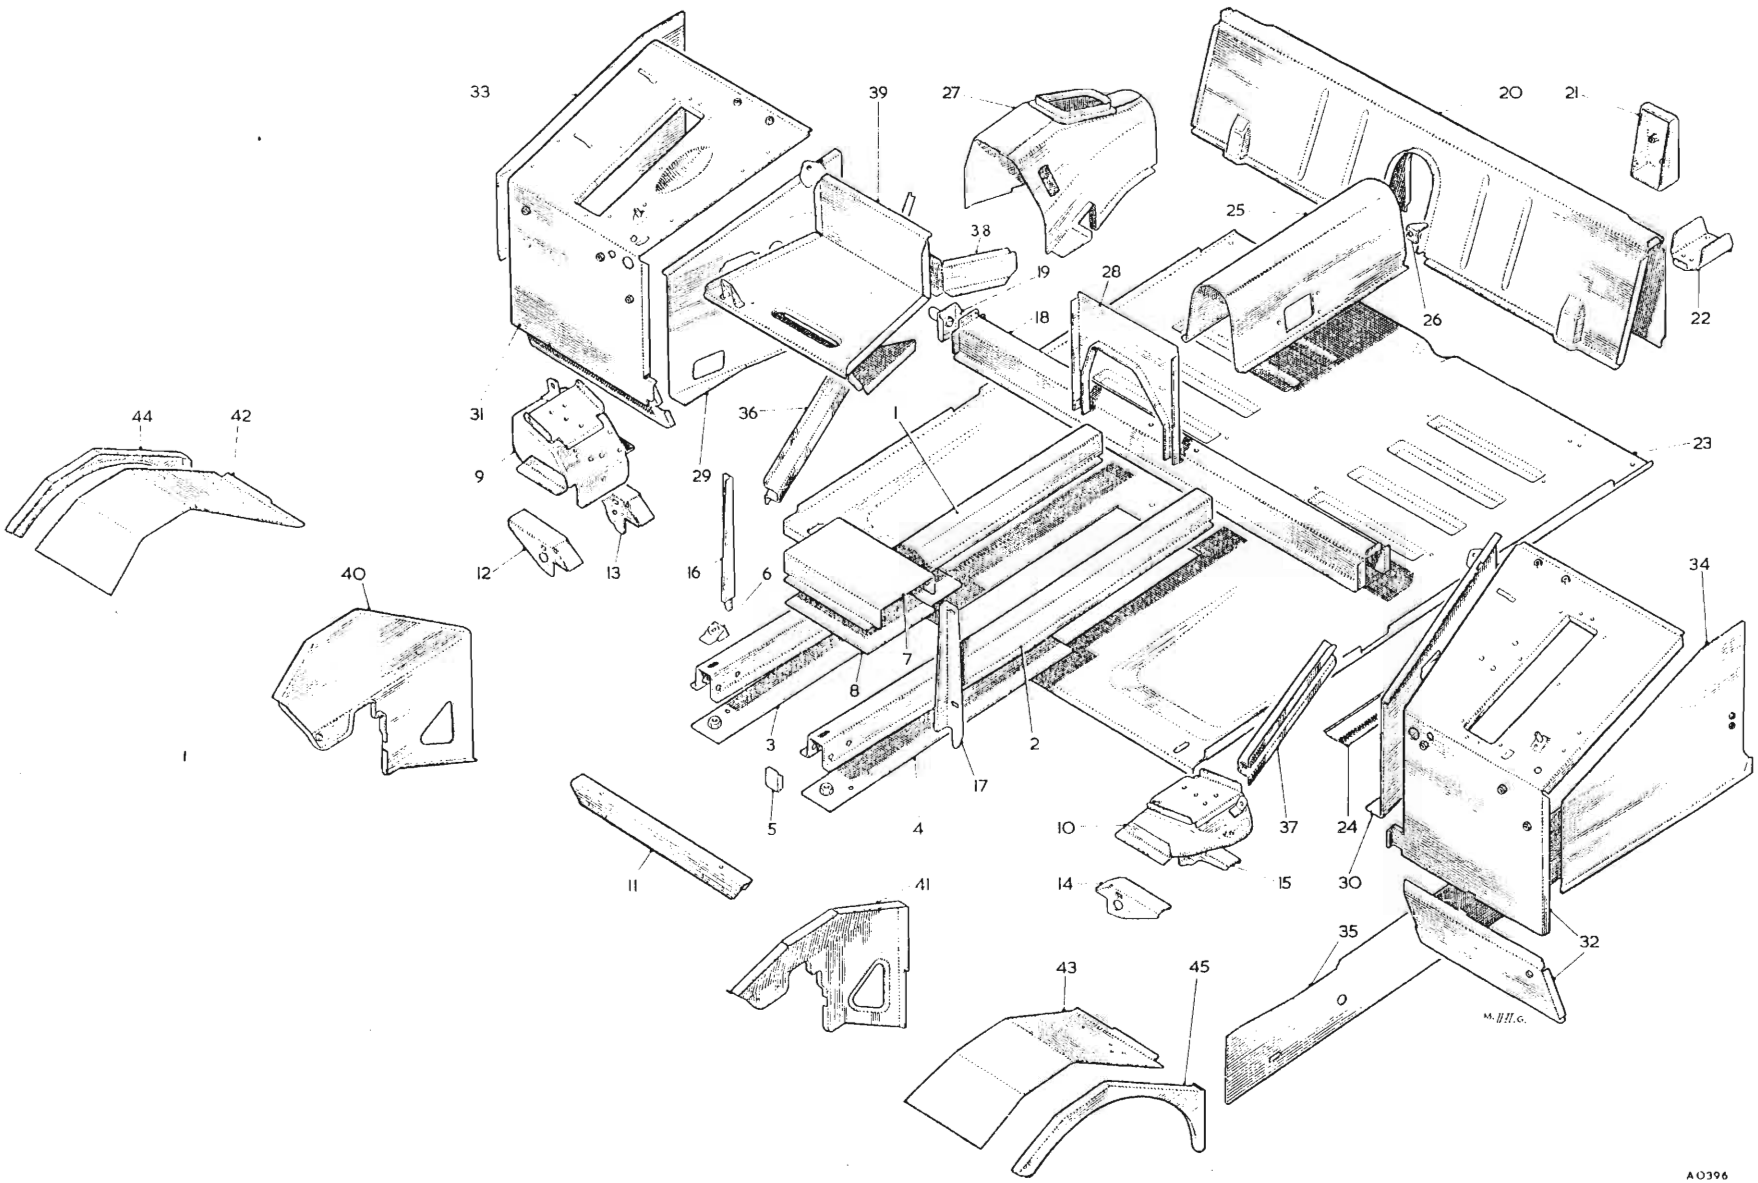


To face page R.4

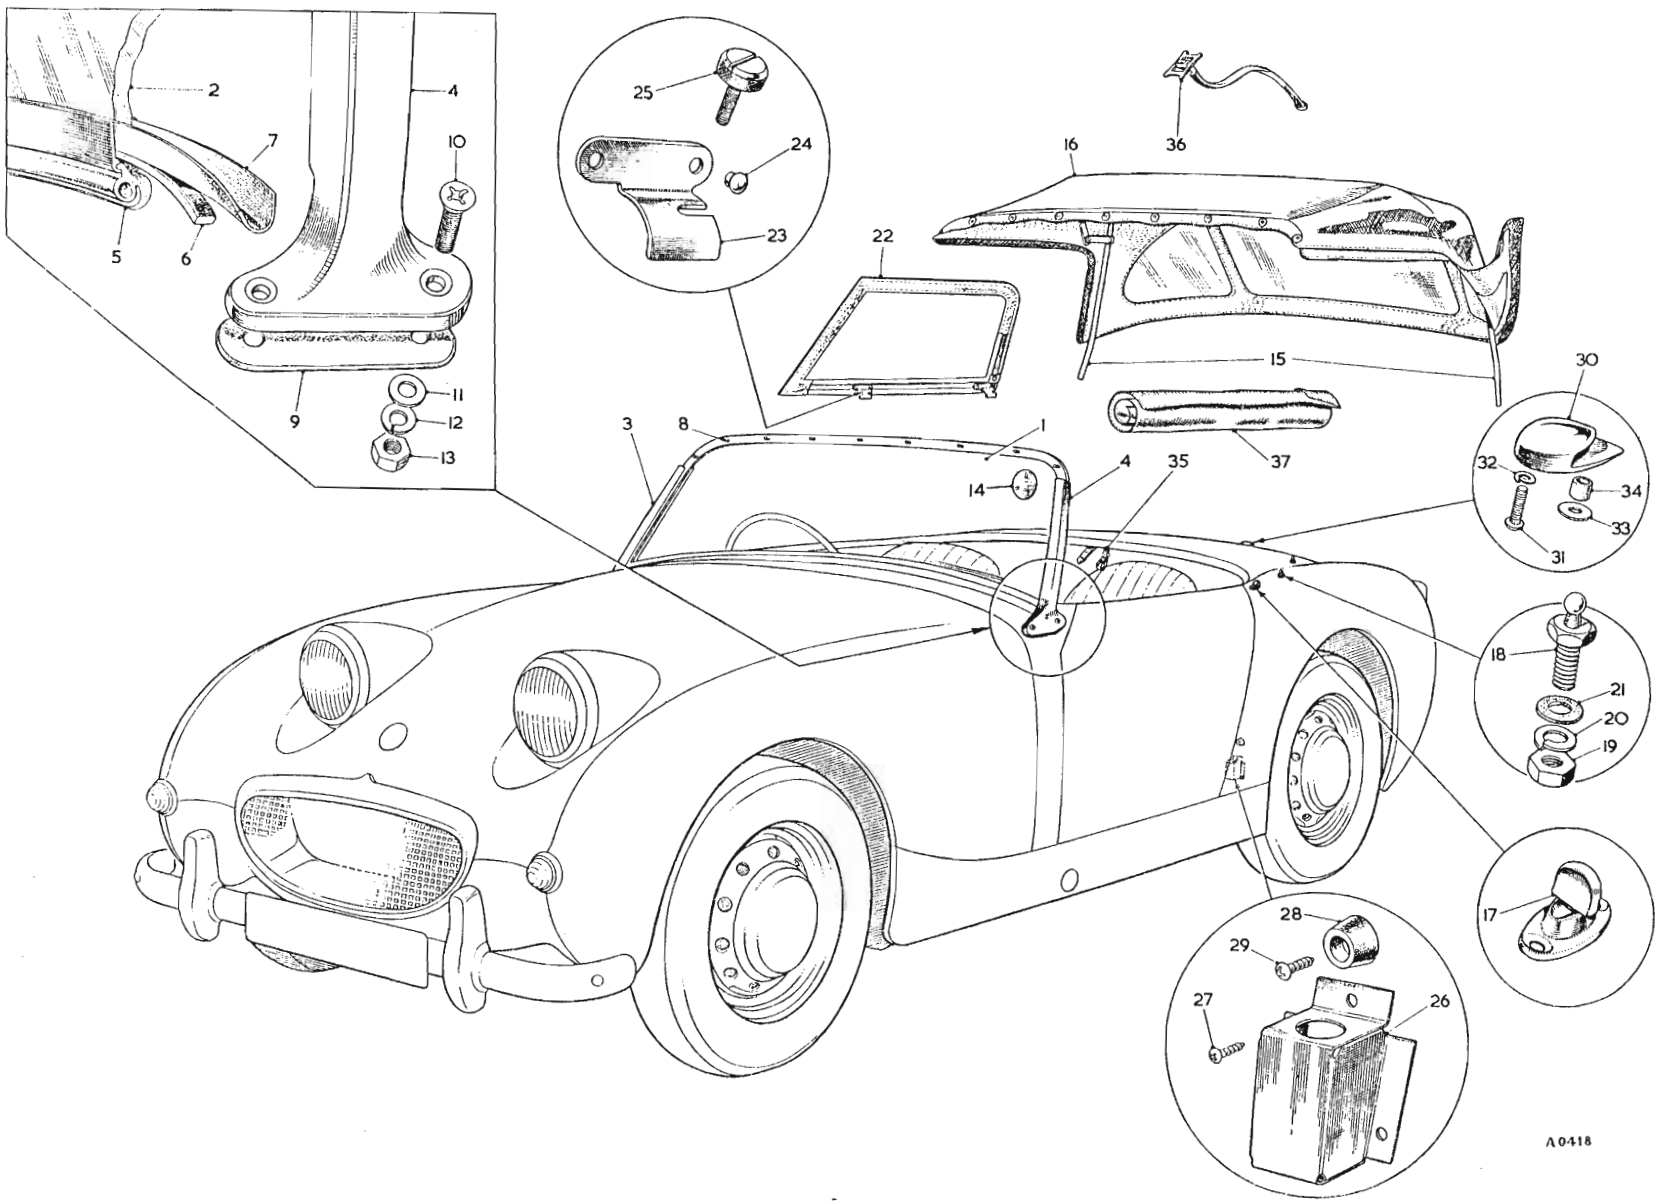


To face page R.5

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	WINDSCREEN										
1	**Windscreen assembly**	**14A4824**	1	1	1						
2	**Windscreen assembly**	**14A4718**		1	1						**Laminated glass optional extra**
3	Windscreen glass	14A4805	2	1	1						
4	Windscreen glass	14A4719		1	1						Laminated glass optional extra
5	Pillar (R/H)	14A4723	3	1	1						
6	Pillar (L/H)	14A4724	4	1	1						
7	Weather seal—bottom—windscreen	14A4729	5	1	1						
8	Weatherstrip	14A4727	6	1	1						
9	Rubber—glazing	14A4728	7	1	1						
10	Channel—top	14A4720		1	1						
11	Channel—bottom	14A4721		1	1						
12	Bracket—corner angle	14A4722		2	2						
13	Screw—corner angle to channel	CMZ0203		8	8						
14	Angle—side curtain (R/H)	14A4725		1	1						
15	Angle—side curtain (L/H)	14A4726		1	1						
16	Screw—side curtain angle to pillar	RMZ0307		2	2						
17	Screw—side curtain angle to pillar	RMZ0308		4	4						
18	Plate—tapped—pillar fixing	14A5472		2	2						
19	Screw—tapped plate to channel	CMZ0203		2	2						
20	Fastener—hood to windscreen	AHA5255	8	9	9						
21	**Pad—foot seating—R/H (rubber)**	**14A4730**		1	1						
22	**Pad—foot seating—L/H (rubber)**	**14A5706**	9	1	1						
23	Screw—foot to scuttle	RMZ0520	10	4	4						
24	Washer for foot screw (plain)	PWZ105	11	2	2						
25	Washer for foot screw (spring)	LWZ205	12	2	2	24					
26	Nut for screw	FNZ105	13	2	2						
27	Holder—licence	14A3823	14	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HOOD AND SIDE CURTAINS										
1	**Frame assembly—hood**	**14A4754**	**15**	1	1						
2	**Cover assembly—hood**	**14A4806**	**16**	1	1						
3	Eyelet	8F2408		2	2						
4	Washer for eyelet	8F2409		2	2						
5	Fastener (lift the dot)	4K9671		9	9						
6	Plate for fastener	4K9670		9	9						
7	Fastener—top portion	14B2465		4	4						
8	Button—turn—single	8F2480	17	2	2						
9	Fastener—bottom portion	14B2464	18	4	4						
10	Nut for fastener	FNZ103	19	4	4						
11	Washer for fastener (spring)	LWZ203	20	4	4						
12	Washer for fastener (joint)	2K4936	21	4	4						
13	**Curtain assembly—side (R/H)**	**14A5507**	**22**	1	1			**AHA5264**	**From (C) 1606**		
14	**Curtain assembly—side (L/H)**	**14A5513**		1	1			**AHA5265**			
15	Bracket—curtain to door (R/H)	AHA5266	23	2	2						
16	Bracket—curtain to door (L/H)	AHA5267		2	2						
17	Rivet—bracket to curtain	CRS0206	24	8	8						
18	Screw—bracket to door (special)	14A5521	25	4	4			AHA5263	From (C) 1606		
19	Bracket—stowage—hood tubes	14A4879	26	2	2						
20	Screw—stowage bracket to member	PTZ804	27	6	6						
21	Buffer	2H5905	28	2	2						
22	Screw—buffer to member	PTZ805	29	2	2						
23	Retainer—hood cover	14B1730	30	2	2						
24	Screw—retainer to body	PMZ0304	31	4	4						
25	Washer for retainer screw (spring)	LWZ203	32	4	4						
26	Washer for retainer screw—large (plain)	PWZ203	33	2	2						
27	Distance collar—retainer to body	11K5564	34	2	2						
28	Strap assembly—hood frame stowage	14A5492	35	1	1						
29	Strap assembly—fixing—hood stowage	135198	36	2	2						
30	Case—side-curtain	AHA5216	37	1	1						
31	Stikastrip—(hood to windscreen)	AHA5359		1	1						

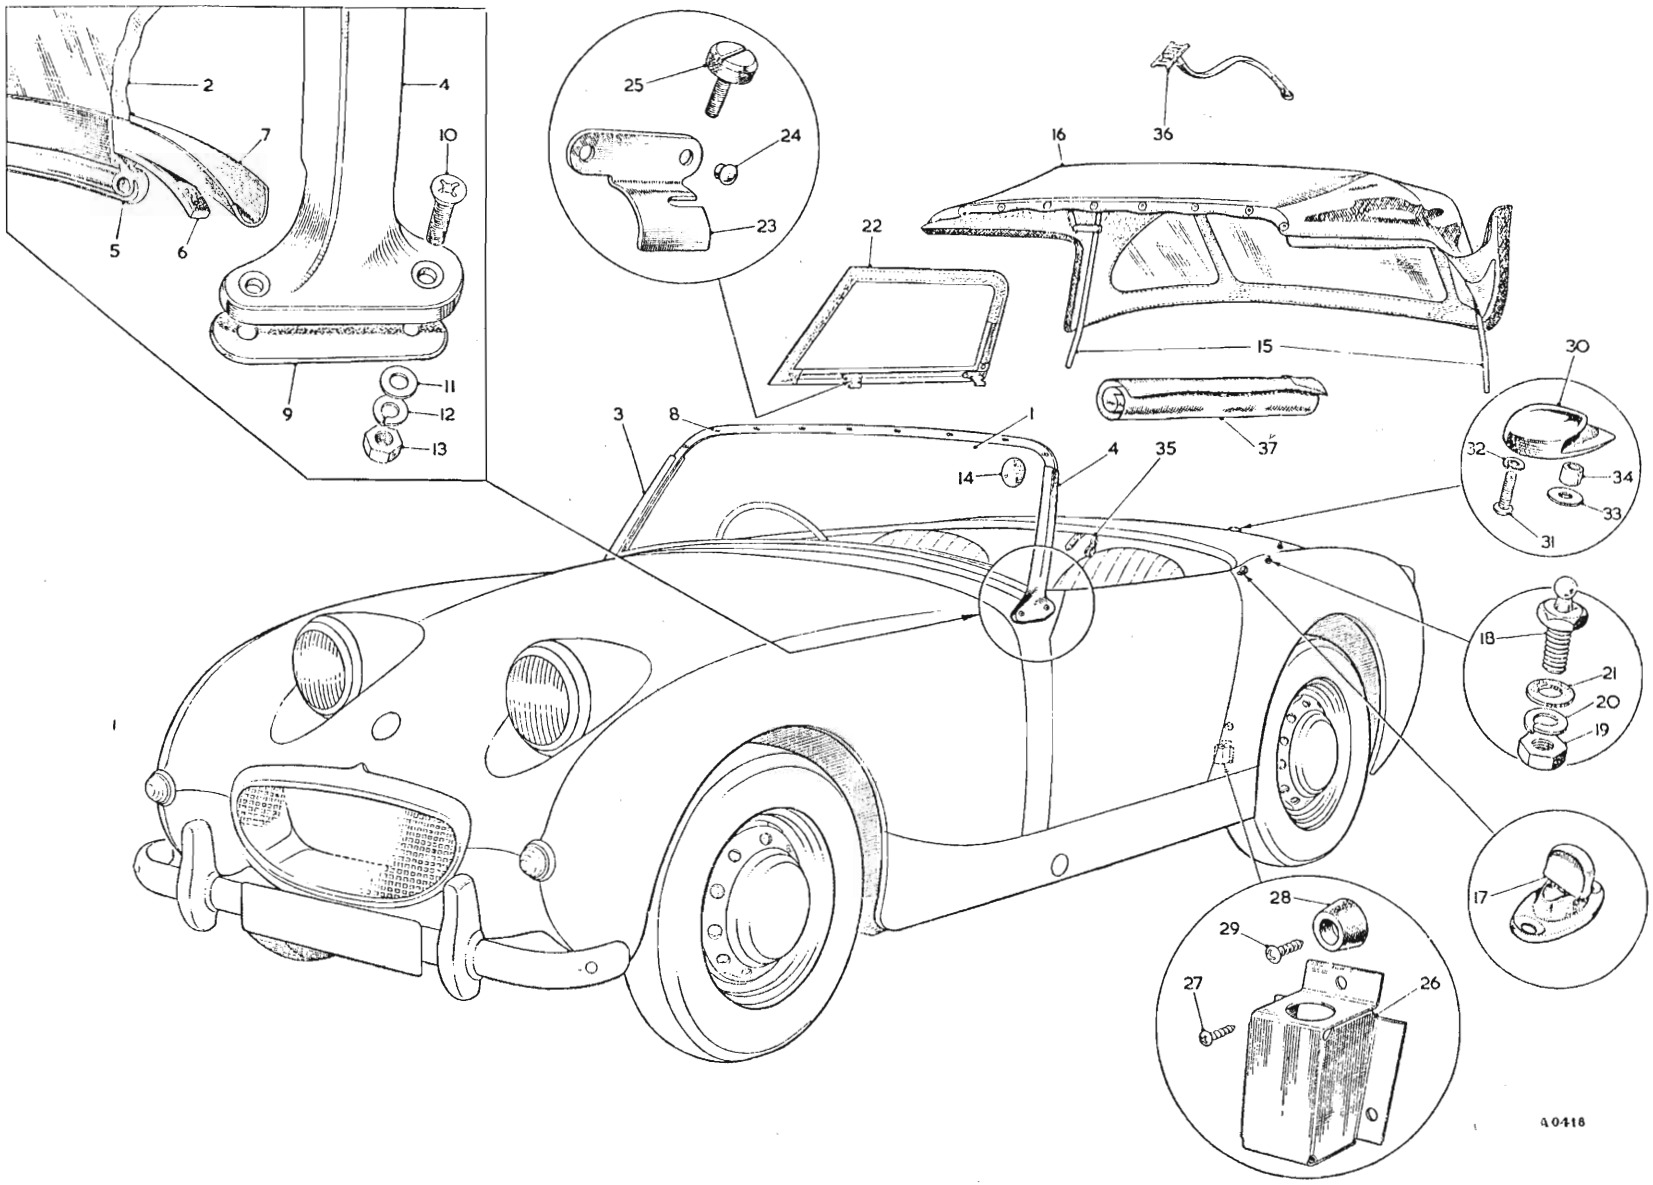


To face page R.6

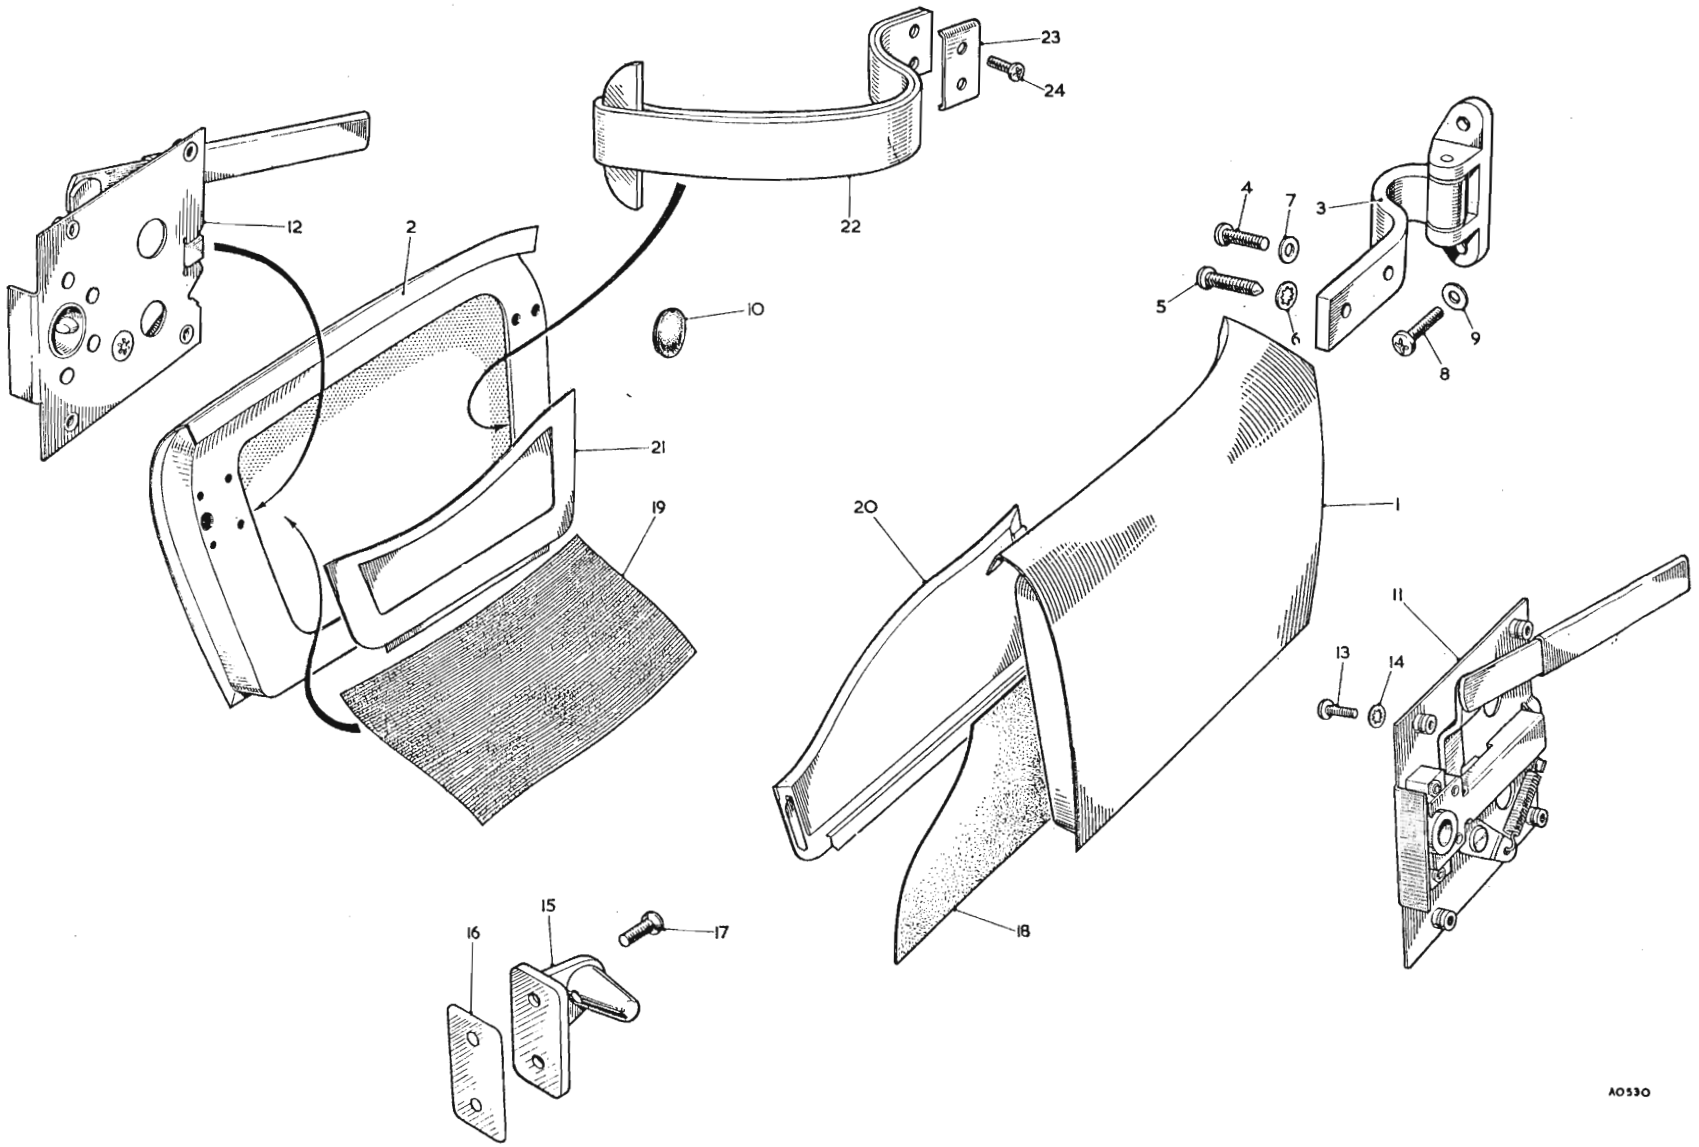


To face page R.7

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	DOORS—HINGES—LOCKS—TRIM LININGS										
1	**Door assembly—less lock (R/H)**	**14A81**	**1**	1	1						] **When supplying 14A81 and 14A82 for vehicles prior to (C) 1606 always supply in addition 2 off screw AHA5263**
2	**Door assembly—less lock (L/H)**	**14A82**	**2**	1	1						
3	Hinge assembly—door	14A4677	3	4	4						
4	Screw—hinge to door	PPN0408	4	6	6						
5	Screw—hinge to door	PPN0412	5	2	2						
6	Washer for screw (shakeproof)	LWZ504	6	8	8						
7	Washer for hinge screw (plain)	AHA5329	7	8	8						
8	Screw—hinge to body	PPN0408	8	12	12						
9	Washer for hinge screw (lock)	LWZ404	9	12	12						
10	Plug - hinge holes - inner door panel (rubber)	14A716	10	8	8						
11	**Lock assembly—door (R/H)**	**14A4675**	**11**	1	1						
12	**Lock assembly—door (L/H)**	**14A4676**	**12**	1	1						
13	Screw—lock to door	PMZ0308	13	8	8						
14	Washer for lock screw (shakeproof)	2K8609	14	8	8						
15	**Striker assembly—lock**	**14A4672**	**15**	2	2						
16	Plate—cover—striker	14A4673	16	2	2						
17	Screw—striker assembly to post	CPZ0410	17	4	4						
18	**Insert—door panel—R/H (Cherry Red)**	**AHA5122**	**18**	1	1						
19	Insert—door panel—R/H (Blue)	AHA5123		1	1						
20	Insert—door panel—R/H (Black)	AHA5124		1	1						
21	Insert—door panel—R/H (Green)	AHA5125		1	1						
22	**Insert—door panel—L/H (Cherry Red)**	**AHA5126**	**19**	1	1						
23	Insert—door panel—L/H (Blue)	AHA5127		1	1						
24	Insert—door panel—L/H (Black)	AHA5128		1	1						
25	Insert—door panel—L/H (Green)	AHA5129		1	1						
26	**Liner assembly—door pocket—R/H (Cherry Red)**	**AHA5050**	**20**	1	1						
27	Liner assembly—door pocket—R/H (Blue)	AHA5052		1	1						
28	Liner assembly—door pocket—R/H (Black)	AHA5053		1	1						
29	Liner assembly—door pocket—R/H (Green)	AHA5054		1	1						
30	**Liner assembly—door pocket—L/H (Cherry Red)**	**AHA5055**	**21**	1	1						
31	Liner assembly—door pocket—L/H (Blue)	AHA5057		1	1						
32	Liner assembly—door pocket—L/H (Black)	AHA5058		1	1						
33	Liner assembly—door pocket—L/H (Green)	AHA5059		1	1						
34	Rivet—pocket to door	6K9789		4	4						
35	**Strap assembly—door check (Cherry Red)**	**AHA5095**	**22**	2	2						
36	Strap assembly—door check (Blue)	AHA5097		2	2						
37	Strap assembly—door check (Black)	AHA5098		2	2						
38	Strap assembly—door check (Green)	AHA5099		2	2						
39	Retainer—check strap	14A764	23	2	2						
40	Screw for check strap	RMZ0310	24	4	4						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Commencing (C) 501 Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BONNET FITTINGS										
1	**Hinge assembly—bonnet**	**14A4684**	**1**	**2**	**2**						
2	Packing—bonnet hinge	14A4687	2	2	2						
3	Screw—hinge to bonnet	HZS0405	3	8	8						
4	Washer for hinge screw (plain)	PWZ104	4	8	8	12					
5	Washer for hinge screw (spring)	LWZ204	5	8	8						
6	Bolt—hinge to bulkhead	HBZ0524	6	2	2						
7	Nut for bolt	LNZ205	7	2	2						
8	**Strut—bonnet**	**14A4776**	**8**	**2**	**2**						
9	Screw—strut to bonnet	HZS0405	9	4	4						
10	Washer for screw (plain)	PWZ104	10	4	4	12					
11	Washer for screw (spring)	LWZ204	11	4	4						
12	**Stay assembly—telescopic—bonnet**	**14A4691**	**12**	**2**	**2**						
13	Nut—pivot bracket to pedal box side	FNZ103	13	2	2						
14	Washer for nut (plain)	PWZ103	14	2	2						
15	Washer for nut (spring)	LWZ203	15	2	2						
16	Screw—stay bracket to pedal box	PMZ0408	16	4	4						
17	Washer for stay bracket screw (plain)	PWZ104	17	4	4	12					
18	Washer for stay bracket screw (spring)	LWZ204	18	4	4						
19	Bolt for bonnet stay (special)	14A4705	19	2	2						
20	Washer for stay bolt (plain)	PWZ105	20	2	2						
21	Washer for stay bolt (curved)	AWZ105	21	2	2						
22	Washer for stay bolt—brass (plain)	2K9030	22	2	2						
23	**Stay—bonnet—auxiliary**	**AHA5232**	**23**	**1**	**1**						
24	Bracket—pivot—bonnet stay	AHA5234	24	1	1						
25	Washer—stay to bracket (plain)	PWZ105	25	1	1						
26	Washer—stay to bracket (spring)	AJD7731	26	1	1						
27	Screw—bracket to radiator support (R/H)	HZS0405	27	1	1						
28	Washer for screw (plain)	PWZ104	28	1	1	12					
29	Washer for screw (spring)	LWZ204	29	1	1						
30	Nut for screw	FNZ104	30	1	1						
31	Bracket—clip—bonnet stay	AHA5233	31	1	1						
32	Clip—bonnet stay	AHH5460	32	1	1						
33	Screw—clip to bracket	PMZ0306	33	2	2						
34	Washer for screw (spring)	LWZ203	34	2	2						
35	Nut for screw	FNZ103	35	2	2						
36	Clip—spring	BNK1500	36	1	1						
37	Rivet—clip to bonnet reinforcement	CRS0206	37	2	2						

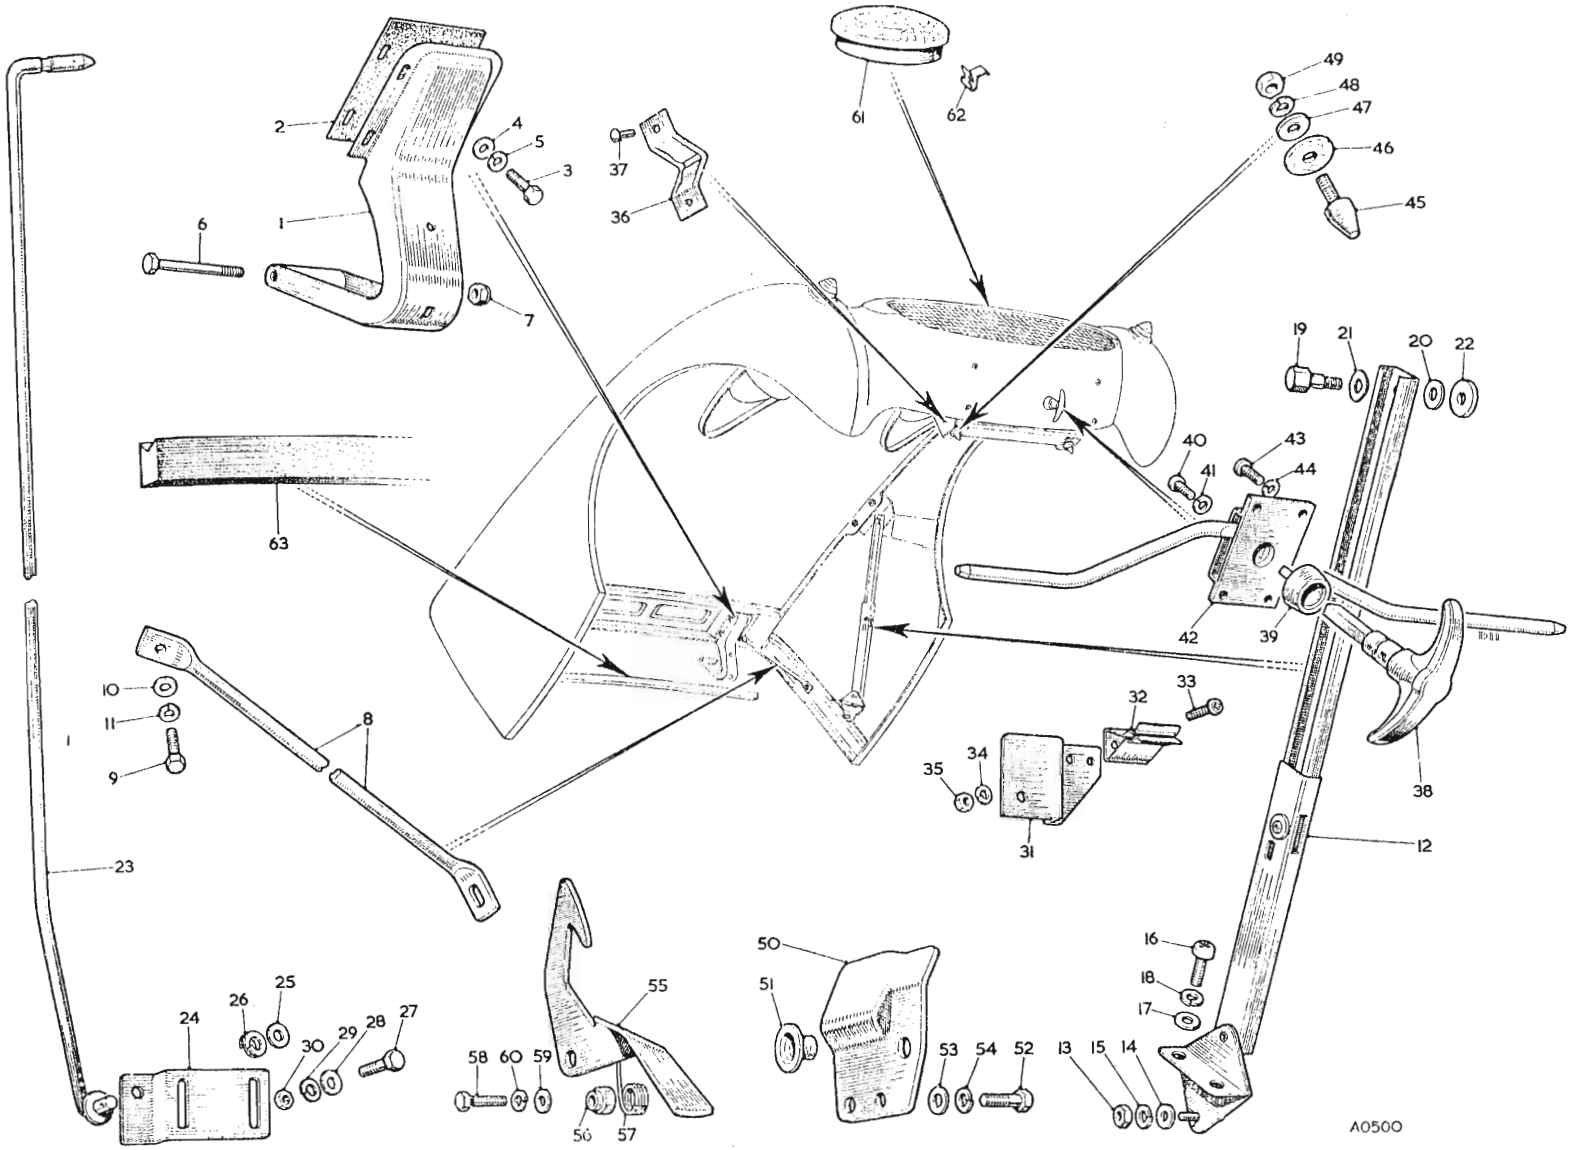


To face page R.8

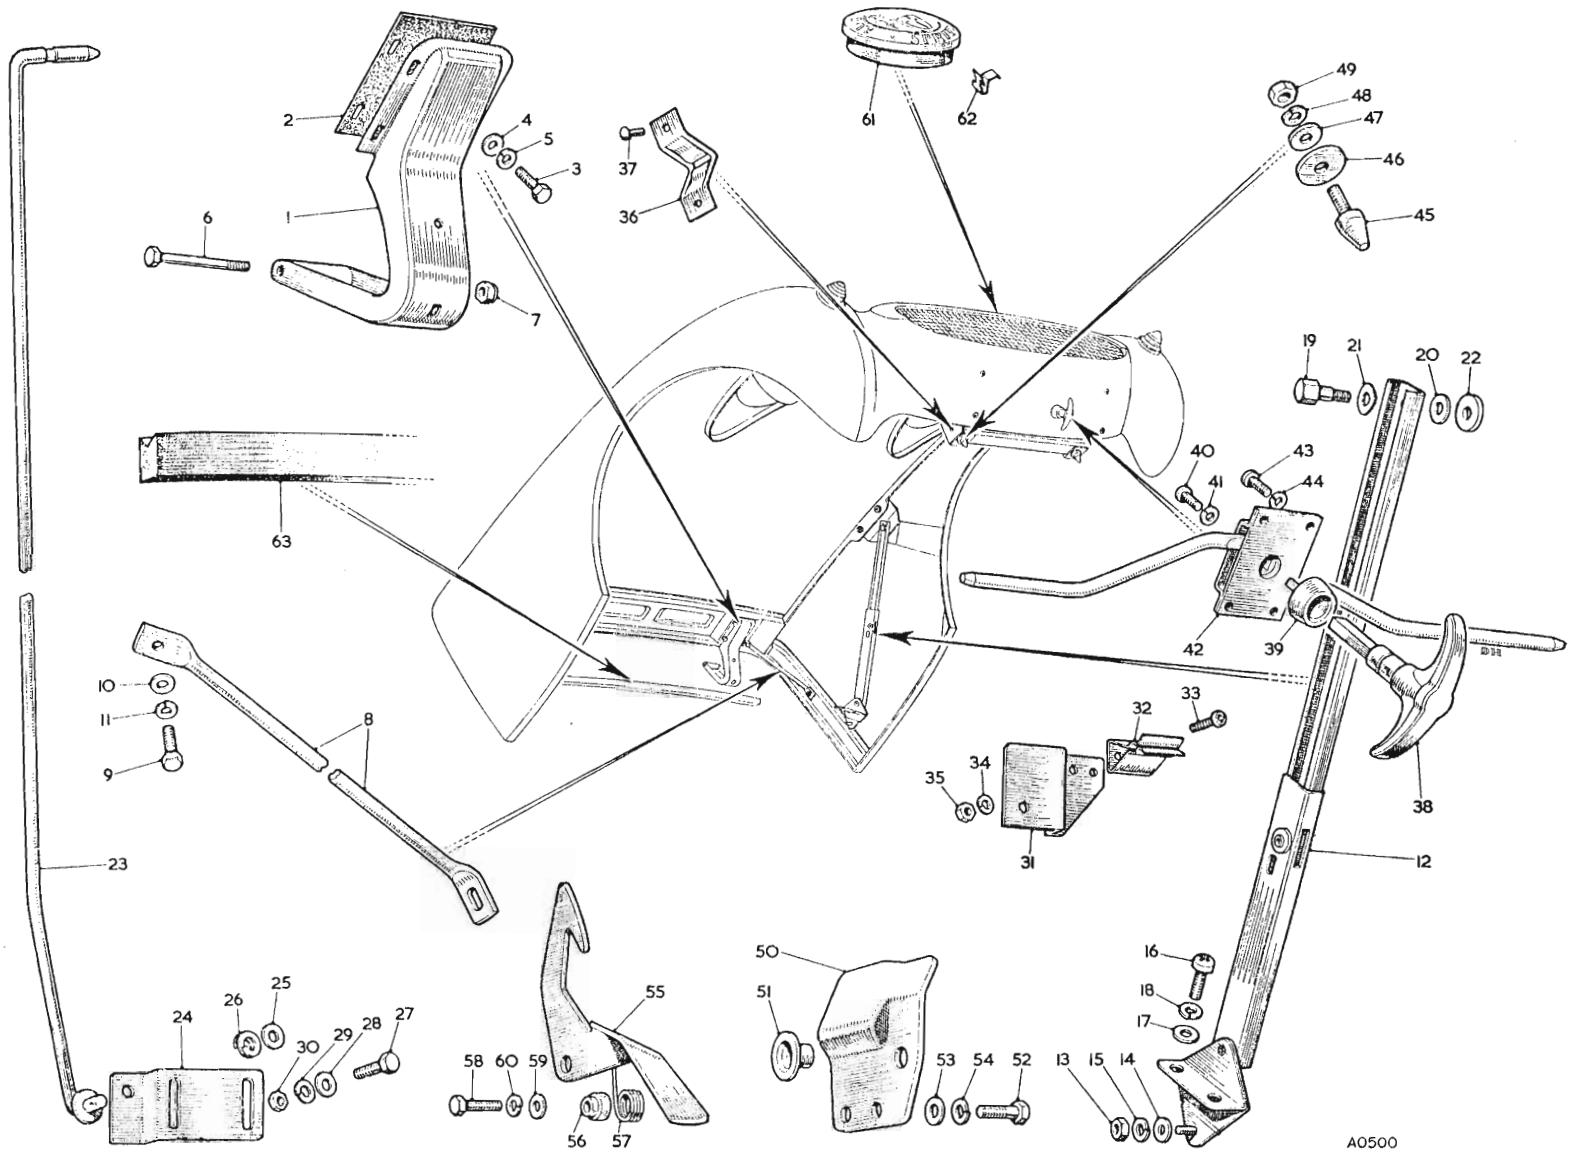


To face page R.9

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Bonnet Fittings—*continued*										
1	**Handle—bonnet**	**14A4891**	**38**	1	1						
2	Escutcheon—handle	14A4892	39	1	1						
3	Screw—handle to lock	6K9833	40	1	1						
4	Washer for screw (spring)	LWZ203	41	1	1						
5	**Lock assembly—bonnet**	**14A4712**	**42**	1	1						
6	Screw—lock to bonnet	PMZ0308	43	4	4						
7	Washer for screw (spring)	LWZ203	44	4	4						
8	Peg—bonnet locating	14A4733	45	2	2						
9	Washer for locating peg (plain)	53K3428	46	2	2						
10	Washer for locating peg (plain)	53K3427	47	2	2						
11	Washer for locating peg (spring)	LWZ305	48	2	2						
12	Nut for locating peg	FNZ105	49	2	2						
13	**Bracket assembly—bonnet lock striker (R/H)**	**AHA5150**	**50**	1	1						
14	**Bracket assembly—bonnet lock striker (L/H)**	**AHA5151**		1	1						
15	Bush—striker plate	14A4714	51	2	2						
16	Screw—bracket to side-member	HNS0405	52	4	4						
17	Washer for screw (plain)	PWZ104	53	4	4	12					
18	Washer for screw (spring)	LWZ204	54	4	4						
19	**Catch—safety—bonnet**	**14A4707**	**55**	1	1						
20	Bush—safety catch	14A4708	56	1	1						
21	Spring—safety catch	14A4709	57	1	1						
22	Bolt—safety catch to side-member	HNS0408	58	1	1						
23	Washer for bolt (plain)	PWZ104	59	1	1	12					
24	Washer for bolt (spring)	LWZ204	60	1	1						
25	**Badge—bonnet top**	**14A4898**	**61**	1	1						
26	Clip—badge to bonnet top	14A5542	62	3	3						
27	Seal—bonnet sealing	AHA5225	63	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SEAT AND SEAT FITTINGS										
1	**Squab assembly (Cherry Red) with white piping**	**AHA5040**	**1**	**2**	**2**						
2	Squab assembly (Blue) with light blue piping	AHA5042		2	2						
3	Squab assembly (Black) with yellow piping	AHA5043		2	2						
4	Squab assembly (Green) with green piping	AHA5044		2	2						
5	Cover assembly—squab (Cherry Red) with white piping	AHA5045		2	2						
6	Cover assembly—squab (Blue) with light blue piping	AHA5047		2	2						
7	Cover assembly—squab (Black)—with yellow piping	AHA5048		2	2						
8	Cover assembly—squab (Green) with green piping	AHA5049		2	2						
9	Clip—trim	14A4497	2	36	36						
10	Nut—squab to pivot bracket	AHA5219		4	4						
11	Washer for nut (plain)	PWZ205		8	8						
12	**Cushion assembly (Cherry Red) with white piping**	**AHA5030**	**3**	**2**	**2**						
13	Cushion assembly (Blue) with light blue piping	AHA5032		2	2						
14	Cushion assembly (Black) with yellow piping	AHA5033		2	2						
15	Cushion assembly (Green) with green piping	AHA5034		2	2						
16	Cover assembly—cushion (Cherry Red)—with white piping	AHA5035		2	2						
17	Cover assembly—cushion (Blue)—with light blue piping	AHA5037		2	2						
18	Cover assembly—cushion (Black)—with yellow piping	AHA5038		2	2						
19	Cover assembly—cushion (Green)—with green piping	AHA5039		2	2						
20	Clip—trim	14A4497	2	36	36						
21	**Frame assembly—seat base**	**14A4778**	**4**	**2**	**2**						
22	Seat runner (top) and handle	14A5519	5	1							
23	Seat runner (top) and handle	14A5520			1						
24	Seat runner (top) less handle	4G877	6	1	1						
25	Seat runner (bottom)	4G878	7	2	2						
26	Packing—driver's seat runner	AHA5223	8	2	2						
27	Screw—bottom runner to floor	HZS0409		4	4						
28	Washer for screw (plain)	PWZ104		4	4	12					
29	Washer for screw (spring)	LWZ204		4	4						
30	Screw—top runner to seat	CMZ0410		4	4						
31	Washer for screw (spring)	LWZ204		4	4						
32	Nut for screw	FNZ104		4	4						
33	Bracket support (passenger's seat)	14A4860	9	4	4						
34	Screw—bracket to floor	HZS0406		4	4						
35	Washer for screw (plain)	PWZ104		4	4	12					
36	Washer for screw (spring)	LWZ204		4	4						
37	Screw—bracket to seat	HZS0405		8	8						
38	Washer for screw (spring)	LWZ205		8	8	24					
39	Nut for screw	FNZ104		8	8						

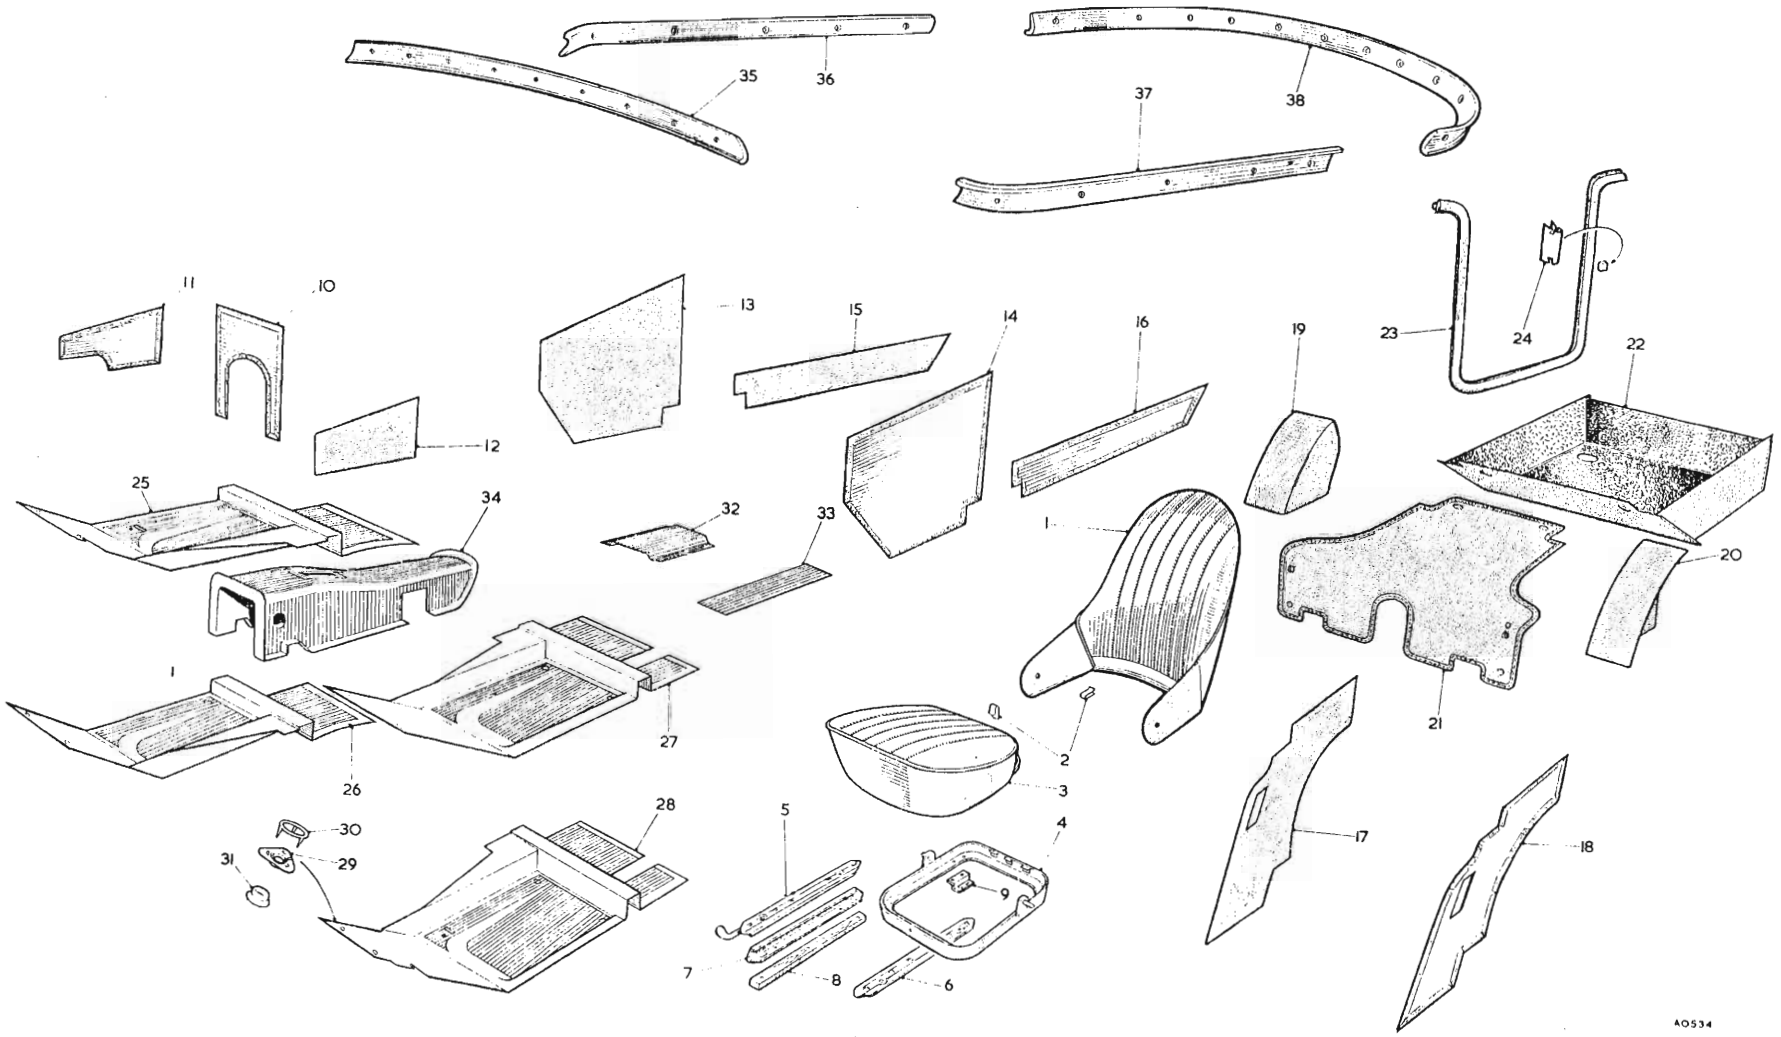

35
36
37
38
11
10
13
15
14
16
19
23
24
22
12
25
34
32
33
1
20
27
2
21
26
3
28
30
5
4
31
29
17
18
9
7
8
6
A0534

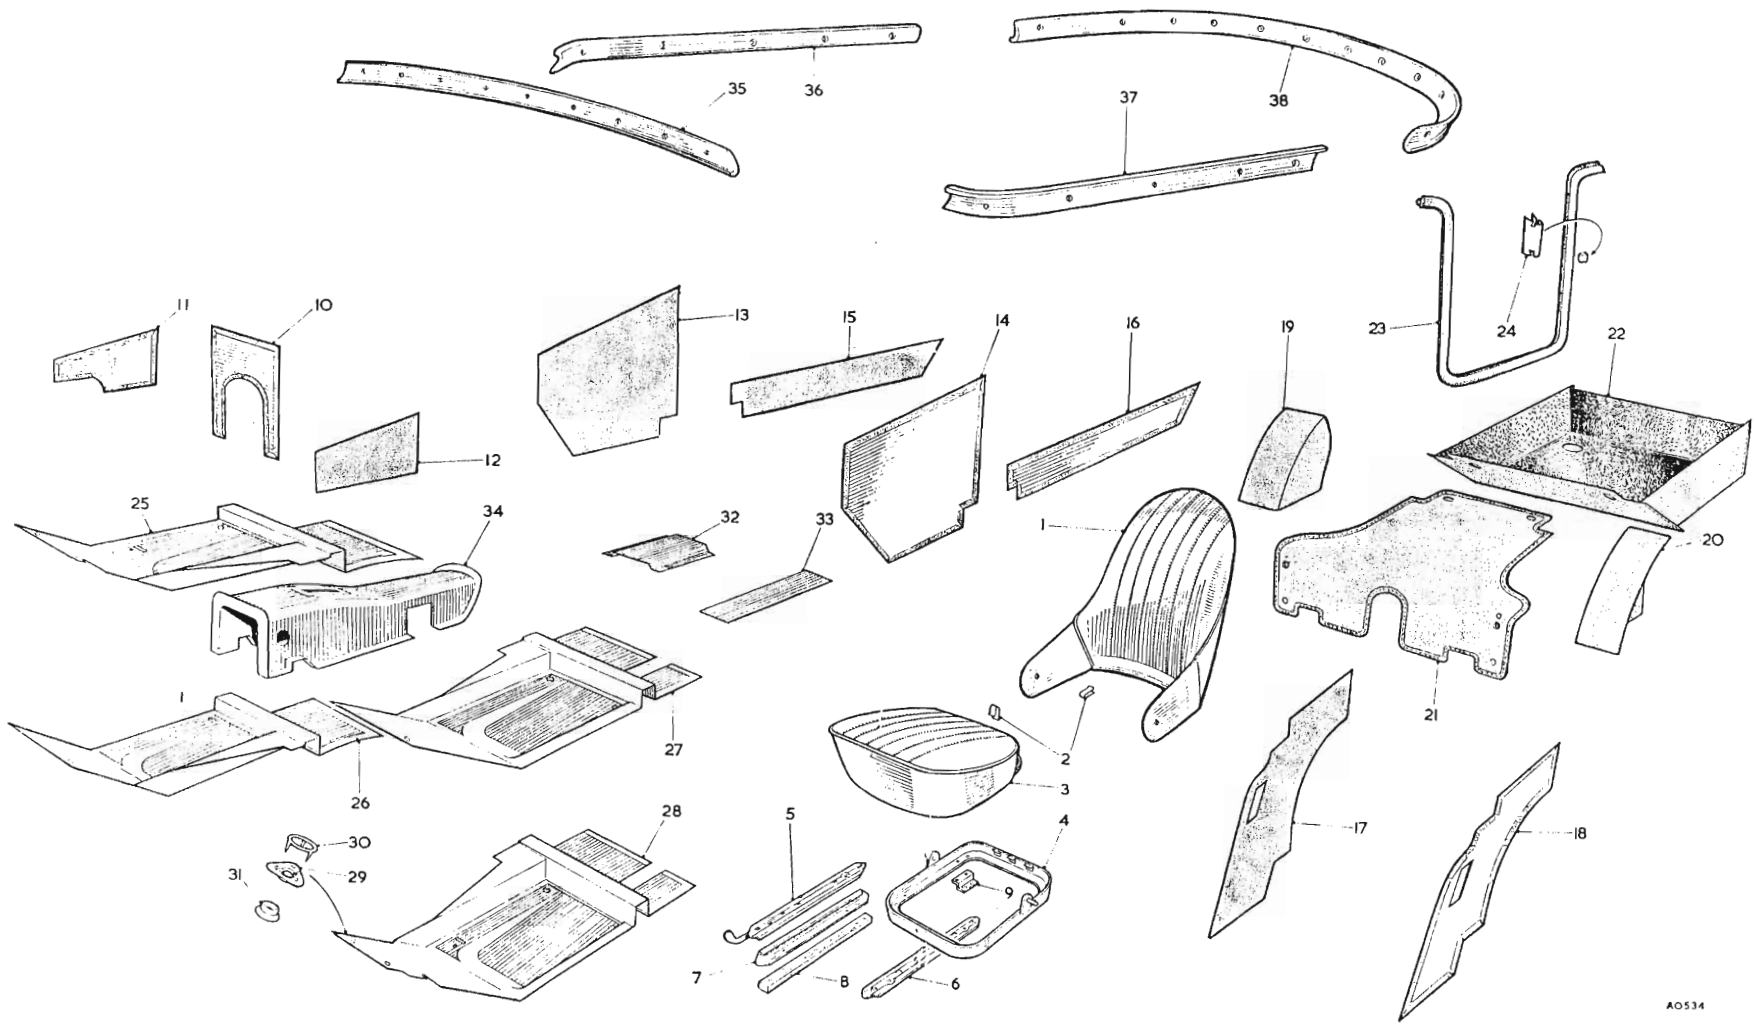


To face page R.11

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Commencing (C) 501 Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	TRIMMING										
1	**Liner assembly—engine front (Cherry Red)**	**AHA5090**	**10**	**1**	**1**						
2	Liner assembly—engine front (Blue)	AHA5092		1	1						
3	Liner assembly—engine front (Black)	AHA5093		1	1						
4	Liner assembly—engine front (Green)	AHA5094		1	1						
5	**Liner assembly—engine side—R/H (Cherry Red)**	**AHA5201**	**11**	**1**	**1**						
6	Liner assembly—engine side—R/H (Blue)	AHA5202		1	1						
7	Liner assembly—engine side—R/H (Black)	AHA5203		1	1						
8	Liner assembly—engine side—R/H (Green)	AHA5204		1	1						
9	**Liner assembly—engine side—L/H (Cherry Red)**	**AHA5205**	**12**	**1**	**1**						
10	Liner assembly—engine side—L/H (Blue)	AHA5206		1	1						
11	Liner assembly—engine side—L/H (Black)	AHA5207		1	1						
12	Liner assembly—engine side—L/H (Green)	AHA5208		1	1						
13	Screw for liner	RTZ606		6	6						
14	Washer for liner screw	7700		6	6						
15	**Liner assembly—scuttle—R/H (Cherry Red)**	**AHA5060**	**13**	**1**	**1**						
16	Liner assembly—scuttle—R/H (Blue)	AHA5062		1	1						
17	Liner assembly—scuttle—R/H (Black)	AHA5063		1	1						
18	Liner assembly—scuttle—R/H (Green)	AHA5064		1	1						
19	**Liner assembly—scuttle—L/H (Cherry Red)**	**AHA5065**	**14**	**1**	**1**						
20	Liner assembly—scuttle—L/H (Blue)	AHA5067		1	1						
21	Liner assembly—scuttle—L/H (Black)	AHA5068		1	1						
22	Liner assembly—scuttle—L/H (Green)	AHA5069		1	1						
23	Screw for liner	RTZ606		4	4						
24	Washer for liner screw	7700		4	4						
25	Screw for liner to 'A' post	CMZ0308		2	2						
26	Washer for liner screw	7698		2	2						
27	Washer for liner screw (spring)	LWZ203		2	2						
28	Nut for screw	FNZ103		2	2						
29	**Liner assembly—sill—R/H (Cherry Red)**	**AHA5100**	**15**	**1**	**1**						
30	Liner assembly—sill—R/H (Blue)	AHA5102		1	1						
31	Liner assembly—sill—R/H (Black)	AHA5103		1	1						
32	Liner assembly—sill—R/H (Green)	AHA5104		1	1						
33	Screw for liner	RTZ606		2	2						
34	Screw for liner	RTZ604		3	3						
35	Washer for liner screw	7700		5	5						
36	**Liner assembly—sill—L/H (Cherry Red)**	**AHA5105**	**16**	**1**	**1**						
37	Liner assembly—sill—L/H (Blue)	AHA5107		1	1						
38	Liner assembly—sill—L/H (Black)	AHA5108		1	1						
39	Liner assembly—sill—L/H (Green)	AHA5109		1	1						
40	Screw for liner	RTZ604		5	5						
41	Washer for liner screw	7700		5	5						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Trimming—*continued*										
1	**Liner assembly—rear quarter—R/H (Cherry Red)**	**AHA5070**	**17**	**1**	**1**						
2	Liner assembly—rear quarter—R/H (Blue)	AHA5072		1	1						
3	Liner assembly—rear quarter—R/H (Black)	AHA5073		1	1						
4	Liner assembly—rear quarter—R/H (Green)	AHA5074		1	1						
5	Screw for liner	RTZ606		3	3						
6	Screw for liner	RTZ604		3	3						
7	Washer for liner screw	7700		6	6						
8	**Liner assembly—rear quarter—L/H (Cherry Red)**	**AHA5075**	**18**	**1**	**1**						
9	Liner assembly—rear quarter—L/H (Blue)	AHA5077		1	1						
10	Liner assembly—rear quarter—L/H (Black)	AHA5078		1	1						
11	Liner assembly—rear quarter—L/H (Green)	AHA5079		1	1						
12	Screw for liner	RTZ604		5	5						
13	Screw for liner	RTZ606		1	1						
14	Washer for liner screw	7700		6	6						
15	**Liner assembly—wheel arch—R/H (Cherry Red)**	**AHA5080**	**19**	**1**	**1**			**AHA5371**	]		
16	Liner assembly—wheel arch—R/H (Blue)	AHA5082		1	1			AHA5372	]		
17	Liner assembly—wheel arch—R/H (Black)	AHA5083		1	1			AHA5373	]		
18	Liner assembly—wheel arch—R/H (Green)	AHA5084		1	1			AHA5374	]		
19	**Liner assembly—wheel arch—L/H (Cherry Red)**	**AHA5085**	**20**	**1**	**1**			**AHA5375**	]		
20	Liner assembly—wheel arch—L/H (Blue)	AHA5087		1	1			AHA5376	From (C) 4333 except		
21	Liner assembly—wheel arch—L/H (Black)	AHA5088		1	1			AHA5377	4471, 4622, 4680, 4684		
22	Liner assembly—wheel arch—L/H (Green)	AHA5089		1	1			AHA5378	]		
23	**Liner assembly—heelboard (Cherry Red)**	**AHA5110**	**21**	**1**	**1**			**AHA5379**	]		
24	Liner assembly—heelboard (Blue)	AHA5111		1	1			AHA5380	]		
25	Liner assembly—heelboard (Black)	AHA5112		1	1			AHA5381	]		
26	Liner assembly—heelboard (Green)	AHA5113		1	1			AHA5382	]		
27	Carpet fastener assembly	ADA2889		4	4						
28	Dot fastener—heelboard liner	99762		4/3	4/3						] Quantity reduced from (C) 4333 except 4471, 4672, 4680, 4684
29	Screw for fastener	CTZ604		4/3	4/3						
30	Washer for fastener screw	ADA2765		4/3	4/3						
31	**Liner assembly—boot floor (Cherry Red)**	**AHA5114**	**22**	**1**	**1**			**AHA5383**	]		
32	Liner assembly—boot floor (Blue)	AHA5115		1	1			AHA5384	From (C) 4333 except		
33	Liner assembly—boot floor (Black)	AHA5116		1	1			AHA5385	4471, 4622, 4680, 4684		
34	Liner assembly—boot floor (Green)	AHA5117		1	1			AHA5386	]		
35	Carpet fastener assembly	ADA2889		4	4						
36	Dot fastener—boot floor liner	99762		4/3	4/3						] Quantity reduced from (C) 4333 except 4471, 4672, 4680, 4684
37	Screw for fastener	CTZ604		4/3	4/3						
38	Washer for fastener screw	ADA2765		4/3	4/3						

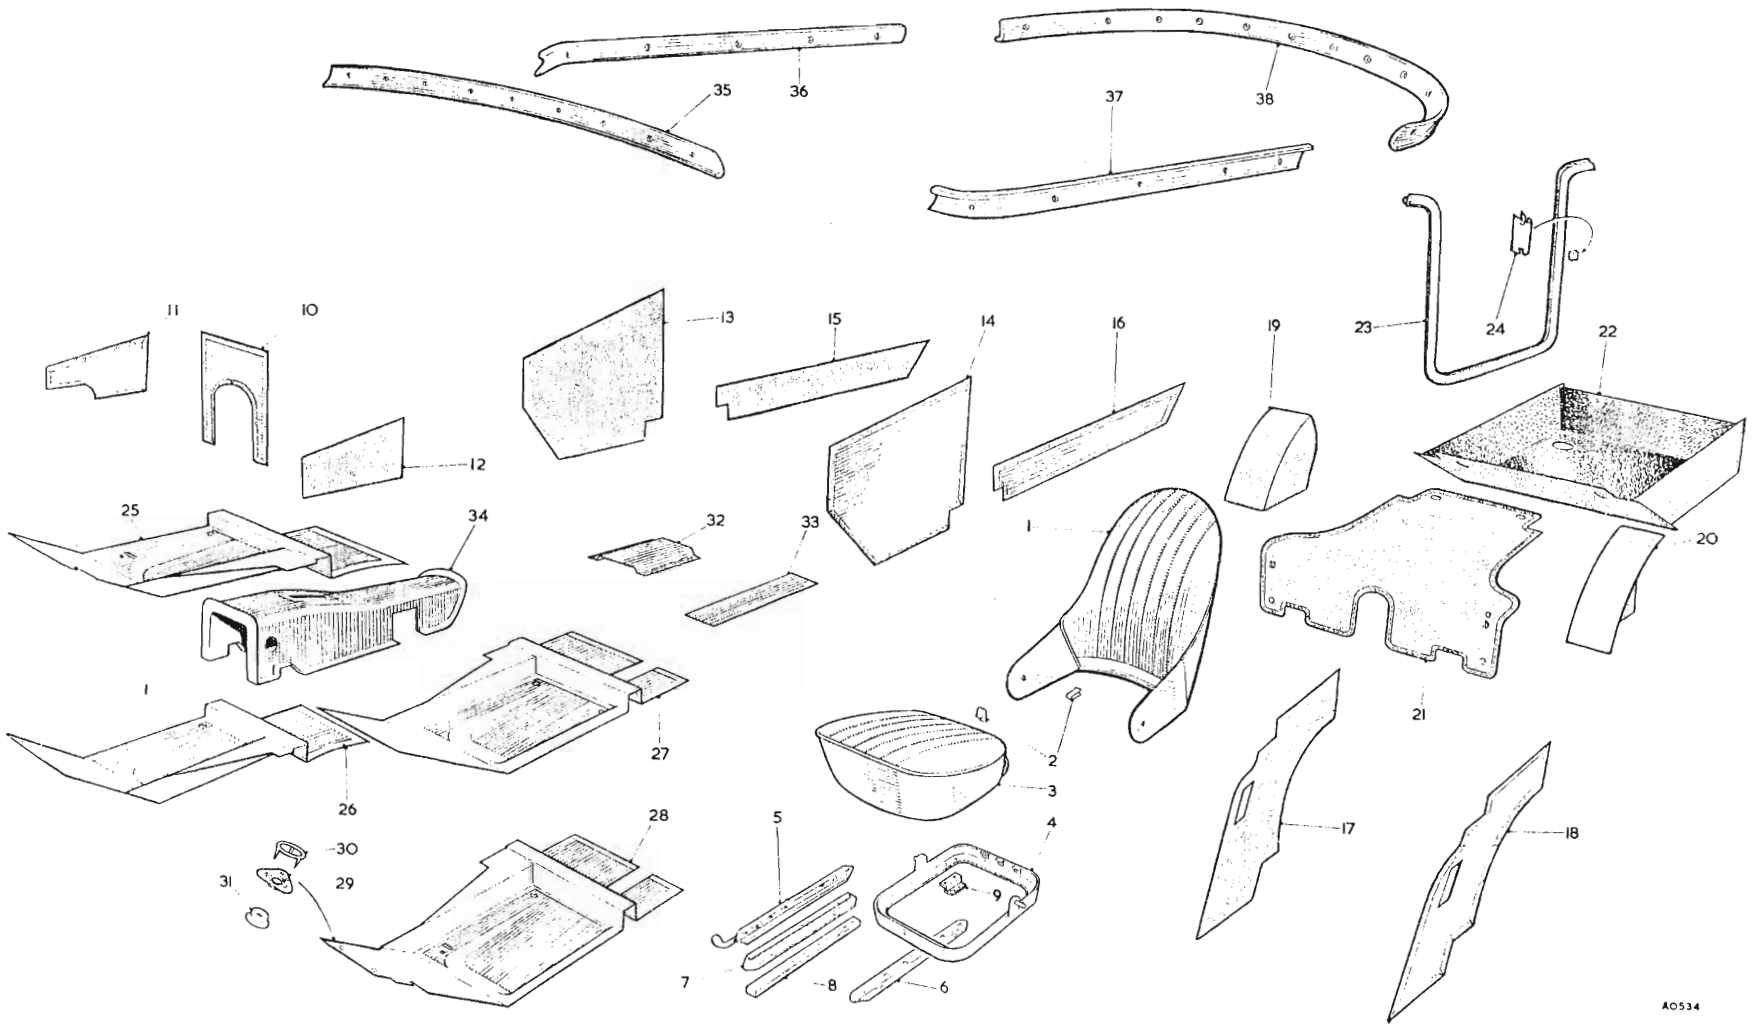


To face page R.12

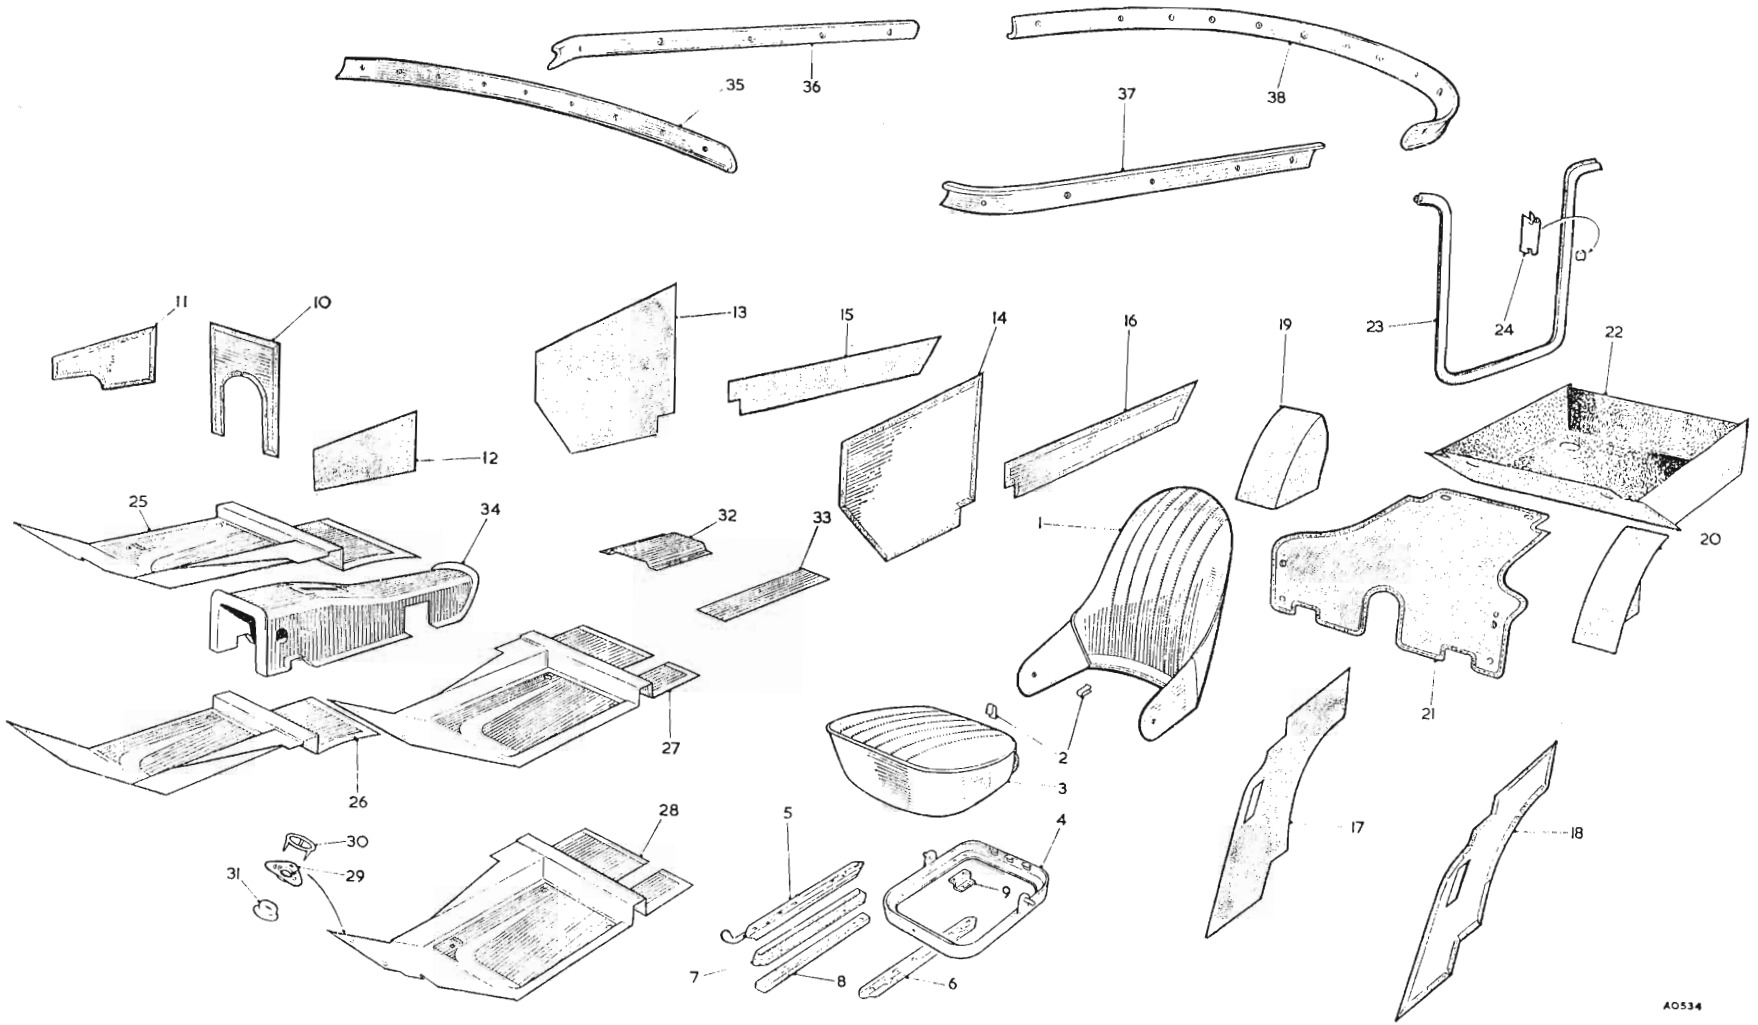


To face page R.13

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	DRAUGHT EXCLUDERS										
1	**Draught excluder—door (Cherry Red)**	**AHA5118**	**23**	**2**	**2**						
2	Draught excluder—door (Blue)	AHA5119		2	2						
3	Draught excluder—door (Black)	AHA5120		2	2						
4	Draught excluder—door (Green)	AHA5121		2	2						
5	Clip—draught excluder	14G5716	24	64	64						
6	Clip—draught excluder	PCR0709		2	2						
7	Washer for clip (plain)	PWZ103		2	2						
8	Screw—draught excluder to top rear of door	RTZ606		2	2						
9	Washer for screw	7700		2	2						
	FLOOR MATS										
10	**Mat assembly—front—R/H (Cherry Red)**	**AHA5130**	**25**	**1**							
11	Mat assembly—front—R/H (Blue)	AHA5131		1							
12	Mat assembly—front—R/H (Black)	AHA5132		1							
13	Mat assembly—front—R/H (Green)	AHA5133		1							
14	**Mat assembly—front—R/H (Cherry Red)**	**AHA5240**	**26**		**1**						
15	Mat assembly—front—R/H (Blue)	AHA5241			1						
16	Mat assembly—front—R/H (Black)	AHA5242			1						
17	Mat assembly—front—R/H (Green)	AHA5243			1						
18	**Mat assembly—front—L/H (Cherry Red)**	**AHA5134**	**27**	**1**							
19	Mat assembly—front—L/H (Blue)	AHA5135		1							
20	Mat assembly—front—L/H (Black)	AHA5136		1							
21	Mat assembly—front—L/H (Green)	AHA5137		1							
22	**Mat assembly—front—L/H (Cherry Red)**	**AHA5244**	**28**		**1**						
23	Mat assembly—front—L/H (Blue)	AHA5245			1						
24	Mat assembly—front—L/H (Black)	AHA5246			1						
25	Mat assembly—front—L/H (Green)	AHA5247			1						
26	Fastener—mat	2H8445	29	14	14						
27	Ring for mat fastener	14G8736	30	14	14						
28	Dot fastener—mat	99762	31	14	14						
29	Screw for fastener	CTZ604		14	14						
30	Washer for fastener screw	ADA2765		14	14						
31	**Mat assembly—longitudinal member (Cherry Red)**	**AHA5248**	**32**	**2**	**2**						
32	Mat assembly—longitudinal member (Blue)	AHA5249		2	2						
33	Mat assembly—longitudinal member (Black)	AHA5250		2	2						
34	Mat assembly—longitudinal member (Green)	AHA5251		2	2						
35	**Cover—floor—side (Cherry Red)**	**AHA5259**	**33**	**2**	**2**						
36	Cover—floor—side (Blue)	AHA5260		2	2						
37	Cover—floor—side (Black)	AHA5261		2	2						
38	Cover—floor—side (Green)	AHA5262		2	2						
39	**Mat assembly—gearbox and tunnel (Cherry Red)**	**AHA5138**	**34**	**1**	**1**						
40	Mat assembly—gearbox and tunnel (Blue)	AHA5139		1	1						
41	Mat assembly—gearbox and tunnel (Black)	AHA5140		1	1						
42	Mat assembly—gearbox and tunnel (Green)	AHA5141		1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	MOULDINGS										
1	**Finisher—scuttle top**	**14A4820**	**35**	**1**	**1**						
2	Screw—finisher to scuttle	RMZ0310		7	7						
3	Screw—finisher to scuttle	RMZ0312		2	2						
4	Lock washer for finisher screw (shakeproof)	53K3464		9	9						
5	Nut for screw	FNZ103		9	9						
6	**Finisher—door top (R/H)**	**14A4821**	**36**	**1**	**1**			**AHA5268**	**From (C) 1606**		
7	**Finisher—door top (L/H)**	**14A4822**	**37**	**1**	**1**			**AHA5269**			
8	Screw—finisher to door top	RMZ0310		6	6						
9	Lock washer for finisher screw (shakeproof)	53K3464		6	6						
10	Nut for screw	FNZ103		6	6						
11	**Finisher—cockpit rear**	**14A4823**	**38**	**1**	**1**						
12	Screw—finisher to cockpit rear	RMZ0310		9	9						
13	Screw—finisher to cockpit rear	RMZ0312		2	2						
14	Lock washer for finisher screw (shakeproof)	53K3464		11	11						
15	Nut for screw	FNZ103		11	11						

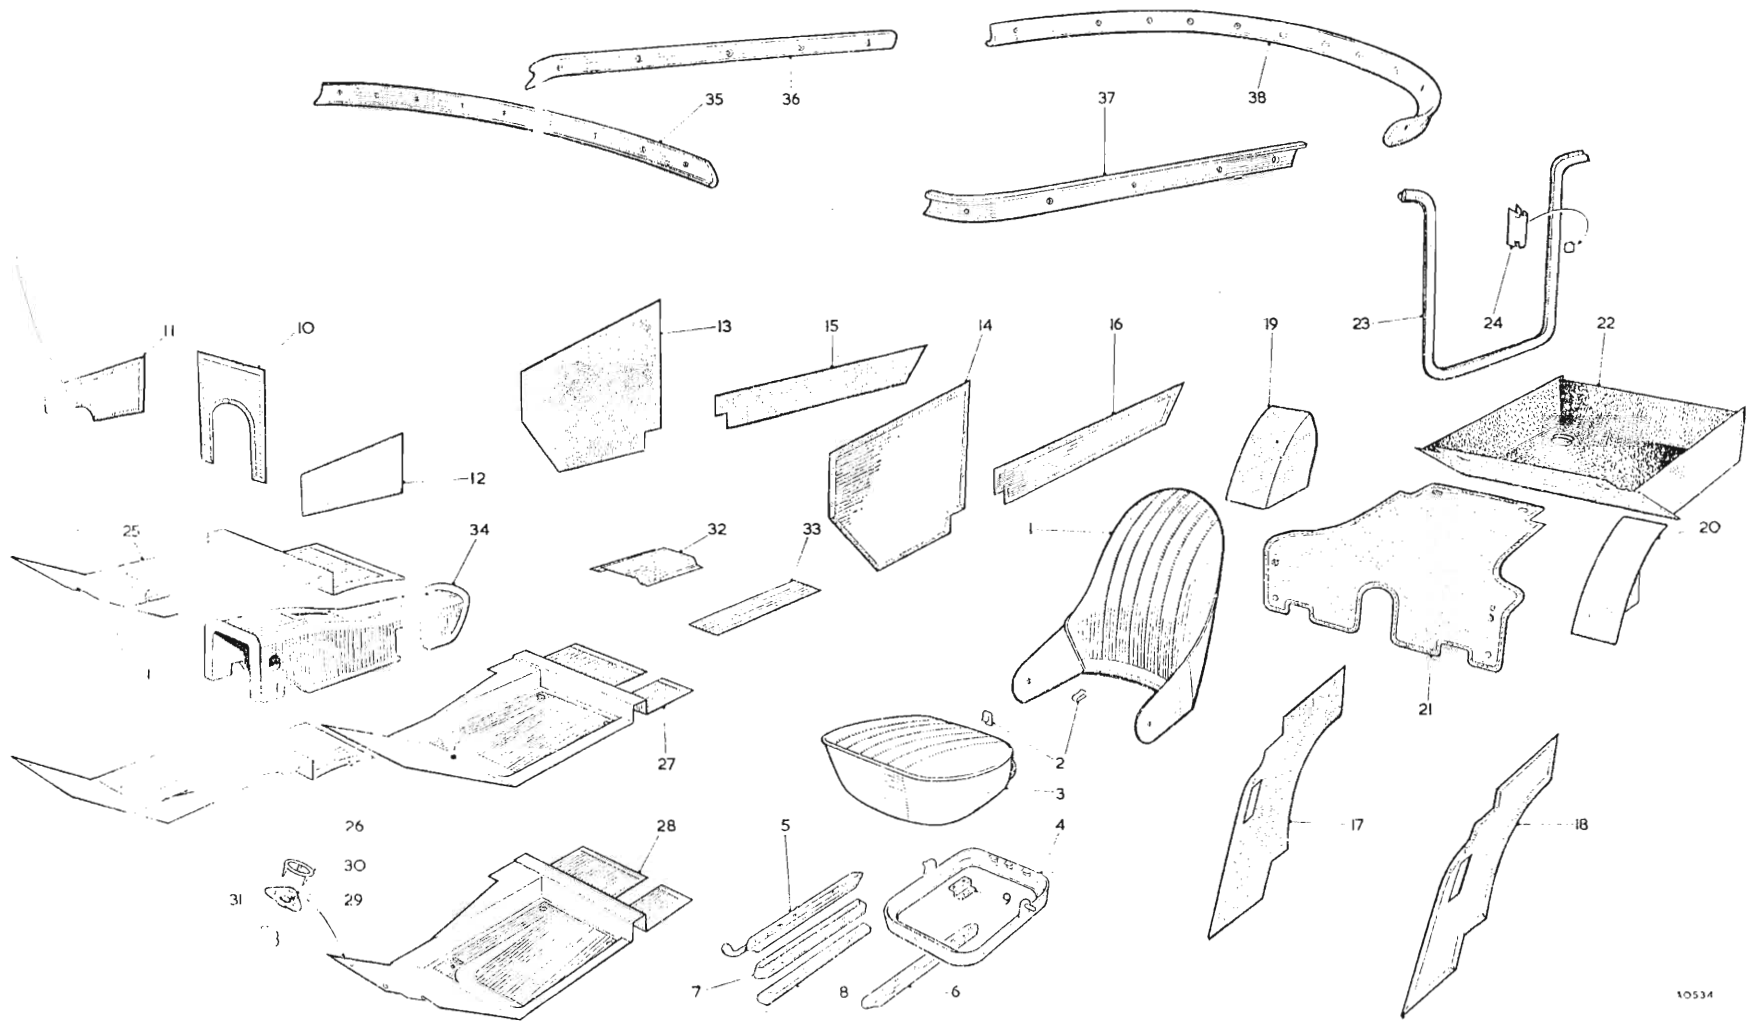


To face page R.14

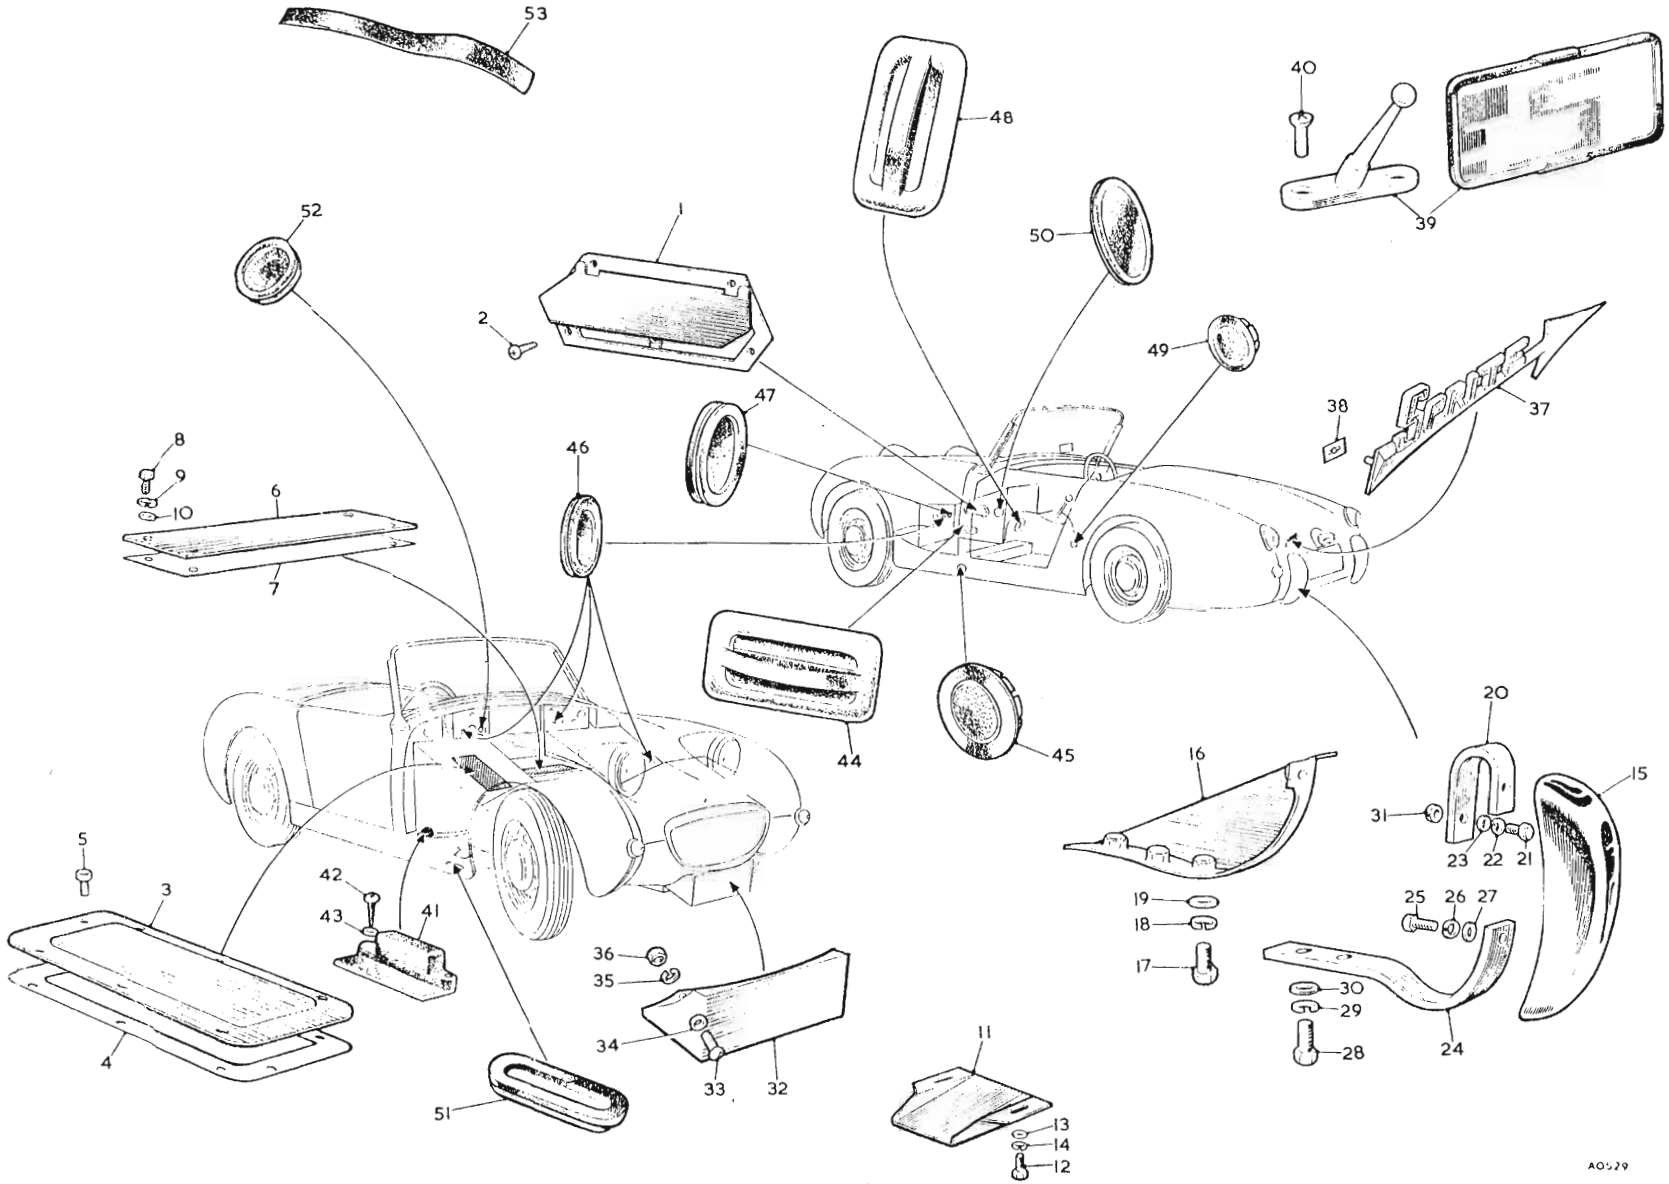

To face page R.15

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SUNDRIES										
1	**Door assembly—heater outlet**	**13H59**	**1**	2	2						
2	Screw—outlet door to foot-well side	PTZ603	2	8	8						
3	Plate—cover—foot-well	2A5589	3	1	1						
4	Washer for cover-plate (joint)	2A5549	4	1	1						
5	Screw—plate to foot-well	HZS0405	5	8	8						
6	Plate—blanking—heater platform	14A4790	6	1	1						Not required when heater or fresh-air unit is fitted
7	Sealer—blanking plate	14A4791	7	1	1						
8	Screw—blanking plate fixing	PMZ0408	8	4	4						
9	Washer for blanking plate screw (spring)	LWZ204	9	4	4						
10	Washer for blanking plate screw (plain)	PWZ204	10	4	4						
11	Plate—cover—engine undershield (R/H)	AHA5210	11	1	1						
12	Screw—plate fixing	PMZ0408	12	2	2						
13	Washer for screw (plain)	PWZ104	13	2	2	12					
14	Washer for screw (spring)	LWZ204	14	2	2						
15	**Over-rider assembly**	**14A4734**	**15**	2	2						
16	Bracket—over-rider (internal)	14A3411	16	2	2						
17	Screw—bracket to luggage floor	HZS0504	17	2	2						
18	Washer for screw (spring)	LWZ205	18	2	2	24					
19	Washer for screw (plain)	PWZ105	19	2	2						
20	Bracket—fixing—over-rider (upper)	14A4738	20	2	2						
21	Screw—bracket to internal bracket	HZS0507	21	2	2						
22	Washer for screw (spring)	LWZ205	22	2	2	24					
23	Washer for screw (plain)	PWZ105	23	2	2						
24	Bracket—fixing—over-rider (lower)	14A4739	24	2	2						
25	Screw—bracket to internal bracket	HZS0506	25	4	4						
26	Washer for screw (spring)	LWZ205	26	4	4	24					
27	Washer for screw (plain)	PWZ105	27	4	4						
28	Screw—over-rider to brackets	HZS0506	28	4	4						
29	Washer for screw (spring)	LWZ205	29	4	4	24					
30	Washer for screw (plain)	PWZ105	30	4	4						
31	Washer—upper bracket to body (rubber)	2K9679	31	2	2						
32	**Plate—number (front)**	**14A4659**	**32**	1	1						**Not required when bumper is fitted**
33	Screw—plate fixing	PMZ0306	33	4	4						
34	Washer for screw (plain)	PWZ203	34	4	4						
35	Washer for screw (spring)	LWZ203	35	4	4						
36	Nut for screw	FNZ103	36	4	4						
37	**Flash (Sprite)**	**14A4859**	**37**	1	1						
38	Push-on fix—flash to back panel	PFS104	38	2	2						
39	**Mirror—interior—rear view**	**14A5473**	**39**	1	1						
40	Glass	27H9782		1	1						
41	Bracket—fixing	27H9781		1	1						
42	Screw—mirror to scuttle top	RMP0308	40	2	2						

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	PAU No.	
	Sundries—*continued*										
1	Buffer (rubber)	14A4874	41	4	4						
2	Screw—buffer to sill panel	PTZ605	42	8	8						
3	Washer for buffer screw (plain)	PWZ102	43	8	8						
4	Plug—toe-box side—R/H (rubber)	4G4920	44	1	1						
5	Plug—sill outer panel (rubber)	2H8198	45	2	2						
6	Plug—dash blanking (rubber)	RFN210	46	2	2						Not required when tachometer is fitted
7	Plug—foot-well blanking (rubber)	RFN210	46	2	2						
8	Plug—steering column hole blanking (rubber)	RFN218	47	1	1						
9	Plug—blanking—gearbox filler hole (rubber)	4G4920	48	1	1						
10	Plug—blanking—propeller shaft oiling hole (rubber)	4G1851	49	1	1						
11	Grommet—blanking—demister outlet hole	4G9763	50	2	2						
12	Grommet—blanking—slinging hole in main floor	4G6957	51	2	2						
13	Grommet—heater control blanking	4G2541	52	1	1						To be pierced when heater is fitted
14	Ferrule—blanking tool hole in rear crossmember panel ($\frac{3}{8}$")			2	2			RFN206	From (C) 5321		
15	Prestik sealer ($\frac{1}{2}$" × $\frac{1}{16}$")	ADE1596	53	A/R	A/R						
16	Prestik sealer ($\frac{1}{8}$" dia.)	ADE1600		A/R	A/R						
17	Seal-a-strip ($\frac{1}{8}$" dia.)	ADE1584		A/R	A/R						

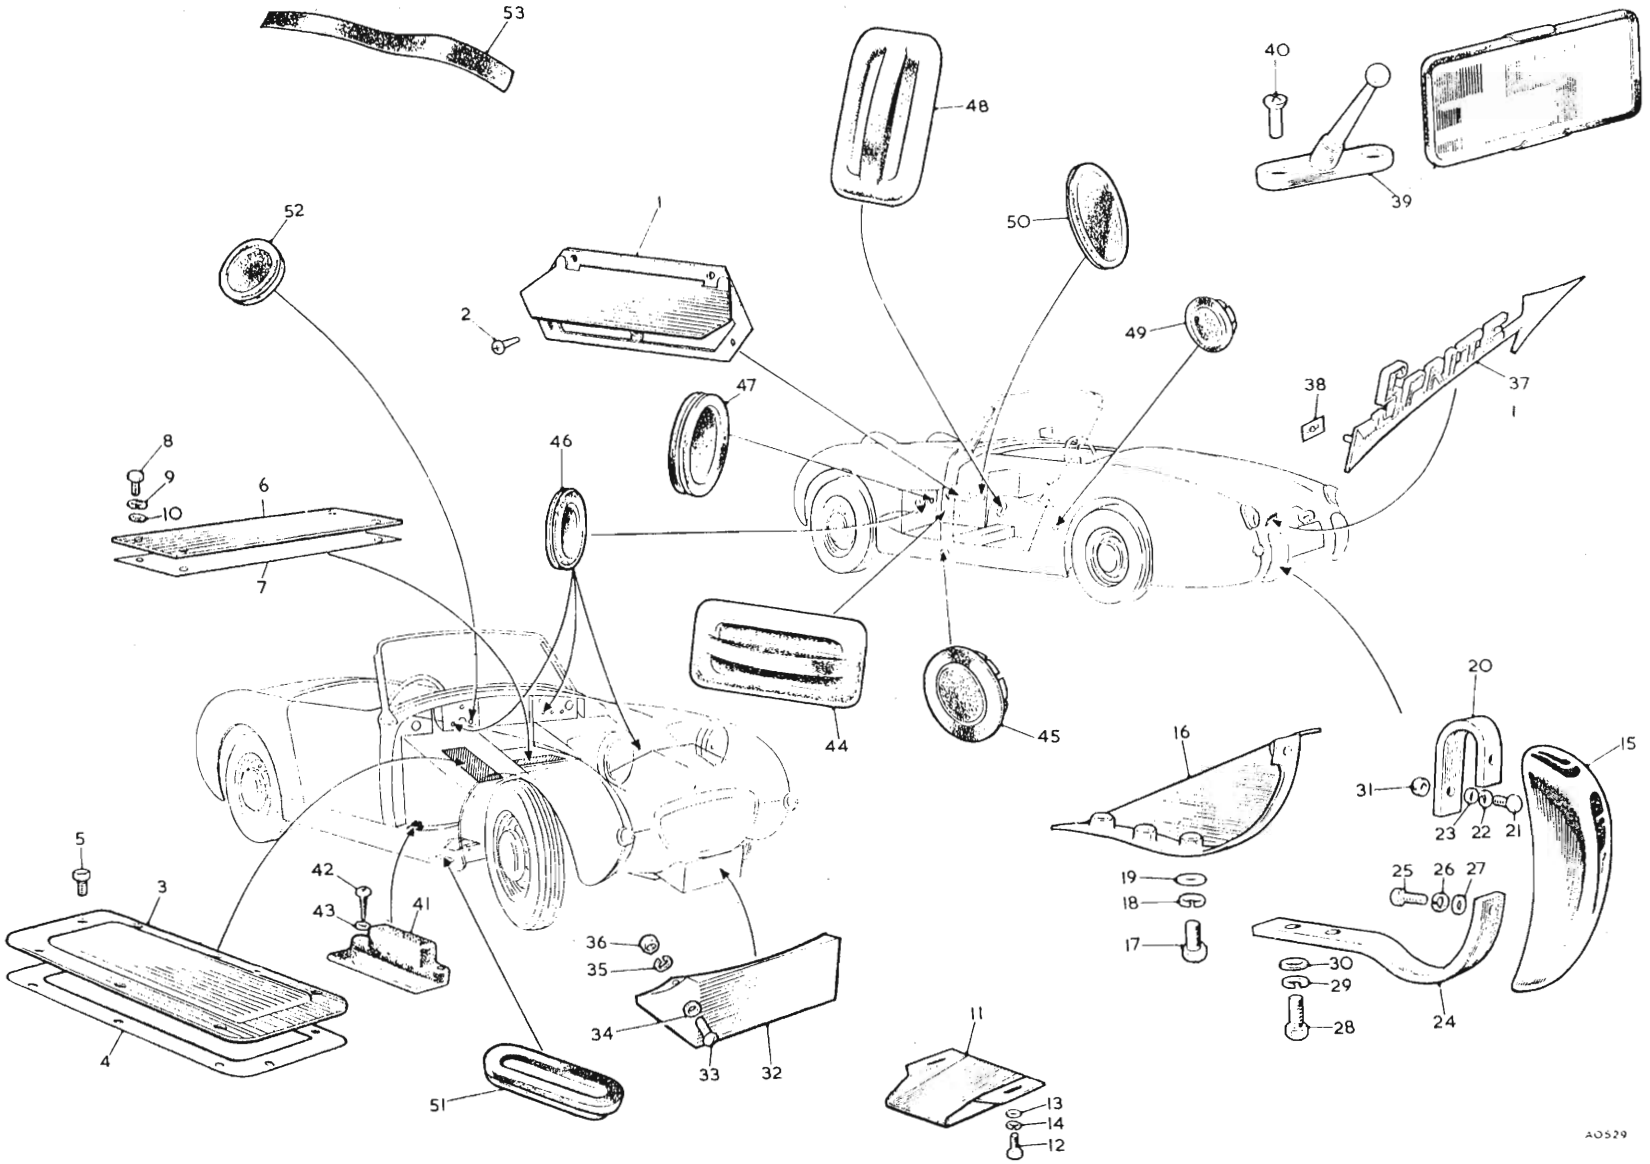


To face page R.16

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	TOOL KIT										
1	**Jack—lifting**	**2A5472**		**1**	**1**						
2	Spanner—ratchet—jack	2A5627		1	1						
3	Pump—tyre	3H2274		1	1						
4	Gun—grease	13H50		1	1						
5	Brace—wheel	2A5626		1	1						
6	Screwdriver and gauge—ignition	3H2648		1	1						
7	Spanner—tyre valve	2H1683		1	1						
8	Spanner—box—sparking plug	2A5379		1	1						
9	Gauge—feeler—tappet and sparking plug	2A5419		1	1						
10	Screwdriver	2H4614		1	1						
11	Bag—tool	2A5412		1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SPECIAL SERVICE TOOLS										
	ENGINE										
1	Reamer—camshaft liner **(Basic tool)**	18G123A		1	1						
2	Pilot—camshaft liner reamer (small)	18G123AJ		1	1						
3	Pilot—camshaft liner reamer (large)	18G123AH		1	1						
4	Cutter—camshaft liner reamer	18G123W		1	1						
5	Remover and replacer—camshaft liner **(Basic tool)**	18G124A		1	1						
6	Adaptor—camshaft liner remover	18G124K		1	1						
7	Remover—crankshaft gear and pulley	18G2		1	1						
8	Replacer—crankshaft gear and pulley	18G138		1	1						
9	Grinding-in tool—oil pump release valve	18G69		1	1						
10	Compressor—piston ring	18G55A		1	1						
11	Spanner—starting nut	18G98		1	1						
12	Remover and replacer—valve rocker bush	18G148		1	1						
13	Cutter—valve seat finishing	18G167		1	1						
14	Breaker—valve seat glaze	18G167A		1	1						
15	Cutter—top—valve seat narrowing	18G167B		1	1						
16	Cutter—bottom—valve seat narrowing	18G167C		1	1						
17	Pilot—valve seat cutter	18G167D		1	1						
18	Handle—valve seat cutter and pilot	18G27		1	1						
19	Compressor—valve spring	18G45		1	1						
20	Pad—suction—valve grinding-in tool	18G29B		1	1						
21	Adaptor—radiator reverse-flush	18G187		1	1						
	CLUTCH										
22	Clutch assembly gauging fixture	18G99A		1	1						
23	Plate centralizer	18G139		1	1						
	GEARBOX										
24	Synchromesh assembly ring	18G144		1	1						
25	Dummy layshaft	18G471		1	1						
26	Remover—oil seal **(Basic tool)**	18G389		1	1						
27	Adaptor—oil seal remover	18G389A		1	1						
28	Adaptor—oil seal replacer	18G134L		1	1						
29	Replacer—first motion shaft assembly	18G140		1	1						
30	Replacer—needle-roller bearing	18G194		1	1						
31	Clinching tool—oil seal—gearbox extension	18G488		1	1						
32	Replacer—bearing and oil seal	18G134		1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Special Service Tools—*continued*										
	REAR AXLE AND REAR SUSPENSION										
1	Gauge—bevel pinion setting	18G191		1	1						
2	Remover—bevel pinion bearing outer race **(Basic tool)**	18G264		1	1						
3	Adaptor—bevel pinion bearing outer race remover (front)	18G264E		1	1						
4	Adaptor—bevel pinion bearing outer race remover (rear)	18G264D		1	1						
5	Gauge—preload—bevel pinion bearing	18G207		1	1						
6	Remover and replacer—bevel pinion inner race	18G285		1	1						
7	Wrench—bevel pinion flange	18G34A		1	1						
8	Gauge—differential bearing	18G191A		1	1						
9	Remover—differential bearing **(Basic tool)**	18G47C		1	1						
10	Adaptor—differential bearing remover	18G47M		1	1						
11	Adaptor—rear hub replacer	18G134Q		1	1						
12	Remover—rear hub	18G146		1	1						
13	Replacer—rear hub bearing	18G4		1	1						
14	Replacer—bevel pinion and rear hub oil seal	18G14		1	1						
15	Spanner—rear hub nut	18G152		1	1						
16	Replacer—bearing and oil seal **(Basic tool)**	18G134		1	1						
	FRONT SUSPENSION										
17	Front suspension assembly fixture	18G253		1	1						
18	Remover—front hub	18G146		1	1						
19	Remover—front hub outer bearing	18G7		1	1						
20	Adaptor—front hub bearing inner race remover	18G8P		1	1						Use with 18G8
21	Remover—front hub bearing outer race **(Basic tool)**	18G260		1	1						
22	Adaptor—front hub bearing outer race remover	18G260A		1	1						
23	Adaptor—front hub bearing outer race remover	18G260B		1	1						
24	Adaptor—front hub outer bearing replacer	18G134B		1	1						
25	Adaptor—front hub inner bearing replacer	18G134C		1	1						
26	Remover and replacer—swivel axle bush	18G154		1	1						
27	Swivel axle broaching equipment	18G155		1	1						
28	Guide—swivel axle bush broach	18G155A		1	1						
29	Compressor—front suspension spring	18G153		1	1						
30	Replacer—bearing and oil seal **(Basic tool)**	18G134		1	1						
	STEERING										
31	Pin spanner—tie-rod	18G312		1	1						
32	'C' spanner—tie-rod	18G313		1	1						
	MISCELLANEOUS										
33	Wrench—torque	18G372		1	1						


Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	PAU No.	
	LITERATURE										
1	Service Parts List	AKD829		1	1						
2	Operation Manual	97H1583		1	1						
3	Workshop Manual	97H1585		1	1						
4	Price List	AKD693		1	1						
5	Schedule of Repair Charges (U.K.)	AKD876		1	1						
6	Schedule of Repair Times	AKD877		1	1						
7	Maintenance Service Voucher Booklet	97H1636		1	1						
8	Catalogue—B.M.C. Service Tools	AKD659		1	1						

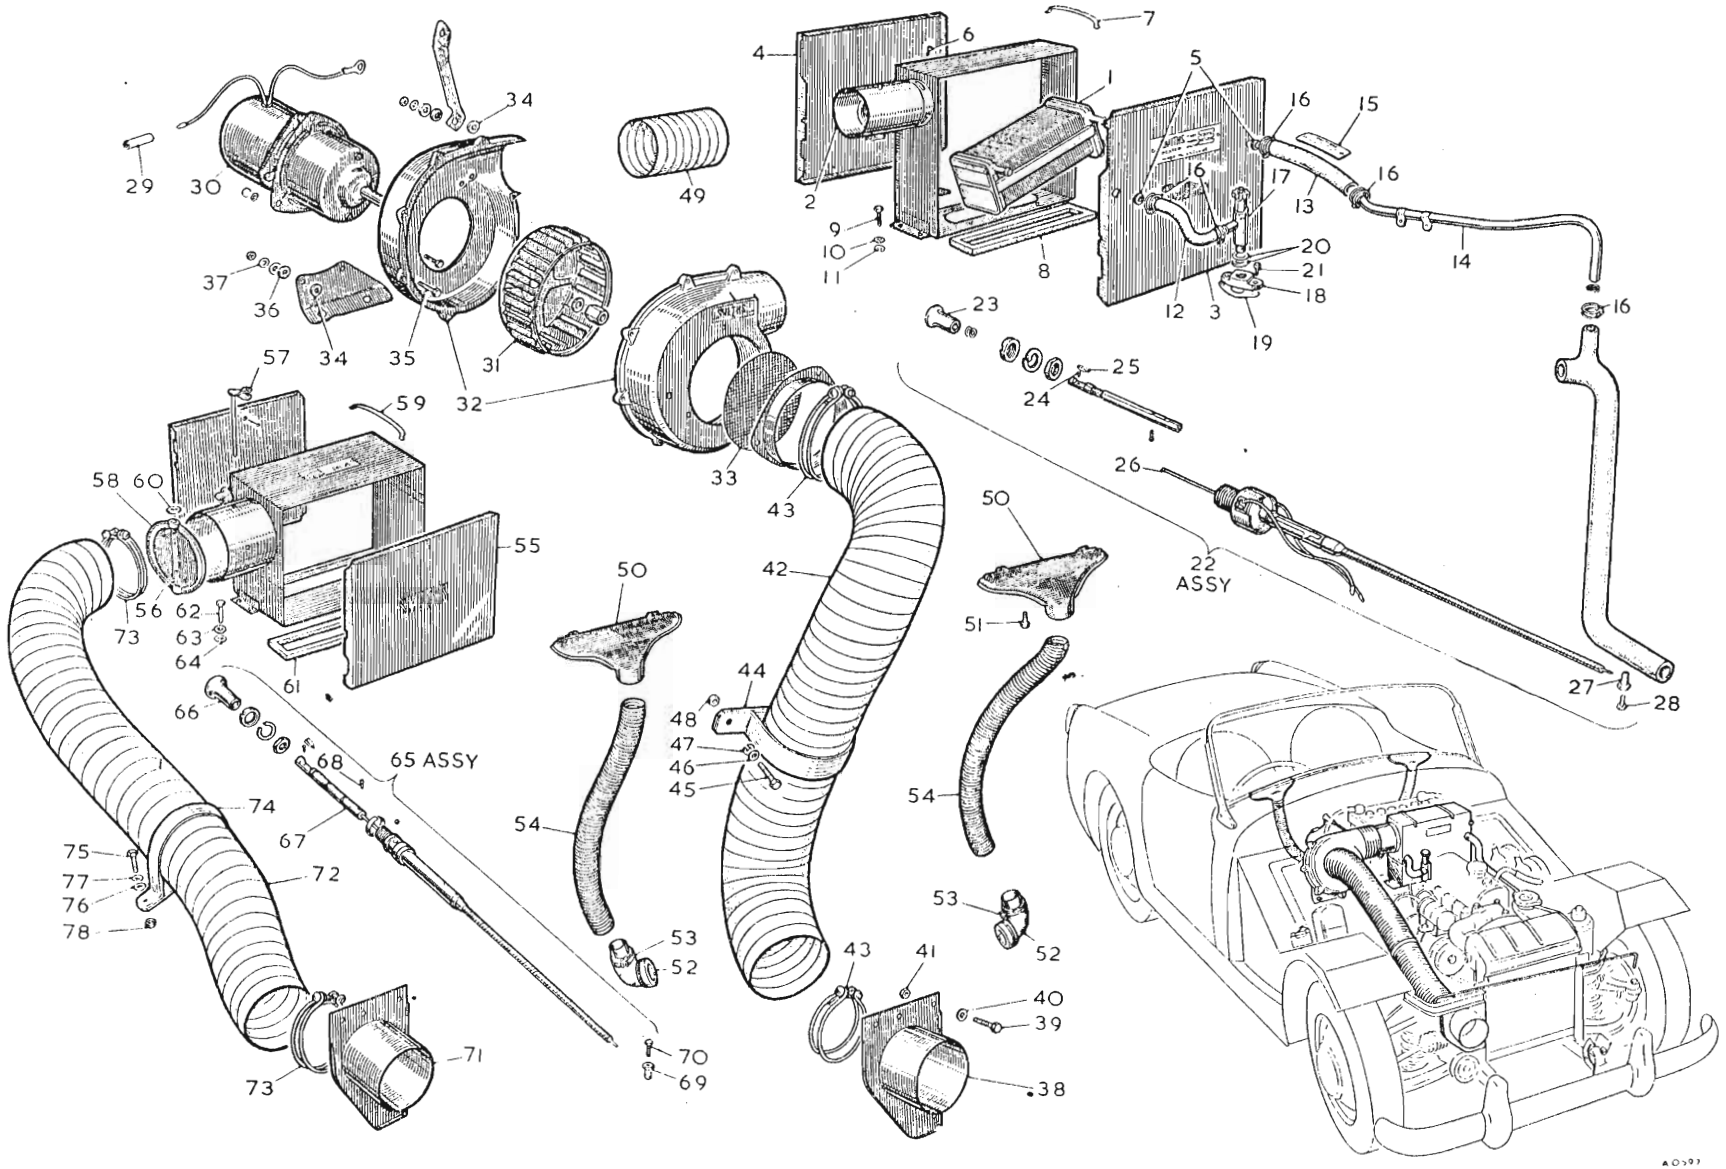


To face page S.5

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HEATING AND VENTILATING EQUIPMENT (Optional Extra)										
1	**Heater kit**	**8G9023**		**1**	**1**	**set**					
2	**Heater unit assembly**	**13H54**		**1**	**1**						
3	Radiator and seals	17H1590	1	1	1						
4	Tube—inlet	17H1592	2	1	1						
5	Plate (front)	17H1594	3	1	1						
6	Plate (rear)	17H1596	4	1	1						
7	Grommet	17H1591	5	2	2						
8	Screw	17H1593	6	3	3						
9	Clip	17H1595	7	10	10						
10	Seal—heater base	4B9713	8	1	1						
11	Screw—heater to platform	PMZ0408	9	4	4						
12	Washer for screw (plain)	PWZ104	10	4	4	12					
13	Washer for screw (spring)	LWZ204	11	4	4						
14	Hose—heater to control valve	AHA5213	12	1	1						
15	Hose—water outlet	AHA5212	13	1	1						
16	Cutter—hose	N.S.P.		1	1						For service purposes use 1 off 2A2084 hose—radiator to pump
17	Connector—adaptor—control tap	N.S.P.		1	1						
18	Hose—radiator hose to heater outlet pipe	N.S.P.		1	1						
19	Pipe—heater outlet to radiator	AHA5214	14	1	1						
20	Plate—heater instruction	4G6826	15	1	1						
21	Clip—hose	8G531	16	6	6						
22	**Tap—water control**	**17H1631**	**17**	**1**	**1**						
23	Plate—adaptor—control tap	ACA5456	18	1	1						
24	Joint—control tap to cylinder head	1G2342	19	1	1	12					
25	Washer for tap	2K5629	20	2	2						
26	Screw—tap to cylinder head	HZS0406	21	2	2						
27	**Switch assembly—heater**	**13H55**	**22**	**1**	**1**						
28	Knob	17H1602	23	1	1						
29	Pin for knob	17H1603	24	1	1						
30	Clip for knob	17H1601	25	1	1						
31	Cable (inner)	17H1599	26	1	1						
32	Trunnion	14G6451	27	1	1						
33	Screw—trunnion	AHH5593	28	1	1						
34	Trunnion—control cable	AHH5439		1	1						
35	Screw for trunnion	AHH5593		1	1						
36	Connector—snap (switch to blower)	17H1634	29	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Heating and Ventilating Equipment—*continued*										
1	**Blower assembly**	**13H51**		**1**	**1**						
2	Motor	17H1455	30	1	1						
3	Rotor	17H1598	31	1	1						
4	Casing	17H819	32	1	1						
5	Mesh—intake	17H1597	33	1	1						
6	Grommet	17H1292	34	3	3						
7	Screw—blower assembly to foot-well top	PMZ0408	35	3	3						
8	Washer for screw (plain)	PWZ104	36	3	3	12					
9	Washer for screw (spring)	LWZ204	37	3	3						
10	**Plate—inlet flange**	**14A4763**	**38**	**1**	**1**						
11	Screw—plate to radiator and wheel arch bracket	PMZ0408	39	1	1						
12	Washer for screw (plain)	PWZ104	40	1	1	12					
13	Nut for screw	FNZ104	41	1	1						
14	**Hose—blower to inlet flange**	**13H53**	**42**	**1**	**1**						
15	Clip—hose to blower and inlet flange	14G800	43	2	2						
16	Clip—hose to wheel arch inner	14B1917	44	1	1						
17	Screw—clip to wheel arch inner	PMZ0310	45	1	1						
18	Washer for screw (plain)	PWZ103	46	1	1						
19	Washer for screw (spring)	LWZ203	47	1	1						
20	Nut for screw	FNZ103	48	1	1						
21	Hose—heater to blower	14A4762	49	1	1						
22	**Nozzle assembly—demister**	**14A1162**	**50**	**2**	**2**						
23	Screw—nozzle to scuttle	PTP603	51	4	4						
24	**Elbow—demister**	**14G3499**	**52**	**2**	**2**						
25	Clip—demister hose	27H168	53	2	2						
26	Hose—demister	14A4766	54	2	2						

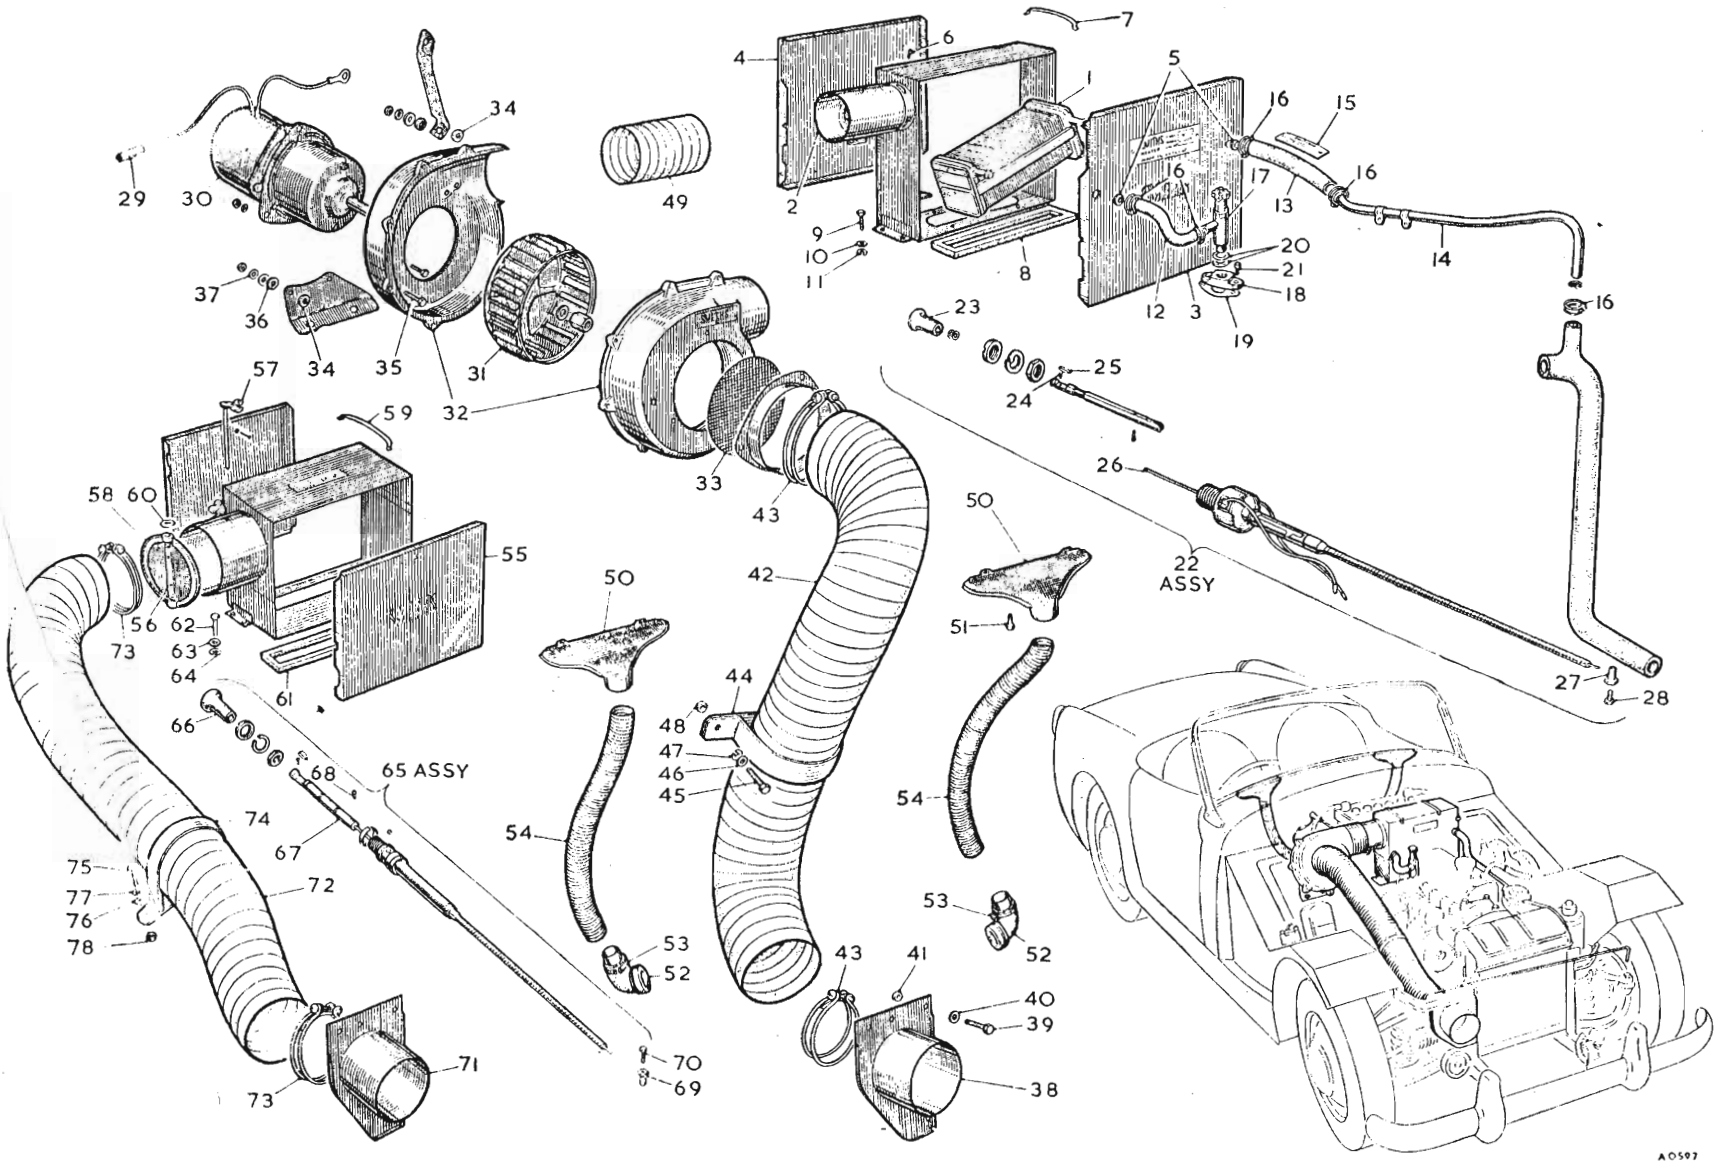

To face page S.6

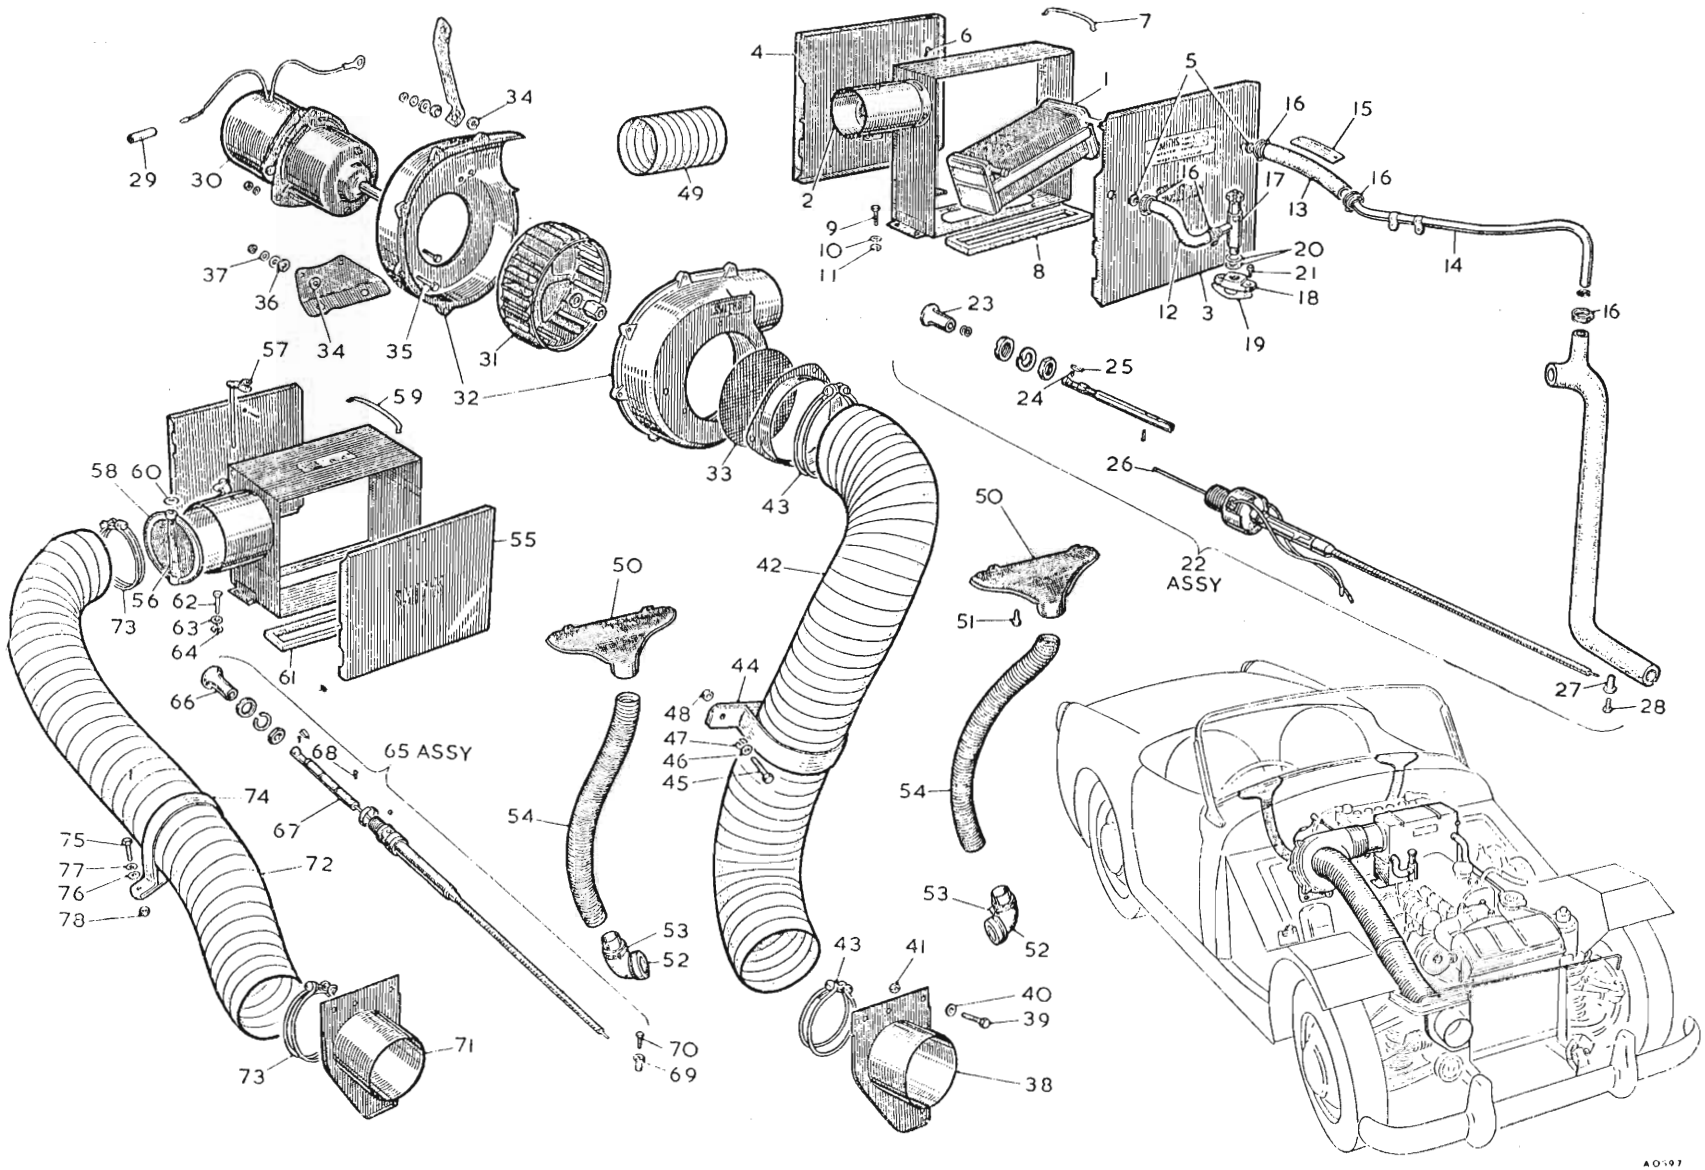

To face page S.7

FRESH AIR UNIT


(Optional Extra)

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Fresh-air unit kit**	**8G9024**		1	1	**set**					
2	**Fresh-air unit assembly**	**13H56**		1	1						
3	Cover—side	17H1604	55	1	1						
4	Plate—valve flap	17H1606	56	1	1						
5	Lever arm and spindle	17H1609	57	1	1						
6	Grommet for seal	17H1607	58	1	1						
7	Clip	17H1605	59	4	4						
8	Washer	17H1608	60	2	2						
9	Seal—base	4B9713	61	1	1						
10	Screw—fresh-air unit to platform	PMZ0408	62	4	4	12					
11	Washer for screw (plain)	PWZ104	63	4	4						
12	Washer for screw (spring)	LWZ204	64	4	4						
13	**Control assembly—push-pull**	**13H57**	**65**	1	1						
14	Knob	17H1612	66	1	1						
15	Spindle	17H1610	67	1	1						
16	Screw	17H1611	68	1	1						
17	Trunnion	AHH5439	69	1	1						
18	Screw for trunnion	AHH5593	70	1	1						
19	Trunnion—control cable	14G6451		1	1						
20	Screw for trunnion	AHH5593		1	1						
21	**Plate—inlet flange**	**14A4763**	**71**	1	1						
22	Screw—plate to radiator and wheel arch bracket	PMZ0408		1	1						
23	Washer for screw (plain)	PWZ104		1	1	12					
24	Nut for screw	FNZ104		1	1						
25	**Hose—fresh-air unit to inlet flange**	**13H58**	**72**	1	1						
26	Clip—hose to fresh-air unit and inlet flange	14G800	73	2	2						
27	Clip—hose to wheel arch inner	14B1917	74	1	1						
28	Screw—clip to wheel arch inner	PMZ0310	75	1	1						
29	Washer for screw (plain)	PWZ103	76	1	1						
30	Washer for screw (spring)	LWZ203	77	1	1						
31	Nut for screw	FNZ103	78	1	1						


WINDSCREEN WASHER

(Optional Extra)

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty per Vehicle RHD	Qty per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Screen washer kit (Trafalgar type)**	**N.S.P.**		1	1	set					**Single-jet mounting**
2	Container—liquid	17H579	1	1	1						
3	Cap and tube assembly	27H9662	2	1	1						
4	Bracket—container	14A5530	3	1	1						
5	Pump assembly	17H577	4	1	1						
6	Tube—suction	14A5531	5	1	1						
7	Tube—delivery	14A5532	6	1	1						
8	**Jet assembly—delivery**	**17H578**	**7**	1	1						
9	**Screen washer kit (Tudor type)**	**AHA5220**		1	1	set					**Twin-jet mountings**
10	Container—liquid	7H9779	8	1	1						
11	Cap assembly—container	7H9785	9	1	1						
12	Bracket—container	27H9657	10	1	1						
13	**Mounting assembly—jet**	**27H9622**	**11**	2	2						
14	Jet	27H9623	12	2	2						
15	**Control assembly**	**27H9654**	**13**	1	1						
16	Knob	27H9625	14	1	1						
17	Bulb (rubber)	27H9626	15	1	1						
18	Washer (shakeproof)	7H9782	16	1	1						
19	Nut	27H9655	17	2	2						
20	Clip—water supply pipe	PCR0309	18	1	1						
21	Clip—water supply pipe	PCR0307	19	2	2						
22	Screw—clip to front wheel arch	PMZ0306	20	2	2						
23	Washer for screw (spring)	LWZ203	21	2	2						
24	Nut for screw	FNZ103	22	2	2						
25	Screw—container bracket to wheel arch	HZS0408	23	1	1						
26	Nut for screw	FNZ104	24	1	1						
27	Screw—container bracket to wheel arch and radiator support	HZS0404	25	1	1						
28	Washer for screw (spring)	LWZ204	26	1	1						
29	Nut for screw	FNZ104	27	1	1						

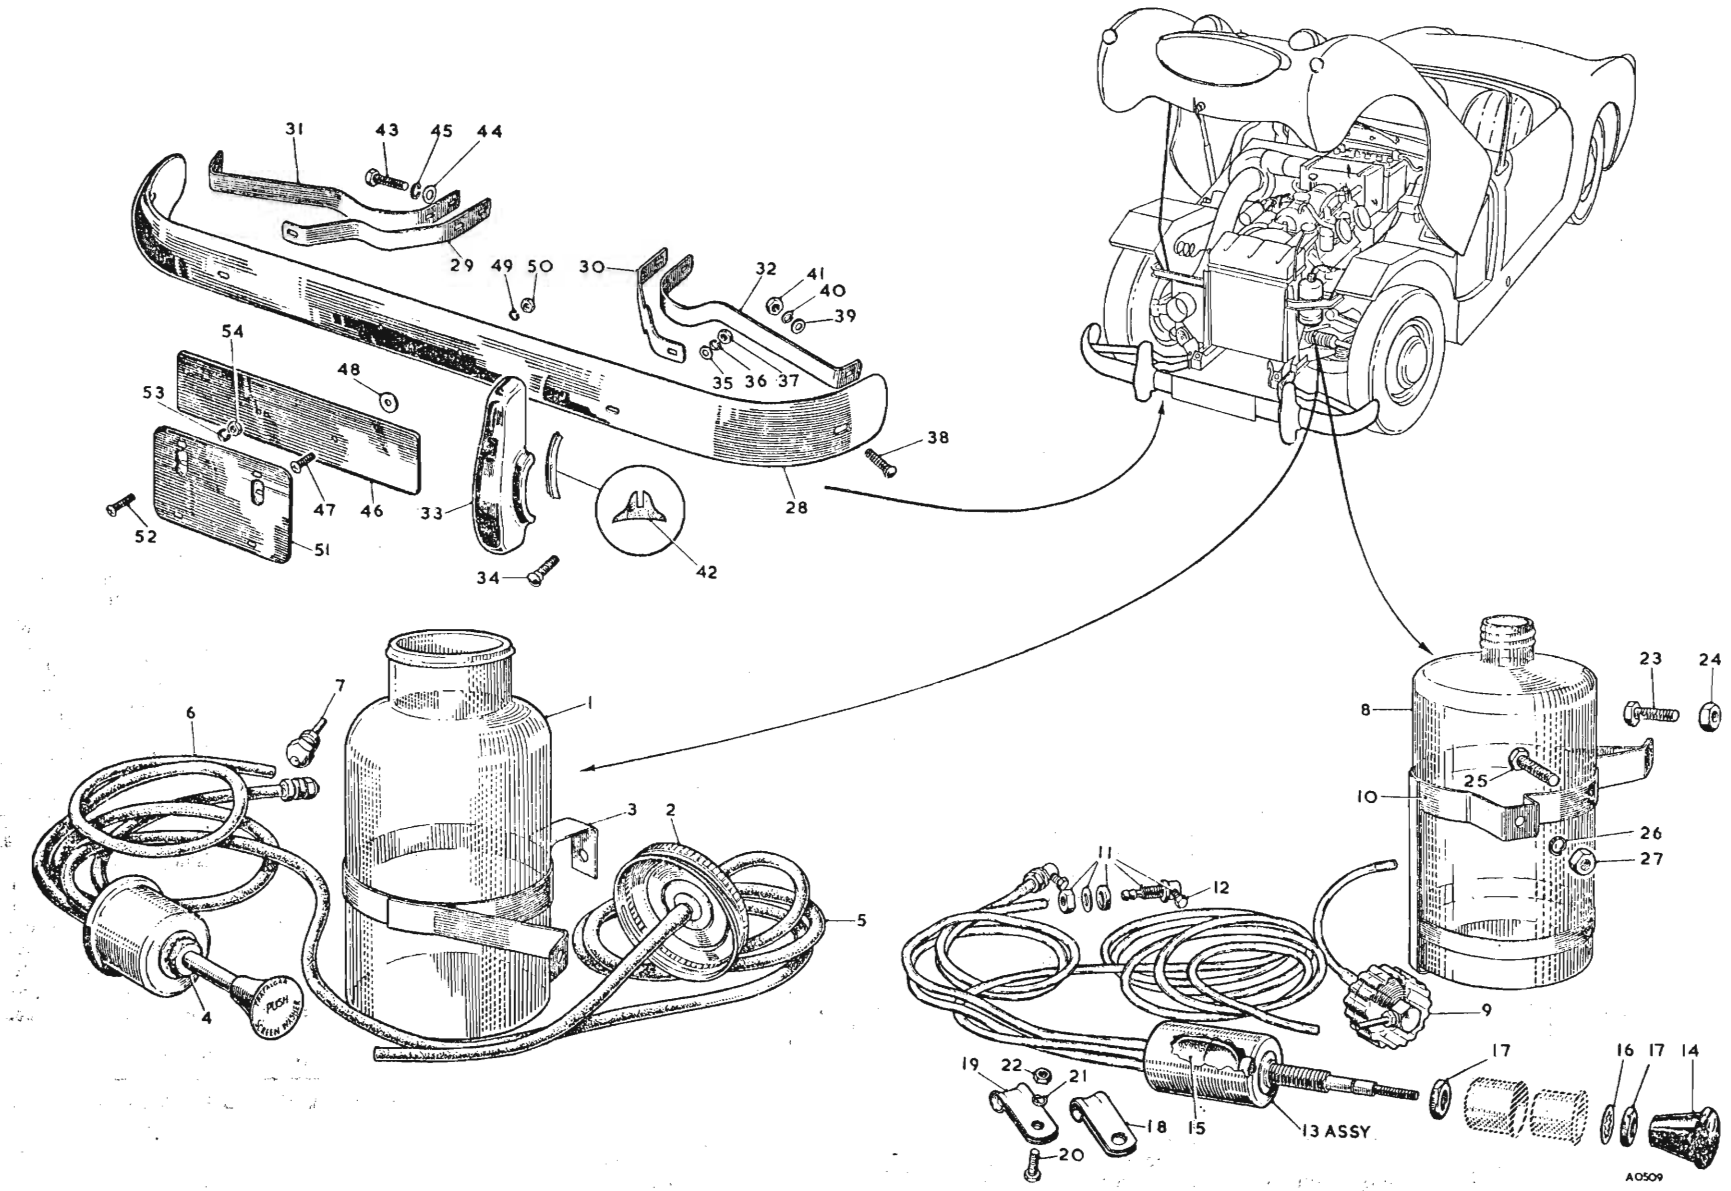

To face page S.8

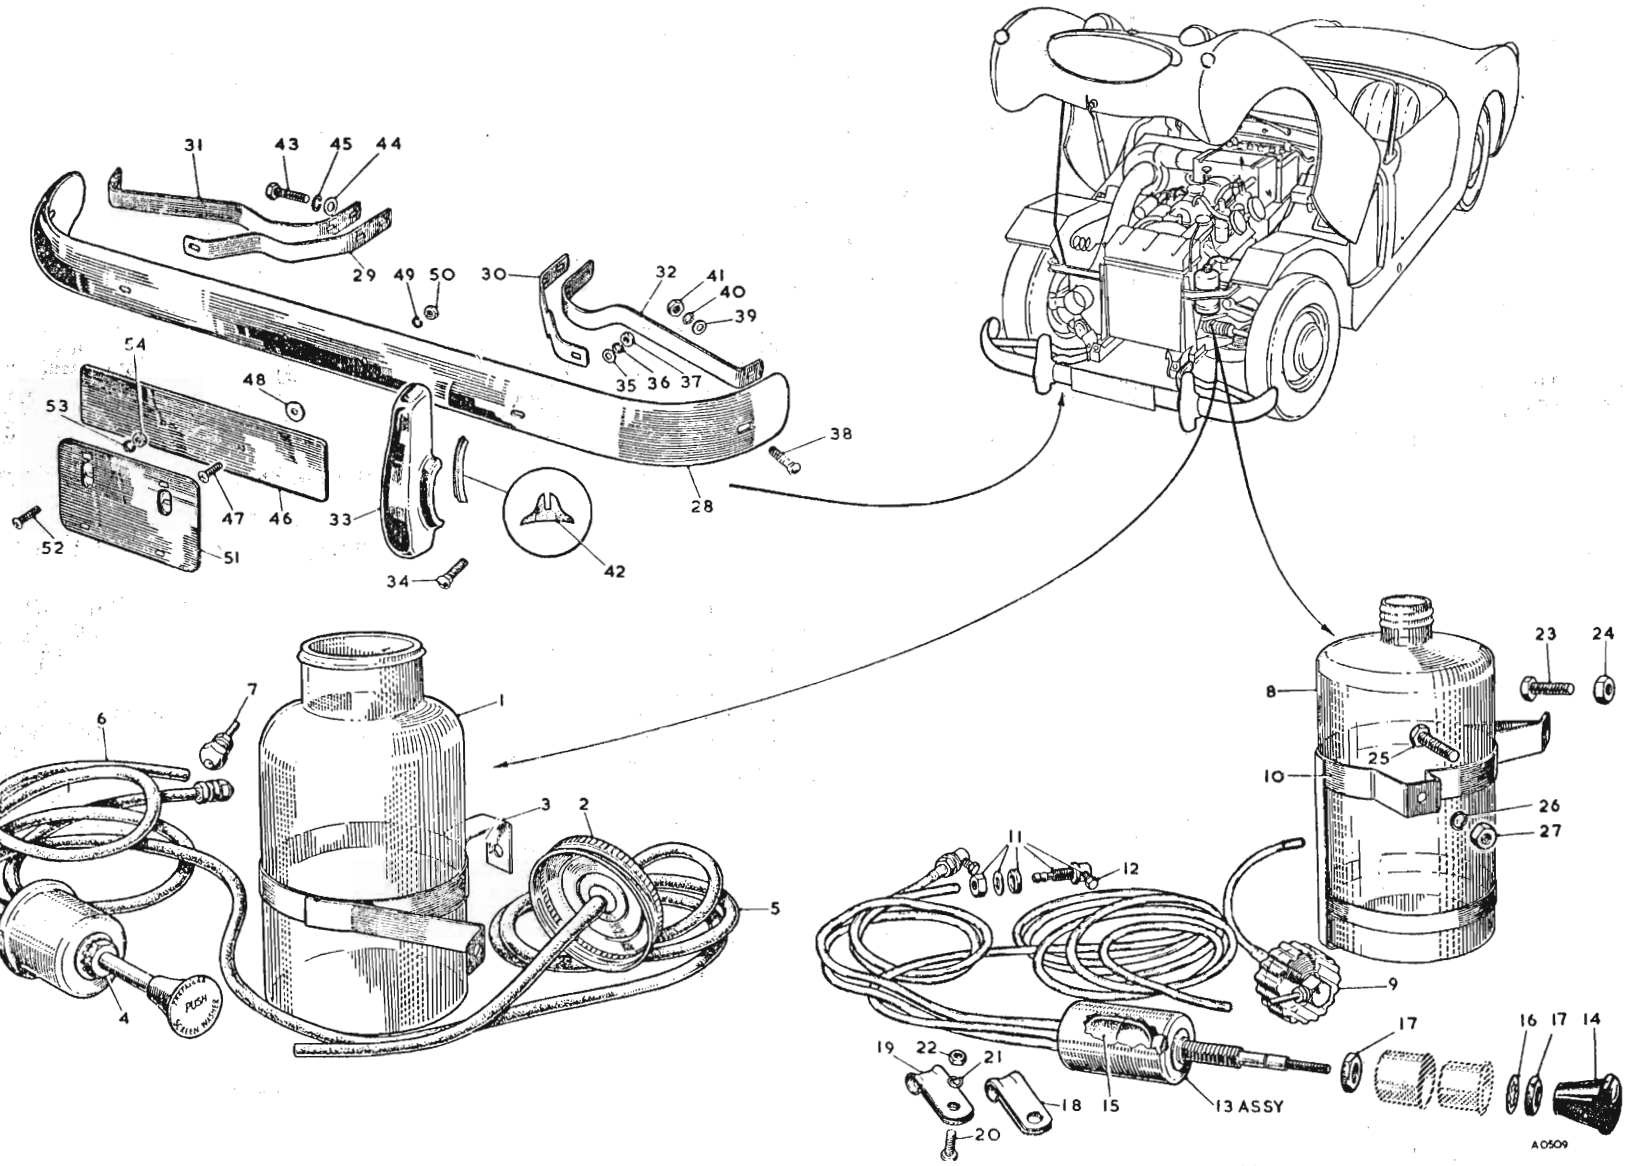

To face page S.9

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	FRONT BUMPER										
	(Optional Extra)										
1	**Bumper assembly (front)**	**N.S.P.**		**1**	**1**						
2	Bar—spring	27H9607	28	1	1						
3	Spring (inner—R/H)	27H9608	29	1	1						
4	Spring (inner—L/H)	27H9609	30	1	1						
5	Spring (outer—R/H)	27H9610	31	1	1						
6	Spring (outer—L/H)	27H9611	32	1	1						
7	**Over-rider assembly**	**27H9612**	**33**	**2**	**2**						
8	Bolt—over-rider to bar	185373	34	2	2						
9	Washer for bolt (plain)	PWZ106	35	2	2						
10	Washer for bolt (spring)	LWZ306	36	2	2						
11	Nut for bolt	FNZ106	37	2	2						
12	Bolt—spring to bar	7H9740	38	2	2						
13	Washer for bolt (plain)	PWZ106	39	2	2						
14	Washer for bolt (spring)	LWZ306	40	2	2						
15	Nut for bolt	FNZ106	41	2	2						
16	Moulding (plastic)	27H9613	42	4	4						
17	Bolt—bumper to body	HBZ0612	43	4	4						
18	Washer for bolt (plain)	PWZ106	44	4	4						
19	Washer for bolt (spring)	LWZ206	45	4	4						
	NUMBER-PLATE AND SUPPORT										
20	**Plate—number (front) (Except N. AMERICA)**	**ADG474**	**46**	**1**	**1**						For use when front bumper is fitted
21	Screw—number-plate fixing	PMZ0412	47	2	2						
22	Washer—packing	AHH5712	48	6	6						
23	Washer for screw (spring)	LWZ204	49	2	2						
24	Nut for screw	FNZ104	50	2	2						
25	**Support—number-plate (N. AMERICA)**	**AHA5211**	**51**		**1**						
26	Screw—support fixing	PMZ0410	52		2						
27	Washer for screw (spring)	LWZ204	53		2						
28	Nut for screw	FNZ104	54		2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	TACHOMETER AND FITTINGS										
	(Optional Extra)										
1	**Tachometer**	**2A9068**		1	1						
2	Bezel	27H397	1	1	1						
3	Slip-ring	27H406	2	1	1						
4	Strap—fixing	27H429	3	1	1						
5	Ring (rubber)	AJH5178	4	1	1						
6	Glass	AJH5177	5	1	1						
7	Screw	17H1544	6	2	2						
8	Nut	17H1304	7	2	2						
9	Washer for screw	17H1341	8	2	2						
10	Bulb holder	3H914	9	2	2						
11	Bulb	2H4732	10	2	2						
12	**Cable—tachometer**	**2A9104**		1				BHA4086			
13	Cable (outer)	17H1497	11	1				17H1679	From (C) 3444		
14	Cable (inner)	17H1499	12	1				17H1678			
15	**Cable—tachometer**	**2A9108**			1						
16	Cable (outer)	17H1498			1						
17	Cable (inner)	17H1344			1						
18	Ratio box—cable to dynamo	2A9105	13	1	1						
19	Grommet—cable through dash	RFN305		1	1						
20	Bracket for cable	1K1977	14	1							
21	Grommet—cable through bracket	3H822	15	1							
22	Cable—tachometer illumination	2A9097		1	1						
	TONNEAU COVER										
	(Optional Extra)										
23	**Tonneau Cover assembly**	**AHA5256**	**16**	1							
24	Tonneau cover assembly	AHA5257			1						