

IGNITION EQUIPMENT

DISTRIBUTOR

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Distributor**	**2A721**		1	1						
2	Plate assembly—clamping	3H2138	1	1	1						
3	Cap (less cables)	17H5422	2	1	1						
4	Brush and spring	17H5065	3	1	1						
5	Rotor arm	7H5086	4	1	1						
6	Contacts	17H5423	5	1 set	1 set	1					
7	Condenser	17H5421	6	1	1						
8	Plate—contact breaker base	17H5469	7	1	1						
9	Terminal with bush and lead—low-tension	37H5409	8	1	1						
10	Lead—earth	17H5531	9	1	1						
11	Cam	17H5066	10	1	1						
12	Springs—automatic advance	37H5440	11	1 set	1 set	1					
13	Toggles	17H5069	12	2	2						
14	Weight assembly	17H5095	13	2	2						
15	Shaft and action plate	37H5439	14	1	1						
16	Vacuum unit with actuating arm	37H5438	15	1	1						Not available, use 47H5520
17	Vacuum unit with actuating arm	47H5520		1	1						
18	Bushing	17H5071	16	1	1						
19	Clip—cap retaining	17H5064	17	2	2						
20	Dog—driving	17H5118	18	1	1						
21	Sundry parts	17H5106		1 set	1 set	1					
22	Cable—high-tension—Nos. 1, 2, 3, and 4	45223		1	1	100'					
23	Cable—coil to distributor	45223		1	1	100'					
24	Ferrule for cable No. 1	3H1655	19	1	1				Fin. (E) 4795		
25	Ferrule for cable No. 2	3H1656	20	1	1				Fin. (E) 4795		
26	Ferrule for cable No. 3	3H1657	21	1	1				Fin. (E) 4795		
27	Ferrule for cable No. 4	3H1658	22	1	1				Fin. (E) 4795		
28	Sleeve—cable identity (No. 1)			1	1			2H4243	Com. (E) 4796		
29	Sleeve—cable identity (No. 2)			1	1			2H4244	Com. (E) 4796		
30	Sleeve—cable identity (No. 3)			1	1			2H4245	Com. (E) 4796		
31	Sleeve—cable identity (No. 4)			1	1			2H4246	Com. (E) 4796		
32	Connector for sparking plug	8G616	23	4	4			13H184	Com. (E) 4796		
33	**Suppressor—sparking plug**			4				**3H1422**	**Com. (C) 25484**		
34	Spacer for high-tension cables—4-way	1G2673	24	1	1				Fin. (E) 4795		
35	Screw—clamping plate to distributor housing	6K639	25	2	2	12					
36	**Pipe with clip—vacuum ignition control**	**AEA346**	**26**	1	1			AEA447	Com. (E) 32663		
37	Clip for vacuum pipe	1B2121	27	1	1			ACH9009	Com. (E) 245		

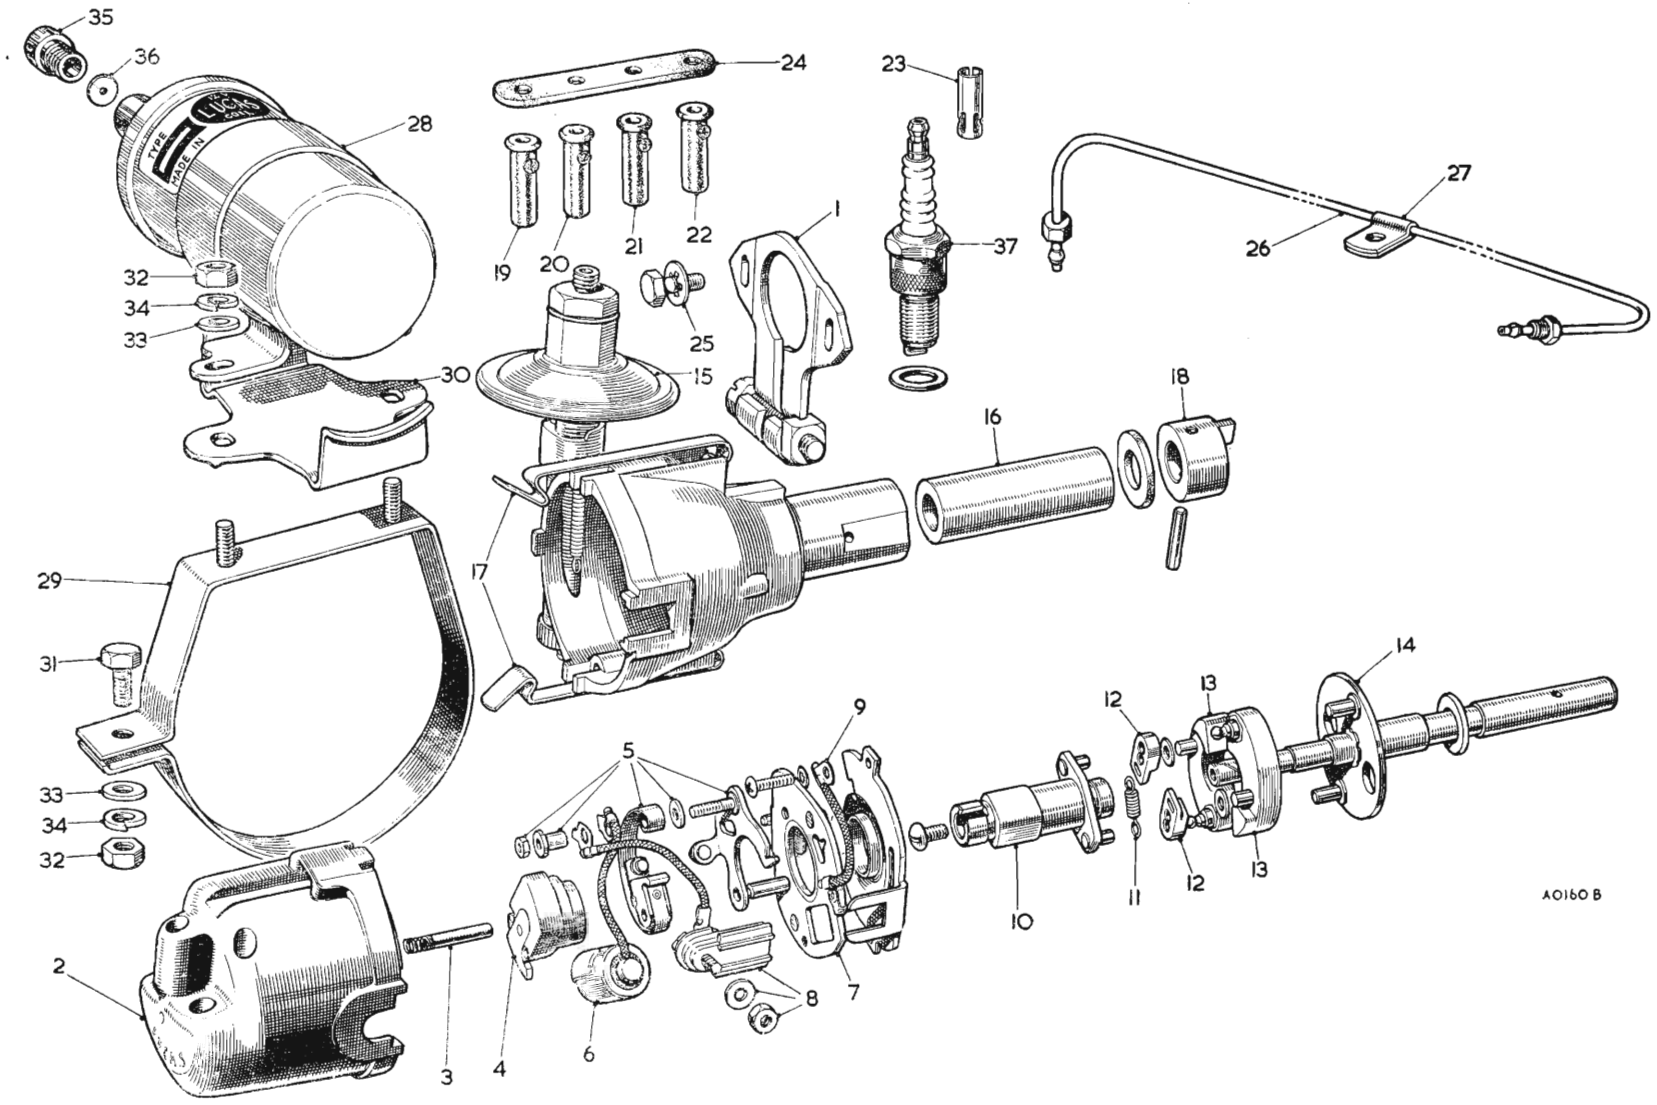

To face page B.1

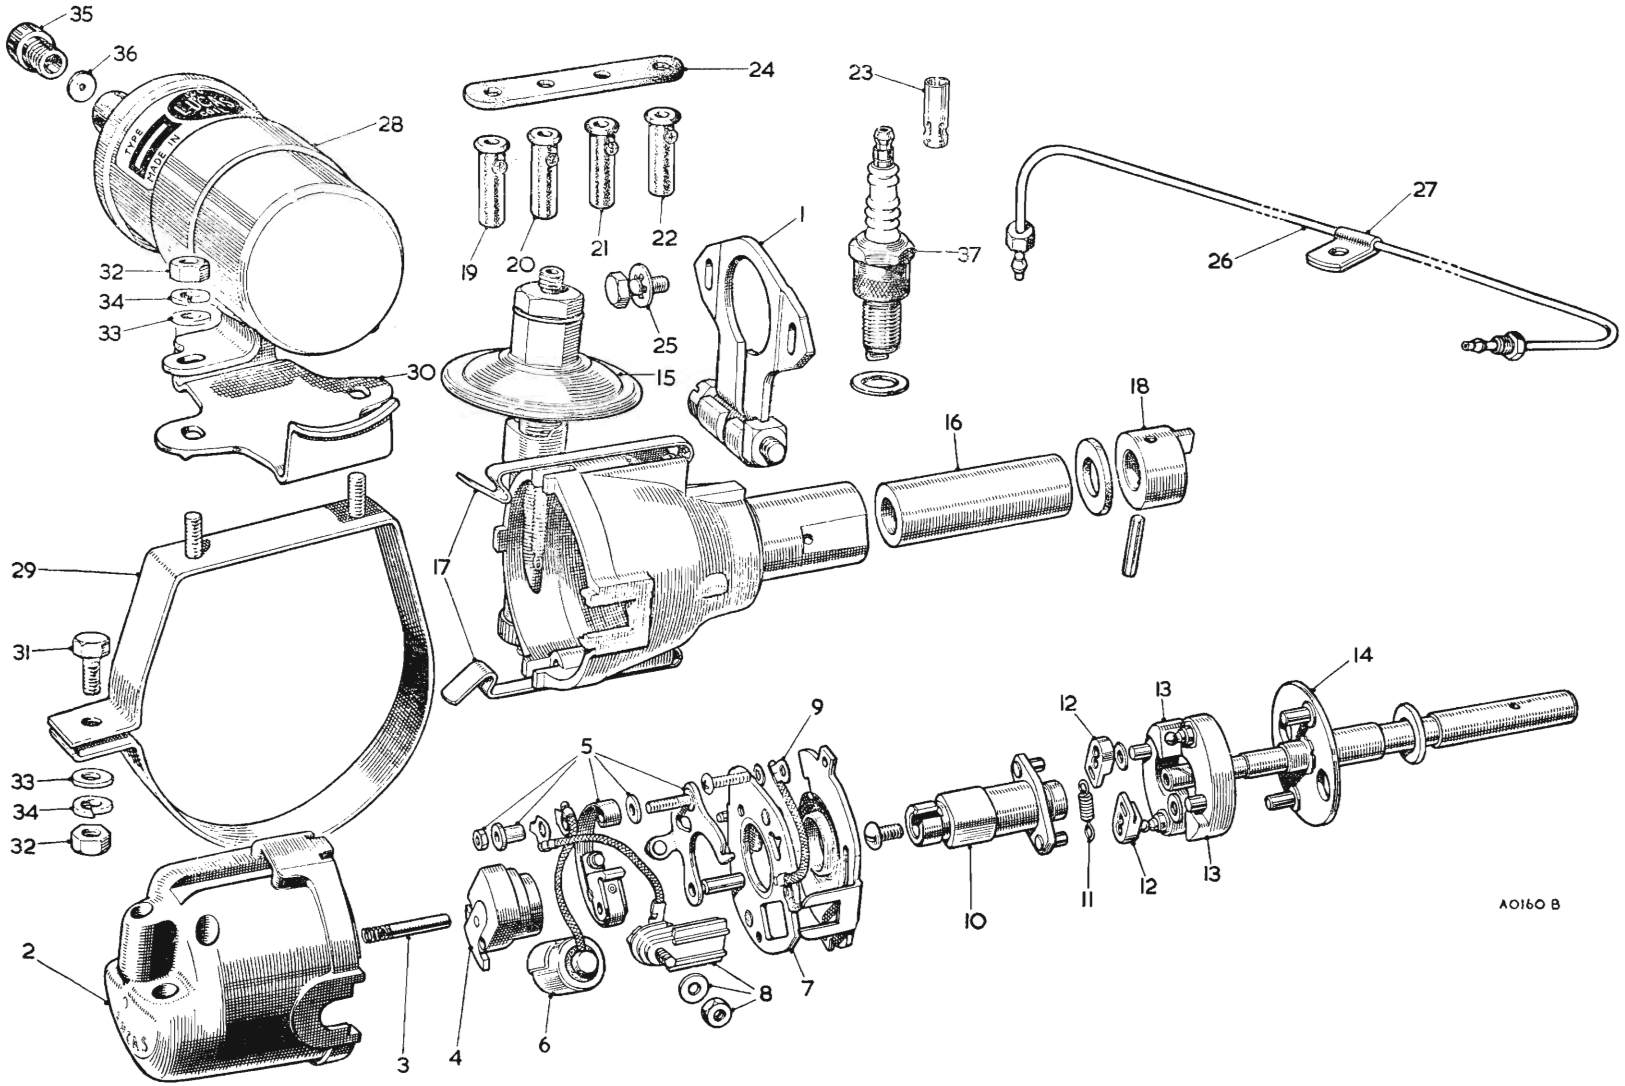

To face page B.2

Item No.	DESCRIPTION	Commencing (E) 101 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	IGNITION COIL										
1	**Coil—ignition**	**2A536**	**28**	**1**	**1**						Not available, use AMK5611
2	Bracket—coil to dynamo	1H1070	29	1	1						] Alternatives
3	Bracket—coil to dynamo	1H1302		1	1						
4	Plate for coil—steady	11G221	30	1	1						
5	Bolt for bracket—clamp	HZS0406	31	1	1				Fin. (C)11888		
6	Nut for bolt	FNZ104	32	3	3						
7	Washer for bolt (plain)	PWN204	33	3	3						
8	Washer for bolt (spring)	LWN304	34	3	3						
9	Screw—coil to coil bracket and gusset plate assembly			2	2			HZS0405			
10	Nut for screw			2	2			FNZ104	Com. (C) 11889		
11	Washer for screw (plain)			2	2			PWZ204			
12	Washer for screw (spring)			2	2			LWZ204			
13	Terminal—high-tension	3H2695	35	1	1						
14	Washer for terminal	3H2696	36	1	1						
	SPARKING PLUGS										
15	Sparking plug	3H2006	37	4	4						
16	Sparking plug	2A375		4	4						When short-wave radio is fitted