

REAR AXLE AND SUSPENSION

REAR AXLE

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
1	**Rear axle assembly**	**N.S.P.**		1	1						
2	**Case assembly**	**ATA7329**	1	1	1			**ATA7618**	**Com. (C) 4333 except 4471, 4622, 4680, 4684**		
3	Stud for differential carrier	2A7226	2	8	8						
4	Nut—bearing retaining (RHT)	2A7103	3	1	1						
5	Nut—bearing retaining (LHT)	1G3584		1	1						
6	Nut for differential carrier stud	FNZ105	4	8	8	24					
7	Washer for nut (spring)	LWZ205	5	8	8	12					
8	Washer for bearing retaining nut (lock)	2A7250	6	2	2						
9	Breather assembly	1G3668	7	1	1						
10	Plug—oil drain	6K499	8	1	1						
11	Plug—oil filler	6K499		1	1						
12	Joint—differential carrier to axle case	2A7027	9	1	1	12					
13	**Differential assembly (R)**	**ATA7326**		1	1						
14	**Carrier assembly**	**ATA7032**	10	1	1						
15	Stud—cap	51K886	11	4	4						
16	Washer for nut (plain)	PWN107	12	4	4						
17	Washer for nut (spring)	LWN207	13	4	4						
18	Nut	FNN107	14	4	4						
19	Plug—filler	6K499	15	1	1						
20	Bearing—differential	2K5943	16	2	2						
21	Washer—bearing packing (·002″)	2K7779	17	A/R	A/R						
22	Washer—bearing packing (·003″)	ATA7269		A/R	A/R						
23	Washer—bearing packing (·004″)	2K7778		A/R	A/R						
24	Washer—bearing packing (·010″)	2A7271		A/R	A/R						
25	Cage—differential	ATA7036	18	1	1						
26	Gear	ATA7037	19	2	2						
27	Washer for gear (thrust)	ATA7296	20	2	2						
28	Pinion	2A7015	21	2	2						
29	Washer for pinion (thrust)	ATA7297	22	2	2						
30	Pin for pinion	2A7016	23	1	1						
31	Peg for pinion pin	6K631	24	1	1	12					
32	**Crown wheel and pinion**	**ATA7266**	25	1	1						
33	Bolt—crown wheel to cage	ATA7043	26	6	6						
34	Washer for bolt (lock)	ATA7044	27	3	3	36					
35	Washer—pinion thrust (·130″)	ATA7123	28	1	1						One used of selected size
36	Washer—pinion thrust (·128″)	ATA7124		1	1						
37	Washer—pinion thrust (·126″)	ATA7125		1	1						
38	Washer—pinion thrust (·124″)	ATA7126		1	1						
39	Washer—pinion thrust (·122″)	ATA7127		1	1						
40	Washer—pinion thrust (·120″)	ATA7128		1	1						
41	Washer—pinion thrust (·118″)	ATA7129		1	1						
42	Washer—pinion thrust (·116″)	ATA7130		1	1						

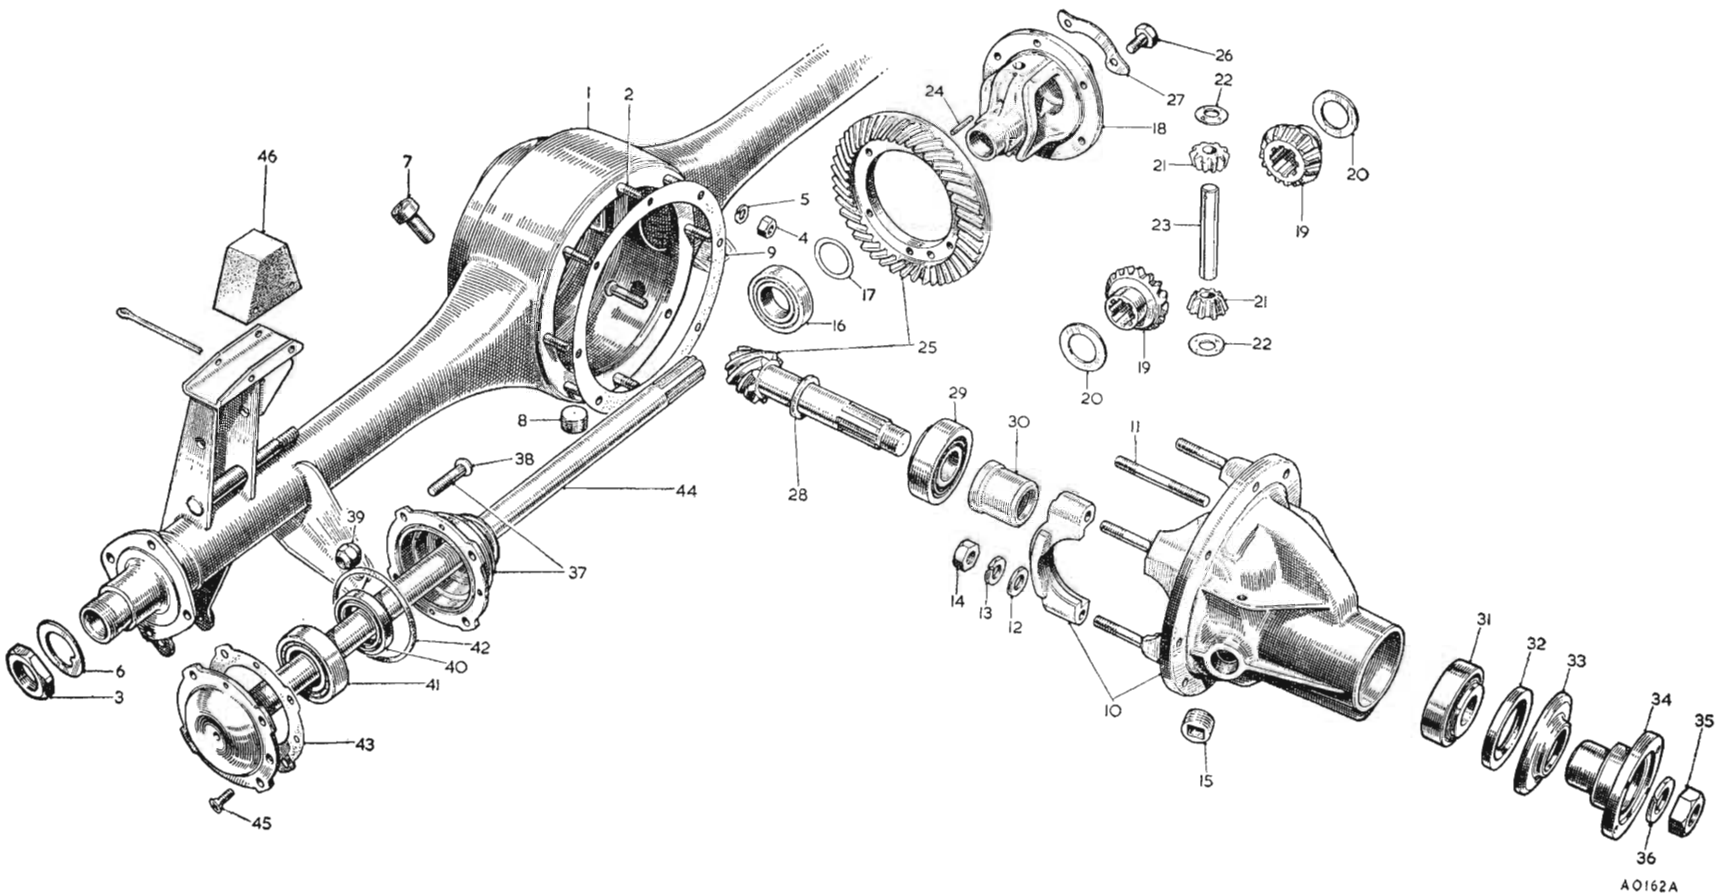


To face page H.1

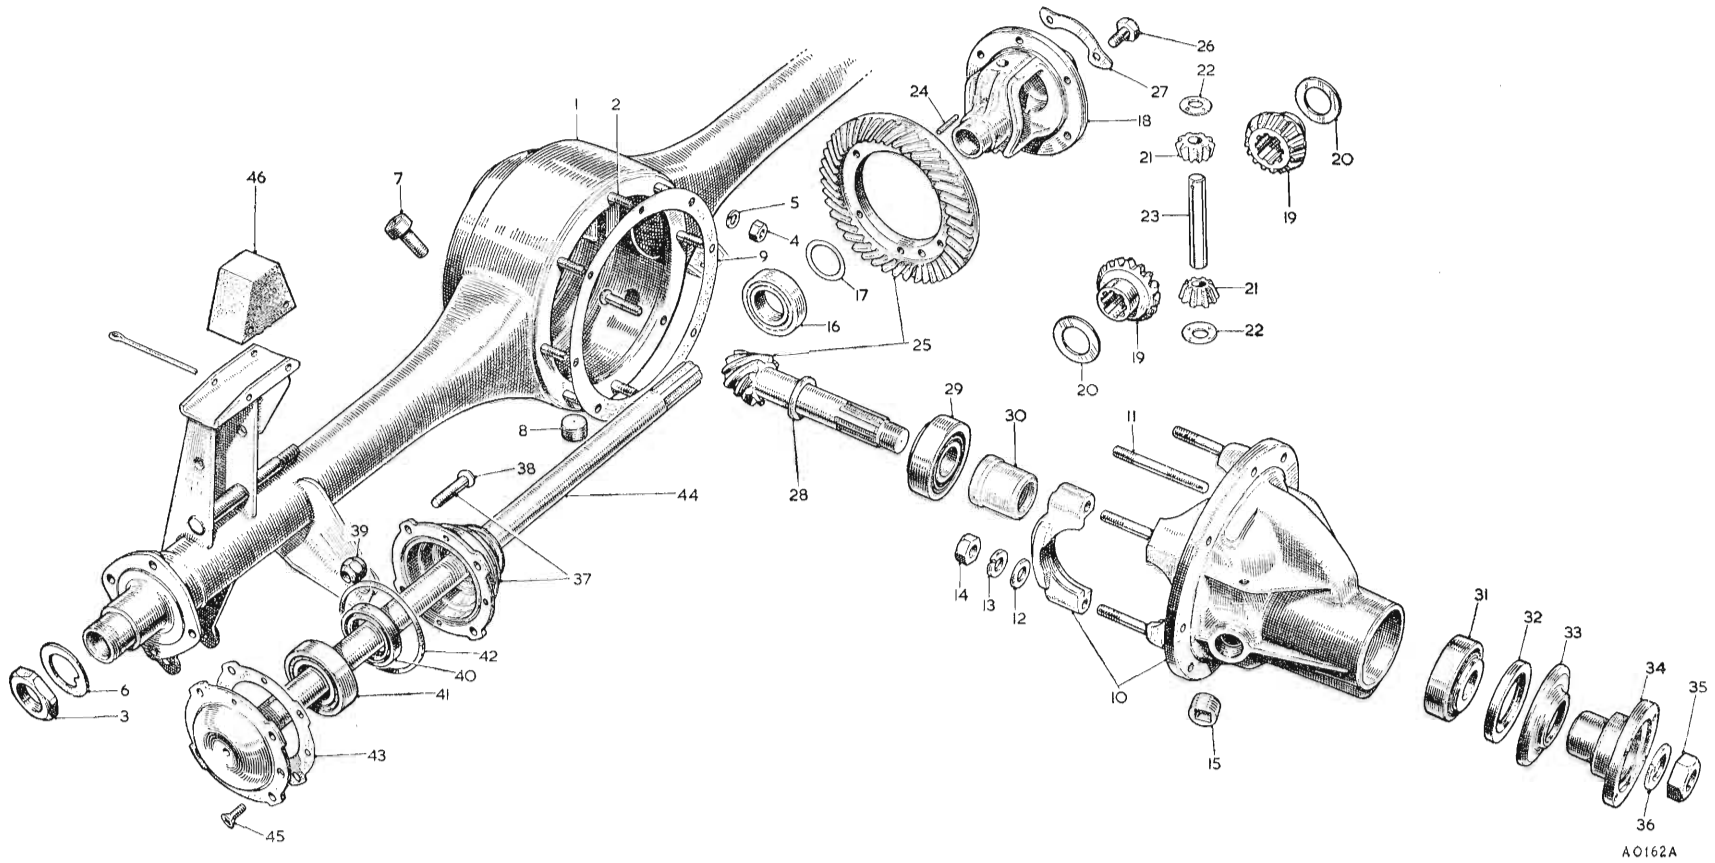


To face page H.2

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Rear Axle and suspension—*continued*										
1	Bearing—pinion inner	ATA7328	29	1	1						
2	Distance piece for bearing	ATA7219	30	1	1						
3	Bearing—pinion outer	2A7213	31	1	1						
4	Seal—oil	ATA7047	32	1	1	6					
5	Cover—dust	1G7439	33	1	1						
6	Flange—universal joint	ATA7056	34	1	1						
7	Nut—flange to pinion	FNZ612	35	1	1						
8	Washer for nut (spring)	LWZ212	36	1	1						
9	**Hub assembly**	**2A7087**	**37**	**2**	**2**						
10	Stud—wheel	2A7089	38	8	8	12					
11	Nut for wheel stud	2A8012	39	8	8	12					
12	Seal—oil	3H2118	40	2	2	12					
13	Seal—oil	BTA108		2	2						Use BTA108
14	Bearing—hub	6K584	41	2	2						
15	Ring—oil seal	ATA7225	42	2	2	12					
16	Joint—shaft to hub	2A7091	43	2	2	12					
17	Shaft—axle	2A7085	44	2	2		—	2A7242			
18	Screw—shaft to hub	CMZ0410	45	2	2						
19	Bumper (rubber)	2A7142	46	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BRAKES										
1	**Plate—brake (R/H)**	**ATA7076**	**1**	**1**	**1**						
2	**Plate—brake (L/H)**	**ATA7077**	**2**	**1**	**1**						
3	Bolt—brake-plate to axle case	HZS0506	3	8	8						
4	Nut for bolt	FNZ105	4	8	8						
5	Washer for nut (spring)	LWZ205	5	8	8	24					
6	**Shoe assembly—brake**	**AJA5086**	**6**	**2 sets**	**2 sets**	**1**					
7	**Liner (with rivets)**	**300826**	**7**	**1 set**	**1 set**	**1**					
8	Rivets	7H7398		28	28						
9	Spring—brake-shoe pull-off (lower)	301633	8	2	2						
10	Spring—brake-shoe pull-off (upper)	301634	9	2	2						
11	Spring—steady	301020	10	4	4						
12	Adjuster	68648	11	2	2						
13	Mask—adjuster	68643	12	2	2						
14	**Cylinder assembly—wheel**	**301622**		**2**	**2**						
15	Body (with abutment strip)	7H7942	13	2	2						
16	Piston—hydraulic	7H7928	14	2	2						
17	**Piston (with dust cover)**	**AJA5008**	**15**	**2**	**2**						
18	Seal	7H7707	16	2	2						Correction, was 7H7957
19	Cup	7H7923	17	2	2						
20	Filler—cup	7H7940	18	2	2						
21	Spring—cup filler	7H7939	19	2	2						
22	Lever—hand brake	27H7395	20	2	2						Not available, use 17H7203
23	Pin—lever pivot	7H7929	21	2	2						
24	Boot for wheel cylinder	7H7943	22	2	2						
25	**Drum—brake**	**2A7168**	**23**	**2**	**2**						
26	Screw—drum to hub	CMZ0410	24	4	4						
27	Plug for drum (rubber)	2A7228	25	2	2	12					
28	**Kit—wheel cylinder repair**	**8G8243**		**2 sets**	**2 sets**	**1**					**Correction, was 17H7046**
29	Seal			2	2						
30	Cup			2	2						
31	Boot			2	2						

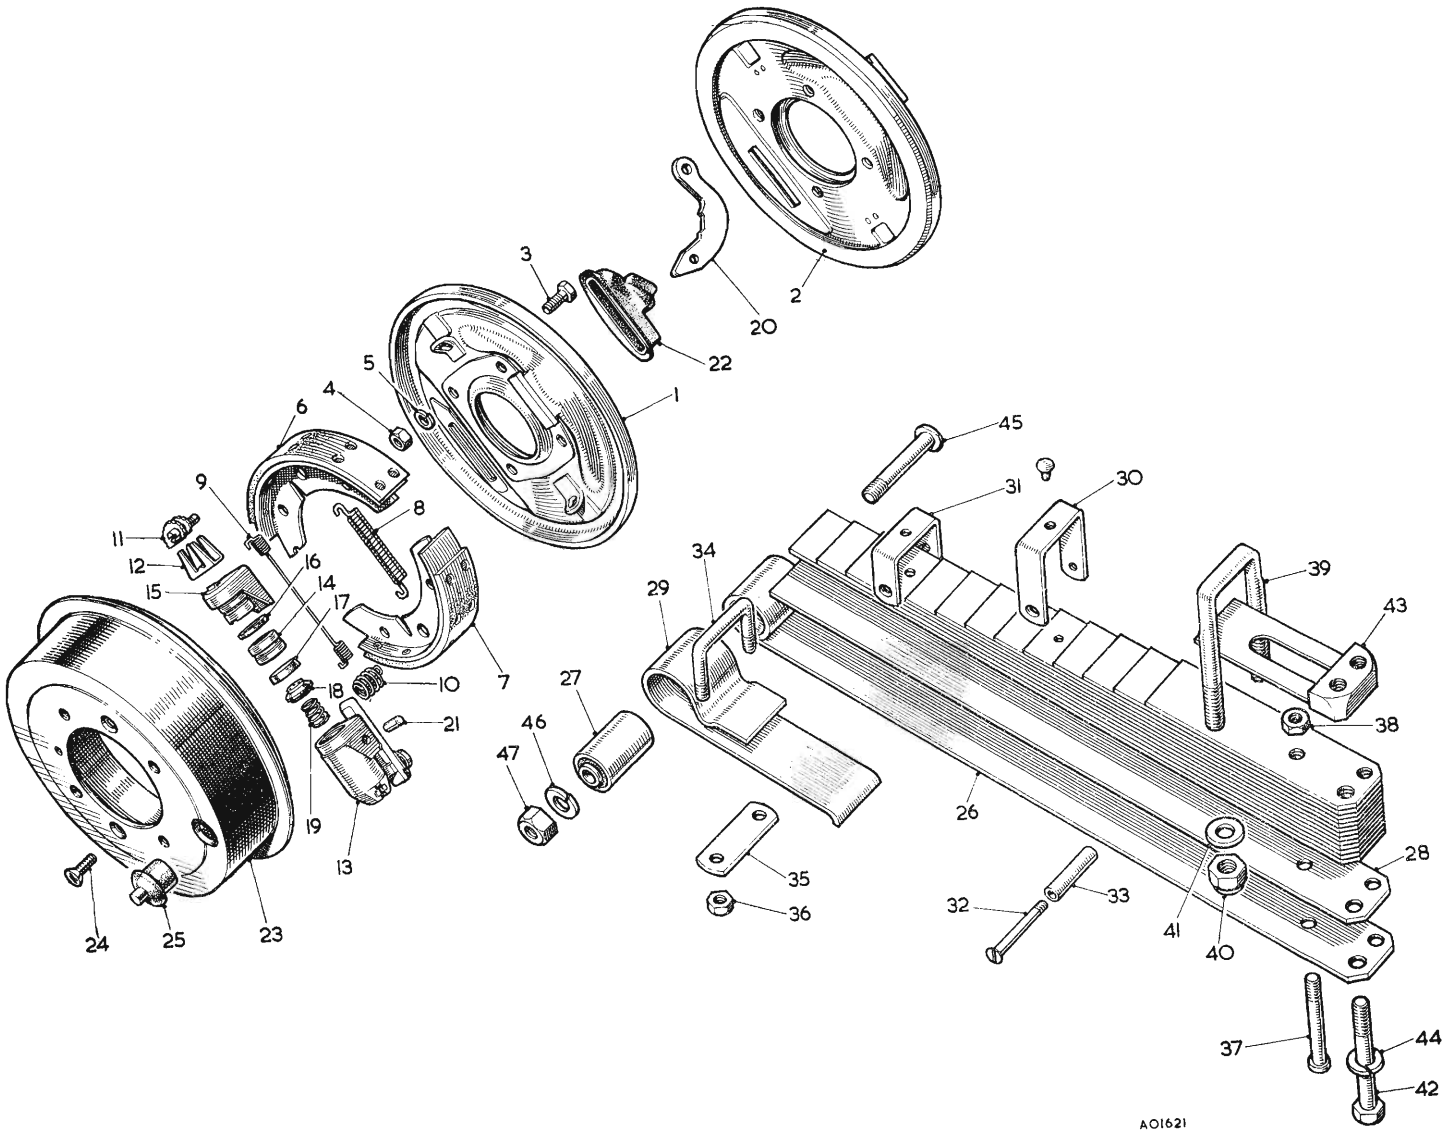

To face page H.3

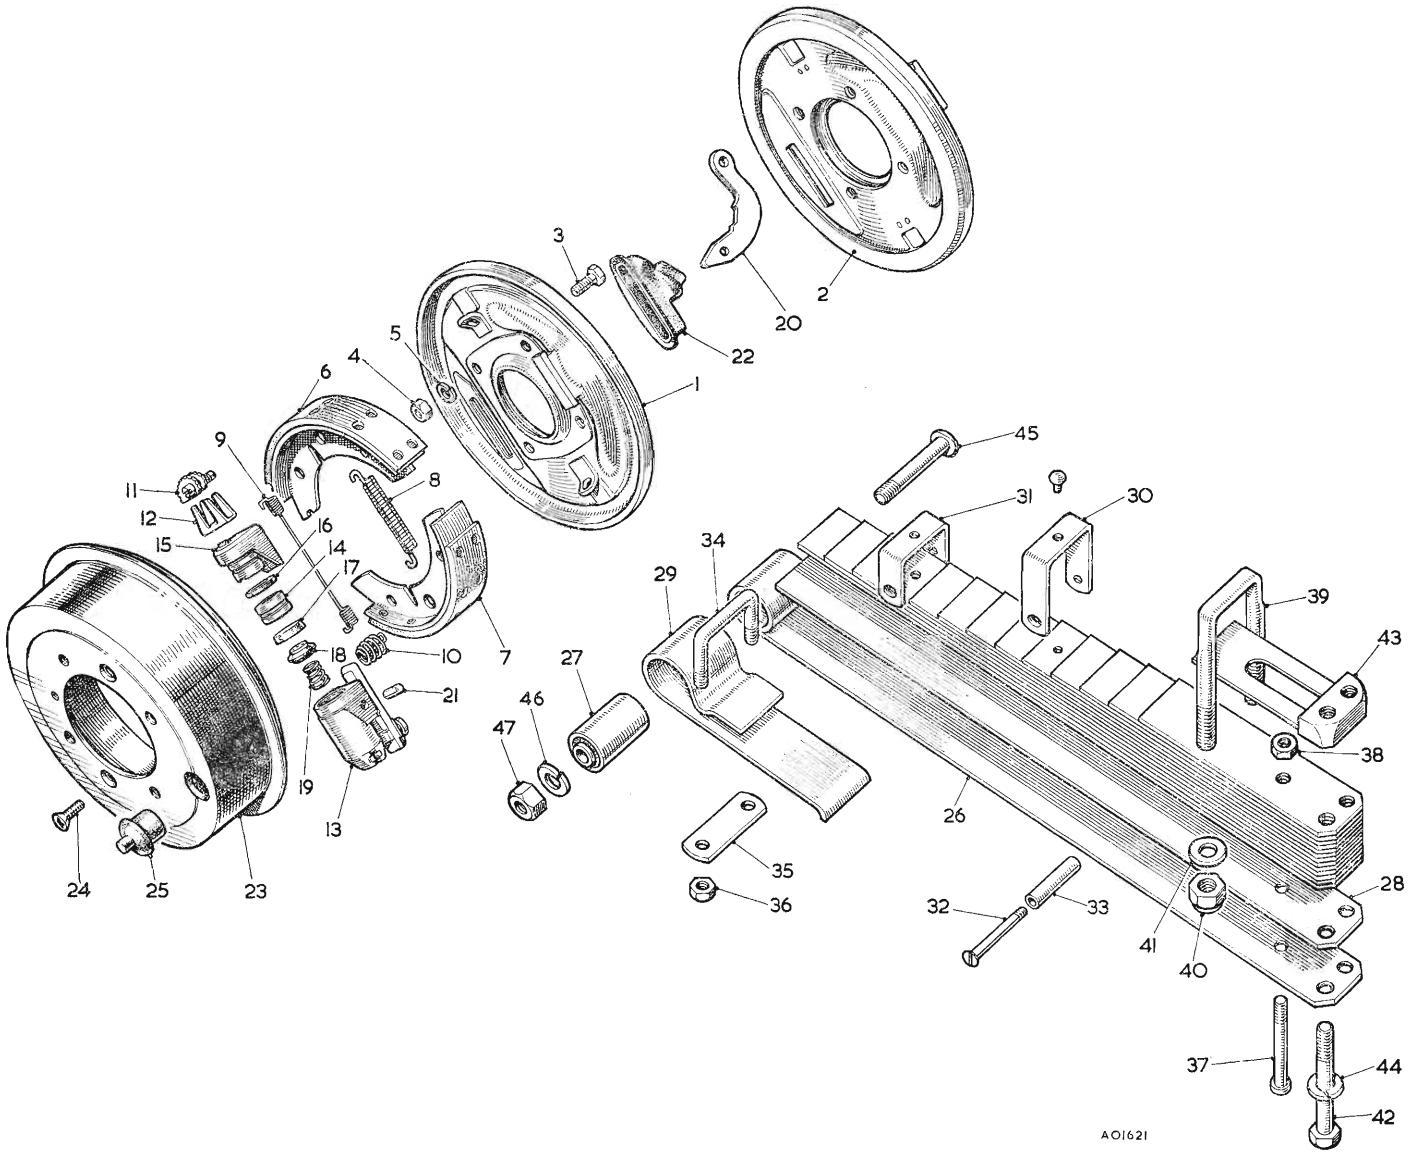

To face page H.4

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	REAR SPRING										
1	**Spring assembly**	**2A7309**		**2**	**2**						
2	Leaf—main	AHA5331	26	2	2						
3	Bush	2H4605	27	2	2						
4	Leaf—second	AHA5332	28	2	2						
5	Leaf—third	N.S.P.		2	2						
6	Leaf—fourth	N.S.P.		2	2						
7	Leaf—fifth	N.S.P.		2	2						
8	Leaf—sixth	N.S.P.		2	2						
9	Leaf—seventh	N.S.P.		2	2						
10	Leaf—eighth	N.S.P.		2	2						
11	Leaf—ninth	N.S.P.		2	2						
12	Leaf—tenth	N.S.P.		2	2						
13	Leaf—eleventh	N.S.P.		2	2						
14	Leaf—twelfth	N.S.P.		2	2						
15	Leaf—thirteenth	N.S.P.		2	2						
16	Leaf—fourteenth	N.S.P.		2	2						
17	Leaf—fifteenth	N.S.P.		2	2						
18	Clip—safety	AHA5350	29	2	2						
19	Clip—spring (long)	AHA5346	30	2	2						
20	Clip—spring (short)	AHA5347	31	2	2						
21	Screw—spring clip	AHA5348	32	4	4						
22	Tube—distance—clip	AHA5349	33	4	4						
23	Clip—safety clip to spring	AHA5351	34	2	2						
24	Plate for clip	AHA5352	35	2	2						
25	Nut for clip	FNZ105	36	4	4						
26	Bolt—locating	AHA5353	37	2	2						
27	Nut for bolt	FNZ205	38	2	2						
28	Clip—spring to frame	AHA5221	39	2	2						
29	Nut for clip	LNZ108	40	4	4						
30	Washer for nut (plain)	PWZ108	41	4	4						
31	Bolt—spring to frame	HBZ0626	42	4	4						
32	Washer for bolt (spring)	LWZ306	44	4	4						
33	**Plate—spring attachment**	**AHA5222**	**43**	**2**	**2**						
34	Pin—spring	2A7279	45	2	2						
35	Nut for pin	FNZ107	47	2	2						
36	Washer for nut (spring)	LWZ307	46	2	2						
37	**Spring assembly—extra heavy**	**AHA5468**		**2**	**2**						] **Optional extra**
38	Bolt—spring to frame	HBZ0624		4	4						