
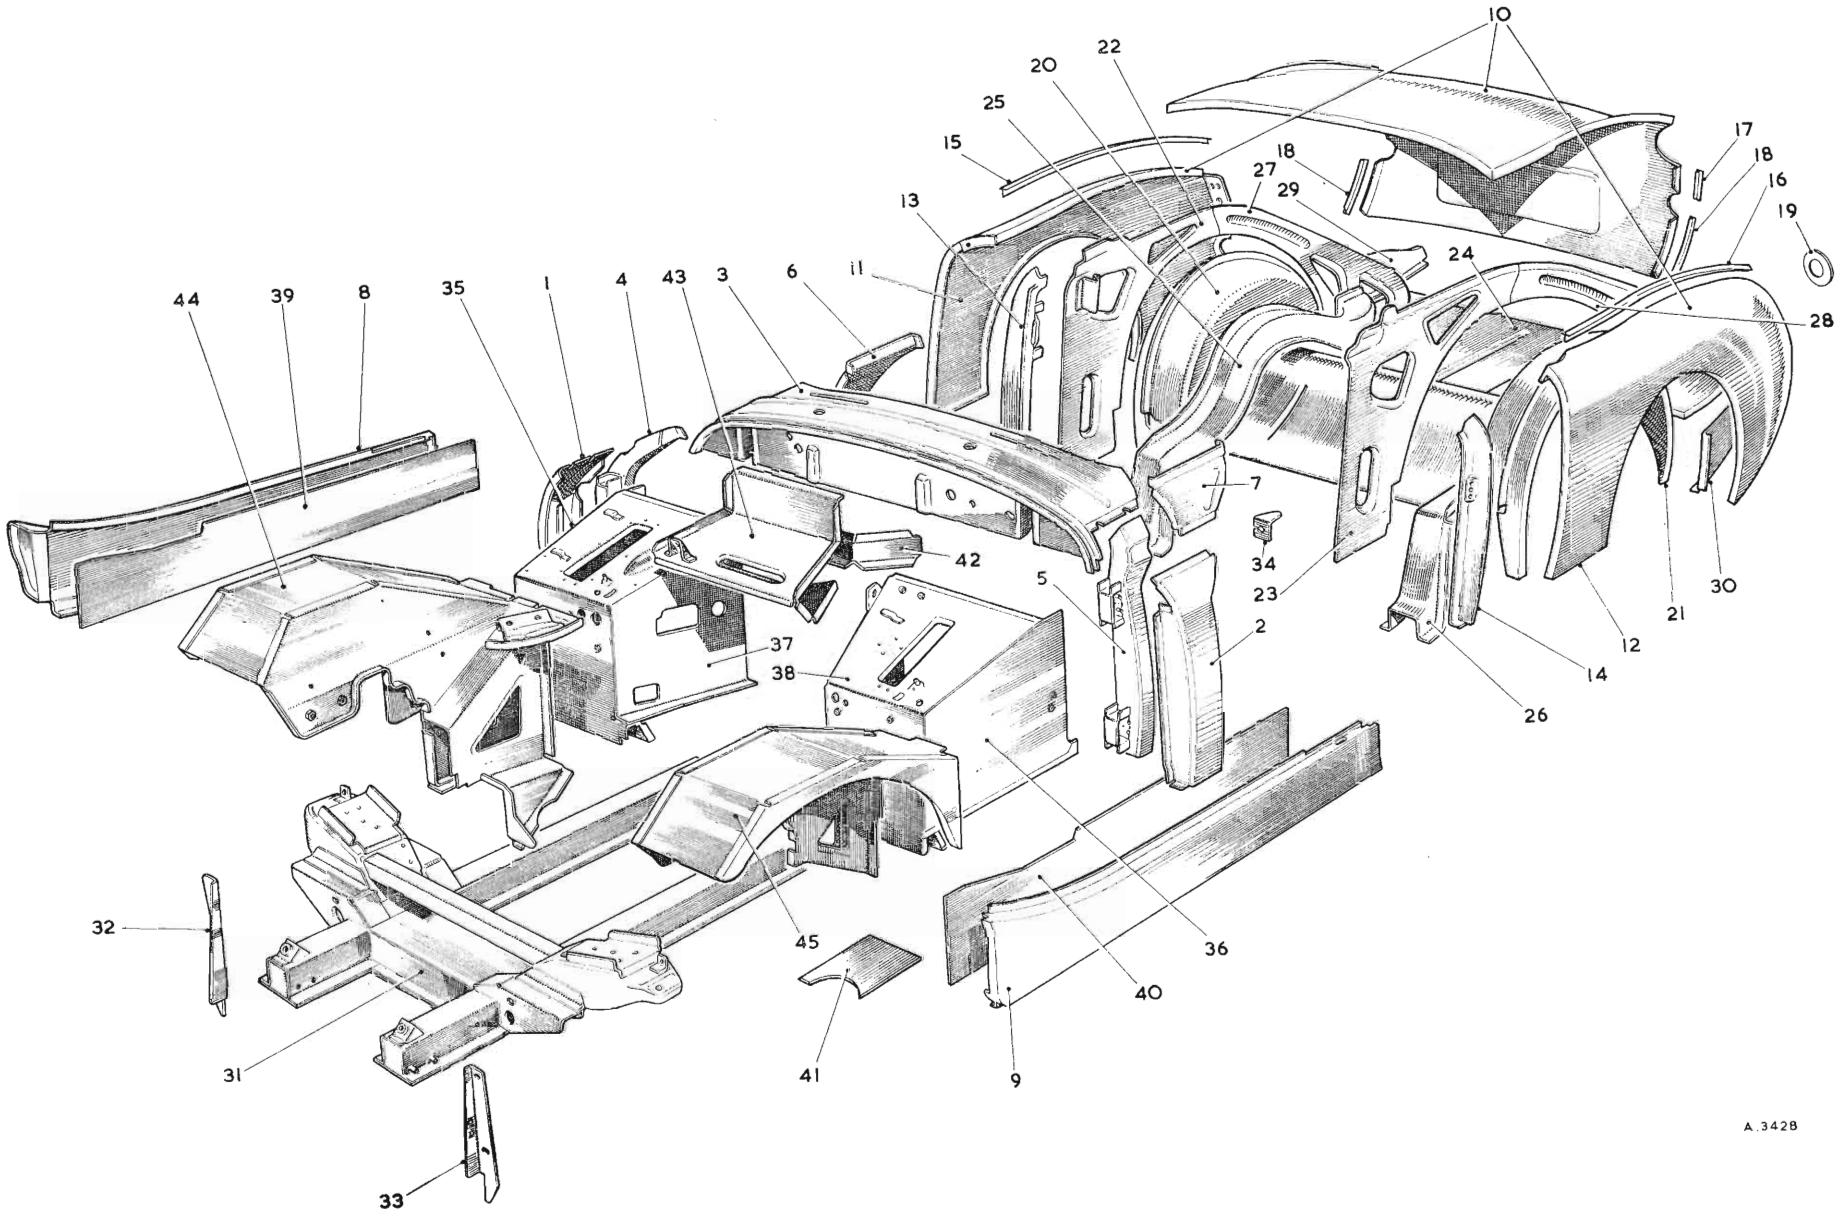



To face page R.1

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BODY SHELL										
1	**Body shell and underframe assembly**	**AHA5145**		1	1						
2	Panel assembly—shroud side (R/H)	AHA5174	1	1	1						
3	Panel assembly—shroud side (L/H)	AHA5175	2	1	1						
4	Panel assembly—shroud and dash top	AHA5173	3	1	1						
5	"A" post assembly (R/H)	AHA5176	4	1	1						
6	"A" post assembly (L/H)	AHA5177	5	1	1						
7	Extension—"A" post to scuttle (R/H)	14A4635	6	1	1						
8	Extension—"A" post to scuttle (L/H)	14A4636	7	1	1						
9	Panel—sill outer (R/H)	14A4593	8	1	1						
10	Panel—sill outer (L/H)	14A4594	9	1	1						
11	Panel assembly—body rear	AHA5179	10	1	1						
12	**Wing assembly—rear (R/H)**	**AHA5182**	**11**	1	1						
13	**Wing assembly—rear (L/H)**	**AHA5183**	**12**	1	1						
14	"B" post assembly (R/H)	AHA5184	13	1	1						
15	"B" post assembly (L/H)	AHA5185	14	1	1						
16	Moulding—rear wing to panel—top (R/H)	14A4769	15	1	1						
17	Moulding—rear wing to panel—top (L/H)	14A4770	16	1	1						
18	Moulding—rear wing to panel (intermediate)	14A4771	17	2	2						
19	Moulding—lower (rear)	14A4772	18	2	2						
20	Filler—lamp	14A4606	19	2	2						
21	Panel assembly—rear wheel arch (R/H)	AHA5148	20	1	1						
22	Panel assembly—rear wheel arch (L/H)	AHA5149	21	1	1						
23	Reinforcement assembly—"B" post to wheel arch (R/H)	14A89	22	1	1						
24	Reinforcement assembly—"B" post to wheel arch (L/H)	14A90	23	1	1						
25	Panel assembly—luggage floor	AHA5147	24	1	1						
26	Reinforcement member—wheel arch to luggage floor (R/H)	AHA5283	25	1	1						
27	Reinforcement member—wheel arch to luggage floor (L/H)	AHA5284	26	1	1						
28	Gusset—wheel arch to luggage floor—rear (R/H)	AHA5291	27	1	1						
29	Gusset—wheel arch to luggage floor—rear (L/H)	AHA5292	28	1	1						
30	Panel assembly—luggage floor to wing (R/H)	14A4611	29	1	1						
31	Panel assembly—luggage floor to wing (L/H)	14A4612	30	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Body Shell and Underframe—*continued*										
1	**Underframe assembly**	**N.S.P.**		**1**	**1**						
2	**Front suspension and main beam assembly**	**28G102**	**31**	**1**	**1**						
3	Bracket assembly—radiator mounting (R/H)	2A5612	32	1	1						
4	Bracket assembly—radiator mounting (L/H)	2A5465	33	1	1			AHA5390	Com. (C) 6490		For all replacements AHA5390 must be used
5	Bracket—hand brake abutment	2A5509	34	1	1						
6	Panel assembly—outer—footwell (R/H)	2A5527	35	1	1						
7	Panel assembly—outer—footwell (L/H)	2A5528	36	1	1						
8	Panel assembly—footwell front and inner side (R/H)	28G103	37	1	1						
9	Panel assembly—footwell front and inner side (L/H)	28G104	38	1	1						
10	Plate—side—sill (R/H)	AHA5299	39	1	1						
11	Plate—side—sill (L/H)	AHA5300	40	1	1						
12	Strut—front suspension (R/H)	2A5558		1	1				Fin. (C) 5136 Except 5138 to 5286, 5289 to 5476		
13	Strut—front—suspension (L/H)	2A5557		1	1						
14	Plate—splash		41	2	2			AHA5401	Com. (C) 5477 Also 5137, 5287, 5288		
15	Support—heater platform	2A5524	42	1	1						
16	Platform assembly—heater	2A5533	43	1	1						
17	**Wheelarch assembly—front (R/H)**	**28G105**	**44**	**1**	**1**						
18	**Wheelarch assembly—front (L/H)**	**28G106**	**45**	**1**	**1**						

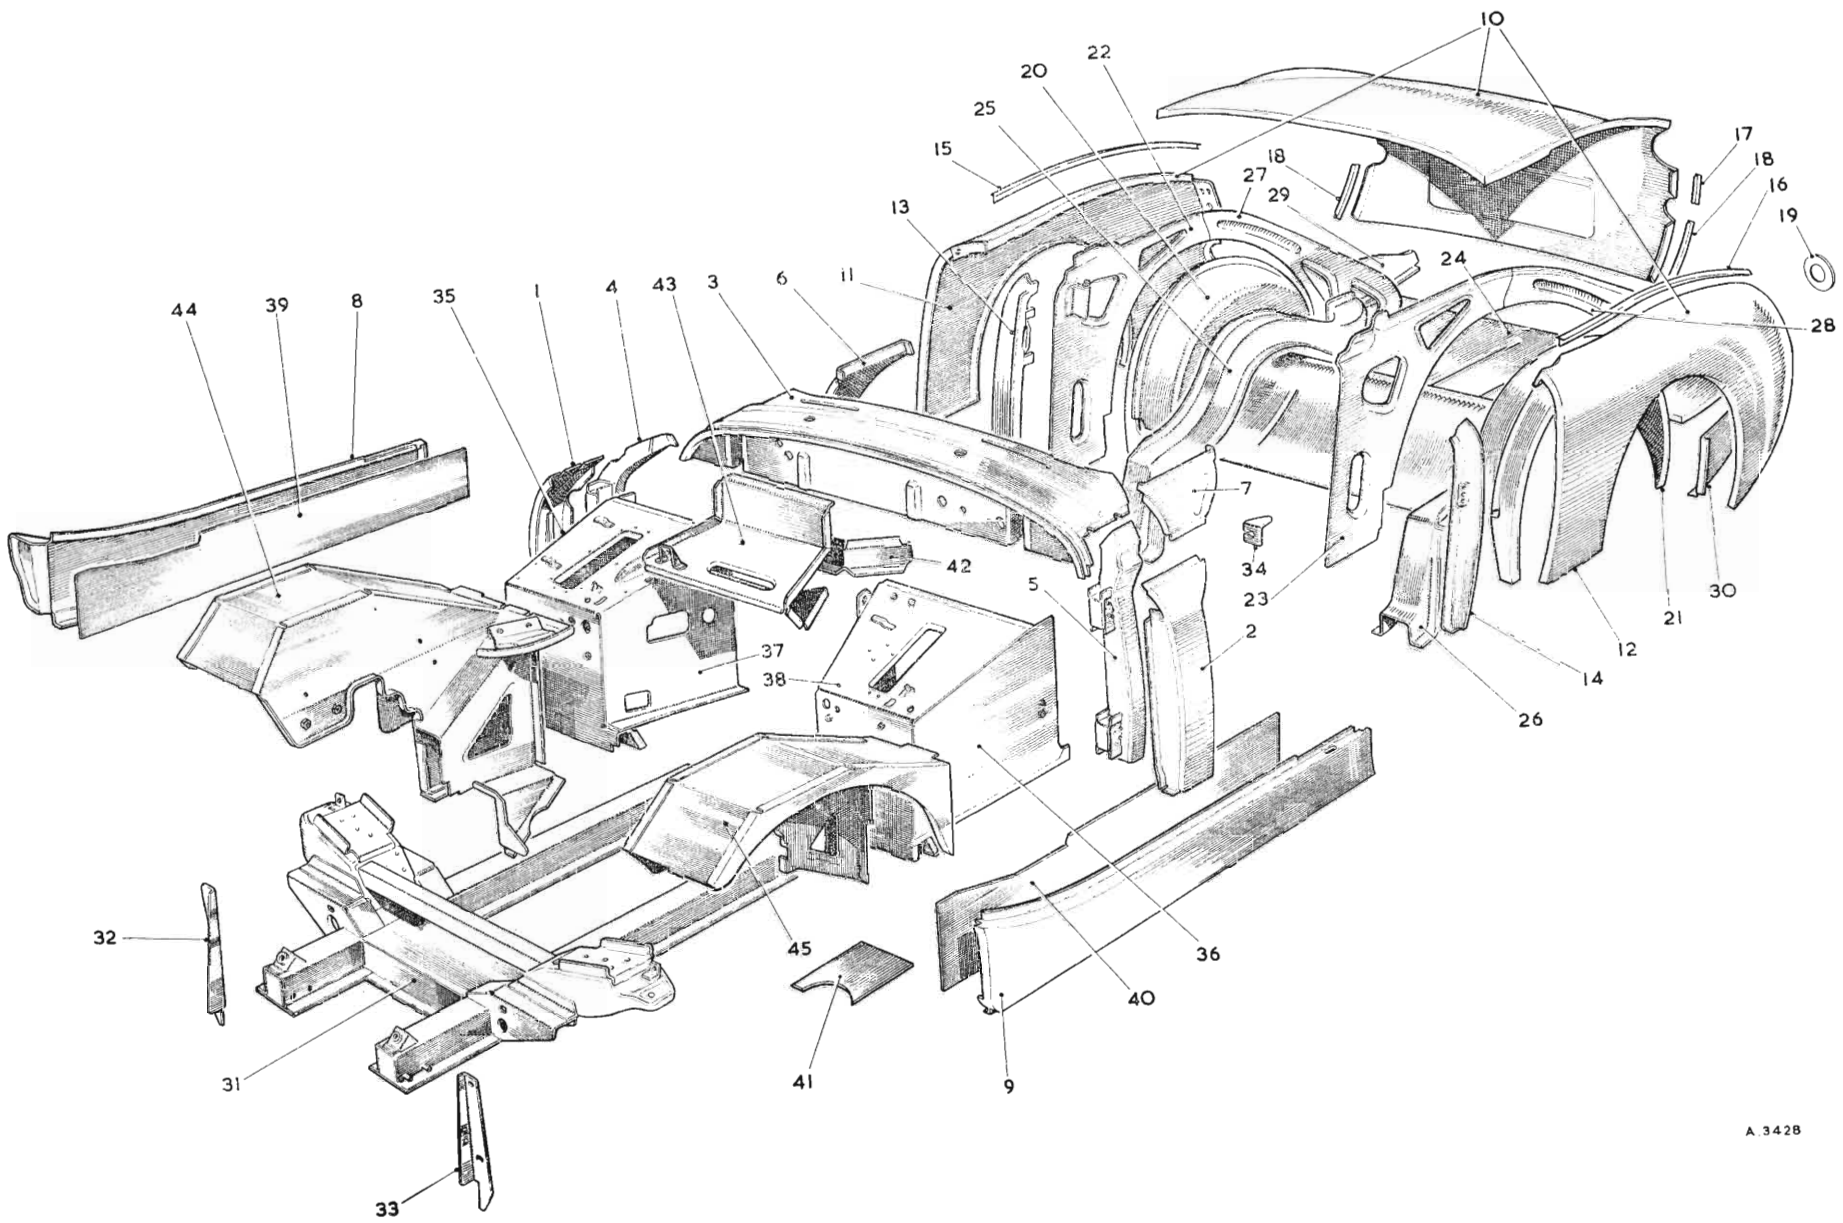


To face page R.2

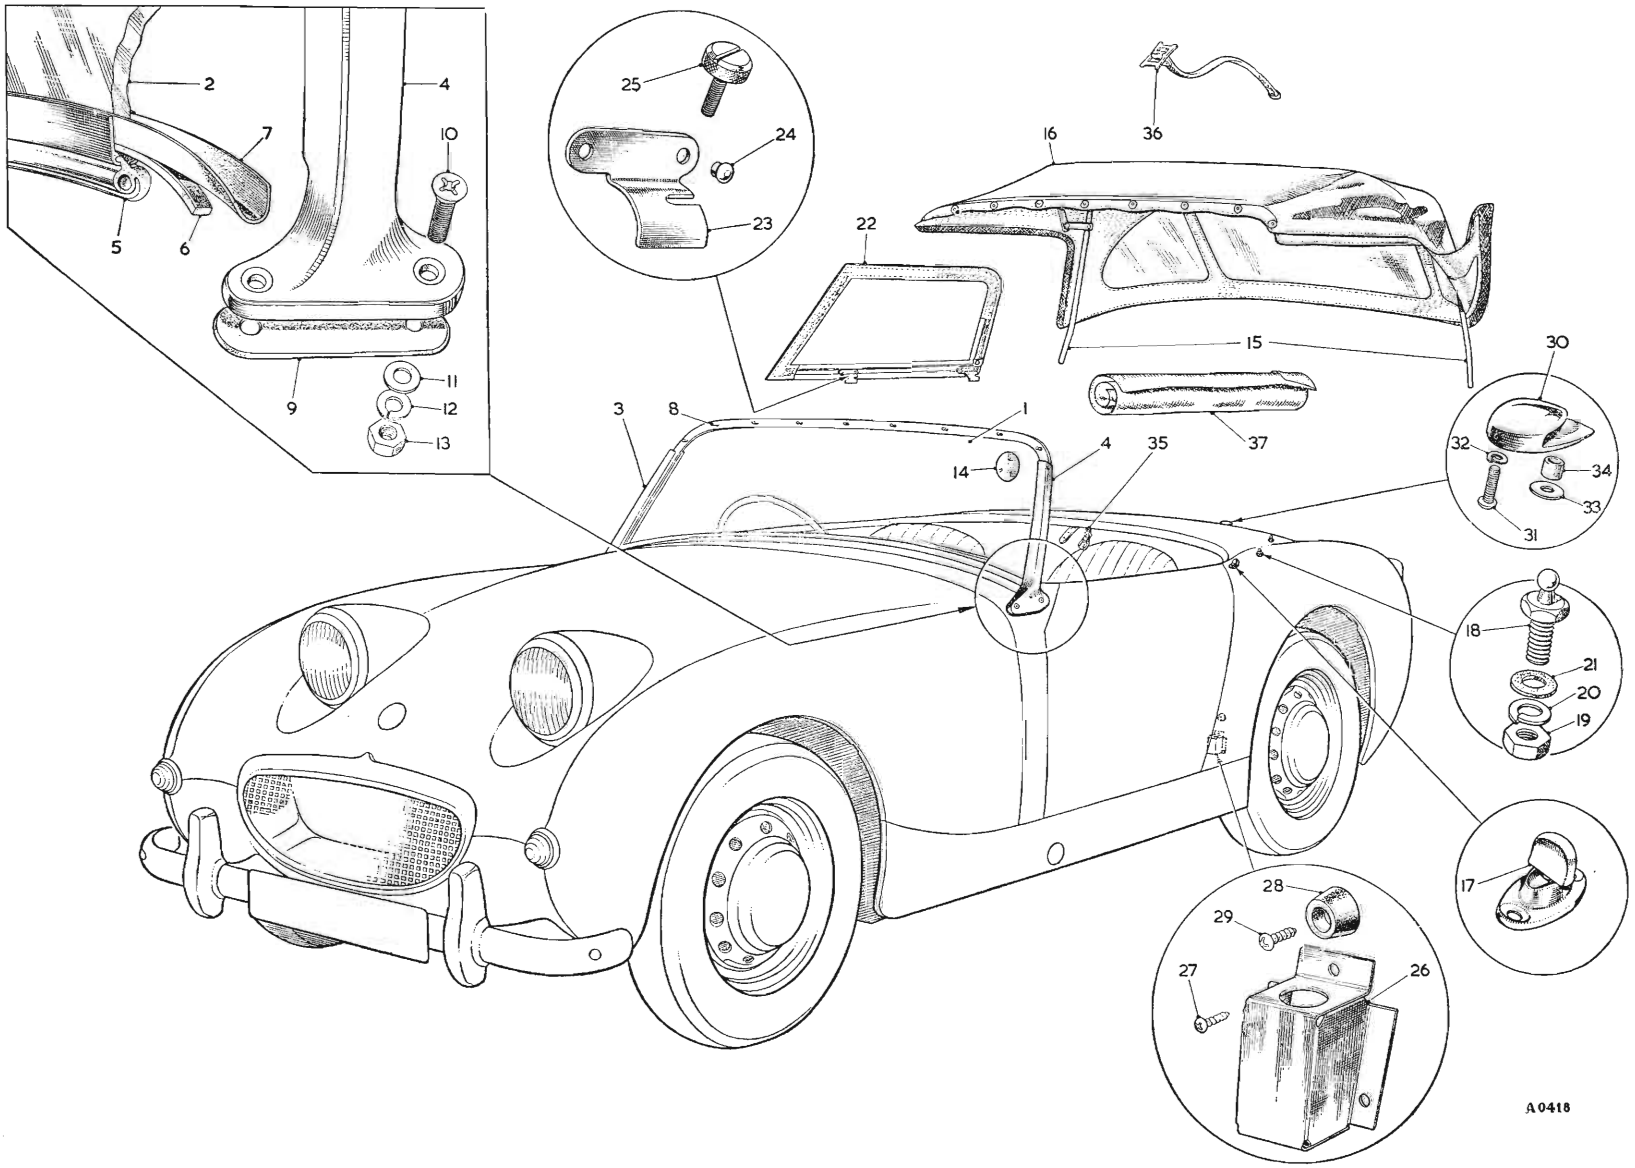


To face page R.3

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	WINDSCREEN										
1	**Windscreen assembly**	**14A4824**	**1**	**1**	**1**			**AHA5314**			
2	**Windscreen assembly (laminated glass)**	**14A4718**		**1**	**1**			**AHA5315**	**Com. (C) 5427 Also 5137, 5287 5288**		**Optional extra**
3	Windscreen glass	14A4805	2	1	1			AHA5316			
4	Windscreen glass (laminated)	14A4719		1	1			AHA5317			Optional extra
5	Pillar (R/H)	14A4723	3	1	1			AHA5319			
6	Pillar (L/H)	14A4724	4	1	1			AHA5320			
7	Weather seal—bottom—windscreen	14A4729	5	1	1				Fin. (C) 5136		
8	Weatherstrip	14A4727	6	1	1				Except		
9	Rubber—glazing	14A4728	7	1	1				5138 to 5286		
10	Channel—top	14A4720		1	1				5289 to 5476		
11	Channel—bottom	14A4721		1	1						
12	**Frame—windscreen**			**1**	**1**			**AHA5318**	**Com. (C) 5477 Also 5137, 5287, 5288**		
13	Bracket—corner angle	14A4722		2	2						
14	Screw—corner angle to channel	CMZ0203		8	8						
15	Angle—side curtain (R/H)	14A4725		1	1				Fin. (C) 5136		
16	Angle—side curtain (L/H)	14A4726		1	1				Except		
17	Screw—side curtain angle to pillar ($\frac{7}{16}$")	RMZ0307		2	2				5138 to 5286		
18	Screw—side curtain angle to pillar ($\frac{1}{2}$")	RMZ0308		4	4				5289 to 5476		
19	Plate—tapped—pillar fixing	14A5472		2	2						
20	Screw—tapped plate to channel	CMZ0203		2	2						
21	Fastener—hood to windscreen	AHA5255	8	9	9						
22	Fastener—hood to windscreen			2	2			37H9719			
23	Nut for fastener			2	2			AJD8012Z	Com. (C) 5477		
24	Rubber—sealing			1	1			AHA5321	Also 5137, 5287,		
25	Rubber—sealing—frame lower			1	1			AHA5322	5288		
26	Screw—pillar to frame			6	6			RMP0410			
27	**Pad—foot seating—R/H (rubber)**	**14A4730**		**1**	**1**						
28	**Pad—foot seating—L/H (rubber)**	**14A5706**	**9**	**1**	**1**						
29	Screw—foot to scuttle	RMZ0520	10	4	4			AHA5486	Com. (C) 14258		For all replacements AHA5486 must be used
30	Washer for foot screw (plain)	PWZ205	11	2	2						
31	Washer for foot screw (spring)	LWZ205	12	2	2	24					
32	Nut for screw	FNZ105	13	2	2						
33	Holder—licence	14A3823	14	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	HOOD AND SIDE CURTAINS										
1	**Frame assembly—hood**	**14A4754**	**15**	**1**	**1**			**AHA5324**	**Com. (C) 5477**		
2	Peg for release catch			2	2			37H9797			
3	**Cover assembly—hood (black)**	**14A4806**	**16**	**1**	**1**			**AHA5323**	**Also 5137, 5287, 5288**		
4	Cover assembly—hood (white)			1	1			AHA5479	Com. (C) 13543		
5	Eyelet	8F2408		2	2						
6	Washer for eyelet	8F2409		2	2						
7	Fastener (lift the dot)	4K9671		9/2	9/2						Quantity reduced at (C) 5477 also 5137, 5287, 5288
8	Plate for fastener	4K9670		9/2	9/2						
9	Fastener—top portion	14B2465		4	4						
10	Button—turn—single	8F2480	17	2	2						
11	Fastener—bottom portion	14B2464	18	4	4						
12	Nut for fastener	FNZ103	19	4	4						
13	Washer for fastener (spring)	LWZ203	20	4	4						
14	Washer for fastener (joint)	2K4936	21	4	4						
15	**Curtain assembly—side—R/H (black)**	**14A5507**	**22**	**1**	**1**			**AHA5264**	**Com. (C) 1606**		
16	**Curtain assembly—side—L/H (black)**	**14A5513**		**1**	**1**			**AHA5265**			
17	Curtain assembly—side—R/H (white			1	1			AHA5480	Com. (C) 13543		
18	Curtain assembly—side—L/H (white)			1	1			AHA5481			
19	Bracket—curtain to door (R/H)	AHA5266	23	2	2						
20	Bracket—curtain to door (L/H)	AHA5267		2	2						
21	Rivet—bracket to curtain	CRS0206	24	8	8						
22	Fastener—durable dot (male)	2H5133		2	2						
23	Fastener—durable dot (female)	2H5134		2	2						
24	Fastener—durable dot (outside portion)	4B6821		2	2						
25	Screw fixing male fastener	CMZ0204		2	2						
26	Screw—bracket to door (special)	14A5521	25	4	4			AHA5263	Com. (C) 1606		
27	Bracket—stowage—hood tubes	14A4879	26	2	2						
28	Screw—stowage bracket to member	PTZ804	27	6	6						
29	Buffer	2H5905	28	2	2						
30	Screw—buffer to member	PTZ805	29	2	2						
31	Retainer—hood cover	14B1730	30	2	2						
32	Screw—retainer to body	PMZ0304	31	4	4						
33	Washer for retainer screw (spring)	LWZ203	32	4	4						
34	Washer for retainer screw—large (plain)	PWZ203	33	2	2						
35	Distance collar—retainer to body	11K5564	34	2	2						
36	Strap assembly—hood frame stowage	14A5492	35	1	1			2K9262	Com. (C) 7454		
37	Strap assembly—fixing—hood stowage	135198	36	2	2						
38	Case—side-curtain	AHA5216	37	1	1						
39	Stikastrip—(hood to windscreen)	AHA5359		1	1				Fin. (C) 5136 Except 5138 to 5286 5289 to 5476		

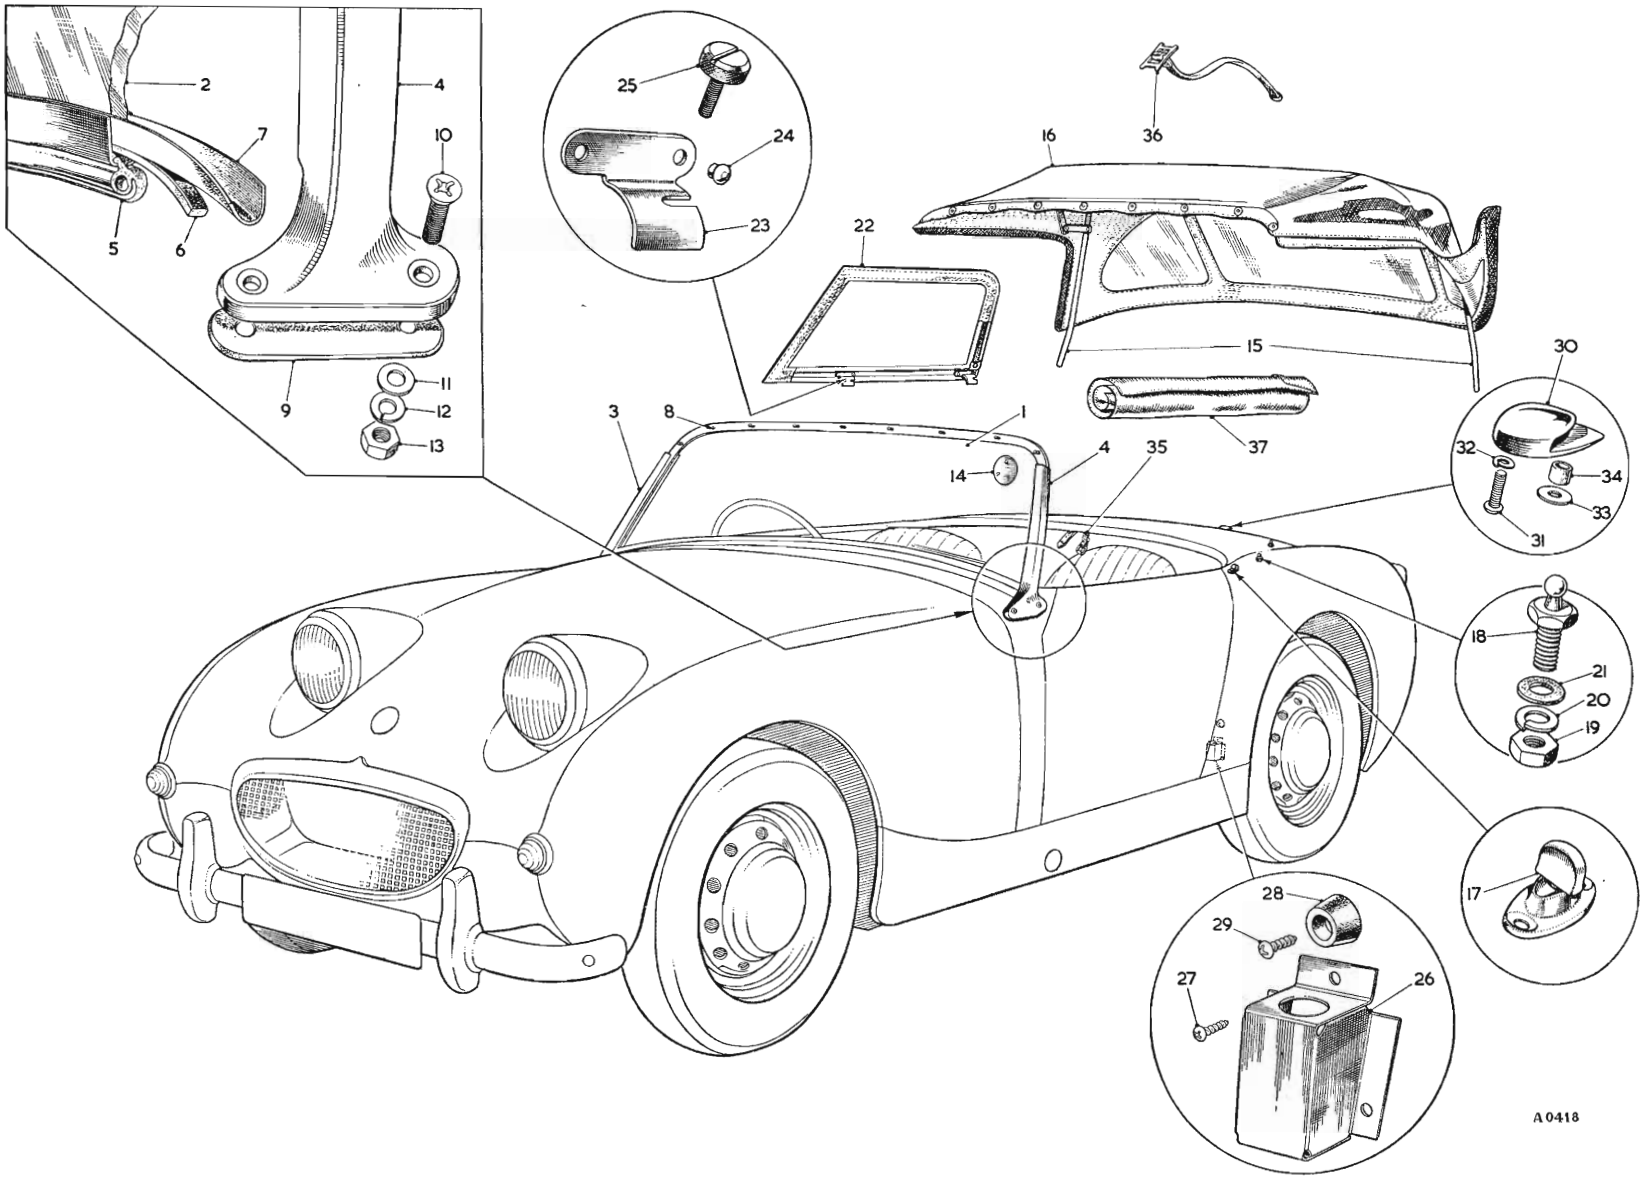


To face page R.4

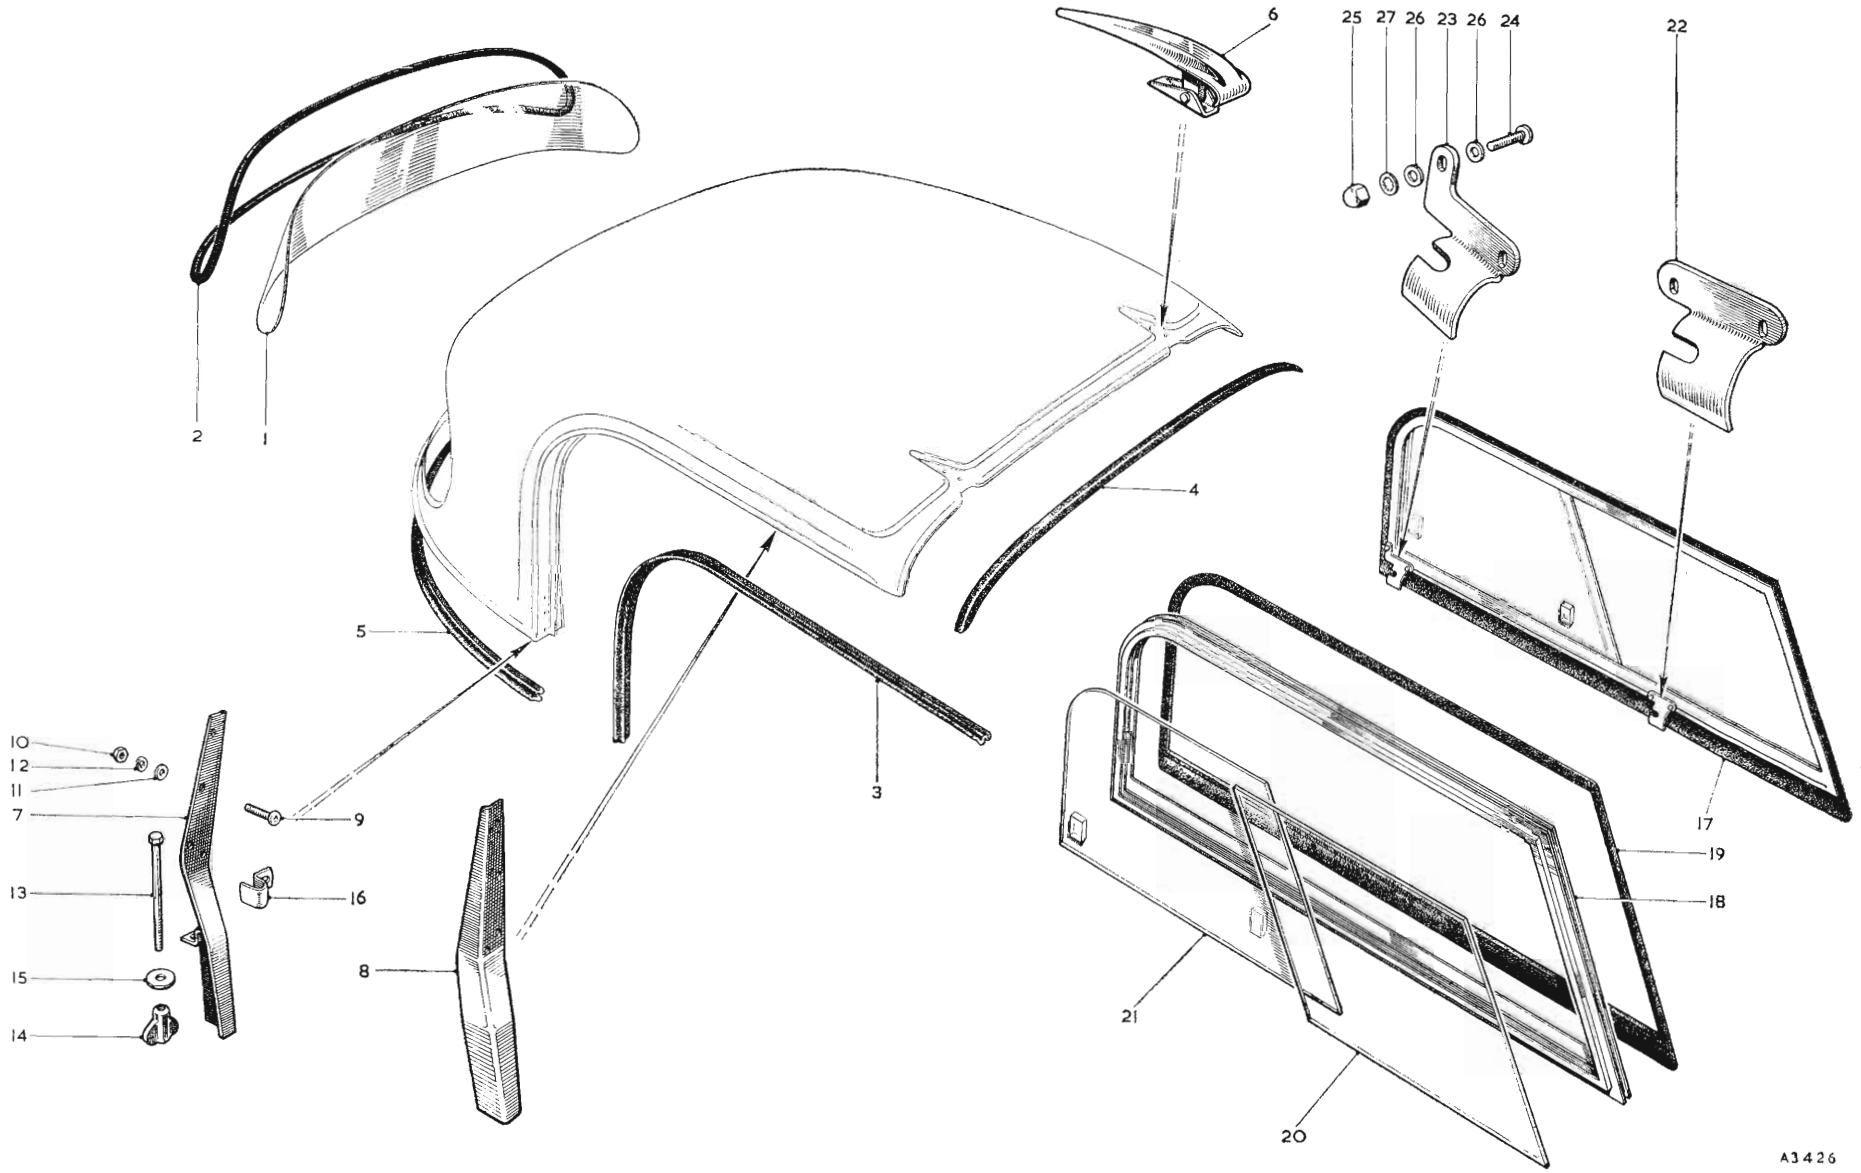


To face page R.5

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	PAU No.	
	HARD TOP (Optional Extra)										
1	**Hard top assembly (ivory white)**			1	1			**AHA5485**			
2	Backlight		1	1	1			37H9803			
3	Rubber—backlight glazing		2	1	1			37H9800			
4	Rubber—cant rail sealing		3	2	2			27H9598			
5	Rubber—header rail sealing		4	1	1			37H9801			
6	Rubber—hard top to body sealing		5	1	1			27H9598			
7	Clamp assembly—toggle		6	2	2			37H9799			
8	Bracket assembly—securing (R/H)		7	1	1			AHA5494	Com. (C) 5477		
9	Bracket assembly—securing (L/H)		8	1	1			AHA5495	Also 5137, 5287,		
10	Screw—bracket to hard top		9	2	2			PMZ0312	5288		
11	Nut for screw		10	2	2			FNZ103			
12	Washer for nut (plain)		11	2	2			PWZ103			
13	Washer for nut (spring)		12	2	2			LWZ203			
14	Bolt—clamp—hard top to body		13	2	2			HBZ0532			
15	Nut for clamp bolt (wing)		14	2	2			24B540			
16	Washer for nut—large (plain)		15	2	2			PWZ206			
17	Clip—sealing rubber retaining		16	2	2			AHA5498			
	SLIDING SIDE-SCREWS (Optional Extra)										
18	**Side-screen assembly—sliding (R/H)**	**AHA5414**		1	1						
19	**Side-screen assembly—sliding (L/H)**	**AHA5415**	**17**	1	1						
20	Frame assembly (R/H)	AHA5416	18	1	1						
21	Frame assembly (L/H)	AHA5417		1	1						
22	Rubber—weathering (R/H)	AHA5418	19	1	1						
23	Rubber—weathering (L/H)	AHA5419		1	1						
24	Window—fixed	AHA5422	20	2	2						
25	Window assembly—sliding (R/H)	AHA5423	21	1	1						
26	Window assembly—sliding (L/H)	AHA5424		1	1						
27	Bracket—front securing (R/H)	AHA5426		1	1						
28	Bracket—front securing (L/H)	AFA5427	22	1	1						
29	Bracket—rear securing (R/H)	AHA5428		1	1						
30	Bracket—rear securing (L/H)	AHA5429	23	1	1						
31	Screw fixing bracket	PMZ0314	24	8	8						
32	Nut for screw (dome)	AHA5430	25	8	8						
33	Washer for nut (plain)	PWZ103	26	16	16						
34	Washer for nut (spring)	LWZ203	27	8	8						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	DOORS—HINGES—LOCKS—TRIM LININGS										
1	**Door assembly—less lock (R/H)**	**14A81**	**1**	**1**	**1**						**When supplying 14A81 and 14A82 for vehicles prior to (C) 1606 always supply in addition 2 off screw AHA5263**
2	**Door assembly—less lock (L/H)**	**14A82**	**2**	**1**	**1**						
3	Hinge assembly—door	14A4677	3	4	4						
4	Screw—hinge to door	PPN0408	4	8	8						
5	Washer for screw (shakeproof)	LWZ504	6	8	8						
6	Washer for hinge screw (plain)	AHA5329	7	8	8						
7	Screw—hinge to body	PPN0408	8	12	12						
8	Washer for hinge screw (lock)	LWZ404	9	12	12						
9	Plug—hinge holes—inner door panel (rubber)	14A716	10	8	8						
10	**Lock assembly—door (R/H)**	**14A4675**	**11**	**1**	**1**			**AHA5455**	**Com. (C) 10344**		
11	**Lock assembly—door (L/H)**	**14A4676**	**12**	**1**	**1**			**AHA5456**			
12	Screw—lock to door	PMZ0308	13	8	8						
13	Washer for lock screw (shakeproof)	LWN603	14	8	8						Correction, was 2K8609
14	**Striker assembly—lock**	**AFH1684**	**15**	**2**	**2**						**Correction, was 14A4672**
15	Plate—cover—striker	14A4673	16	2	2						
16	Screw—striker assembly to post	CPZ0410	17	4	4						
17	**Insert—door panel—R/H (Cherry Red)**	**AHA5122**	**18**	**1**	**1**						
18	Insert—door panel—R/H (Blue)	AHA5123		1	1						
19	Insert—door panel—R/H (Black)	AHA5124		1	1						
20	Insert—door panel—R/H (Green)	AHA5125		1	1						
21	**Insert—door panel—L/H (Cherry Red)**	**AHA5126**	**19**	**1**	**1**						
22	Insert—door panel—L/H (Blue)	AHA5127		1	1						
23	Insert—door panel—L/H (Black)	AHA5128		1	1						
24	Insert—door panel—L/H (Green)	AHA5129		1	1						
25	**Liner assembly—door pocket—R/H (Cherry Red)**	**AHA5050**	**20**	**1**	**1**						
26	Liner assembly—door pocket—R/H (Blue)	AHA5052		1	1						
27	Liner assembly—door pocket—R/H (Black)	AHA5053		1	1						
28	Liner assembly—door pocket—R/H (Green)	AHA5054		1	1						
29	**Liner assembly—door pocket—L/H (Cherry Red)**	**AHA5055**	**21**	**1**	**1**						
30	Liner assembly—door pocket—L/H (Blue)	AHA5057		1	1						
31	Liner assembly—door pocket—L/H (Black)	AHA5058		1	1						
32	Liner assembly—door pocket—L/H (Green)	AHA5059		1	1						
33	Screw—pocket to door			4	4			AHA5412	Com. (C) 6652		
34	Nut for screw			4	4			AHA5413			
35	Washer for nut (clip)			4	4			7699			
36	Rivet—pocket to door	6K9789		4	4						
37	**Strap assembly—door check (Cherry Red)**	**AHA5095**	**22**	2	2						
38	Strap assembly—door check (Blue)	AHA5097		2	2						
39	Strap assembly—door check (Black)	AHA5098		2	2						
40	Strap assembly—door check (Green)	AHA5099		2	2						
41	Retainer—check strap	14A764	23	2	2						
42	Screw for check strap	RMZ0310	24	4	4						

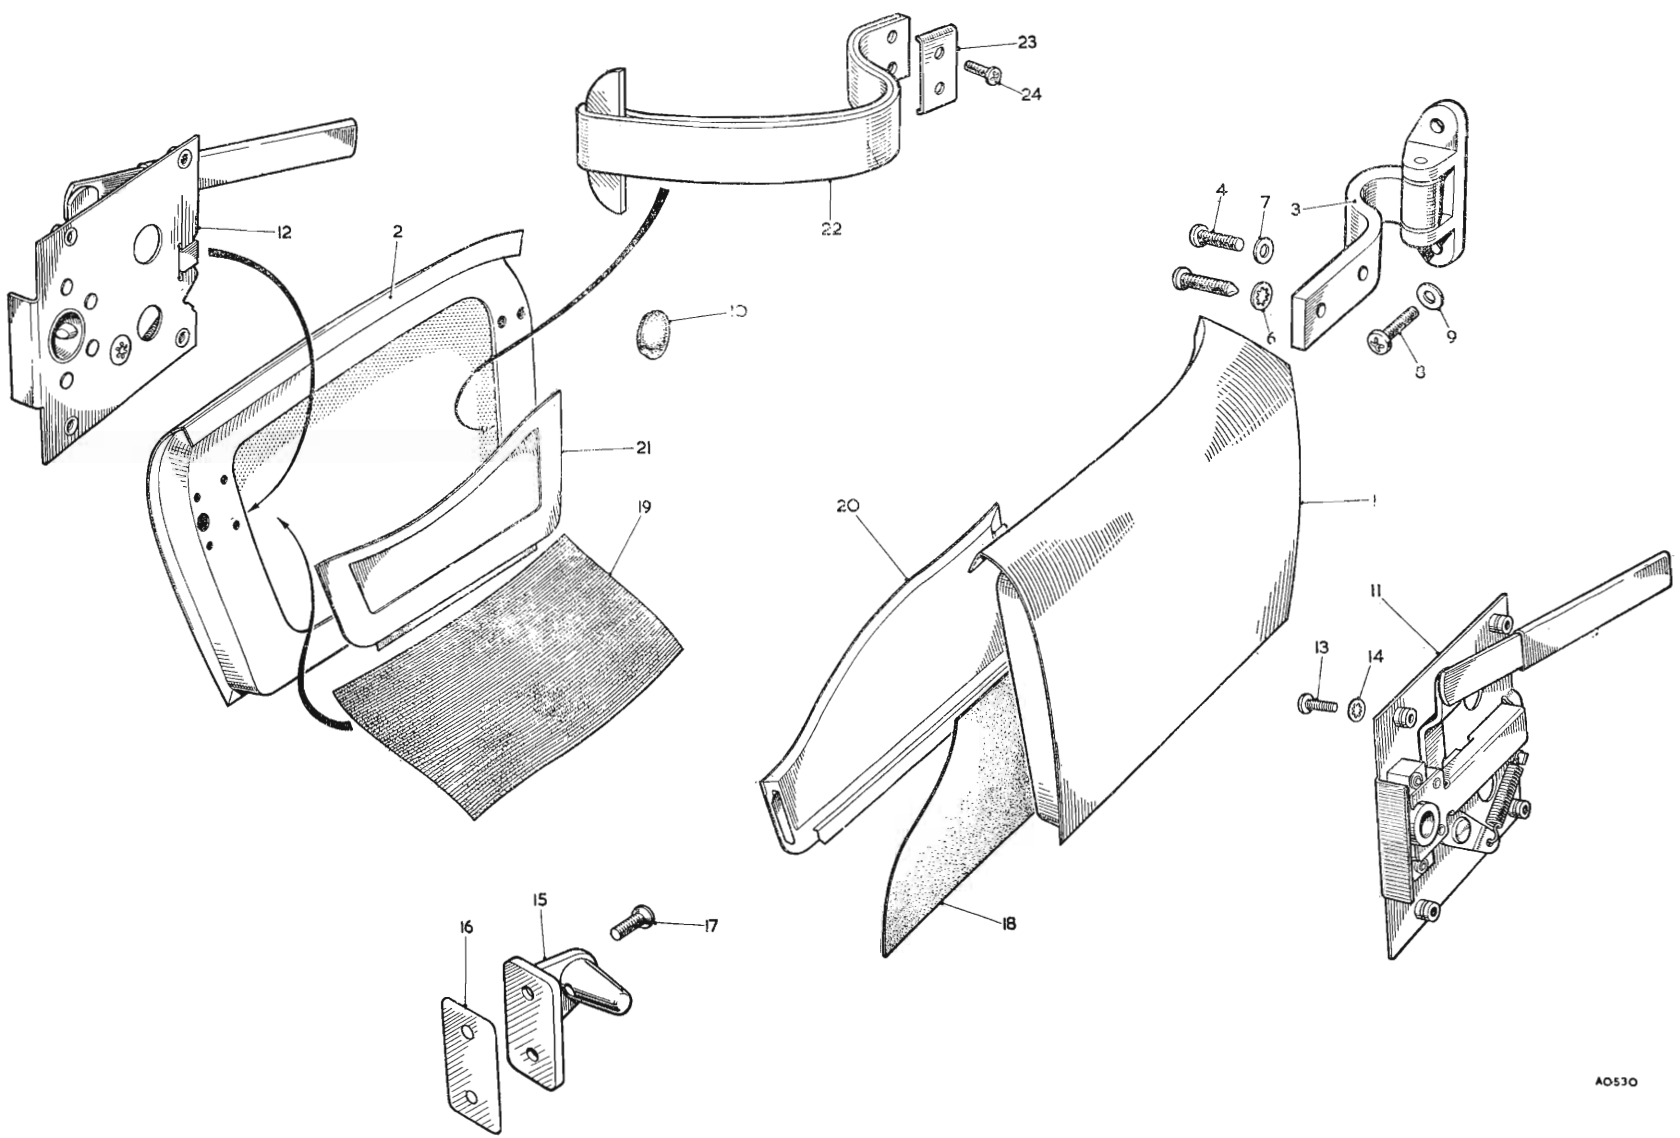


To face page R.6

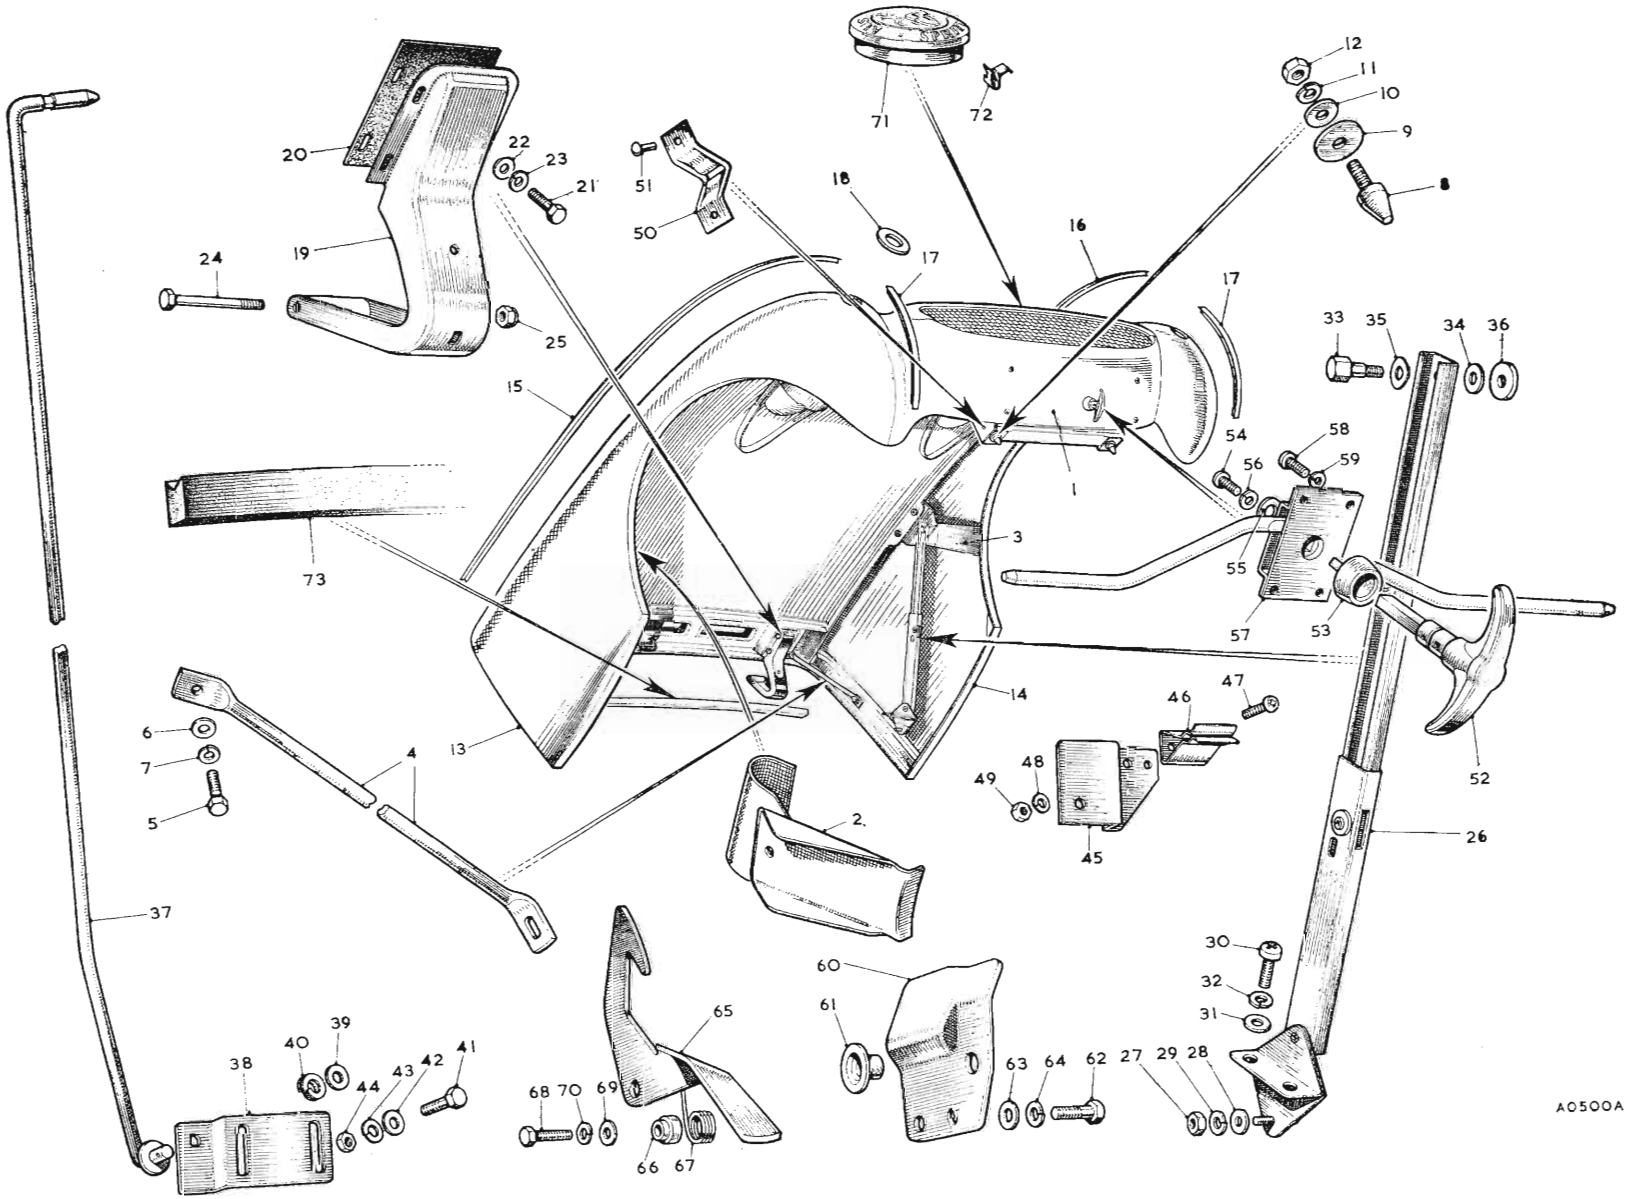


To face page R.7

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	BONNET, WINGS AND FITTINGS										
1	**Bonnet assembly**	**14A84**	**1**	**1**	**1**						
2	**Panel assembly—bonnet front—bottom**	**8G9044**		**1**	**1**			**AHA5155**			
3	Panel—lower—air intake			1	1			AHA5393			For cars prior to 4695 see Austin Service Journal A/55
4	Panel—side—air intake (R/H)			1	1			AHA5394			
5	Panel—side—air intake (L/H)			1	1			AHA5395	Com. (C) 4695		
6	Panel—front—air intake (R/H)			1	1			AHA5396			
7	Panel—front—air intake (L/H)			1	1			AHA5397			
8	Channel—support—bonnet			1	1			AHA5398			
9	Bracket assembly—bonnet stay (R/H)	AHA5164	2	1	1						
10	Bracket assembly—bonnet stay (L/H)	AHA5165	3	1	1						
11	Strut—bonnet	14A4776	4	2	2						
12	Screw—strut to bonnet	HZS0405	5	4	4						
13	Washer for screw (plain)	PWZ104	6	4	4						
14	Washer for screw (spring)	LWZ204	7	4	4						
15	Peg—bonnet locating	14A4733	8	2	2						
16	Washer for locating peg (plain)	53K3423	9	2	2				Fin. (C) 9190		
17	Washer for locating peg (rubber)			2	2			AHA5442	Com. (C) 9191		
18	Washer for locating peg (plain)	53K3427	10	2	2						
19	Washer for locating peg (spring)	LWZ305	11	2	2						
20	Nut for locating peg	FNZ105	12	2	2						
21	**Wing assembly—front (R/H)**	**AHA5162**	**13**	**1**	**1**						
22	**Wing assembly—front (L/H)**	**AHA5163**	**14**	**1**	**1**						
23	Moulding—bonnet top (R/H)	14A4773	15	1	1						
24	Moulding—bonnet top (L/H)	14A4774	16	1	1						
25	Moulding—bonnet lower	14A4775	17	2	2						
26	Filler—lamp	14A4606	18	2	2						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Bonnet, Wings and Fittings—*continued*										
1	**Hinge assembly—bonnet**	**14A4684**	19	**2**	**2**						
2	Packing—bonnet hinge	14A4687	20	2	2						
3	Screw—hinge to bonnet	HZS0405	21	8	8						
4	Washer for hinge screw (plain)	PWZ104	22	8	8	12					
5	Washer for hinge screw (spring)	LWZ204	23	8	8						
6	Bolt—hinge to bulkhead	HBZ0524	24	2	2						
7	Nut for bolt	LNZ205	25	2	2						Use LNZ105
8	Nut for bolt	LNZ105		2	2						
9	**Stay assembly—telescopic—bonnet**	**14A4691**	26	**2**	**2**						
10	Nut—pivot bracket to pedal box side	FNZ103	27	2	2						
11	Washer for nut (plain)	PWZ103	28	2	2						
12	Washer for nut (spring)	LWZ203	29	2	2						
13	Screw—stay bracket to pedal box	PMZ0408	30	4	4						
14	Washer for stay bracket screw (plain)	PWZ104	31	4	4	12					
15	Washer for stay bracket screw (spring)	LWZ204	32	4	4						
16	Bolt for bonnet stay (special)	14A4705	33	2	2						
17	Washer for stay bolt (plain)	PWZ105	34	2	2						
18	Washer for stay bolt (curved)	AWZ105	35	2	2						
19	Washer for stay bolt—brass (plain)	2K9030	36	2	2						
20	**Stay—bonnet—auxiliary**	**AHA5232**	37	**1**	**1**						
21	Bracket—pivot—bonnet stay	AHA5234	38	1	1						
22	Washer—stay to bracket (plain)	PWZ105	39	1	1						
23	Washer—stay to bracket (spring)	AJD7731	40	1	1						
24	Screw—bracket to radiator support (R/H)	HZS0405	41	1	1						
25	Washer for screw (plain)	PWZ104	42	1	1	12					
26	Washer for screw (spring)	LWZ204	43	1	1						
27	Nut for screw	FNZ104	44	1	1						
28	Bracket—clip—bonnet stay	AHA5233	45	1	1						
29	Clip—bonnet stay	AHH5460	46	1	1						
30	Screw—clip to bracket	PMZ0306	47	2	2						
31	Washer for screw (spring)	LWZ203	48	2	2						
32	Nut for screw	FNZ103	49	2	2						
33	Clip—spring	BNK1500	50	1	1						
34	Rivet—clip to bonnet reinforcement	CRS0206	51	2	2						

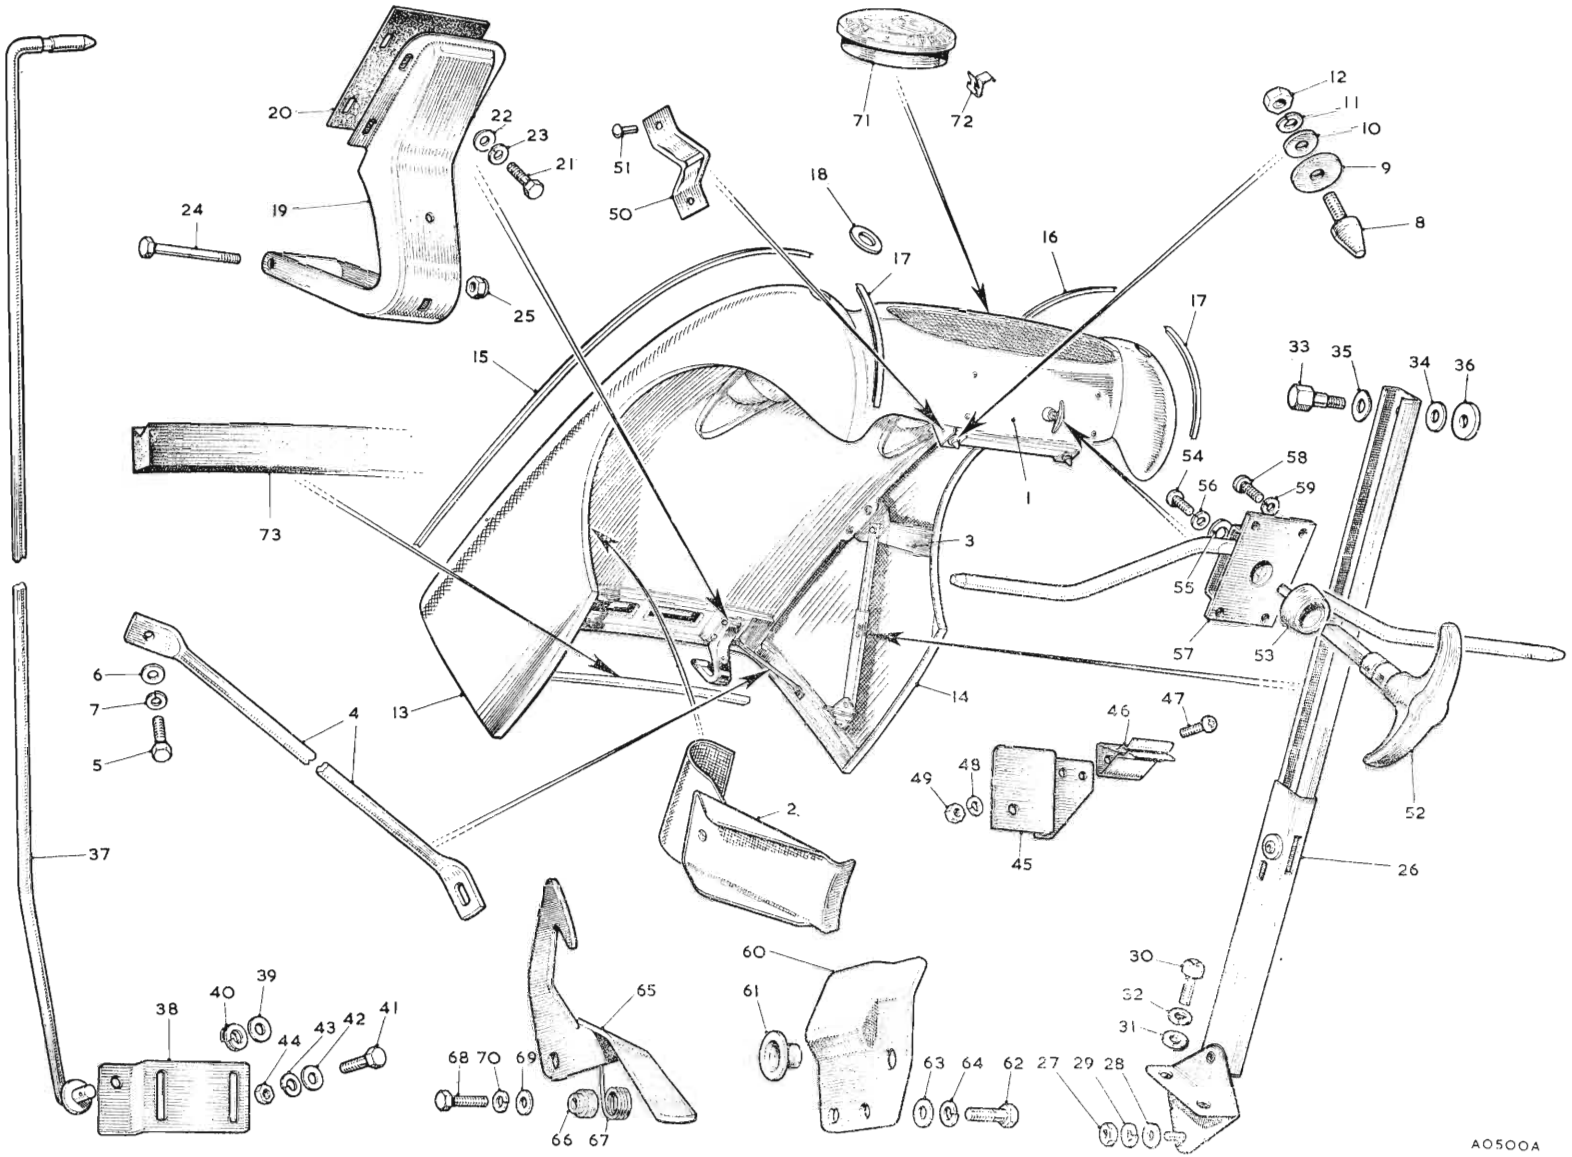


To face page R.8

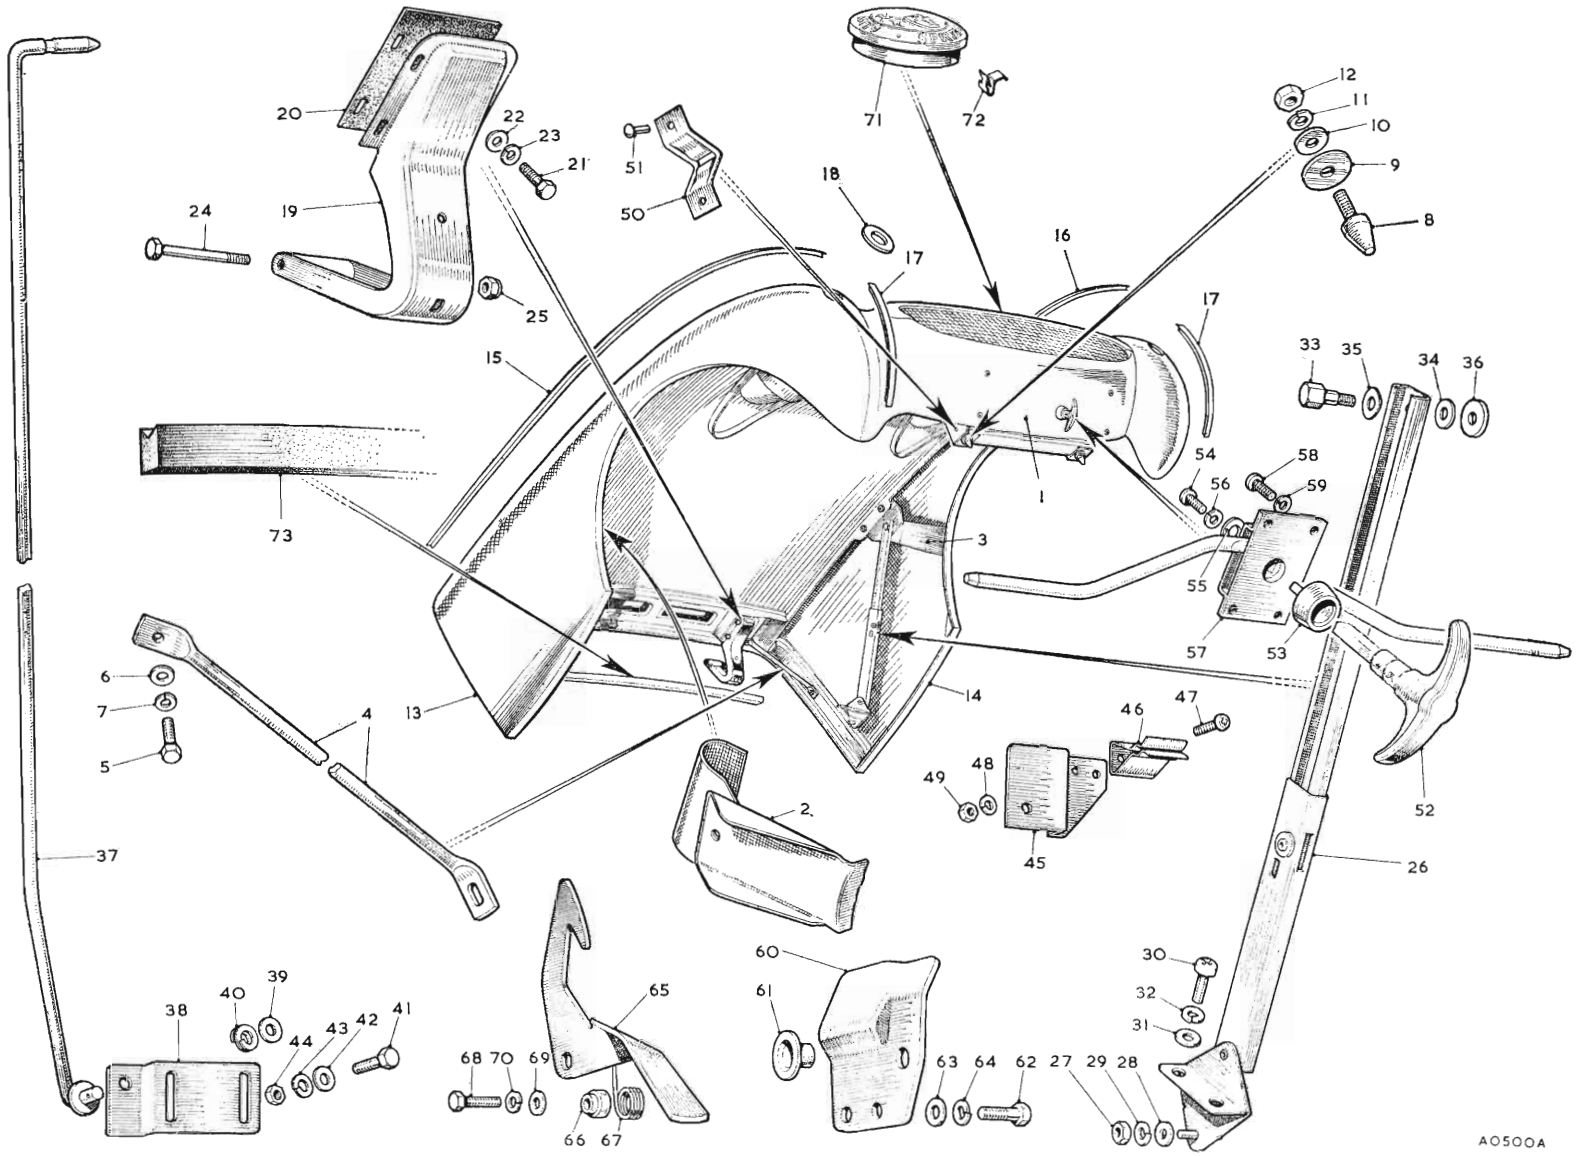


To face page R.9

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	PAU No.	
	Bonnet, Wings and Fittings—*continued*										
1	**Handle—bonnet**	**14A4891**	**52**	**1**	**1**						
2	Escutcheon—handle	14A4892	53	1	1						
3	Screw—handle to lock	6K9833	54	1	1						
4	Washer for screw (plain)	PWZ103	55	1	1						
5	Washer for screw (spring)	LWZ203	56	1	1						
6	**Lock assembly—bonnet**	**14A4712**	**57**	**1**	**1**						
7	Screw—lock to bonnet	PMZ0308	58	4	4						
8	Washer for screw (spring)	LWZ203	59	4	4						
9	**Bracket assembly—bonnet lock striker (R/H)**	**AHA5150**	**60**	**1**	**1**						
10	**Bracket assembly—bonnet lock striker (L/H)**	**AHA5151**		**1**	**1**						
11	Bush—striker plate	14A4714	61	2	2						
12	Screw—bracket to side-member	HNS0405	62	4	4						
13	Washer for screw (plain)	AHA5329	63	4	4						
14	Washer for screw (spring)	LWZ204	64	4	4						
15	**Catch—safety—bonnet**	**14A4707**	**65**	**1**	**1**						
16	Bush—safety catch	14A4708	66	1	1						
17	Spring—safety catch	14A4709	67	1	1			AHA5472	Com. (C) 16151		For all replacements AHA5472 must be used
18	Bolt—safety catch to side-member	HNS0408	68	1	1						
19	Washer for bolt (plain)	AHA5329	69	1	1						
20	Washer for bolt (spring)	LWZ204	70	1	1						
21	**Badge—bonnet top**	**14A4898**	**71**	**1**	**1**						
22	Clip—badge to bonnet top	14A5542	72	3	3						
23	Seal—bonnet sealing	AHA5225	73	1	1						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SEAT AND SEAT FITTINGS										
1	**Squab assembly (Cherry Red) with white piping**	**AHA5040**	**1**	**2**	**2**						
2	Squab assembly (Blue) with light blue piping	AHA5042		2	2						
3	Squab assembly (Black) with yellow piping	AHA5043		2	2				Fin. (C) 9604		
4	Squab assembly—(Black)—with white piping			2	2			AHA5461	Com. (C) 9605		
5	Squab assembly (Green) with green piping	AHA5044		2	2						
6	**Cover assembly—squab (Cherry Red) with white piping**	**AHA5045**		**2**	**2**						
7	Cover assembly—squab (Blue) with light blue piping	AHA5047		2	2						
8	Cover assembly — squab (Black) — with yellow piping	AHA5048		2	2				Fin. (C) 9604		
9	Cover assembly—squab—(Black)—with white piping			2	2			AHA5462	Com. (C) 9605		
10	Cover assembly—squab (Green) with green piping	AHA5049		2	2						
11	Clip—trim	14A4497	2	36	36						
12	Nut—squab to pivot bracket	AHA5219		4	4						
13	Washer for nut (plain)	PWZ205		8	8						
14	**Cushion assembly (Cherry Red) with white piping**	**AHA5030**	**3**	**2**	**2**						
15	Cushion assembly (Blue) with light blue piping	AHA5032		2	2						
16	Cushion assembly (Black) with yellow piping	AHA5033		2	2				Fin. (C) 9604		
17	Cushion assembly—(Black)—with white piping			2	2			AHA5459	Com. (C) 9605		
18	Cushion assembly (Green) with green piping	AHA5034		2	2						
19	**Cover assembly—cushion (Cherry Red)—with white piping**	**AHA5035**		**2**	**2**						
20	Cover assembly—cushion (Blue)—with light blue piping	AHA5037		2	2						
21	Cover assembly—cushion (Black)—with yellow piping	AHA5038		2	2				Fin. (C) 9604		
22	Cover assembly—cushion—(Black)—with white piping			2	2			AHA5460	Com. (C) 9605		
23	Cover assembly—cushion (Green)—with green piping	AHA5039		2	2						
24	**Cushion (foam rubber)**	**14A4787**		**2**	**2**						
25	Clip—trim	14A4497		36	36						

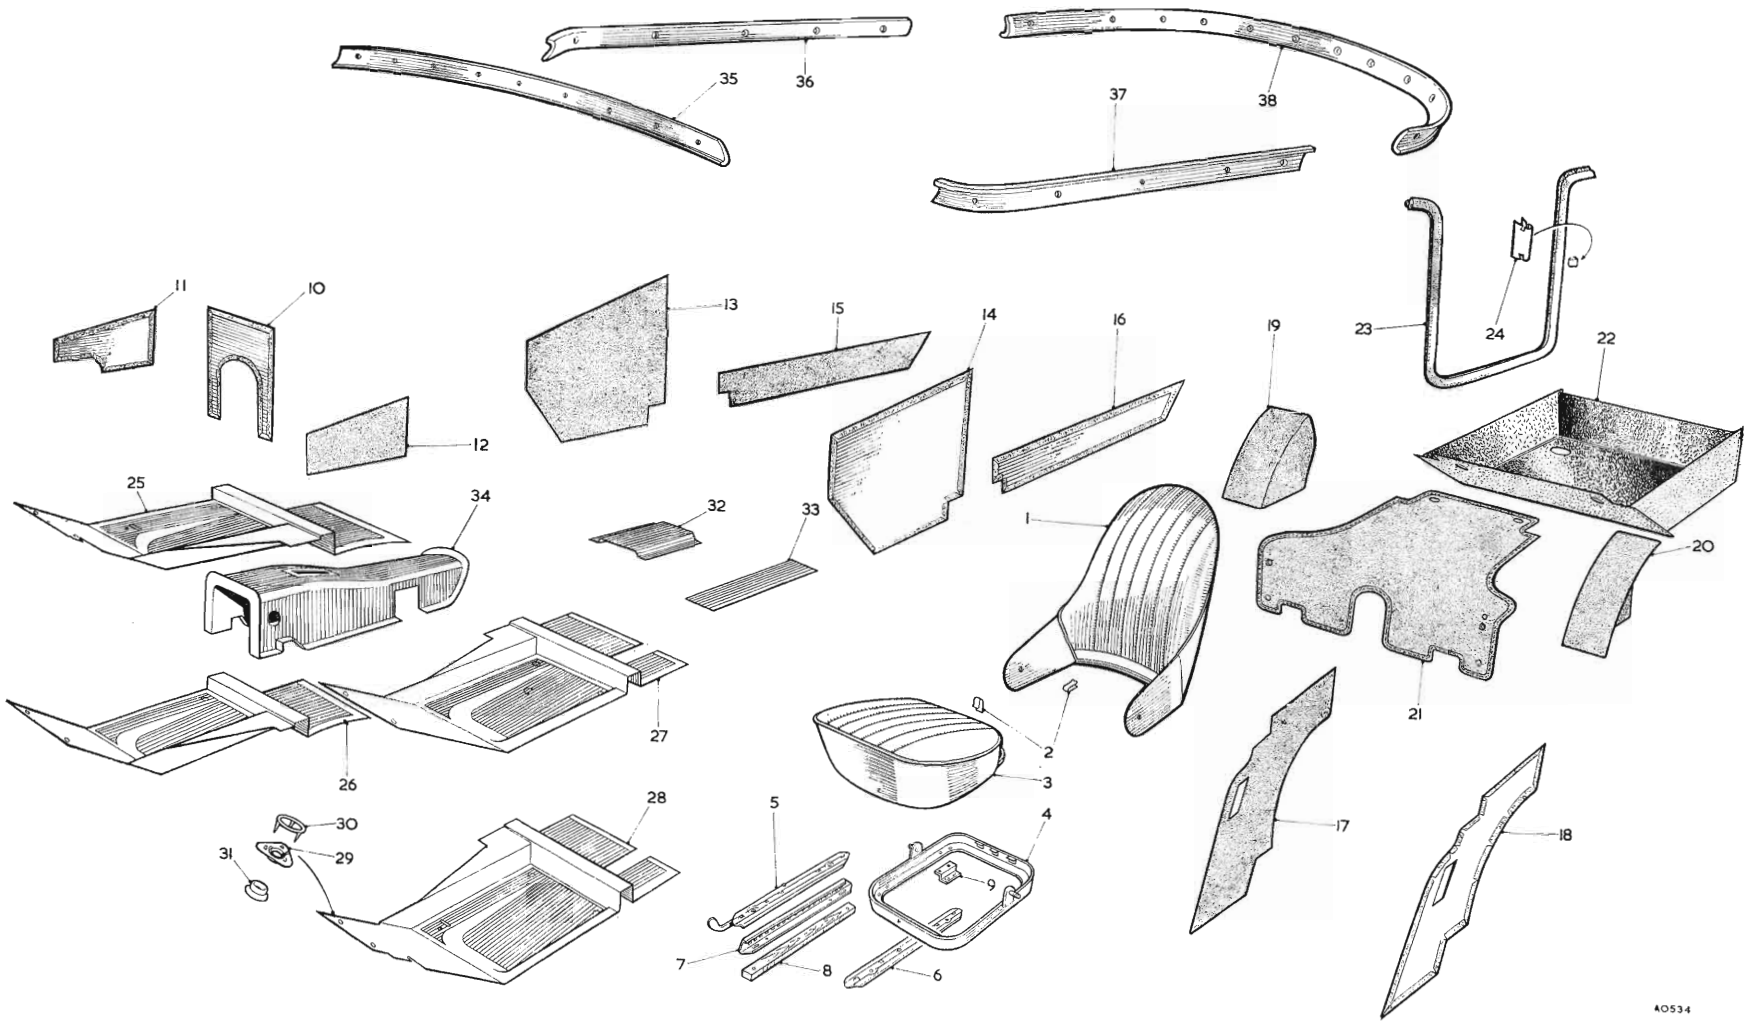


To face page R.10

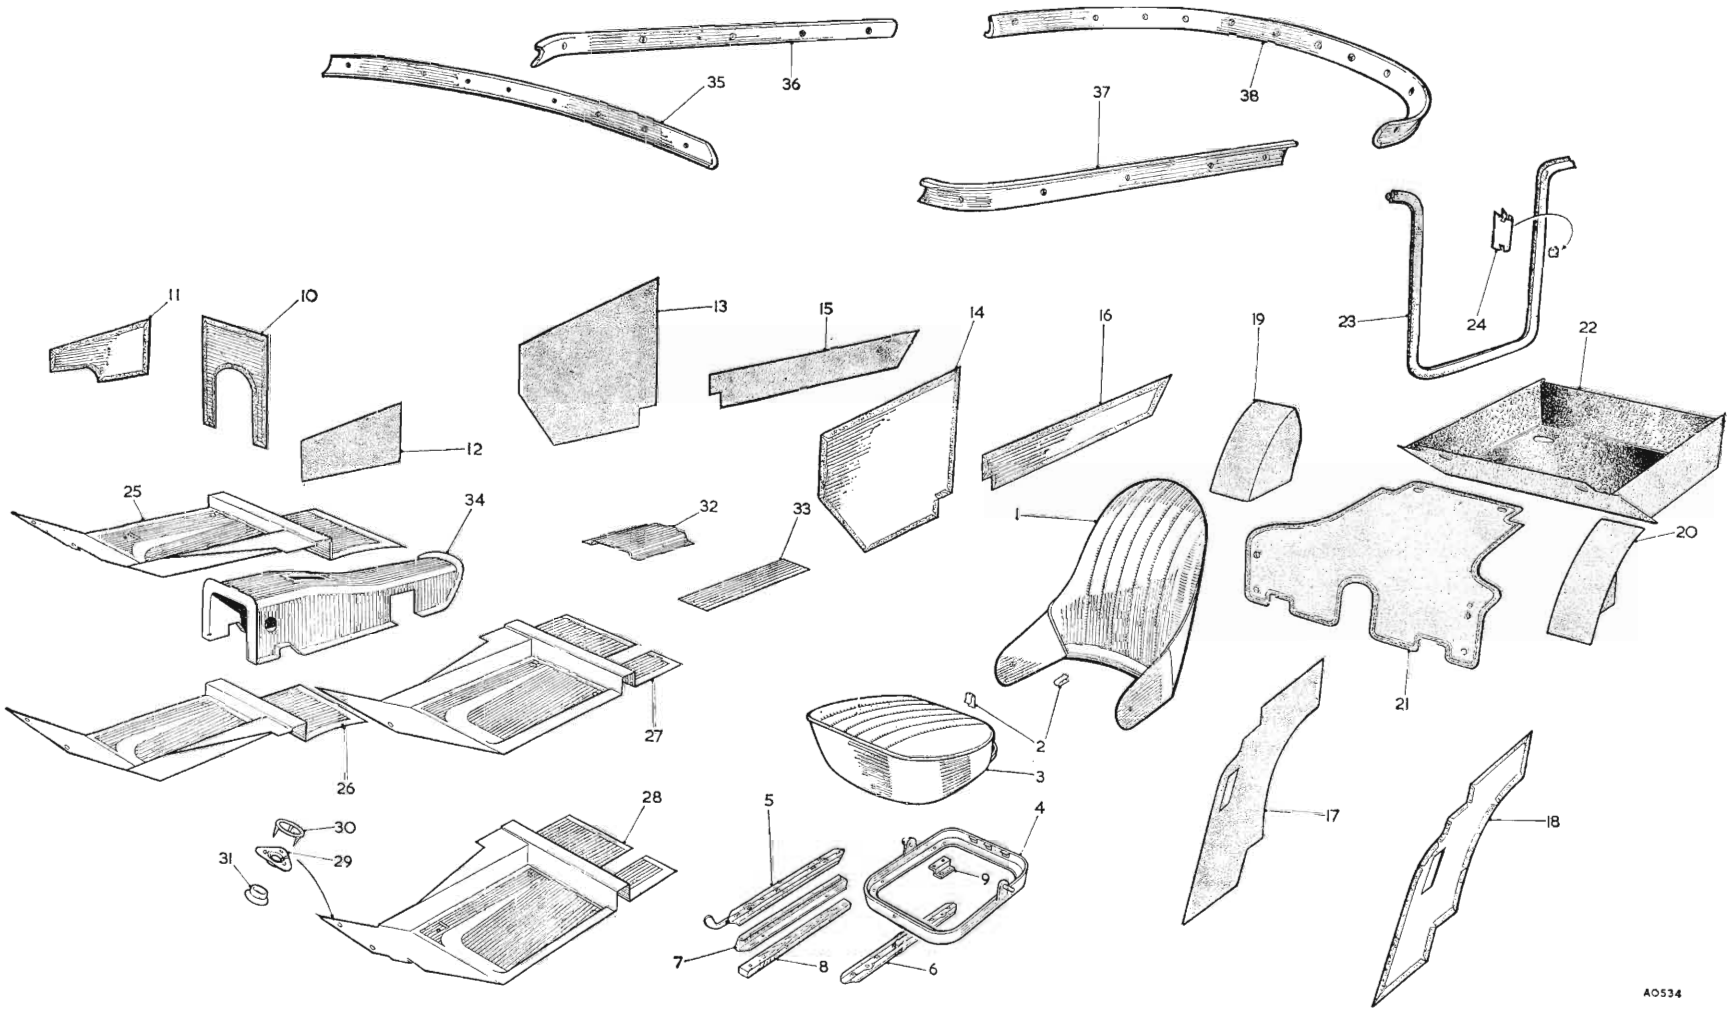


To face page R.11

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Seat and Seat Fittings—*continued.*										
1	**Frame assembly—seat base**	**14A4778**	**4**	**2**	**2**						
2	Runner and handle—seat (top)	14A5519	5	1							
3	Runner and handle—seat (top)	14A5520			1						
4	Runner less handle—seat (top)	4G877	6	1	1						
5	Runner—seat (bottom)	4G878	7	2	2				Fin. (C) 26138		
6	Runner—seat—R/H (bottom)			1	1			AHA5499	Com. (C) 26139		
7	Runner—seat—L/H (bottom)			1	1			AHA5500			
8	Packing—driver's seat runner	AHA5223	8	2	2						
9	Screw—bottom runner to floor	HZS0409		4	4						
10	Washer for screw (plain)	PWZ104		4	4	12					
11	Washer for screw (spring)	LWZ204		4	4						
12	Screw—top runner to seat	CMZ0410		4	4						
13	Washer for screw (spring)	LWZ204		4	4				Fin. (C) 31902		
14	Nut for screw	FNZ104		4	4						
15	Rivet—top runner to seat			4	4			CRS0410	Com. (C) 31903		
16	Bracket support (passenger's seat)	14A4860	9	4	4						
17	Screw—bracket to floor	HZS0406		4	4						
18	Washer for screw (plain)	PWZ104		4	4	12					
19	Washer for screw (spring)	LWZ204		4	4						
20	Screw—bracket to seat	HZS0405		8	8						
21	Washer for screw (spring)	LWZ204		8	8				Fin. (C) 31902		Correction, was LWZ205
22	Nut for screw	FNZ104		8	8						
23	Rivet—bracket to seat			8	8			FRS0408	Com. (C) 31903		

Item No	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	TRIMMING										
1	**Liner assembly—engine front (Cherry Red)**	**AHA5090**	**10**	**1**	**1**						
2	Liner assembly—engine front (Blue)	AHA5092		1	1						
3	Liner assembly—engine front (Black)	AHA5093		1	1						
4	Liner assembly—engine front (Green)	AHA5094		1	1						
5	**Liner assembly—engine side—R/H (Cherry Red)**	**AHA5201**	**11**	**1**	**1**						
6	Liner assembly—engine side—R/H (Blue)	AHA5202		1	1						
7	Liner assembly—engine side—R/H (Black)	AHA5203		1	1						
8	Liner assembly—engine side—R/H (Green)	AHA5204		1	1						
9	**Liner assembly—engine side—L/H (Cherry Red)**	**AHA5205**	**12**	**1**	**1**						
10	Liner assembly—engine side—L/H (Blue)	AHA5206		1	1						
11	Liner assembly—engine side—L/H (Black)	AHA5207		1	1						
12	Liner assembly—engine side—L/H (Green)	AHA5208		1	1						
13	Screw for liner	RTZ606		6	6						
14	Washer for liner screw	7700		6	6						
15	**Liner assembly—scuttle—R/H (Cherry Red)**	**AHA5060**	**13**	**1**	**1**						
16	Liner assembly—scuttle—R/H (Blue)	AHA5062		1	1						
17	Liner assembly—scuttle R/H (Black)	AHA5063		1	1						
18	Liner assembly—scuttle—R/H (Green)	AHA5064		1	1						
19	**Liner assembly—scuttle—L/H (Cherry Red)**	**AHA5065**	**14**	**1**	**1**						
20	Liner assembly—scuttle—L/H (Blue)	AHA5067		1	1						
21	Liner assembly—scuttle—L/H (Black)	AHA5068		1	1						
22	Liner assembly—scuttle—L/H (Green)	AHA5069		1	1						
23	Screw for liner	RTZ606		4	4						
24	Washer for liner screw	7700		4	4						
25	Screw for liner to 'A' post	CMZ0308		2	2						
26	Washer for liner screw	7698		2	2						
27	Washer for liner screw (spring)	LWZ203		2	2						
28	Nut for screw	FNZ103		2	2						
29	**Liner assembly—sill—R/H (Cherry Red)**	**AHA5100**	**15**	**1**	**1**						
30	Liner assembly—sill—R/H (Blue)	AHA5102		1	1						
31	Liner assembly—sill—R/H (Black)	AHA5103		1	1						
32	Liner assembly—sill—R/H (Green)	AHA5104		1	1						
33	Screw for liner	RTZ606		2	2						
34	Screw for liner	RTZ604		3	3						
35	Washer for liner screw	7700		5	5						
36	**Liner assembly—sill—L/H (Cherry Red)**	**AHA5105**	**16**	**1**	**1**						
37	Liner assembly—sill—L/H (Blue)	AHA5107		1	1						
38	Liner assembly—sill—L/H (Black)	AHA5108		1	1						
39	Liner assembly—sill—L/H (Green)	AHA5109		1	1						
40	Screw for liner	RTZ604		5	5						
41	Washer for liner screw	7700		5	5						

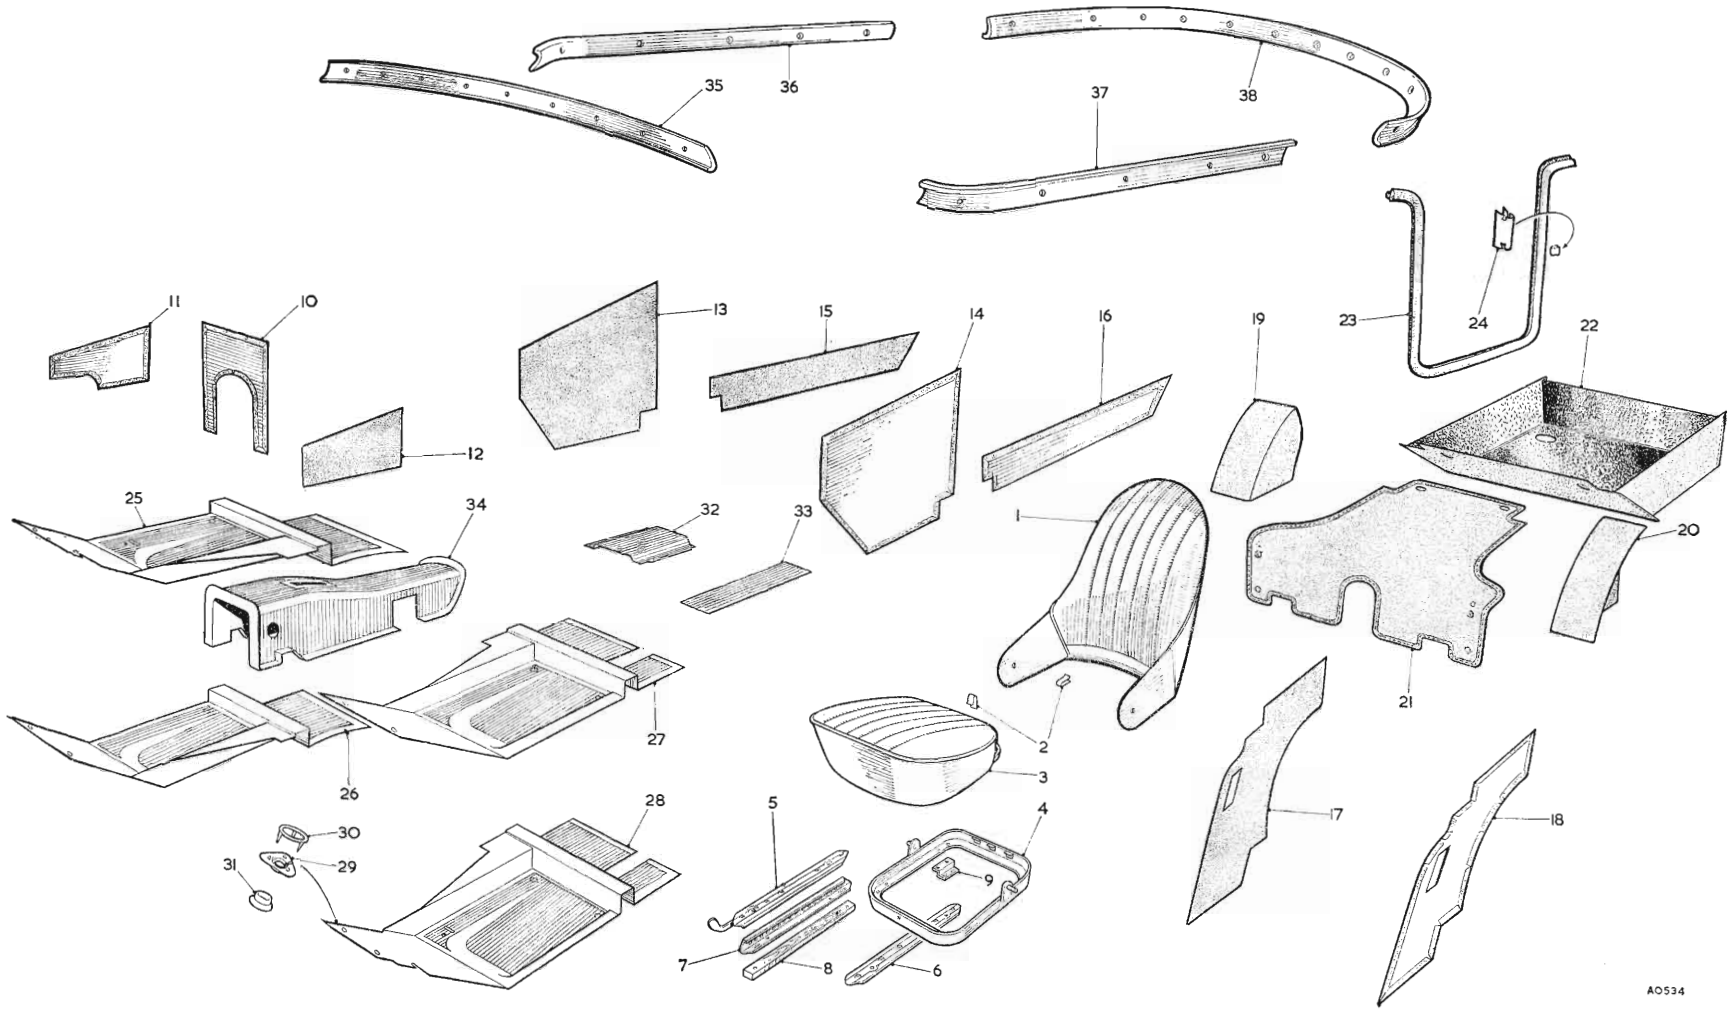


To face page R.12

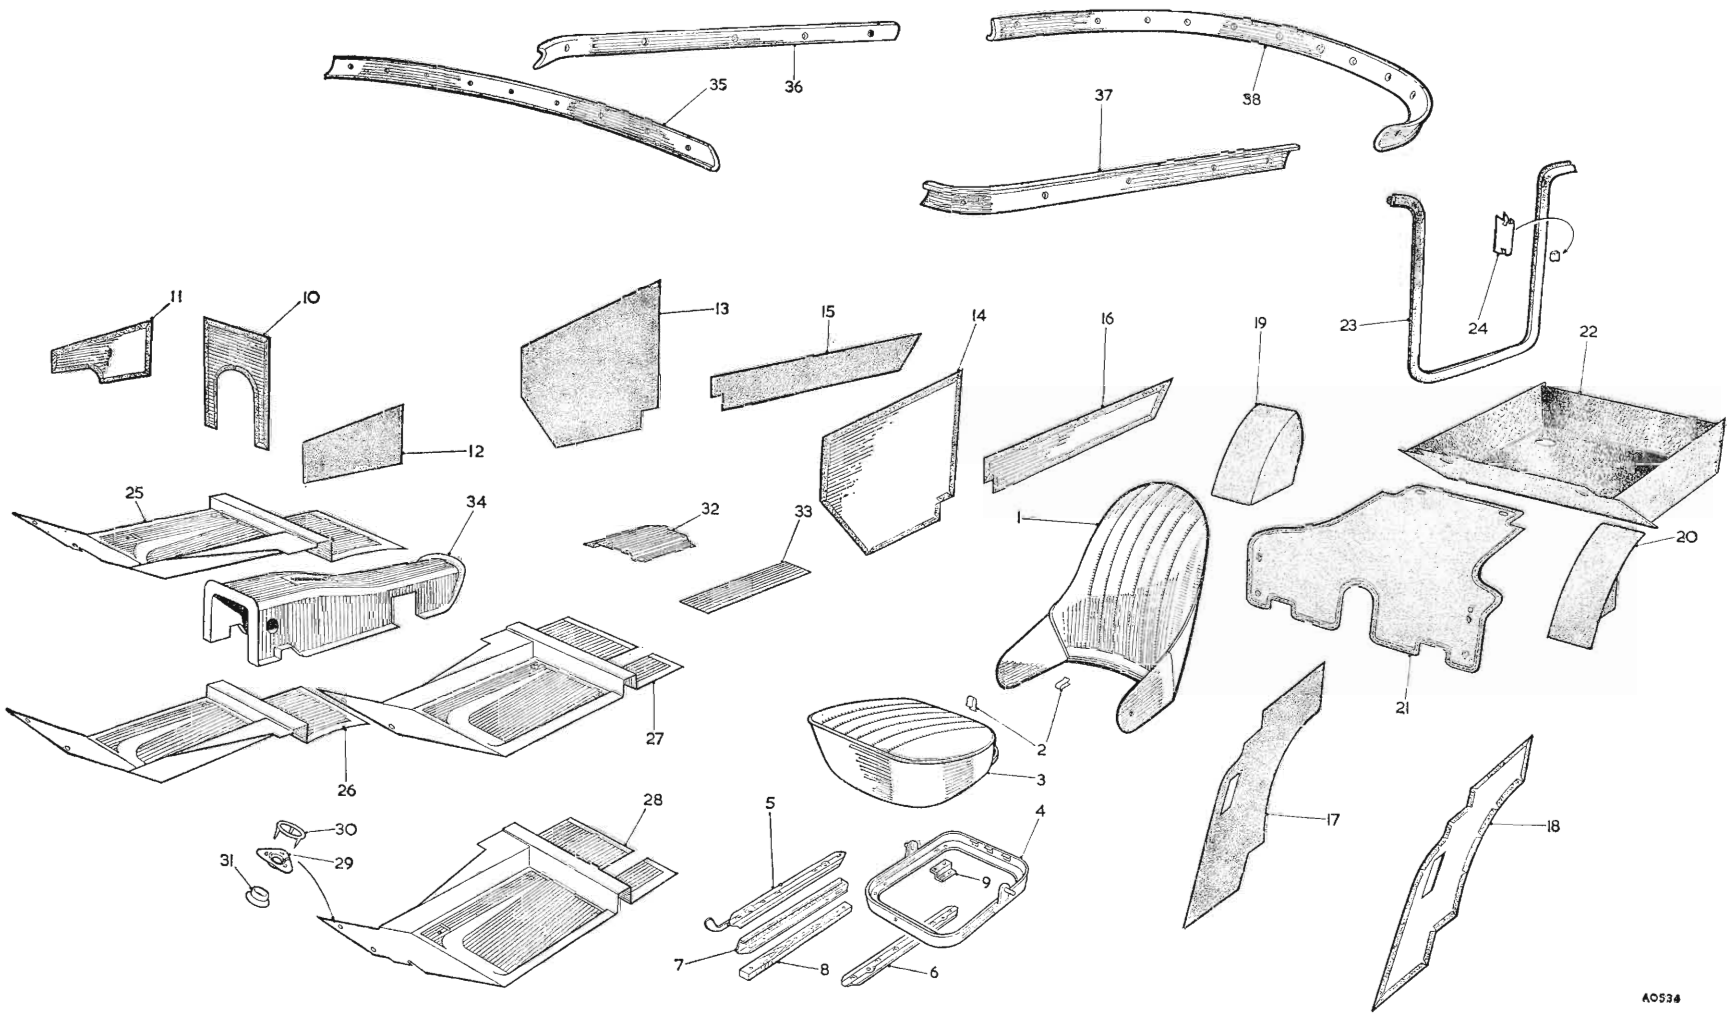


To face page R.13

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Trimming—*continued*										
1	**Liner assembly—rear quarter—R/H (Cherry Red)**	**AHA5070**	**17**	**1**	**1**						
2	Liner assembly—rear quarter—R/H (Blue)	AHA5072		1	1						
3	Liner assembly—rear quarter—R/H (Black)	AHA5073		1	1						
4	Liner assembly—rear quarter—R/H (Green)	AHA5074		1	1						
5	Screw for liner	RTZ606		3	3						
6	Screw for liner	RTZ604		3	3						
7	Washer for liner screw	7700		6	6						
8	**Liner assembly—rear quarter—L/H (Cherry Red)**	**AHA5075**	**18**	**1**	**1**						
9	Liner assembly—rear quarter—L/H (Blue)	AHA5077		1	1						
10	Liner assembly—rear quarter—L/H (Black)	AHA5078		1	1						
11	Liner assembly—rear quarter—L/H (Green)	AHA5079		1	1						
12	Screw for liner	RTZ604		5	5						
13	Screw for liner	RTZ606		1	1						
14	Washer for liner screw	7700		6	6						
15	**Liner assembly—wheel arch—R/H (Cherry Red)**	**AHA5080**	**19**	**1**	**1**			**AHA5371**			
16	Liner assembly—wheel arch—R/H (Blue)	AHA5082		1	1			AHA5372			
17	Liner assembly—wheel arch—R/H (Black)	AHA5083		1	1			AHA5373			
18	Liner assembly—wheel arch—R/H (Green)	AHA5084		1	1			AHA5374			
19	**Liner assembly—wheel arch—L/H (Cherry Red)**	**AHA5085**	**20**	**1**	**1**			**AHA5375**			
20	Liner assembly—wheel arch—L/H (Blue)	AHA5087		1	1			AHA5376	Com. (C) 4333 except 4471, 4622, 4680, 4684		
21	Liner assembly—wheel arch—L/H (Black)	AHA5088		1	1			AHA5377			
22	Liner assembly—wheel arch—L/H (Green)	AHA5089		1	1			AHA5378			
23	**Liner assembly—heelboard (Cherry Red)**	**AHA5110**	**21**	**1**	**1**			**AHA5379**			
24	Liner assembly—heelboard (Blue)	AHA5111		1	1			AHA5380			
25	Liner assembly—heelboard (Black)	AHA5112		1	1			AHA5381			
26	Liner assembly—heelboard (Green)	AHA5113		1	1			AHA5382			
27	Carpet fastener assembly	ADA2889		4	4						
28	Dot fastener—heelboard liner	ADB4811		4/3	4/3						Quantity reduced at (C) 4333 except 4471, 4622, 4680, 4684
29	Screw for fastener	CTZ604		4/3	4/3						
30	Washer for fastener screw	ADA2765		4/3	4/3						
31	**Liner assembly—boot floor (Cherry Red)**	**AHA5114**	**22**	**1**	**1**			**AHA5383**	**Com. (C) 4333** except 4471, 4622, 4680, 4684		
32	Liner assembly—boot floor (Blue)	AHA5115		1	1			AHA5384			
33	Liner assembly—boot floor (Black)	AHA5116		1	1			AHA5385			
34	Liner assembly—boot floor (Green)	AHA5117		1	1			AHA5386			
35	Carpet fastener assembly	ADA2889		4	4						
36	Dot fastener—boot floor liner	ADB4811		4/3	4/3						Quantity reduced at (C) 4333 except 4471, 4622, 4680, 4684
37	Screw for fastener	CTZ604		4/3	4/3						
38	Washer for fastener screw	ADA2765		4/3	4/3						
39	**Liner—rear boot side—R/H (Grey)**			**1**	**1**			**AHA5355**	Com. (C) 4333 Except 4471, 4622, 4680, 4684		
40	Liner—rear boot side—L/H (Grey)			1	1			AHA5356			
41	Screw for liner			2	2			RTZ604			
42	Washer for liner screw (cup)			2	2			7700			
43	**Leathercloth—50 wide (Cherry Red)**	**AHA5005**		**A/R**	**A/R**						
44	Leathercloth—50 wide (Blue)	AHA5006		A/R	A/R						
45	Leathercloth—50 wide (Black)	AHA5007		A/R	A/R						
46	Leathercloth—50 wide (Green)	AHA5008		A/R	A/R						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	DRAUGHT EXCLUDERS										
1	**Draught excluder—door (Cherry Red)**	**AHA5118**	23	2	2			3TH995			
2	Draught excluder—door (Blue)	AHA5119		2	2						
3	Draught excluder—door (Black)	AHA5120		2	2						
4	Draught excluder—door (Green)	AHA5121		2	2						
5	Clip—draught excluder	14G5716	24	64	64						
6	Clip—draught excluder	PCR0709		2	2						
7	Washer for clip (plain)	PWZ203		2	2						
8	Screw—draught excluder to top rear of door	RTZ606		2	2						
9	Washer for screw	7700		2	2						
	FLOOR MATS										
10	**Mat assembly—front—R/H (Cherry Red)**	**AHA5130**	25	1							
11	Mat assembly—front—R/H (Blue)	AHA5131		1							
12	Mat assembly—front—R/H (Black)	AHA5132		1							
13	Mat assembly—front—R/H (Green)	AHA5133		1							
14	**Mat assembly—front—R/H (Cherry Red)**	**AHA5240**	26		1						
15	Mat assembly—front—R/H (Blue)	AHA5241			1						
16	Mat assembly—front—R/H (Black)	AHA5242			1						
17	Mat assembly—front—R/H (Green)	AHA5243			1						
18	**Mat assembly—front—L/H (Cherry Red)**	**AHA5134**	27	1							
19	Mat assembly—front—L/H (Blue)	AHA5135		1							
20	Mat assembly—front—L/H (Black)	AHA5136		1							
21	Mat assembly—front—L/H (Green)	AHA5137		1							
22	**Mat assembly—front—L/H (Cherry Red)**	**AHA5244**	28		1						
23	Mat assembly—front—L/H (Blue)	AHA5245			1						
24	Mat assembly—front—L/H (Black)	AHA5246			1						
25	Mat assembly—front—L/H (Green)	AHA5247			1						
26	Fastener—mat	2H8445	29	14	14						
27	Ring for mat fastener	14G8736	30	14	14						
28	Dot fastener—mat	ADB4811	31	14	14						
29	Screw for fastener	CTZ604		14	14						
30	Washer for fastener screw	ADA2765		14	14						
31	**Mat assembly—longitudinal member (Cherry Red)**	**AHA5248**	32	2	2				**Fin. (C) 21546**		
32	Mat assembly—longitudinal member (Blue)	AHA5249		2	2				Fin. (C) 26185		
33	Mat assembly—longitudinal member (Black)	AHA5250		2	2				Fin. (C) 26464		
34	Mat assembly—longitudinal member (Green)	AHA5251		2	2						
35	**Cover—floor—side (Cherry Red)**	**AHA5259**	33	2	2						
36	Cover—floor—side (Blue)	AHA5260		2	2						
37	Cover—floor—side (Black)	AHA5261		2	2						
38	Cover—floor—side (Green)	AHA5262		2	2						
39	**Mat assembly—gearbox and tunnel (Cherry Red)**	**AHA5138**	34	1	1						
40	Mat assembly—gearbox and tunnel (Blue)	AHA5139		1	1						
41	Mat assembly—gearbox and tunnel (Black)	AHA5140		1	1						
42	Mat assembly—gearbox and tunnel (Green)	AHA5141		1	1						

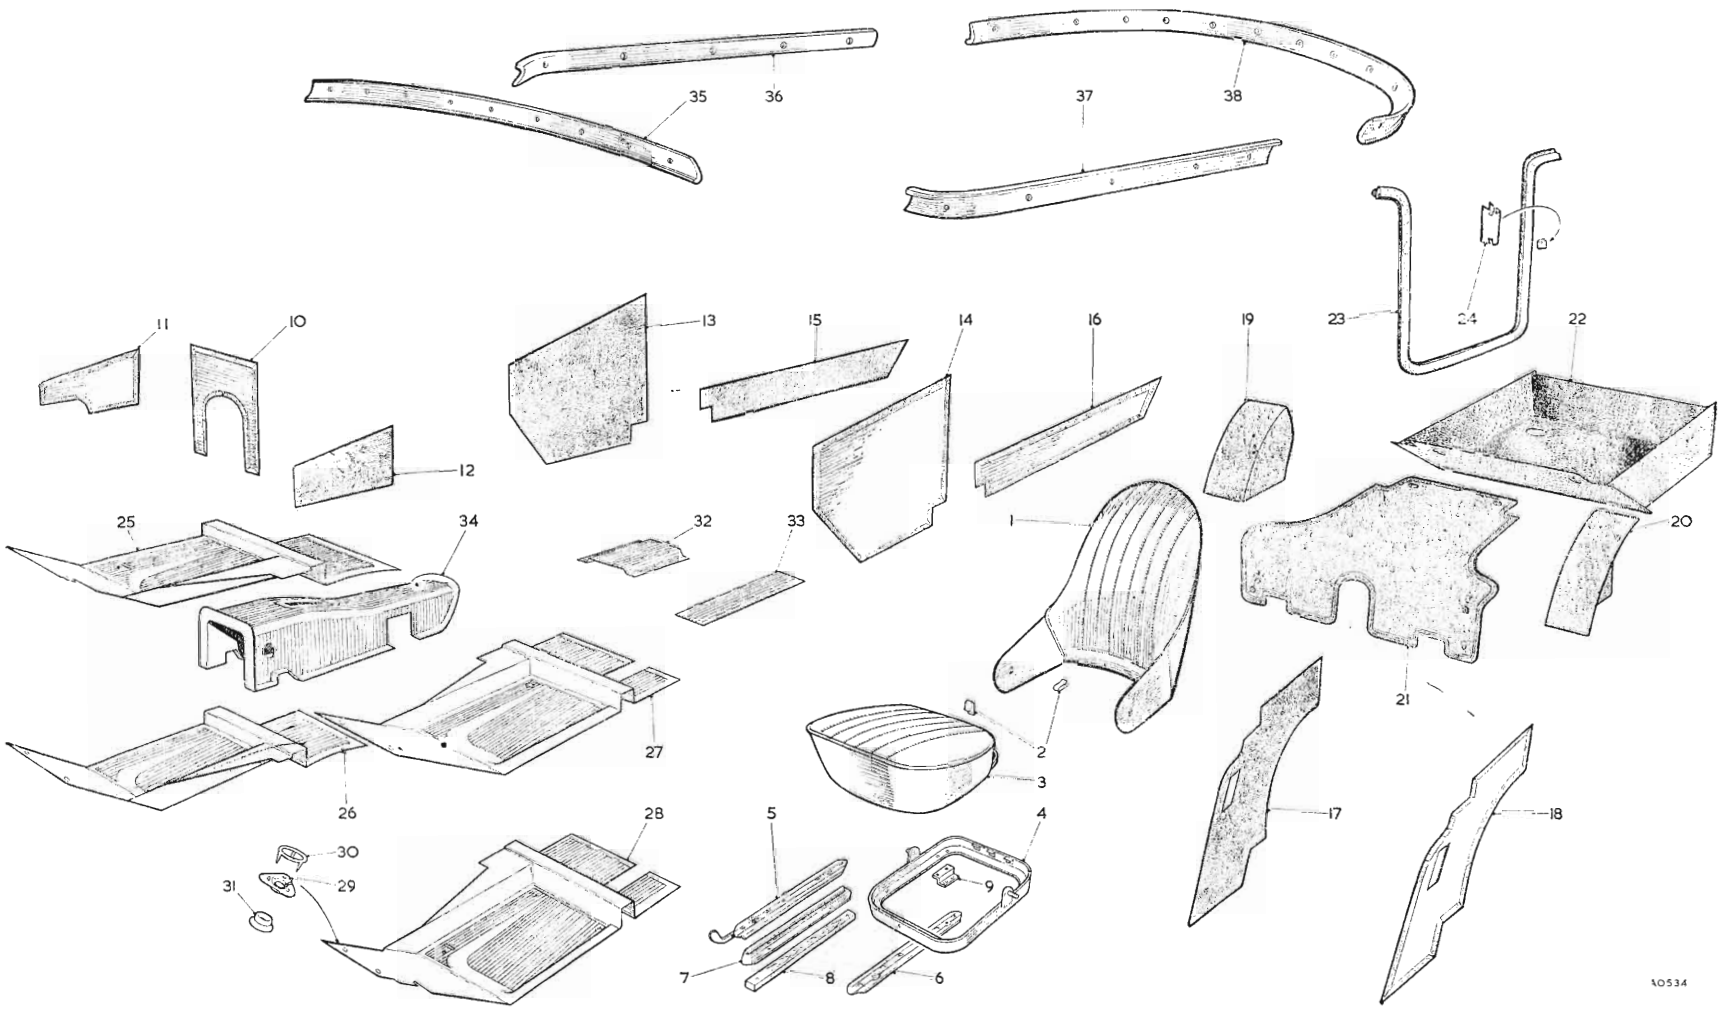


To face page R.14

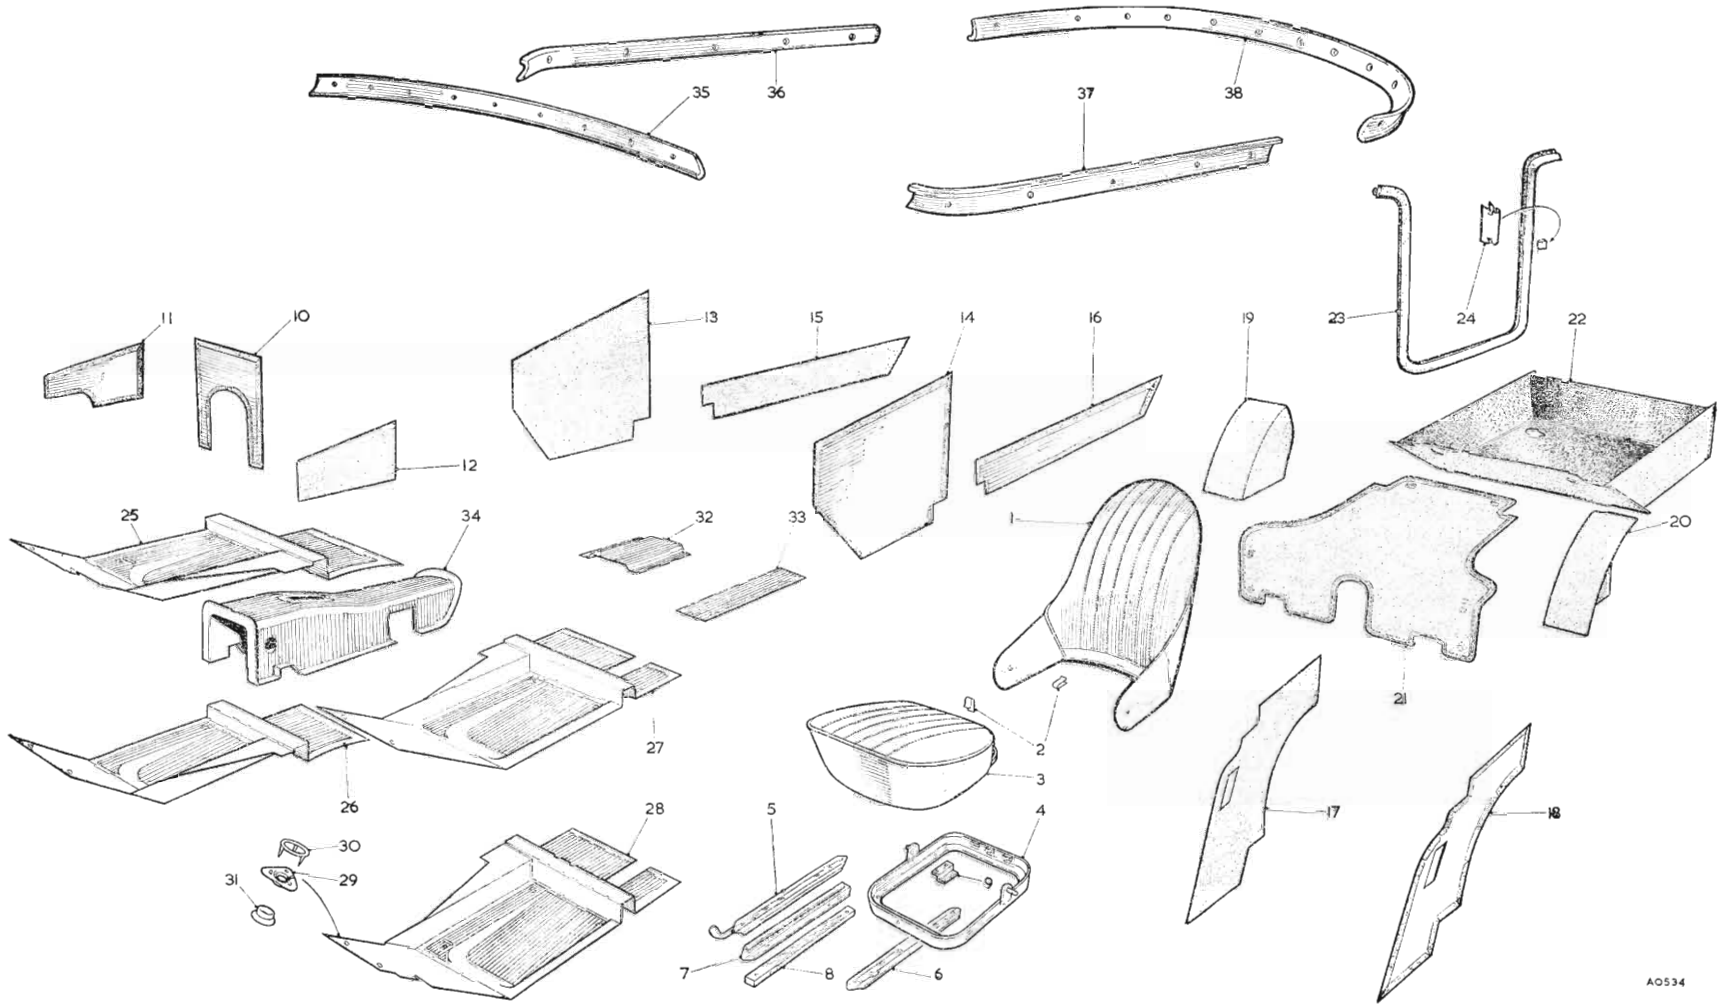


To face page R.15

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	MOULDINGS										
1	**Finisher—scuttle top**	**14A4820**	**35**	**1**	**1**						
2	Screw—finisher to scuttle	RMZ0310		7	7						
3	Screw—finisher to scuttle	RMZ0312		2	2			RMZ0316	] Com. (C)7256		
4	Washer for screw (plain)			2	2			PWZ203	]		
5	Lock washer for finisher screw (shakeproof)	LWZ703		9	9						Correction, was 53K3464
6	Nut for screw	FNZ103		9	9						
7	**Finisher—door top (R/H)**	**14A4821**	**36**	**1**	**1**			**AHA5268**	] Com. (C) 1606		
8	**Finisher—door top (L/H)**	**14A4822**	**37**	**1**	**1**			**AHA5269**	]		
9	Screw—finisher to door top	RMZ0310		6	6						
10	Lock washer for finisher screw (shakeproof)	LWZ703		6	6						Correction, was 53K3464
11	Nut for screw	FNZ103		6	6						
12	**Finisher—cockpit rear**	**14A4823**	**38**	**1**	**1**						
13	Screw—finisher to cockpit rear	RMZ0310		9	9						
14	Screw—finisher to cockpit rear	RMZ0312		2	2						
15	Lock washer for finisher screw (shakeproof)	LWZ703		11	11						Correction, was 53K3464
16	Nut for screw	FNZ103		11	11						

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	SUNDRIES										
1	**Door assembly—heater outlet**	**13H59**	**1**	**2**	**2**						
2	Screw—outlet door to foot-well side	PTZ603	2	8	8						
3	Plate—cover—foot-well	2A5589	3	1	1						
4	Washer for cover-plate (joint)	2A5549	4	1	1						
5	Screw—plate to foot-well	HZS0405	5	8	8						
6	Plate—blanking—heater platform	14A4790	6	1	1						Not required when heater or fresh-air unit is fitted
7	Sealer—blanking plate	14A4791	7	1	1						
8	Screw—blanking plate fixing	PMZ0408	8	4	4						
9	Washer for blanking plate screw (spring)	LWZ204	9	4	4						
10	Washer for blanking plate screw (plain)	PWZ204	10	4	4						
11	Plate—cover—engine undershield (R/H)	AHA5210	11	1	1				Fin. (C) 5476 except 5137, 5287, 5288		
12	Screw—plate fixing	PMZ0408	12	2	2						
13	Washer for screw (plain)	PWZ104	13	2	2	12					
14	Washer for screw (spring)	LWZ204	14	2	2						
15	**Over-rider assembly**	**14A4734**	**15**	**2**	**2**						
16	Bracket—over-rider (internal)	14A3411	16	2	2						
17	Screw—bracket to luggage floor	HZS0504	17	2	2						
18	Washer for screw (spring)	LWZ205	18	2	2	24					
19	Washer for screw (plain)	PWZ105	19	2	2						
20	Bracket—fixing—over-rider (upper)	14A4738	20	2	2						
21	Screw—bracket to internal bracket	HZS0507	21	2	2						
22	Washer for screw (spring)	LWZ205	22	2	2	24					
23	Washer for screw (plain)	PWZ105	23	2	2						
24	Bracket—fixing—over-rider (lower)	14A4739	24	2	2						
25	Screw—bracket to internal bracket	HZS0506	25	4	4						
26	Washer for screw (spring)	LWZ205	26	4	4	24					
27	Washer for screw (plain)	PWZ105	27	4	4						
28	Screw—over-rider to brackets	HZS0506	28	4	4						
29	Washer for screw (spring)	LWZ205	29	4	4	24					
30	Washer for screw (plain)	PWZ105	30	4	4						
31	Washer—upper bracket to body (rubber)	2K9679	31	2	2						
32	**Plate—number (front)**	**14A4659**	**32**	**1**	**1**						**Not required when bumper is fitted**
33	Screw—plate fixing	PMZ0306	33	4	4						
34	Washer for screw (plain)	PWZ203	34	4	4						
35	Washer for screw (spring)	LWZ203	35	4	4						
36	Nut for screw	FNZ103	36	4	4						
37	**Flash (Sprite)**	**14A4859**	**37**	**1**	**1**						
38	Push-on fix—flash to back panel	PFS104	38	2	2						
39	**Mirror—interior—rear view**	**14A5473**	**39**	**1**	**1**						
40	Glass	27H9782		1	1						
41	Bracket—fixing	27H9781		1	1						
42	Screw—mirror to scuttle top	RMP0308	40	2	2						

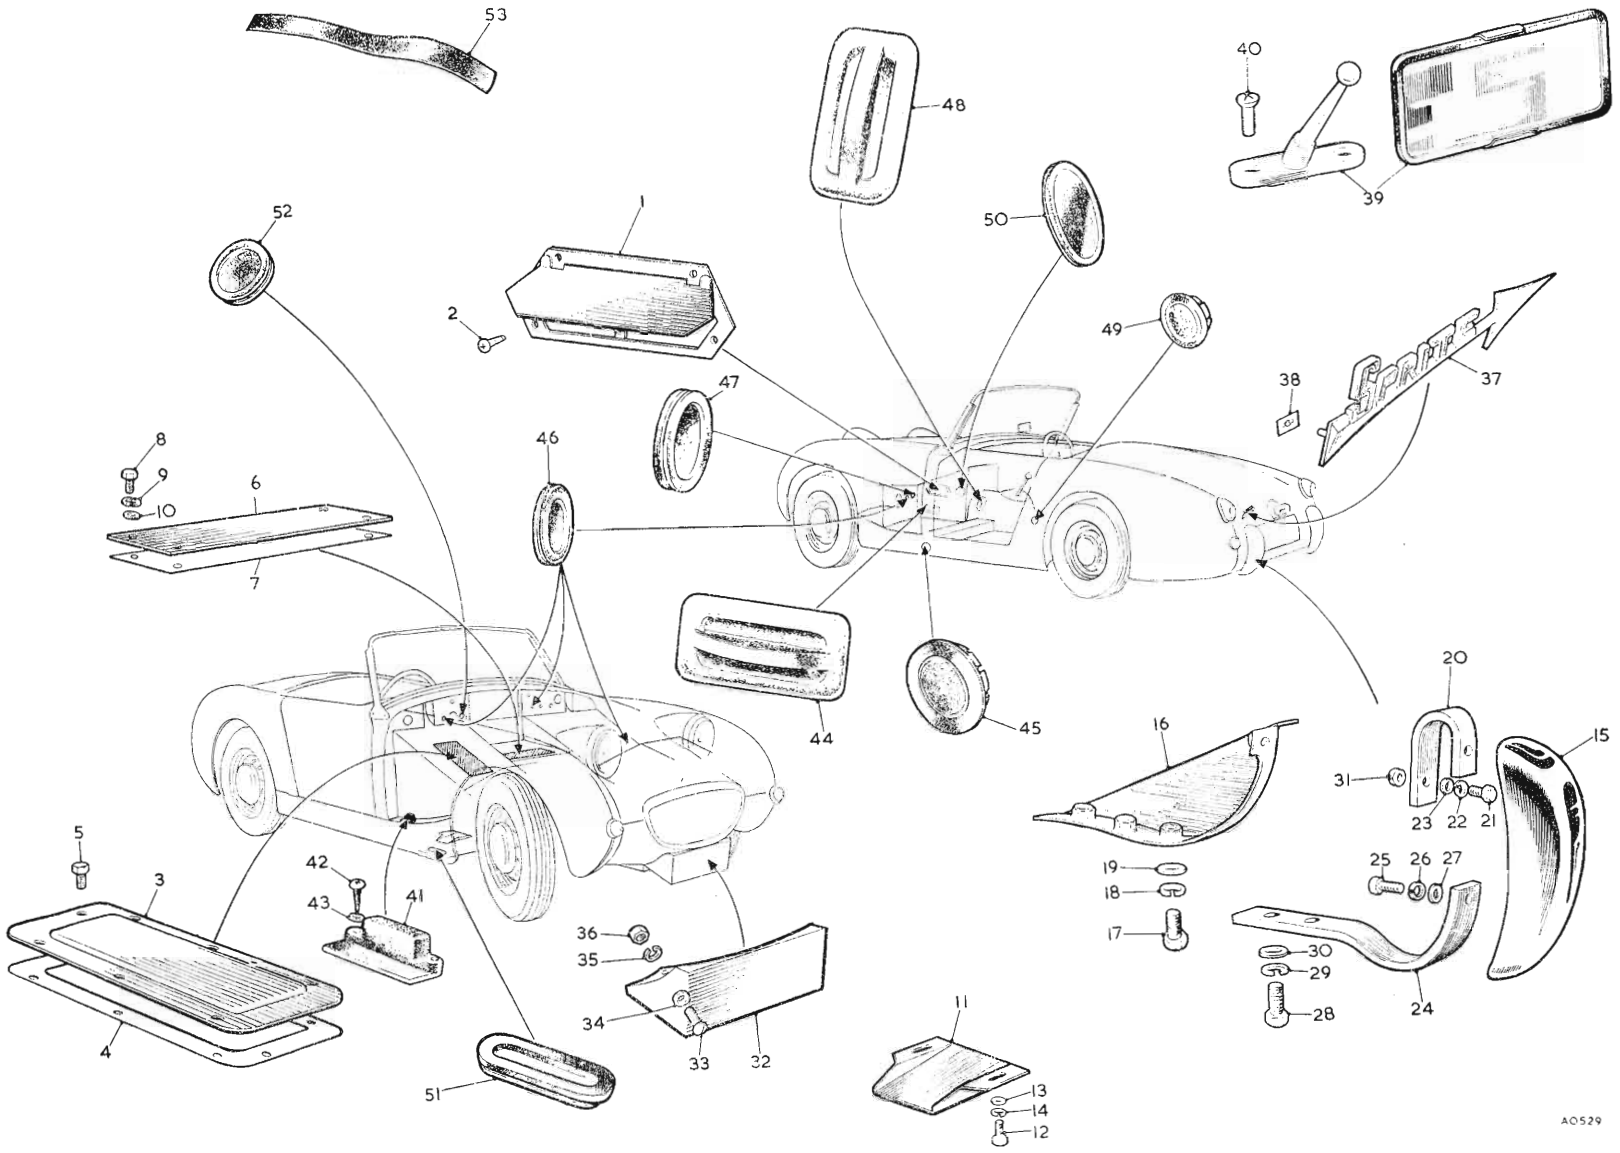

To face page R.16

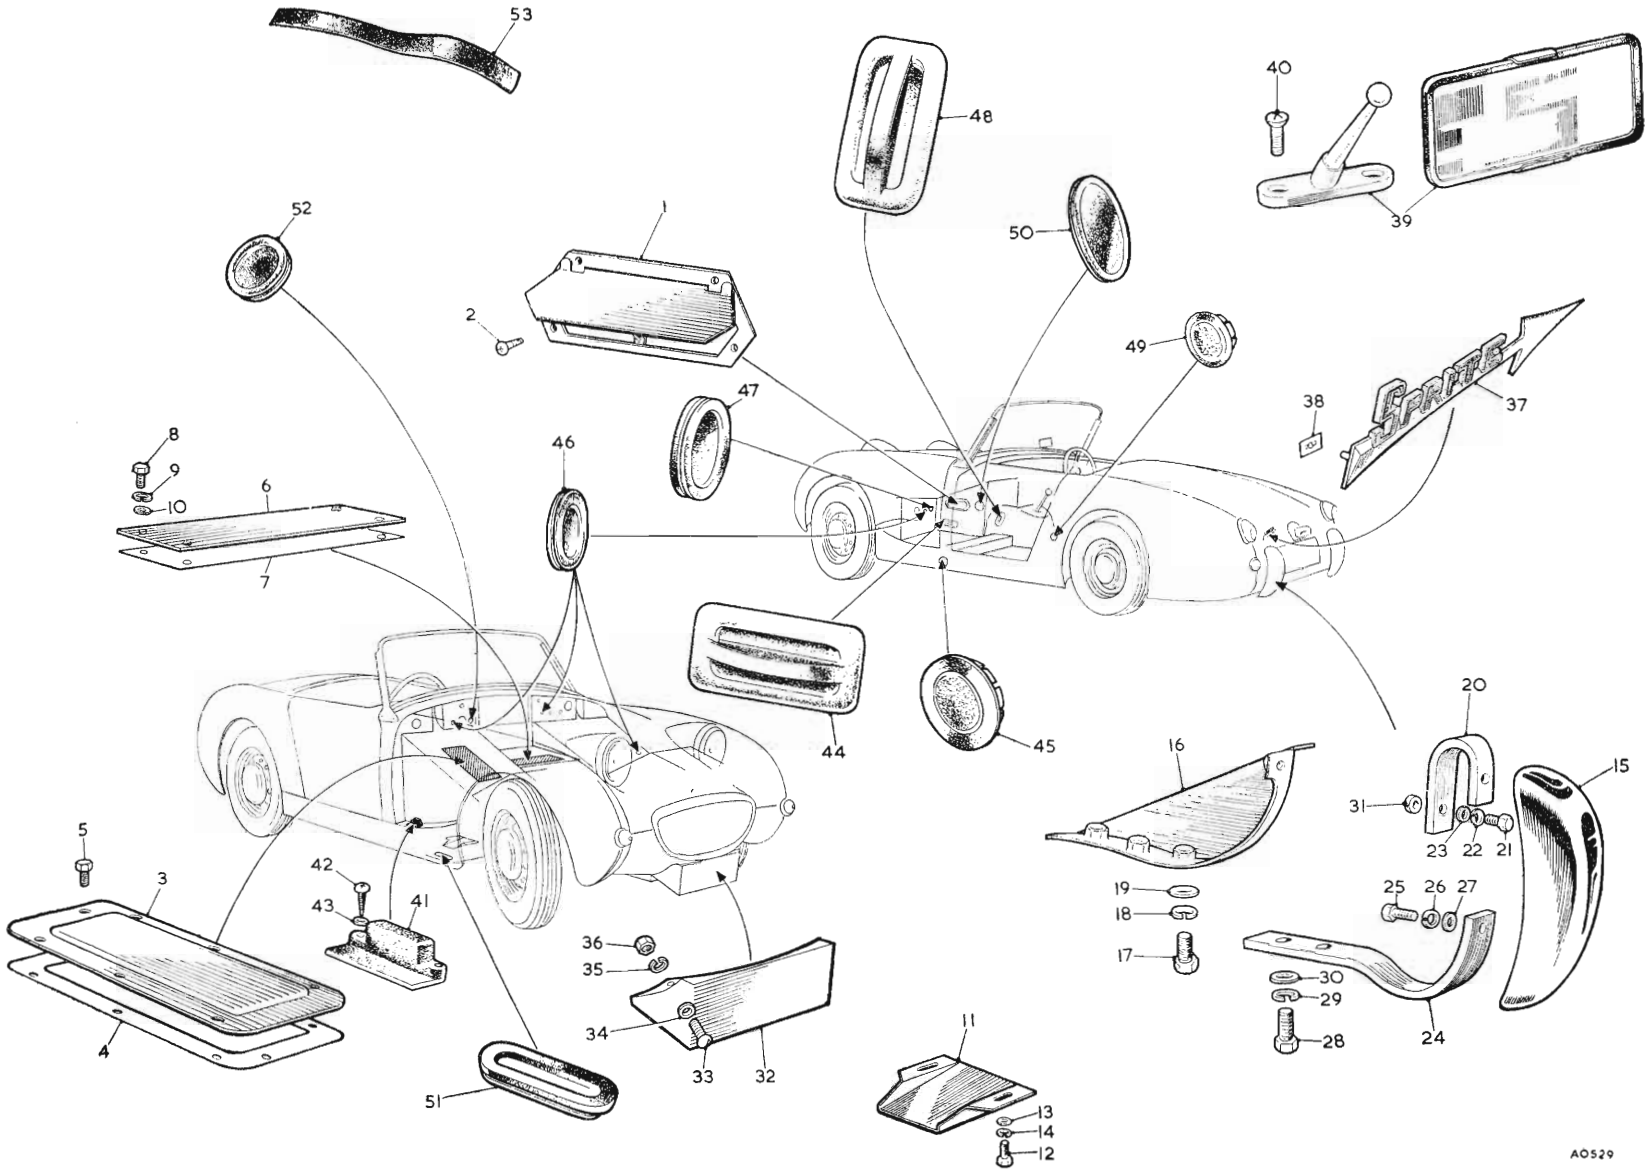

To face page R.17

Item No.	DESCRIPTION	Commencing (C) 501 Part Number	Illus. No.	Qty. per Vehicle RHD	Qty. per Vehicle LHD	Unit of Issue	Type of Vehicle	MODIFICATIONS New Part Number	MODIFICATIONS Change Point	MODIFICATIONS PAU No.	REMARKS
	Sundries—*continued*										
1	Buffer (rubber)	14A4874	41	4	4						
2	Screw—buffer to sill panel	PTZ605	42	8	8						
3	Washer for buffer screw (plain)	PWZ102	43	8	8						
4	Plug—toe-box side—R/H (rubber)	4G4920	44	1	1						
5	Plug—sill outer panel (rubber)	2H8198	45	2	2						
6	Plug—dash blanking (rubber)	RFN210	46	2	2						] Not required when tachometer is fitted
7	Plug—foot-well blanking (rubber)	RFN210	46	2	2						
8	Plug—steering column hole blanking (rubber)	RFN218	47	1	1			AHA5437	Com. (C) 7433		
9	Plug—gearbox filler hole blanking (rubber)	4G4920	48	1	1						
10	Plug—propeller shaft oiling hole blanking (rubber)	4G1851	49	1	1						
11	Grommet—demister outlet hole blanking	4G9763	50	2	2						
12	Grommet—slinging hole in main floor blanking	4G6957	51	2	2						
13	Grommet—heater control blanking	4G2541	52	1	1						To be pierced when heater is fitted
14	Ferrule—tool hole in rear crossmember Panel blanking ($\frac{3}{8}$")			2	2			RFN206	Com. (C) 5321		
15	Prestik sealer ($\frac{1}{2}$" × $\frac{1}{16}$")	ADE1596	53	A/R	A/R						
16	Prestik sealer ($\frac{1}{8}$" dia.)	ADE1600		A/R	A/R						
17	Seal-a-strip ($\frac{1}{8}$" dia.)	ADE1584		A/R	A/R						
18	Buffer—bonnet			2	2			ALA1716			
19	Block—buffer packing			2	2			AHA5400			
20	Distance tube—buffer			2	2			AHA5399			
21	Screw—buffer and block to wheel arch			2	2			PMZ0328	Com. (C) 6063		
22	Nut for screw			2	2			FNZ103			
23	Washer for nut (plain)			2	2			PWZ203			
24	Washer for nut (spring)			2	2			LWZ203			
25	**Lighter—cigar**	**AHH5759**		1	1						
26	**Luggage grid kit**			1	1			**AHA5467**	**Com. (C) 4333 Except 4471, 4622, 4680, 4684**		**Optional extra**
27	**Mirror—wing**	**BHA4066**		2	2						