
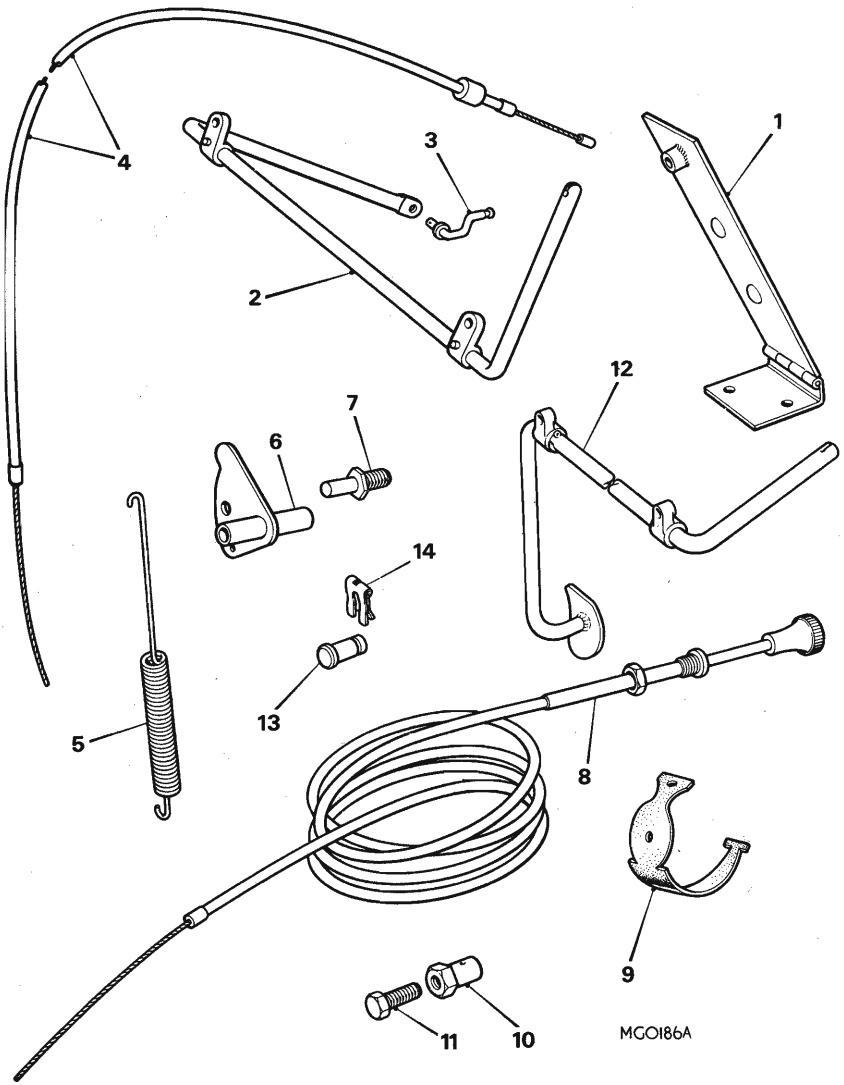


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		ENGINE CONTROLS.			
1	AHA 6256	Pedal-accelerator $	1	Use prior to CHA 494-RHD CHA 496-LHD	
12	CHA 494	Pedal-accelerator(with lever)-RHD	1	(C)G-AN6-154101 ON	
	CHA 496	Pedal-accelerator(with lever)-lhd	1		
	HZS 404	Screw	2		
	LWZ 204	Washer-spring	2		
2	2A 2077	Lever-pedal	1		
2	AHA 8514	Lever-pedal $	1		USA,Canada, Sweden and Germany
	HZS 407	Screw	2		
	LWZ 204	Washer-spring	2		
	HZS 407	Screw	1		
	FNZ 204	Locknut	1		
3	AHA 6255	Link-pedal to lever	1	Finished at (C)G-AN5-154100	
	PWZ 104	Washer-plain	1		
4	AHA 5746	Cable-accelerator control $	1		
4	CHA 475	Cable-accelerator control-RHD $	1	(C)G-AN6-154101 ON	
	CHA 405	Cable-accelerator control-LHD $	1		Not California
	CHA 485	Cable-accelerator control-LHD	1	(C)G-AN6-160160 ON	California only
5	AEA 602	Spring-throttle return	3		
6	AEA 597	Lever-throttle	1		
7	ACC 5062	Pin-cable to lever	1		
	PWZ 203	Washer-plain	1		
	PWZ 104	Washer-plain	1		
	NH 604041	Nut	1		
13	BHA 5357	Pin-cable to lever-RHD	1	(C)G-AN6-154101 ON	
14	BHA 5358	Clip-pin-RHD	1		
	PWZ 203	Washer-plain-RHD	2		
8	AHA 7748	Cable-mixture control	NLA	Use prior to CHA 288	Use CHA 288
8	AHA 8713	Cable-mixture control $	1		USA,Canada, Sweden and Germany
8	CHA 288	Cable-mixture control	1	(C)G-AN5-147531 TO 154100 (C)G-AN6-154101 ON (Except USA and Canada)	
8	CHA 446	Cable-mixture control	1	(C)G-AN6-154101 ON (USA and CANADA)	Not required with Automatic choke
	WA 110061	Washer-plain	1		
9	13H 6107	Strap-cable to heater clip	1		
10	AHA 6367	Pin-cable to carburetter	1		
11	53K 3503	Screw-pin	1		

$ This item is subject to safety regulations.


107-G 2

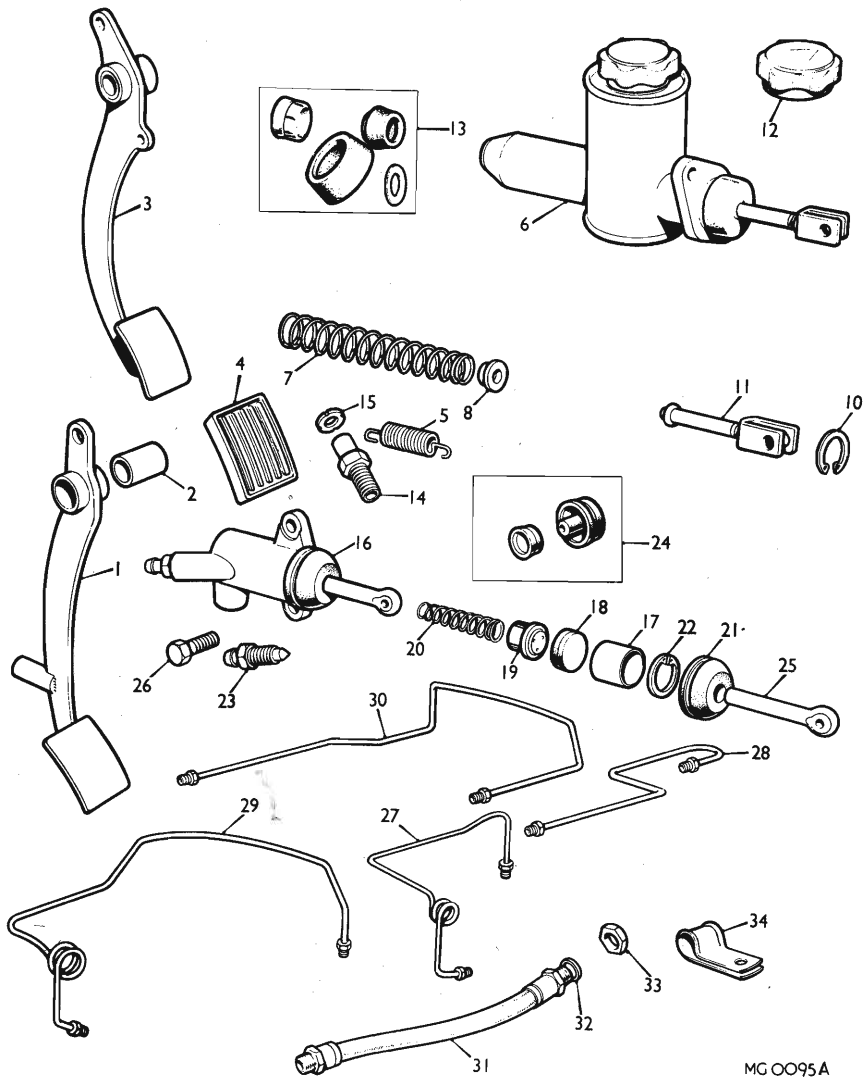

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CLUTCH PEDAL AND LINKAGE			
3	AHA 8071	PEDAL ASSEMBLY-CLUTCH $	1	(C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON	
2	LBS 810	Bush	1		
4	AHA 5326	Pad-pedal rubber	1		
	HZS 408	Screw-pedal adjustment	1	(C)H-AN8-38329 TO 64734 (C)G-AN3-25788 TO 52389	
	FNZ 204	Locknut	2		
5	2A 5574	Spring-pedal return	NLA		
5	AAA 1628	Spring-pedal return	1	(C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON	


$ This item is subject to safety regulations.

107-G 4

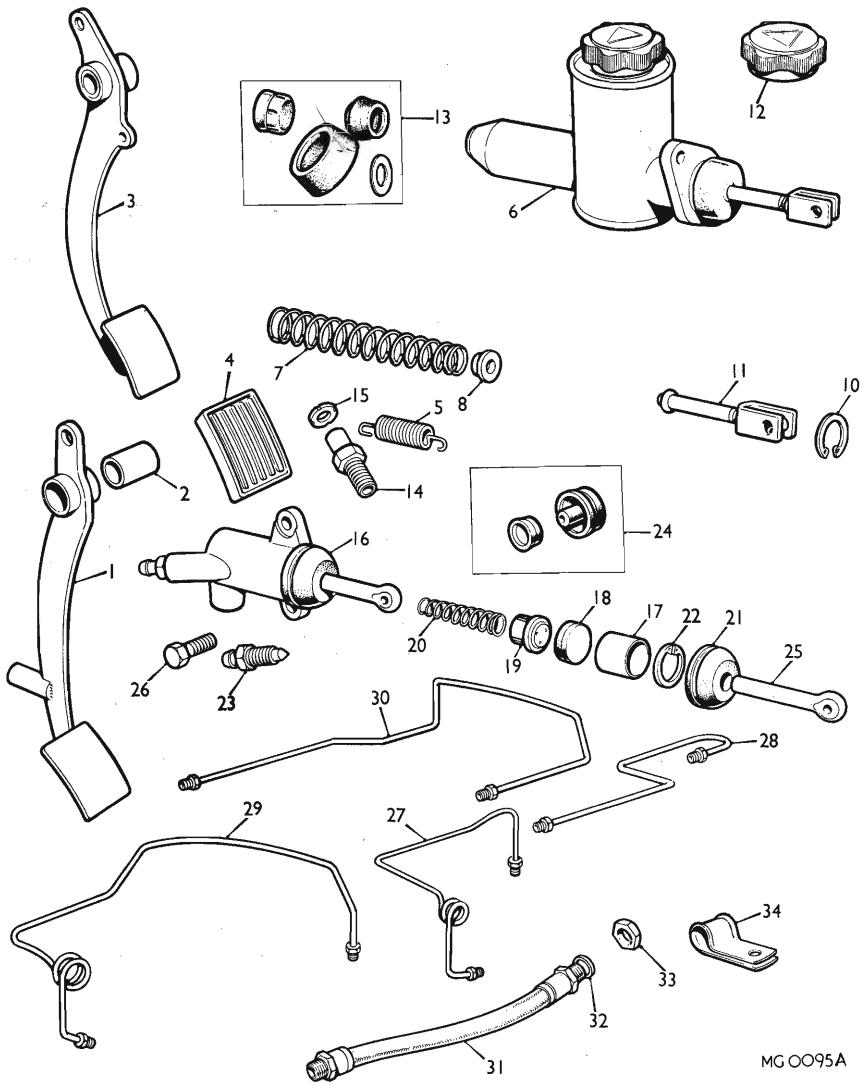


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CLUTCH MASTER AND OPERATING CYLINDERS			
6	BHA 4615	CYLINDER AND SUPPLY TANK ASSEMBLY-CLUTCH MASTER	1	Use prior to AAU 2298	Prior to (C)H-AN8-64735 AND G-AN3-52390.Refer to Brake master CYLINDER
6	AAU 2298	CYLINDER AND SUPPLY TANK ASSEMBLY-CLUTCH MASTER	1	(C)G-AN6-167343 ON (N.America) (C)G-AN6-169644 ON (Except N.America)	
7	27H 7751	Spring-piston return	1		
8	17H 7554	Retainer-spring	1		
10	17H 7560	Circlip	1		
11	27H 8459	Push-rod	1	Use prior to AAU 3469	
11	AAU 3469	Push-rod	1	(C)G-AN6-167343 ON (N.America) (C)G-AN6-169644 ON (Except N.America)	
12	17H 6861	Cap-filler	1		
13	8G 8730	KIT-REPAIR-MASTER CYLINDER	1	(C)H-AN9-64735 ON (C)G-AN4-52390 ON	
	CLZ 513	Pin-clevis	1		
	PWZ 105	Washer-plain	1		
14	21K 8564	Adaptor-master cylinder	1	Use prior to ACB 9641	
14	ACB 9641	Adaptor-master cylinder	NLA	(C)G-AN6-154101 ON	
15	3H 2287	Gasket	1		
	HZS 507	Screw	2	(C)H-AN9-64735 ON (C)G-AN4-52390 ON	
	PWZ 105	Washer-plain	2		
	WL 600051	Washer-spring	2		
	FNZ 505	Nut	2		
		CLUTCH OPERATING CYLINDER 1098cc(10CC)			
16	22A 233	CYLINDER ASSEMBLY-CLUTCH OPERATING	1		
17	17H 7841	Piston	1		
18	17H 7868	Cup-piston	1		
19	17H 7540	Filler-cup	1		
20	17H 7580	Spring-filler	1		
21	17H 7268	Boot	1		
22	AAA 81	Circlip	1		
23	3H 2428	Screw-bleeder	1		
24	8G 8446	KIT-OPERATING-CYLINDER REPAIR	1		
25	13H 21	Push-rod	1		
	CLZ 517	Pin-clevis	1		
	PWZ 105	Washer-plain	1		
26	53K 152	Bolt-cylinder to gearbox	2		
	LWZ 305	Washer-spring	2		

107-G 6

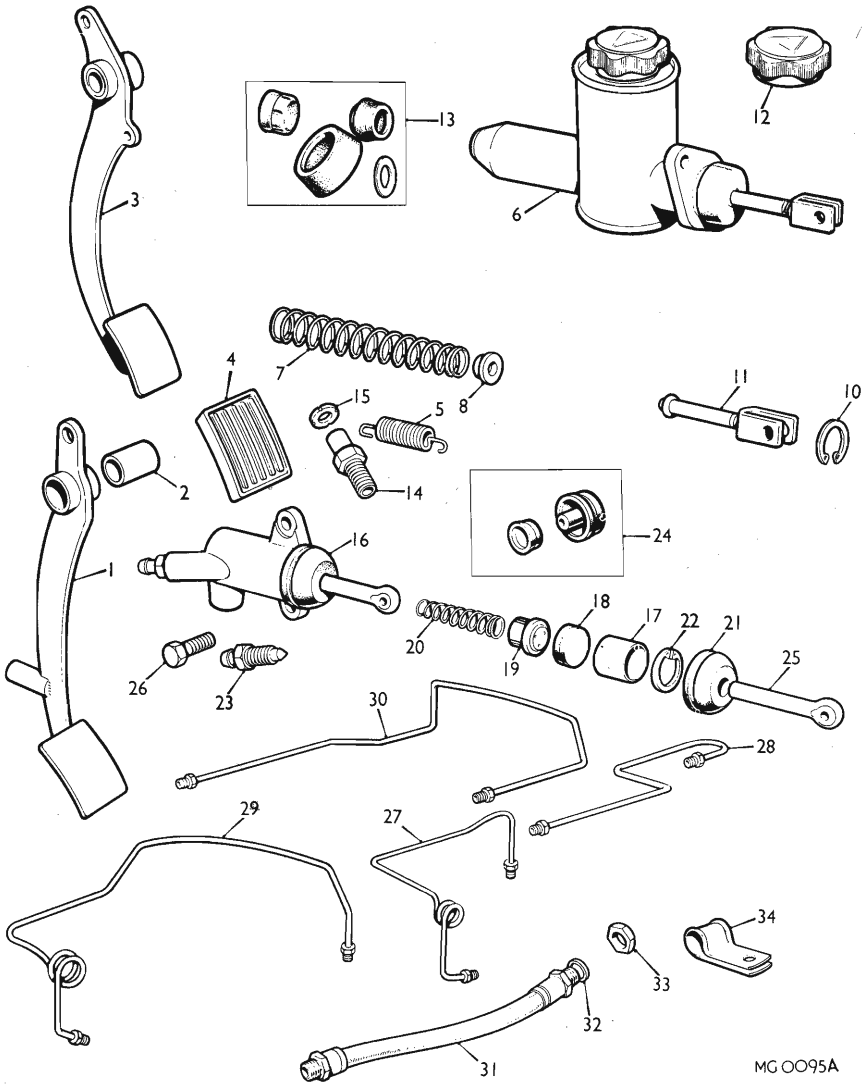


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CLUTCH MASTER AND OPERATING CYLINDERS-continued.			
		CLUTCH OPERATING CYLINDER-1275cc(12CC,12CD,12CE,12CJ, 12V)			
16	13H 3654	CYLINDER ASSEMBLY-CLUTCH OPERATING	1		
17	17H 7417	Piston	1		
18	7H 7913	Filler-cup	1		
20	17H 7580	Spring-filler	1		
22	17H 7819	Circlip	1		] Alternatives
	CCN 216	Circlip	1		
23	3H 2428	Screw-bleeder	1		
24	18G 8207	KIT-CYLINDER-REPAIR	NLA		Use BHM 7061
24	BHM 7061	Kit cylinder repair	1		
25	13H 3655	Push-rod	1		
	CLZ 517	Pin-clevis	1		
	PWZ 105	Washer-plain	1		
26	53K 152	Bolt-cylinder to gearbox	NLA		
	LWZ 305	Washer-spring	2		

107-G 8

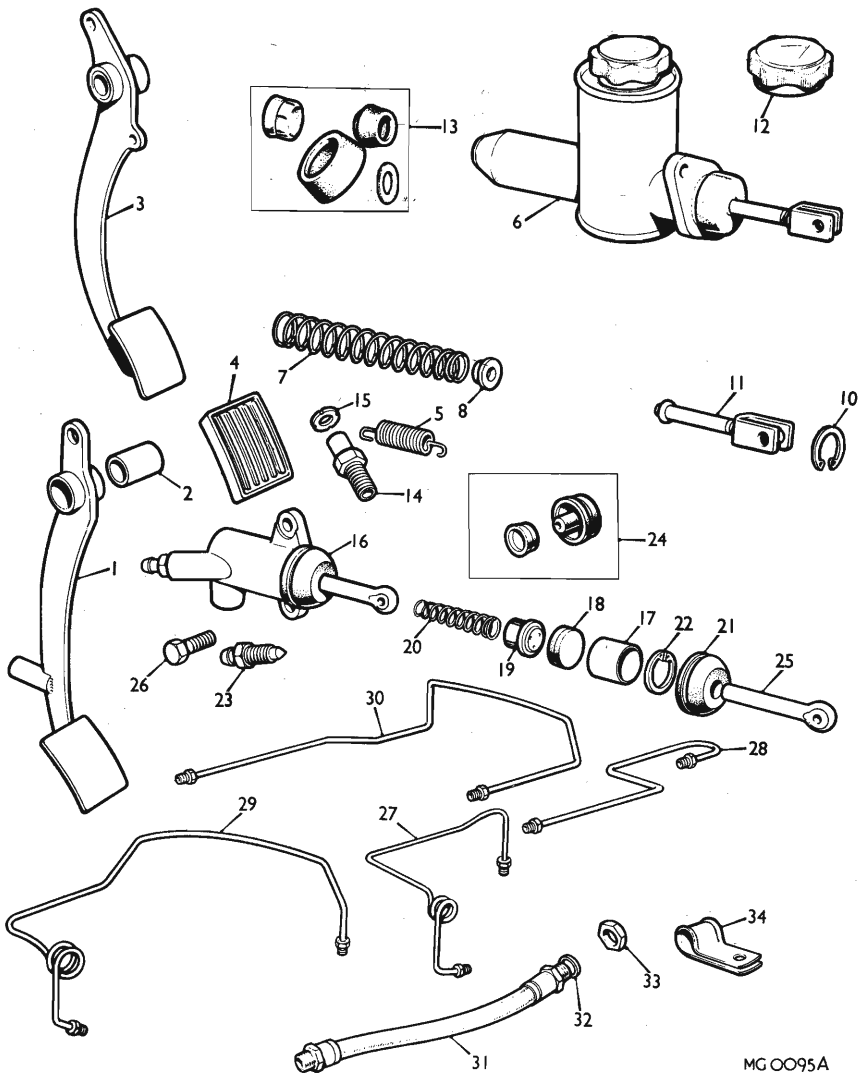


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CLUTCH PIPES			
		PIPE			
	2A 5615	Master cylinder to operating cylinder-RHD-142.2cm(56")	NLA	(C)H-AN8-38829 TO 64734 (C)G-AN3-25788 TO 52389	Make frompipe 37H 7147 M with 2 off tube nut 3H 2249
	AAK 806	Master cylinder to operating cylinder-RHD-88.9cm(35")	NLA	(C)H-AN9-64735 TO 85286 (C)H-AN10-85286 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 TO 154100	Make from pipe 37H 7148 M with 2 off tube nut BCA 4370
	BHA 5376	Master cylinder to operating cylinder-RHD	1	(C)G-AN6-154101 ON	
	AHA 5508	Master cylinder to operating cylinder-LHD-233.7cm(92")	NLA	(C)H-AN8-38829 TO 39634 (C)G-AN3-25788 TO 26641	Make from pipe 37H 7147 M with 2 off tube nut 3H 2249
	7H 7991	Master cylinder to operating cylinder-LHD-18.03cm(71")	NLA	(C)H-AN8-39635 TO 64734 (C)G-AN3-26642 TO 52389	
	AAK 769	Master cylinder to operating cylinder-LHD-139.7cm(55")	NLA	(C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87824 (C)G-AN4-52390 TO 74886 (C)G-AN5-74886 TO 154100	make from pipe 37H 7148 M with 2 off tube nut BCA 4370
	BHA 5375	Master cylinder to operating cylinder-LHD	1	(C)G-AN6-154101 ON	

107-G 10

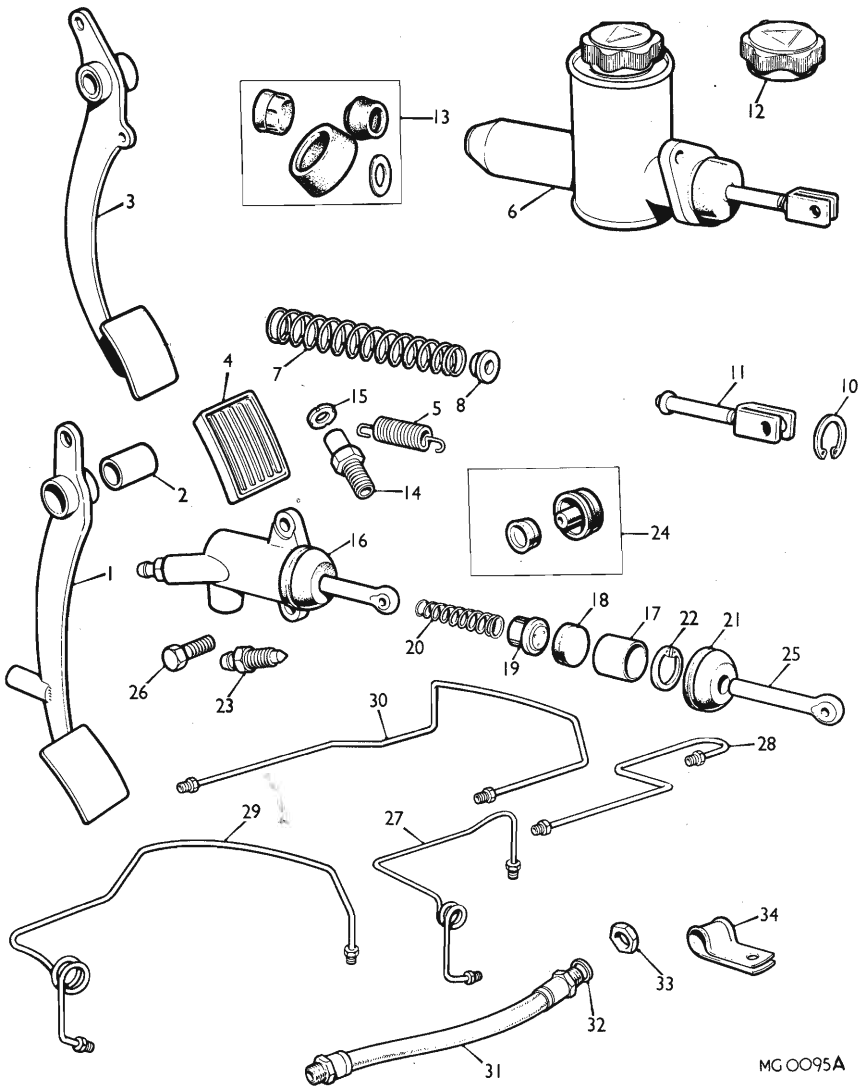


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		CLUTCH PIPES-continued			
31	ACC 5509	Hose-operating cylinder	1	(C)H-AN9-64735 TO 85286	
32	3H 550	Gasket-hose	1		
33	2K 8686	Nut-hose	1	(C)H-AN10-85287 TO 86803	
	LWZ 510	Washer-lock	1		
	PCR 409	Clip-pipe to pedal box	1	(C)A-AN10-86804 TO 87824 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 TO 154100	
	PCR 409	Clip-pipe to heater platform and foot well	3	(C)H-AN8-39635 TO 64734 (C)G-AN3-26642 TO 52389	
34	AHA 8161	Clip-pipe to heater platform	1	(C)H-AN9-64735 TO 85286 (C)H-AN10-85287 TO 86803 (C)A-AN10-86804 TO 87924 (C)G-AN4-52390 TO 74885 (C)G-AN5-74886 ON	
	37H 7147 M	Pipe-clutch-4.762mm(.1875")O/D	A/R		Supplied in 7 metre(22'9") rolls
	37H 7148 M	Pipe-clutch-6.35mm(.25")O/D	A/R		
	3H 2249	Nut-tube-internal	A/R		
	BCA 4370	Nut-tube-internal	A/R		

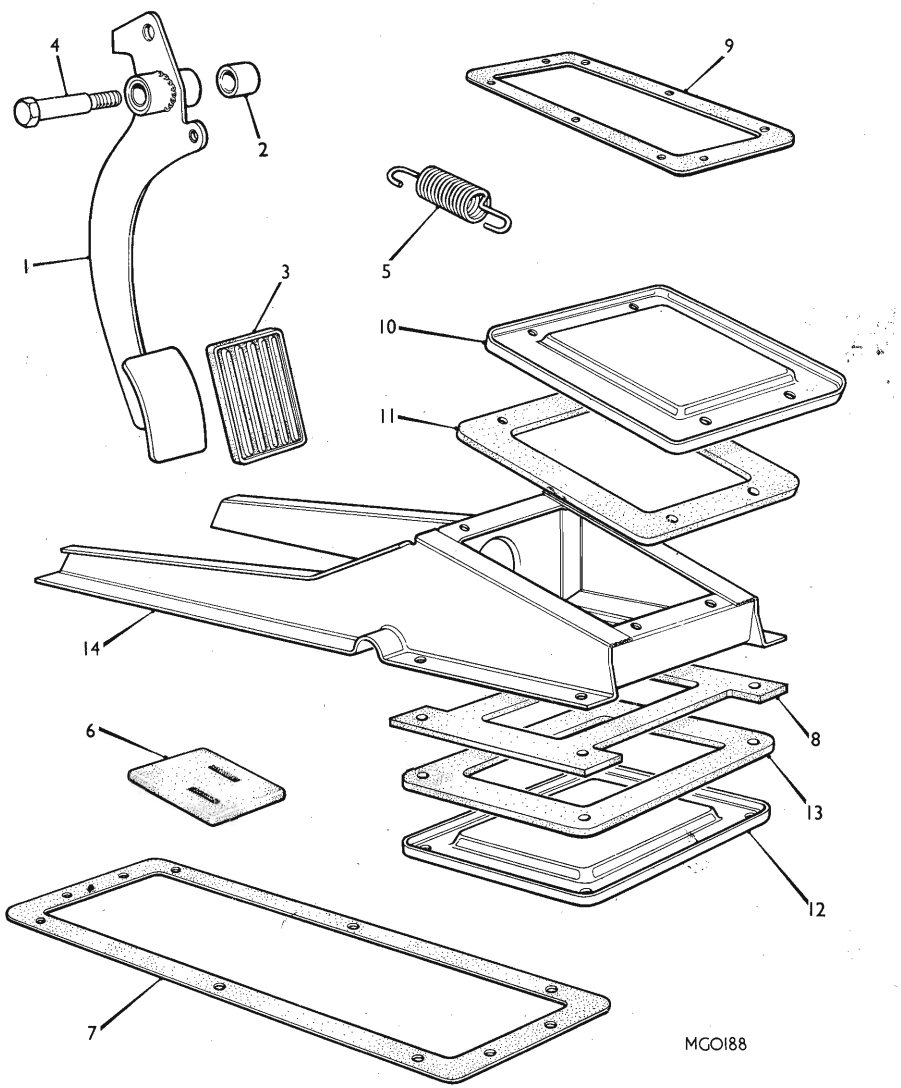

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PEDAL-SINGLE LINE SYSTEM			
3	AHA 5326	Pad-pedal(rubber)	1		
5	2A 5574	Spring-pedal return	NLA		
7	AHA 6366	Washer-joint	1		
	HZS 405	Screw	9	(C)H-AN8-38829	
	HZS 408	Screw	1	TO 64734	
	LWZ 304	Washer-spring	10		
9	AHA 6366	Washer-joint	1		
	HZS 405	Screw	8		
	LWZ 304	Washer-spring	8		
1	AHA 9723	PEDAL ASSEMBLY-BRAKE	1	(C)H-AN9-64735	
2	LBS 810	Bush	2	TO 85286	
				(C)H-AN10-85287	
				TO 86803	
				(C)A-AN10-86804	
				TO 87824	
				(C)G-AN4-52390	
				TO 74885	
				(C)G-AN5-74886 ON	
3	AHA 5326	Pad-pedal(rubber)	1		
4	AHA 8075	Bolt-brake and clutch pedal $	1		
	LWZ 206	Washer-spring	1		
	PWZ 108	Washer-plain	1		
	FNZ 506	Nut	1	(C)H-AN9-64735	
5	AAA 1628	Spring-pedal return $	1	TO 85286	
14	AHA 8408	Box-pedal $	1	(C)H-AN10-85287	
11	AHA 8073	Seal	1	TO 86803	
8	AHA 8072	Washer-joint	1	(C)A-AN10-86804	
	HZS 405	Screw	6	TO 87824	
	PMZ 410	Screw	NLA	(C)G-AN4-52390	Use SE 604051
	SE 604051	Screw	2	TO 74885	
	WL 600051	Washer-spring	8	(C)G-AN5-74886 ON	
12	AHA 8145	Plate-blanking	1		
13	AHA 8146	Seal	1		
	HZS 405	Screw	4		
	WL 600051	Washer-spring	4		

$ This item is subject to safety regulations.


107-G 14

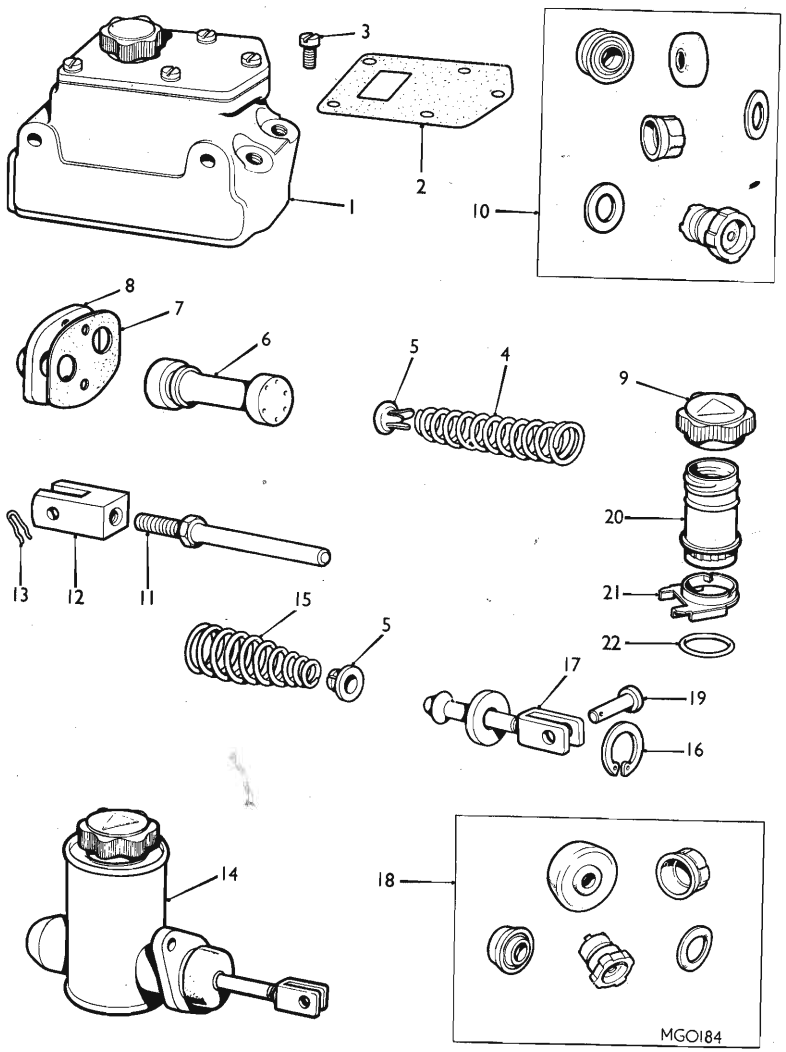

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE MASTER CYLINDER-SINGLE LINE SYSTEM			
1	GMC 112	CYLINDER AND SUPPLY TANK BRAKE AND CLUTCH-MASTER	1		
2	37H 2496	Gasket-cover	NLA		
3	AAA 4758	Screw-cover to body	5		
	LWZ 404	Washer-shakeproof	5		
4	27H 7751	Spring-piston return	2		
5	17H 7554	Retainer-return spring	2		
7	AAA 4757	Gasket-boot fixing plate	1		
8	AAA 4756	Plate-boot fixing	1	(C)H-AN8-38829	
	LWZ 404	Washer-shakeproof	2	TO 64734	
9	17H 6861	Cap-filler	1	(C)G-AN3-25788	
10	8G 8766	KIT-REPAIR-BRAKE MASTER CYLINDER	1	TO 52389	
	FNZ 205	Locknut	2		
12	2A 5576	Fork end-push-rod	2		
13	1B 3498	Circlip-pin	2		
	HBZ 624	Bolt	1		
	LWZ 206	Washer-spring	2		
	FNZ 106	Nut	2		
14	GMC 113	CYLINDER AND SUPPLY TANK-BRAKE MASTER	1	(C)H-AN9-64735 TO 85286	
15	27H 7751	Spring-piston return	1	(C)H-AN10-85287 TO 86803	
5	17H 7554	Retainer-spring	1	(C)A-AN10-86804 TO 87824	
16	17H 7560	Circlip	1	(C)G-AN4-52390 TO 74885	
17	27H 8459	Push-rod	1	(C)G-AN5-74886 TO 154100	
9	17H 6861	Cap-filler	1	(C)G-AN6-154101 TO (+)	
18	8G 8258	KIT-REPAIR-BRAKE MASTER CYLINDER	1		
14	GMC 151	CYLINDER AND SUPPLY TANK BRAKE MASTER	1		Identify by Two concentric Circles
15	27H 7751	Spring-piston return	1		
5	17H 7554	Retainer-spring	1	(C)G-AN6(+)ON	
16	17H 7560	Circlip	1		
17	AAU 3469	Push rod	1		
	513123	Cap-filler	1		
18	BHM 7125	Kit-cylinder repair	1		
19	CLZ 513	Pin-clevis	1	(C)H-AN9-64735 TO 85286	
	PWZ 105	Washer-plain	1	(C)H-AN10-85287 TO 86803	
	HZS 507	Screw	1	(C)A-AN10-86804 TO 87824	
	PWZ 105	Washer-plain	1	(C)G-AN4-52390 TO 74885	
	WL 600051	Washer-spring	1	(C)G-AN5-74886 TO 154100	
	FNZ 505	Nut	1	(C)G-AN6-154101 ON	
20	BHA 4661	Tank-fluid(plastic)	1		
21	BHA 4660	Clip-locking	1		
22	BCA 4964	Seal	1		

(+) Change point not known.


107-G 16

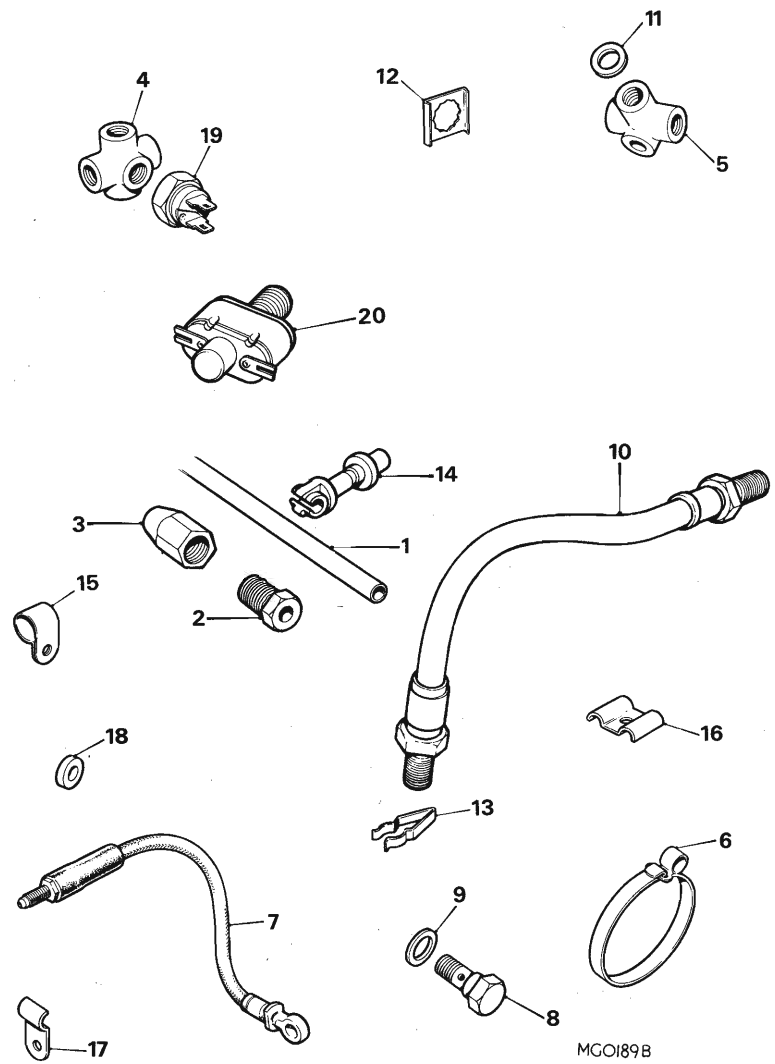

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PIPES AND FITTINGS-SINGLE LINE BRAKING SYSTEM			
		PIPE			
	2A 2183	Master cylinder to 4-way RHD 28"(72cm).....	NLA		Use 37H 7147 M with 2 off nut 3H 2249
	2A 5619	Master cylinder to 4-way LHD 64"(163cm) $.....	NLA		
	2A 5606	4-way connection to RH front hose 14"(36cm) $	NLA	Finished at (C)G-AN5-154100	Use 37H 7147 M with 1 Off Nut 3H 2249 and 1 off nut 11D 5050
	2A 5609	4-way connection to LH front hose 47"(100cm) $	NLA		
	2A 5611	4-way connection to rear brake hose 74"(188cm) $.....	1		
1	37H 7147 M	Master cylinder to RH front hose-33"(83.8cm).....	1		With 1 off nut 3H 2249 and 11D 5050
1	37H 7147 M	Master cylinder to 3-way 60"(152.4cm).....	1	(C)G-AN6-154101 ON	With 2 off nut 3H 2249
1	37H 7147 M	3-way to LH front hose-11.5"(29.2cm).....	1		With 1 off nut 3H 2249 and 11D 5050
1	37H 7147 M	3-way to rear hose-81"(205.7cm).....	1		With 1 off nut 3H 2249 and 11D 5050
	AHA 6482	3-way connection to RH rear brake 22"(56cm) $.....	NLA		Use 37H 7147 M with 2 off nut 3H 2249
	ACB 9162	3-way connection to LH rear brake 30"(77cm) $.....	NLA		
1	37H 7147 M	Pipe-brake .187"(4.762mm)O/D.....	A/R		Supplied in 7 metre(22'9")rolls
2	3H 2249	Nut-tube-internal.....	A/R		
3	11D 5050	Nut-tube-external.....	A/R		

$ This item is subject to safety regulations

107-G 18

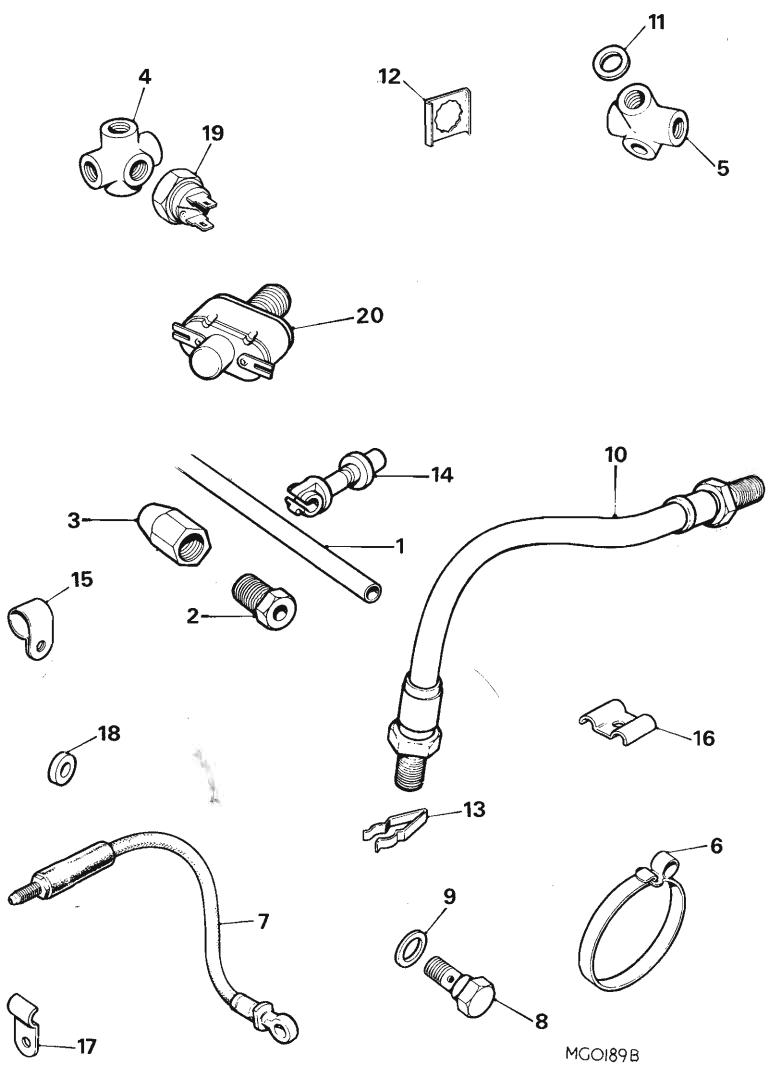


Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PIPES AND FITTINGS-SINGLE LINE BRAKING SYSTEM-continued			
4	17H 7108	Connection-4-way $	1	Use prior to 3H 2424-3 Way (C)G-AN6-154101 ON	
5	3H 2424	Connection-3-way-front	1		
	HBZ 408	Bolt	1		
	LWZ 204	Washer-spring	1		
5	3H 2424	Connection-3-way-rear	1		
	HBZ 410	Bolt	1		
	LWZ 204	Washer-spring	1		
	NH 604041	Nut	1		
6	ACA 5375	Strap-pipe to rear axle	NLA		
7	GBH 111	Hose-front brake $	2	Use prior to GBH 139	
7	GBH 139	Hose-front brake $	NLA	See(1)foot of page	Use GBH 157
7	GBH 157	Hose-front brake $	2	(C)G-AN6-162565 ON	
8	11D 5264	Bolt-banjo $	2		
	7H 7851	Connector-banjo	1		
9	3H 550	Gasket-bolt $	2		
10	GBH 109	Hose-rear brake	NLA	Use prior to GBH 158 (C)G-AN6-162565 ON	Use GBH 158
10	GBH 158	Hose-rear brake $	1		
11	3H 2287	Gasket-hose $	3		
12	1G 9198	Plate-locking hose	3		Use with hose GBH 111
	FNZ 106	Nut	3		
	LWN 406	Washer-shakeproof	3		

CHANGE POINTS
(1)G-AN5-114643 TO G-AN5-154100(PLUS 114352, 114473, 114475 TO 114480, 114526 TO 114541,114543 AND 114580 TO 114588)
G-AN6-154101 TO 162564.

$This item is subject to safety regulations


107-G 18.02

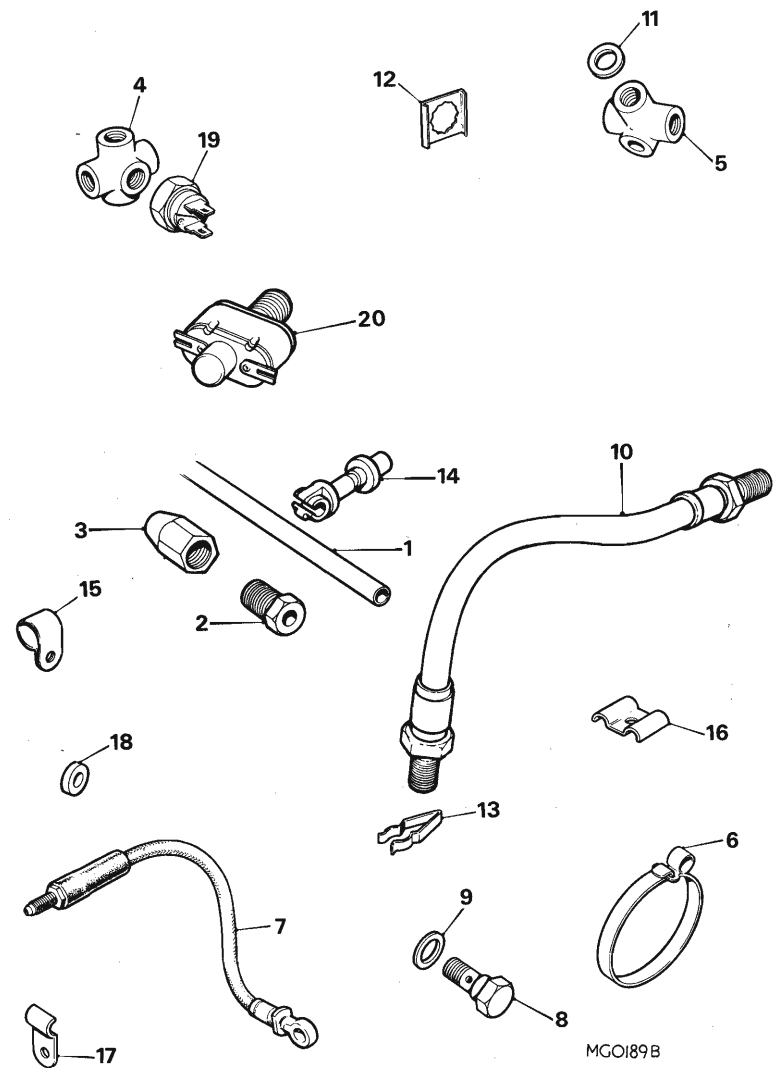

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PIPES AND FITTINGS-SINGLE LINE SYSTEM-continued			
13	6K 35	Clip-brake pipe to frame	A/R		Use prior to 88 623312
14	623312	Clip-brake pipe to frame	2		See(1)foot of page
15	PCR 307	Clip-brake pipe to tunnel	2		
15	PCR 307	Clip-brake pipe to foot well	1		
16	2H 400	Clip-brake and clutch pipe to foot well-RHD	1		
17	CHR 307	Clip-brake and clutch pipe to dash-LHD	A/R		
15	PCR 309	Clip-brake pipe to cover-plate bolt-LHD	1		
18	AHH 6247	Spacer-pipe to cover-plate bolt-LHD	NLA		
	LNZ 102	Stiffnut	1		
	NH 604041	Nut	1		
	PWZ 104	Washer-plain	1		
	LWZ 204	Washer-spring	1		
	PMZ 307	Screw	3		
	PWZ 103	Washer-plain	3		
	LNZ 203	Locknut	3		
	PMZ 305	Screw-RHD	1		
	LWZ 203	Washer-spring-RHD	1		
	PMZ 305	Screw-LHD	A/R		
	LWZ 203	Washer-spring-LHD	A/R		
	FNZ 103	Nut-LHD	A/R		
19	C 16062	Switch-stop light	1		Use prior to BHA 4675
20	BHA 4675	Switch-stop light	1		(C)G-AN6-154101 ON
	FNZ 206	Nut-switch	1		

CHANGE POINTS
(1) (C)G-AN5-114643 ON(PLUS 114352, 114473, 114475 TO 114480, 114526 TO 114541, 114543 AND 114580 TO 114588)


107-G 20

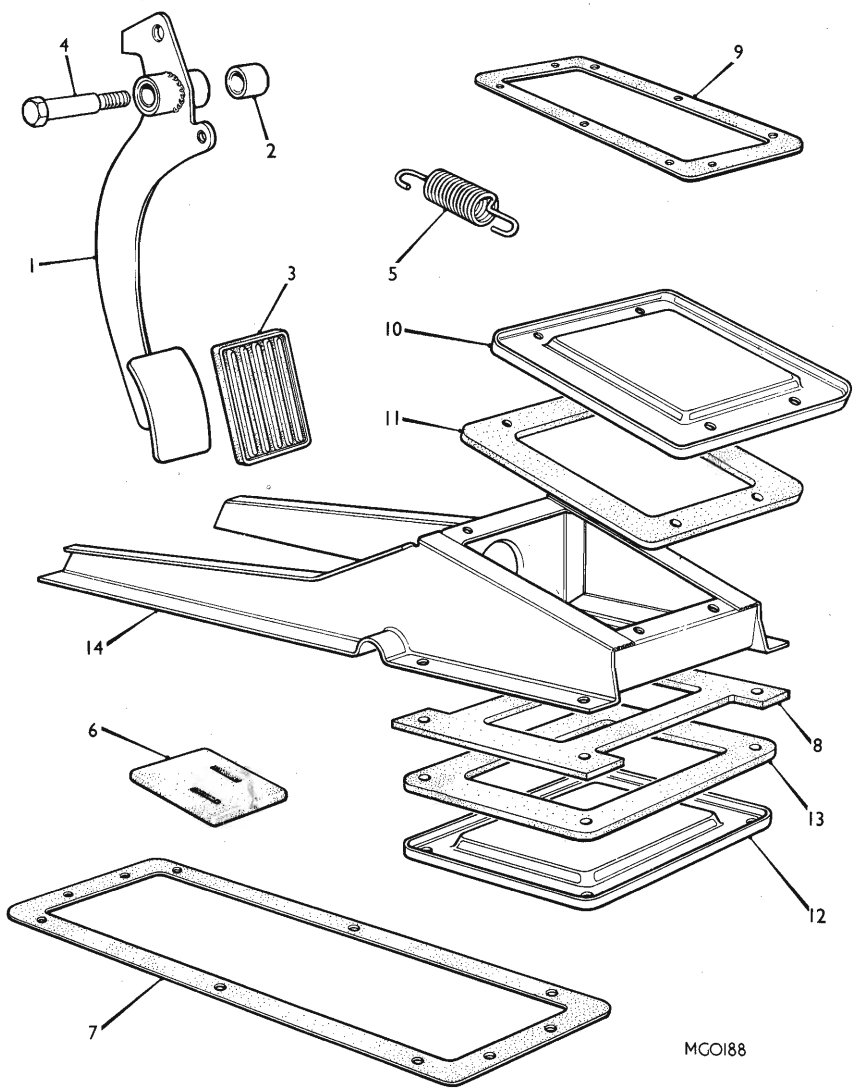

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PEDAL-DUAL LINE SYSTEM			
1	AHA 8069	PEDAL ASSEMBLY-BRAKE	1	Use prior to AHA 9723	
1	AHA 9723	PEDAL ASSEMBLY-BRAKE	1	(C)G-AN5-100179 ON	
2	LBS 810	Bush	1		
3	AHA 5326	Pad-pedal(rubber)	1		
4	AHA 8075	Bolt-brake and clutch pedal $	1		
	LWZ 206	Washer-spring	1		
	PWZ 108	Washer-plain	1		
	FNZ 506	Nut	1		
5	AAA 1628	Spring-pedal return $	1		
14	AHA 8408	Box-pedal	1	Use prior to CHA 375	
14	CHA 375	Box-pedal	1	(C)G-AN6-154101 ON	
10	CHA 333	Cover-top-pedal box	1		
11	AHA 8073	Seal	1		
8	AHA 8072	Gasket	1		
	HZS 405	Screw	6		
	PMZ 410	Screw	NLA		Use SE 604051
	SE 604051	Screw	2		
	WL 600051	Washer-spring	8		
12	AHA 8145	Plate-blanking	1		
13	AHA 8146	Seal	1		
	HZS 405	Screw	4		
	WL 600051	Washer-spring	4		

$ This item is subject to safety regulations


107-G 22

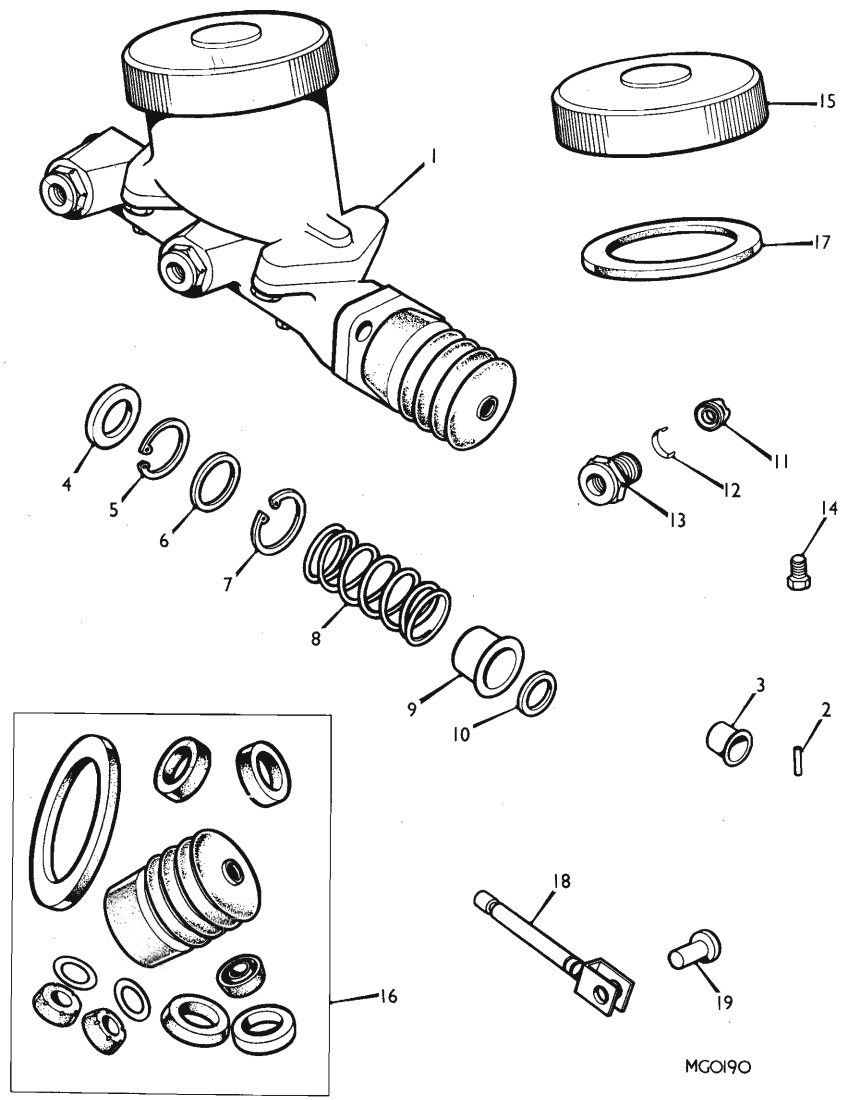

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE MASTER CYLINDER-DUAL LINE SYSTEM			
1	37H 2760	CYLINDER AND SUPPLY TANK ASSEMBLY-BRAKE MASTER(LESS PUSH-ROD) $	1		
2	27H 8442	Pin-link-piston $	1		
3	27H 8443	Retainer $	1		
4	37H 5912	Washer-stop $	1		
5	27H 8445	Circlip $	1		
6	27H 8446	Washer-cap $	1		
7	27H 8445	Circlip-bearing	1		
8	37H 2764	Spring-primary piston $	1		
8	27H 8449	Retainer $	1		
10	27H 8450	Ring-securing $	1		
11	27H 8453	Body-trap valve $	2		
12	27H 8454	Clip-trap valve $	2		
13	27H 8456	Adaptor-outlet $	2		
14	7H 7520	Bolt-fluid tank $	4		
	LWN 404	Washer	4		
15	37H 7022	Cap-filler $	1		
	AAU 3815	Cap-filler (with warning instructions) $	1		Use AAU 3815 for this application.
16	18G 8587	KIT-REPAIR-MASTER CYLINDER $	1		
17	37H 2171	Seal-filler cap $	1		
18	37H 2761	Push-rod $	1	Use prior to BHA 5132 (C)G-AN5-100745 ON	
18	BHA 5132	Push-rod $	1		
19	CLZ 513	Pin-clevis	1		
	PWZ 105	Washer-plain	1		
	WL 600051	Washer-spring	1		
	FNZ 505	Nut	1		

$ This item is subject to safety regulations


107-G 24

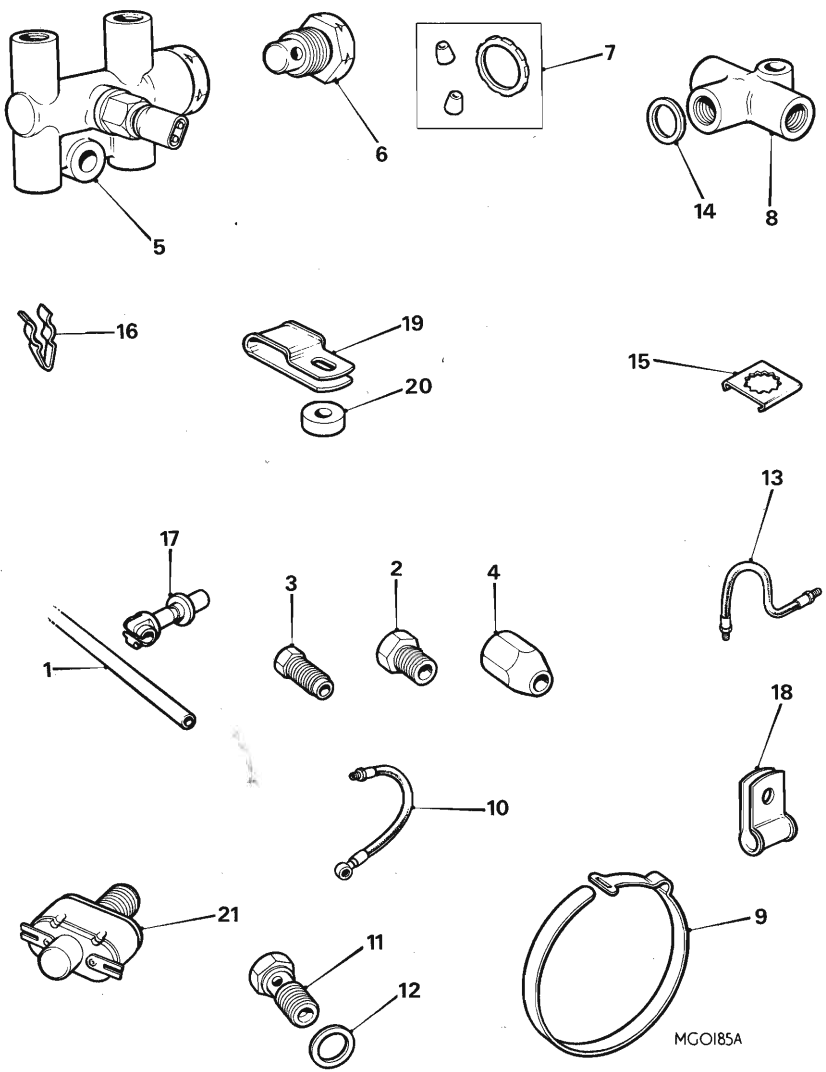

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PIPES AND FITTINGS-DUAL LINE BRAKING SYSTEM			
		PIPE			
	AHA 8552	Master cylinder to pressure switch-front-66"(168cm) $	NLA		Use pipe 37H 7147M and 1 off nut 3H 2249, 1 off nut BHA 4706
	13H 1265	Master cylinder to pressure switch rear-69"(176cm) $	NLA		Use pipe 37H 7147M and 2 off nut 3H 2249
	AHA 8510	Pressure switch to front brake hose-RH-17" (44cm) $	NLA	Finished at (C)G-AN5-154100	Use 37H 7147 M with 1 off nut BHA 4706 and 1 OFF NUT 11D 5050
	AHA 8551	Pressure switch to front brake hose-LH-49" (125cm) $	NLA		
	13H 5905	Pressure switch to rear brake hose 76"(193cm) $	NLA		Use pipe 37H 7147 M and 1 off nut 3H 2249, 1 off nut 11D 5050
	AHA 6482	3-way connection to RH rear brake-22"(56cm) $	NLA		Use 37H 7147 M with 2 off nut 3H 2249
	ACB 9162	3-way connection to LH rear brake-30"(77cm) $	NLA		
1	37H 7147 M	Pipe-brake-.187"(4.762mm) O/D	A/R		Supplied in 7 metre(22'9")rolls
2	3H 2249	Nut-tube-internal	A/R		
3	BHA 4706	Nut-tube-internal	A/R		
4	11D 5050	Nut-tube-external	A/R		

$ This item is subject to safety regulations


107-G 26

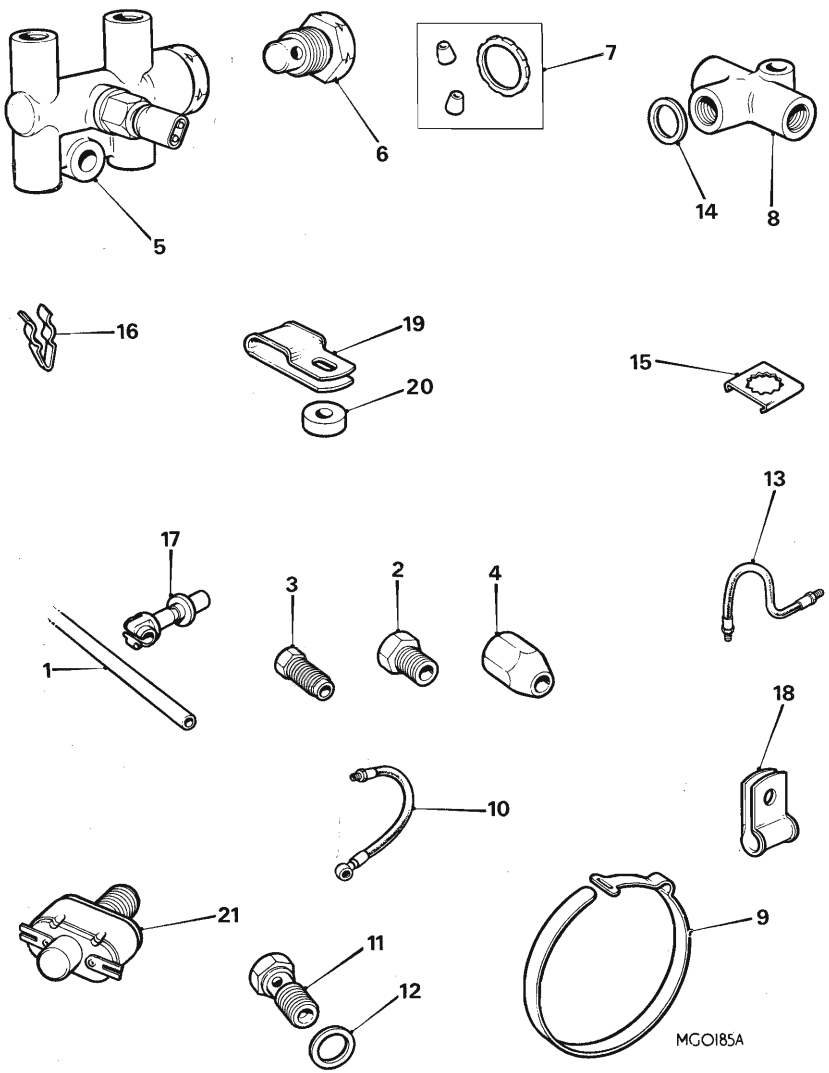

BRAKE PIPES AND FITTINGS-DUAL LINE BRAKING SYSTEM-continued.

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
	37H 7147 M	Pipe-master cylinder to pressure switch-front 15.5″(39.4cm)long $	1		With 1 off nut BHA 4706 and 3H 2249.
	37H 7147 M	Pipe-master cylinder to pressure switch-rear 17.5″(44.5cm)long $	1		With 2 off nut 3H 2249.
	37H 7147 M	Pipe-pressure switch to front brake hose-RH-41″ (104.1cm)long $	1		With 1 off nut 11D 5050 and BHA 4706.
	37H 7147 M	Pipe-pressure switch to front brake hose-LH-10″(25.4cm)long $	1	(C)G-AN6-154101 ON	
	37H 7147 M	Pipe-pressure switch to rear brake hose-81″(205.7cm)long $	1		With 1 off nut 1D 5050 and 3H 2249.
	37H 7147 M	Pipe-3-way connection to RH rear brake-22″(56cm)long $	1		With 2 off nut 3H 2249.
	37H 7147 M	Pipe-3-way connection to LH rear brake-30″(77cm)long $	1		
1	37H 7147 M	Pipe-brake-.187″(4.762mm) O/D	A/R		Supplied in 7 metre(22′9″) rolls.
2	3H 2249	Nut-tube-internal	A/R		
3	BHA 4706	Nut-tube-internal	A/R		
4	11D 5050	Nut-tube-external	A/R		


$ This item is subject to safety regulations.

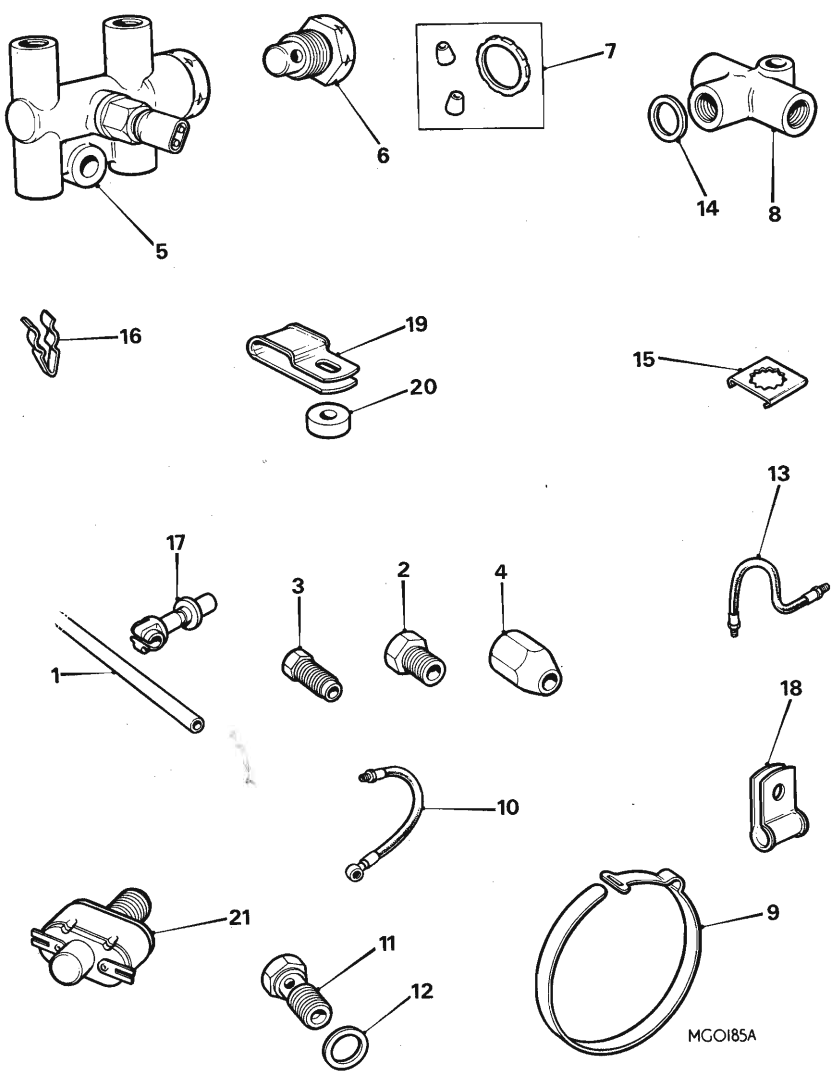

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		BRAKE PIPES AND FITTINGS-DUAL LINE BRAKING SYSTEM-continued			
5	13H 5905	SWITCH ASSEMBLY-PRESSURE FAILURE $	1	Use prior to AAU 2583	
	AAU 2583	SWITCH ASSEMBLY-PRESSURE FAILURE $	1	(C)G-AN6-166304 ON	
6	37H 4652	Cap-end	1		
7	18G 8353	KIT-REPAIR $	1		
	HBZ 408	Bolt	1		
	LWZ 204	Washer-spring	1		
8	3H 2424	Connection-3-way-rear $	1		
	HBZ 410	Bolt	1		
	LWZ 204	Washer-spring	NLA		
	NH 604041	Nut	1		
9	ACA 5375	Strap-pipe to rear axle	2		
10	GBH 111	Hose-front brake	2	Use prior to GBH 139	
10	GBH 139	Hose-front brake	NLA	See(1)foot of page	Use GBH 157
	GBH 157	Hose-front brake $	2	(C)G-AN6-162565 ON	
11	11D 5264	Bolt-banjo $	2		
12	3H 550	Gasket-bolt $	2		
13	GBH 109	Hose-rear brake	NLA	Use prior to GBH 158 (C)G-AN6-162565 ON	Use GBH 158
	GBH 158	Hose-rear brake $	1		
14	3H 2287	Gasket-hose $	3		
15	1G 9198	Plate-locking-hose	3		Use with hose GBH 111
	FNZ 106	Nut	3		
	LWN 406	Washer-shakeproof	3		
16	6K 35	Clip-brake pipe to frame	2		Use with hose GBH 111
17	623312	Clip-brake pipe to frame	2		
18	PCR 307	Clip-brake pipe to tunnel	2		
19	AHA 8683	Clip-pipe	NLA		
20	AHH 6247	Spacer-pipe to cover plate bolt	NLA		
	NH 604041	Nut	1		
	PWZ 104	Washer-plain	1		
	LWZ 204	Washer-spring	1		
	PMZ 307	Screw	2		
	PMZ 103	Washer-plain	2		
	LNZ 203	Locknut	2		
	LWZ 203	Washer-spring	2		
	FNZ 103	Nut	2		
21	BHA 4675	Switch-stoplight $	1		
	FNZ 206	Nut	1		

CHANGE POINTS
(1).(C)G-AN5-11487 TO 154100(PLUS 114244,114332,114333,114361 TO 114365, 114377,114385,114398 TO 114406,114416 TO 114419,114446 TO 114472 AND AND 114483 TO 114486)
(C)G-AN6-154101 TO 162564.

$ This item is subject to safety regulations

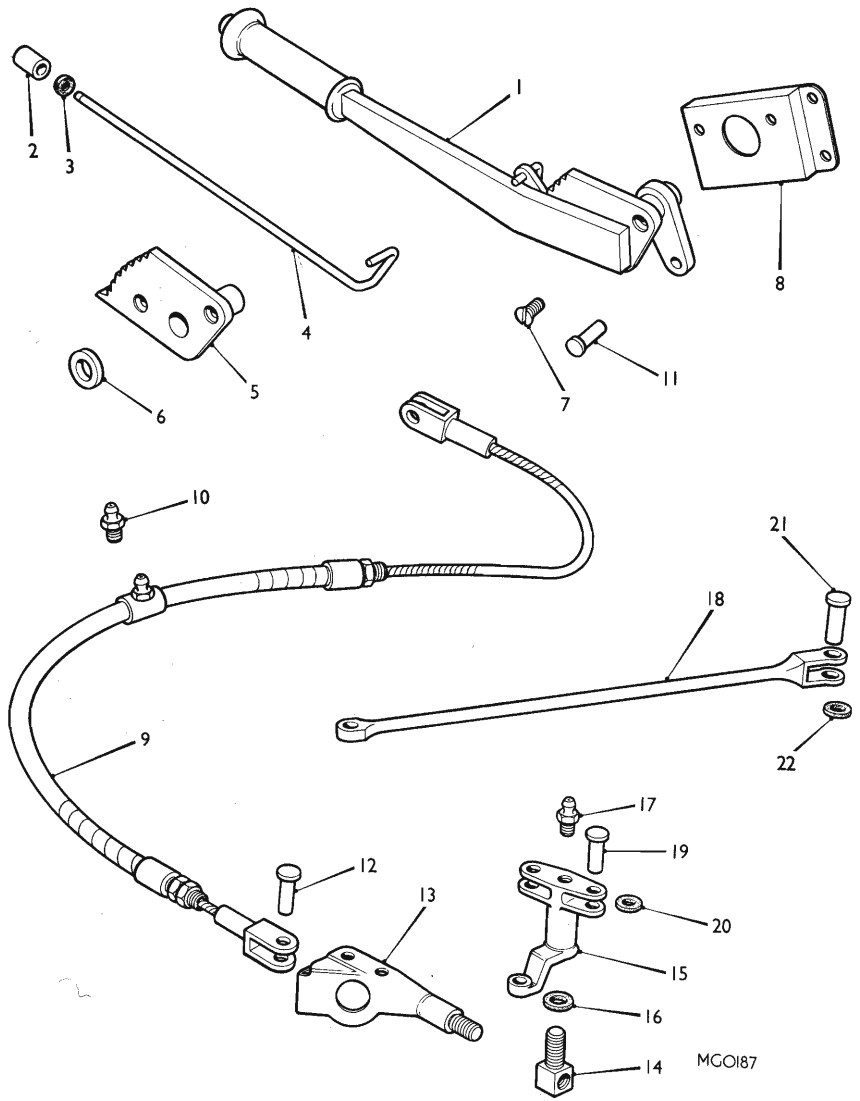

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		HAND BRAKE LEVER AND LINKAGE			
1	AHA 6406	HAND BRAKE ASSEMBLY $	1	Use prior to CHA 567	
	CHA 567	HAND BRAKE ASSEMBLY $	1	(C)G-AN6-166304 ON (USA and Canada)	
2	17H 7890	Plunger-thumb $	1		
3	7H 5951	Washer-plunger(rubber) $	1		
4	17H 2093	Rod-pawl $	NLA		
	AWZ 104	Washer-anti-rattle	1		
5	7H 5947	Ratchet and tube $	1		
	FNZ 106	Nut-main spindle	1		
6	17H 2091	Washer-anti-rattle-main spindle $	1		
	LWZ 406	Washer-shakeproof-main spindle	1		
	AAU 2492	Switch and leads-handbrake-LHD	1	(C)G-AN6-166304 ON	
7	88G 295	Screw-handbrake to bracket $	2		
8	2A 7291	Bracket-handbrake mounting $	1		
	HZS 505	Screw	3		
	WL 600051	Washer-spring	3		
9	2A 7308	CABLE ASSEMBLY-HANDBRAKE S	1		
10	UHN 105	Lubricator-cable	1		
	FNZ 207	Locknut	2		
11	CLZ 515	Pin-clevis	1		
	PWZ 105	Washer-plain	1		
12	CLZ 414	Pin-clevis	1		
	PWZ 104	Washer-plain	1		
13	ATA 7320	Support-balance lever $	1		
	HZS 506	Screw-support to axle	2		
	PMZ 105	Washer-plain	2	Use prior to CHA 634 And CHA 638	
	LWZ 305	Washer-spring	2		
	NH 605041	Nut	2		
14	2A 7058	Carrier-balance lever $	1		
15	2A 7057	Lever-balance $	1		
16	2K 5820	Washer-balance lever(felt)	1		
17	UHN 490	Lubricator-balance lever	1		
18	BTA 498	Cross-rod-RH $	1		Disc wheels
	BTA 497	Cross-rod-LH $	1		
18	BTA 495	Cross-rod-RH $	1		Wire wheels
	BTA 494	Cross-rod-LH $	1		
19	CLZ 314	Pin-cross-rod to balance lever	2		
20	6K 690	Washer-pin(felt)	4		
21	2K 6930	Pin-cross-rod to brake $	2		
22	2K 5291	Washer-pin(felt)	4		
	CHA 638	Cable-handbrake	1		Disc wheels
	CHA 634	Cable-handbrake	1		Wire wheels
	CLZ 514	Pin-clevis	1		
	WA 108051	Washer-plain	1		
	SH 604041	Screw-cable clip	1		
	WA 106041	Washer-plain	2		
	WL 600041	Washer-spring	1	(C)G-AN6-182001 ON	
	NH 604041	Nut	1		
	SH 604061	Screw-strap	2		
	WL 600041	Washer-spring	2		
	SH 605061	Screw-clamp	1		
	WL 600051	Washer-spring	1		
	WA 106041	Washer-plain	2		
	CLZ 411	Pin-clevis	2		

$ This item is subject to safety regulations

107-G 30