
MASTER INDEX

INTRODUCTION INTRODUCTION EINFUHRUNG	1.B
ENGINE MOTEUR MOTOR	1.C
FLYWHEEL AND CLUTCH VOLANT ET EMBRAYAGE SCHWUNGRAD UND KUPPLUNG	1.D
GEARBOX AND PROPSHAFT BOITE DE VITESSES ET CARDAN GETRIEBE UND KARDANWELLE	1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS AXE, SUSPENSION, ARBRE DE COMMANDE,ROUES ACHSE, AUFHANGUNG, ANTRIEBSWELLE, RADER	1.F
STEERING DIRECTION LENKUNG	1.G
BRAKES AND BRAKE CONTROLS FREINS ET COMMANDES BREMSEN UND BEDIENUNGSORGANE	1.H
FUEL, EXHAUST AND EMISSION SYSTEMS ALIMENTATION ET ECHAPPEMENT KRAFTSTOFF UND AUSPUFFANLAGE	1.I
COOLING, HEATING AND AIR CONDITIONING REFROIDISSEMENT, CHAUFFAGE, AERATION KUHLUNG, HEIZUNG UND LUFTUNG	1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ELECTRICITE, ESSUIE GLACE, INSTRUMENTS ELEKTRISCHE, SCHEIBENWISCHER,INSTRUMENTE	1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS CHASSIS, SOUBASSEMENT, CABINE CHASSIS TEILE, HILFSRAHMEN, KABINE	2.C
FASCIA, TRIM, SEATS AND FIXINGS TABLEAU DE BORD,GARNITURES INT ET SIEGES ARMATURENBRETT, POLSTERUNG UND SITZ	2.E
MISCELLANEOUS DIVERS VERMISCHT	2.F
NUMERICAL INDEX INDEX NUMERIQUE NUMMERNVERZEICHNIS	2.G

GROUP INDEX

ALTERNATOR AND FIXINGS	L05
BELT-FAN	L05
BATTERY AND FIXINGS	N03
COURTESY LIGHTS	L13
DISTRIBUTOR-NOT USA	L02
DISTRIBUTOR-USA AND CANADA	L03
FUSE BOX AND RELAY	N02
HEADLAMPS	L07
KIT-SCREW-TRIMMER	L07
HORN AND CONTROLS	M03
INSTRUMENT WARNING LIGHTS	M08
INSTRUMENTS	M04
LAMP-REFLEX	L11
LAMP-REVERSE	L10
LAMP-SIDE AND FLASHER	L08
NUMBER PLATE LAMPS	L12
OIL PRESSURE GAUGE PIPES	M09
SWITCH-OIL PRESSURE-ANTI RUN-ON	M09
SWITCH-OIL-PRESSURE	M09
POWER UNIT ELECTRICS	L04
SWITCH-INHIBITOR(SEAT BELT)	L04
SWITCH-REVERSE LIGHT	L04
RADIO FITTINGS	N04
REAR FOG LAMPS	L14
STARTER AND FIXINGS	L06
STOP/TAIL LAMPS	L09
SWITCHES-(USA TYPES)	M12
LIGHT-WARNING-BRAKE	M14
LIGHT-WARNING FASTEN BELTS	M14
LIGHTER ASSEMBLY-CIGAR	M14
UNIT-FLASHER	M13
UNIT-HAZARD WARNING	M14
SWITCHES-RHD	M10
LIGHT-BRAKE WARNING	M11
LIGHTER ASSEMBLY-CIGAR	M11
UNIT-FLASHER-HAZARD WARNING	M11
WINDSCREEN WASHER	M02
WINDSCREEN WIPERS-LHD	L17
WINDSCREEN WIPERS-RHD	L15
WIRING CABLES AND FITTINGS	M15

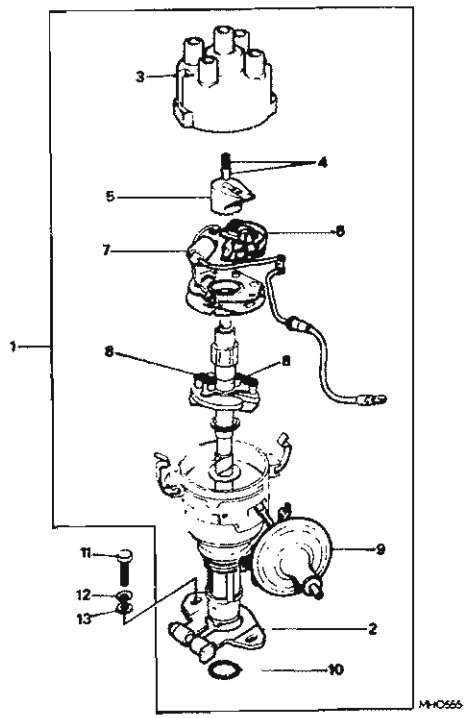

MH0555

DISTRIBUTOR-NOT USA.


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	GEU	925	DISTRIBUTOR ASSEMBLY	1		
2	RTC	1773	Plate-clamping	NLA		
3	GDC	132	Cover moulded	1		
4	37H	8230	Brush and spring	1		
5	GRA	114	Arm-rotor	1		
6	GCS	118	Contact set	1		
7	GSC	110	Condenser(with lead)	1		
8	RTC	1776	Spring-Automatic advance	1SET		
9	RTC	1775	Vacuum unit	1		
10	27H	6547	O ring	1		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

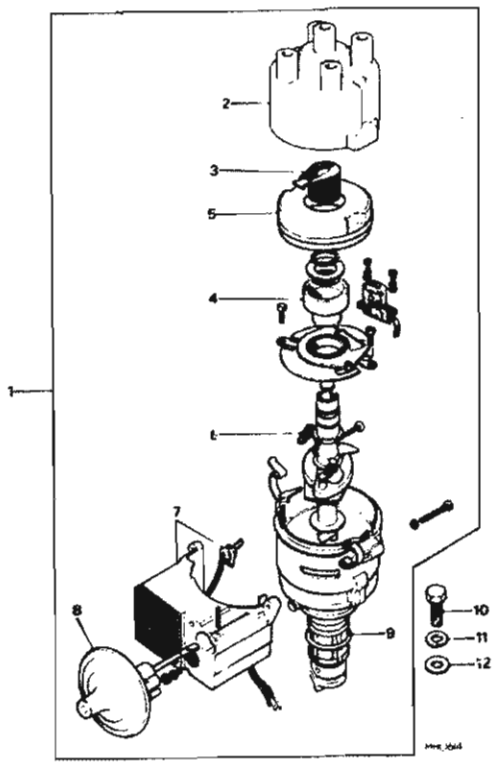

MH0617

DISTRIBUTOR-USA AND CANADA


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	TKC	1224	DISTRIBUTOR ASSEMBLY	NLA		Use TKC 3180
	TKC	3180	DISTRIBUTOR ASSEMBLY	1		
	RTC	1773	Plate-clamping	NLA		
2	GDC	136	Cover-moulded	1		
	37H	8230	Brush and spring	1		
3	GRA	114	Arm-rotor	1		
4	RTC	1739	Rotor assembly timing	1		USA and Canada
5	RTC	1738	Cover-anti-flash	1		TO 1976
6	RTC	1780	Spring-automatic advance	1SET		California
7	AAU	4364	Amplifier with vacuum unit and module	1		1976 TO 1977
8	BAU	1165	Vacuum unit(with roll pin)	1		
9	27H	6547	O'ring oil seal	1		
1	TKC	2755	DISTRIBUTOR ASSEMBLY	1		
	RTC	1773	Plate-clamping	NLA		
2	GDC	136	Cover-moulded	1		
	37H	8230	Brush and spring	1		Federal
3	GRA	114	Arm-rotor	1		1976 TO 1977
4	RTC	1739	Rotor-timing	1		
5	RTC	1738	Cover-anti-flash	1		
	AAU	4365	Amplifier with vacuum unit and module	1		
	AAU	6311	Vacuum unit(with roll pin)	1		
9	27H	6547	O'ring	1		
1	TKC	3289	DISTRIBUTOR ASSEMBLY	1		
7	AAU	6313	AMPLIFIER AND VACUUM UNIT ASSEMBLY	1		Federal 1977 ON
8	AAU	6312	Vacuum unit	1		
1	TKC	3287	DISTRIBUTOR ASSEMBLY	1		
7	AAU	4365	AMPLIFIER AND VACUUM UNIT ASSEMBLY	1		California
8	AAU	6311	Vacuum unit	1		1977 YM ON

MASTER INDEX

INTRODUCTION 1B
ENGINE 1C
FLYWHEEL AND CLUTCH 1D
GEARBOX AND PROPSHAFT 1E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1F
STEERING 1G
BRAKES AND BRAKE CONTROLS 1H
FUEL, EXHAUST AND EMISSION SYSTEMS 1I
COOLING, HEATING AND AIR CONDITIONING 1K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2C
FASCIA, TRIM, SEATS AND FIXINGS 2E
MISCELLANEOUS 2F
NUMERICAL INDEX 2G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

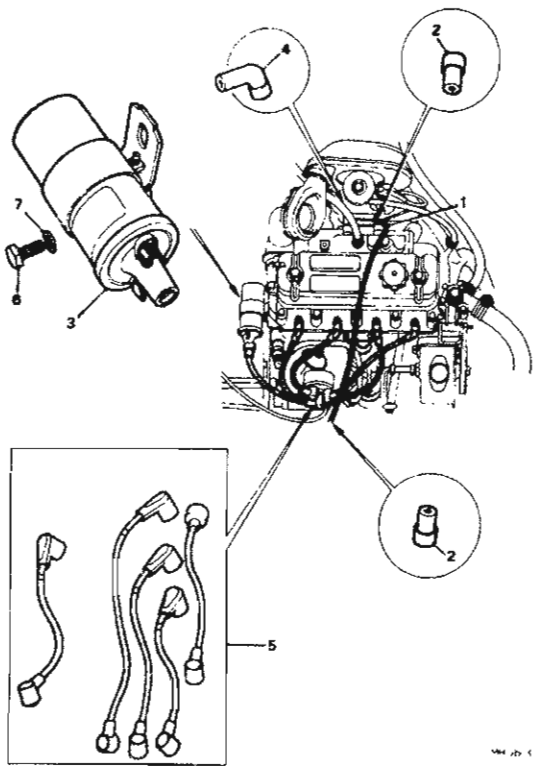

MH0650

POWER UNIT ELECTRICS


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
1	151103		Pipe-suction-distributor to carburetter	1		
4	128262		Connection-pipe to distributor	1		
2	131211		Connection-pipe to carburetter	1		
5	GHT 152		Kit-ignition lead	1		
3	GCL 111		Coil-ignition	1		
	13H 9440		Resistor-electronic ignition driver-ballast $	NLA		Use UKC 3908 USA and Canada
	UKC 3908		Resistor-electronic ignition driver-ballast $	1		
6	HZS 405		Screw-coil to body	2		
7	GHF 332		Washer-spring	2		
	NT 605041		Nut	2		
8	GSP 131		Plug-sparking	4		
	22G 2047		Switch-inhibitor(seat belt)	NLA	(C)G-AN6-154101 TO 159053	Use CAL 4675 USA-Canada
	CAL 4675		Switch-inhibitor(seat belt)	1		
	13H 6084		Switch-reverse light	1		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

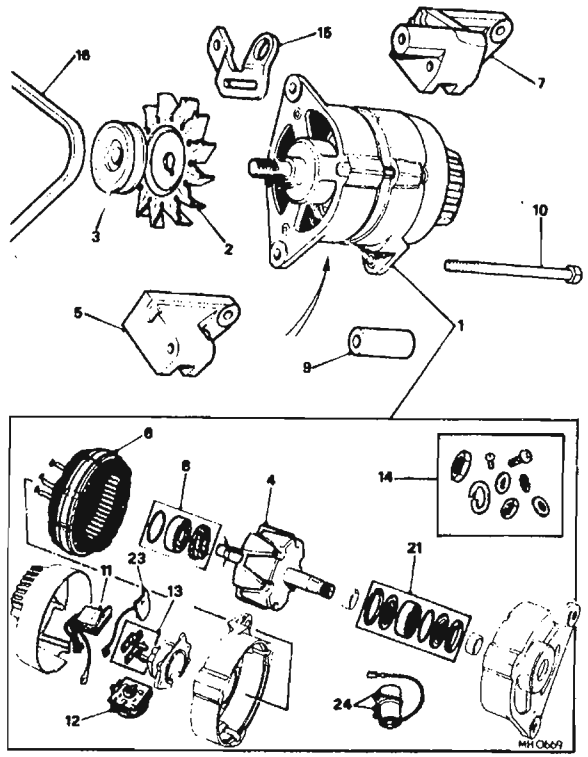

MH0669


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			ALTERNATOR AND FIXINGS.			
1	GEU 207		ALTERNATOR ASSEMBLY-BATTERY SENSED-16ACR	1		
11	37H 7964		Regulator	1		
12	37H 7965		Rectifier	1		
21	18G 8619		Kit-bearing-drive end	1		
4	37H 4196		Rotor	1		
8	18G 8620		Kit-bearing-slip ring end	1		
6	37H 2257		Stator	1		
13	37H 4199		Brush-set	1		
14	37H 2258		Sundry parts-set	1		
23	37H 7517		Device-surge protection	1		
24	37H 7963		Capacitor-suppression	1		
2	147990		Fan-alternator	1		
3	154334		Pulley-alternator	NLA		Use AEU 1238
3	AEU 1238		Pully-alternator	1		
5	147899		Bracket-mounting	1		
7	CHA 304		Bracket-mounting	1		USA and Canada
	GHF 332		Washer-lock	2		
	GHF 103		Setscrew	2		
	HB 839		Bolt-pivot	1		Not USA and Canada
	147483		Spacer-pivot bolt	1		
	WP 139		Washer-plain	1		
	GHF 222		Nut	1		
9	UKC 3128		Tube-distance	1		USA and Canada
10	HB 841		Bolt	1		
15	156464		Link-adjusting and lifting eye-front	1		
	HU 858		Screw-link to alternator	1		
	WP 17		Washer	2		
	JN 2158		Nut	1		
16	GFB 105		Belt-fan	1		
16	CHA 328		Belt-fan	1		USA and Canada
	BHH 1580		Guard-alternator fan	1		

MASTER INDEX

INTRODUCTION 1.B
ENGINE 1.C
FLYWHEEL AND CLUTCH 1.D
GEARBOX AND PROPSHAFT 1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1.F
STEERING 1.G
BRAKES AND BRAKE CONTROLS 1.H
FUEL, EXHAUST AND EMISSION SYSTEMS 1.I
COOLING, HEATING AND AIR CONDITIONING 1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2.C
FASCIA, TRIM, SEATS AND FIXINGS 2.E
MISCELLANEOUS 2.F
NUMERICAL INDEX 2.G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

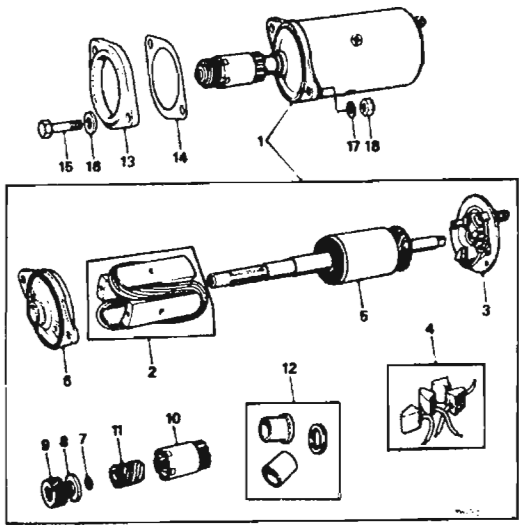

MH0701


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			STARTER AND FIXINGS.			
1	GEU 405		STARTER ASSEMBLY-TYPE M35J	1		
1	GEU 448		STARTER ASSEMBLY-M35J	1		
2	37H 4670		Coil-field-set	1		
3	37H 4672		Bracket-commutator end	1		
4	GSB 105		Brush-set	1		
5	37H 4674		Armature	1		
6	37H 4675		Bracket-drive end	1		
7	7H 6887		Ring-jump	1		
8	27H 3755		Cup-shaft	1		
9	7H 5045		Spring-main	1		
10	67H 5010		Pinion and barrel	1		
11	67H 5013		Sleeve-screwed	1		
12	37H 4678		Kit-bush	1		
13	131570		Piece-packing	1		
14	104549		Shim	1		
15	BH 606171		Bolt	2		
16	WE 600061		Washer	2		
17	GHF 333		Washer-lock	2		
18	GHF 202		Nut	2		

MASTER INDEX

INTRODUCTION 1.B
ENGINE 1.C
FLYWHEEL AND CLUTCH 1.D
GEARBOX AND PROPSHAFT 1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1.F
STEERING 1.G
BRAKES AND BRAKE CONTROLS 1.H
FUEL, EXHAUST AND EMISSION SYSTEMS 1.I
COOLING, HEATING AND AIR CONDITIONING 1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2.C
FASCIA, TRIM, SEATS AND FIXINGS 2.E
MISCELLANEOUS 2.F
NUMERICAL INDEX 2.G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

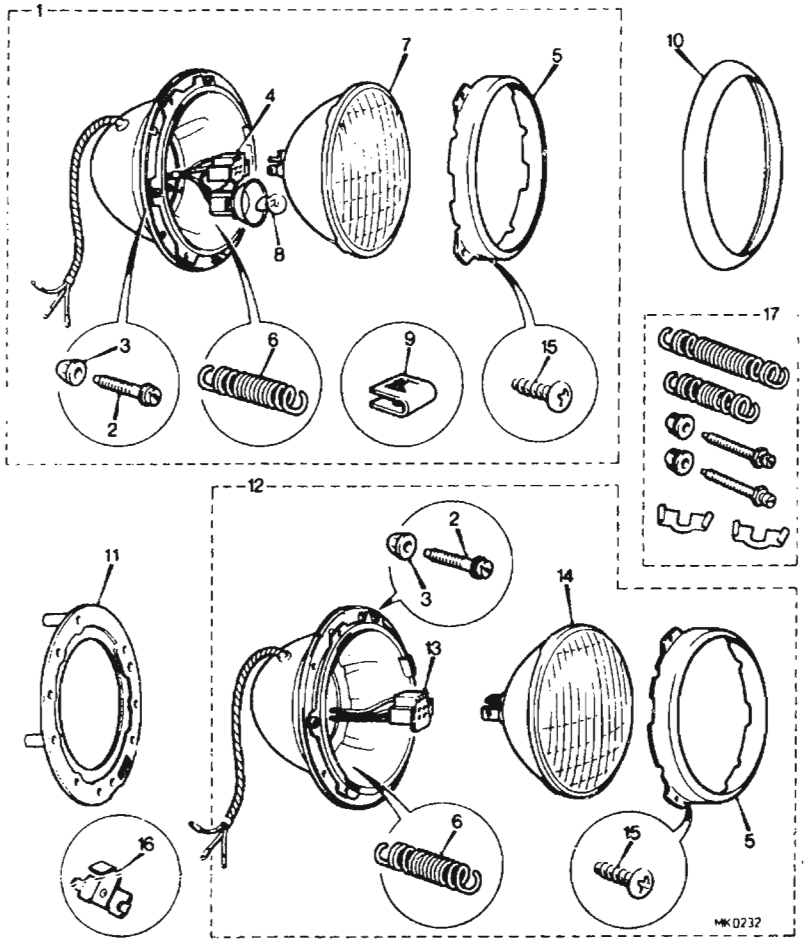

MK0232


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			HEADLAMPS.			
1	37H 8813		HEADLAMP ASSEMBLY-RHD	2		
2	67H 5025		Screw-trimmer	NLA		Use BHM 7058
3	BMK 2435		Retainer	NLA		
4	37H 8814		Adaptor and cable	2		
5	515218		Plate-light unit retaining	2		
15	PJZ 602		Screw-fixing-unit rim	6		
6	67H 5026		Spring-fixing-unit rim	2		
7	GLU 104		Unit-light	2		
8	GLB 501		Bulb-pilot	2		
9	27H 5354		Nut-fixing screw	2		
10	57H 5455		Rim	2		
11	9403		Gasket-body	2		
12	27H 8266		HEADLAMP ASSEMBLY-LHD $	2		
2	67H 5025		Screw-trimmer	NLA		Use BHM 7058
3	BMK 2435		Retainer	NLA		
13	27H 6713		Adaptor and cable	NLA		
5	515218		Plate-light unit retaining	2		
15	PJZ 602		Screw-fixing unit rim	6		
6	67H 5026		Spring-fixing unit rim	2		
14	BHA 5315		Unit-light $	NLA		Use GLU 133
14	GLU 133		Unit-light $	2		
16	BAU 1460		Clip and bracket	1		
10	57H 5455		Rim	2		
11	9403		Gasket-body	2		
17	BHM 7058		Kit-screw-trimmer	2		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

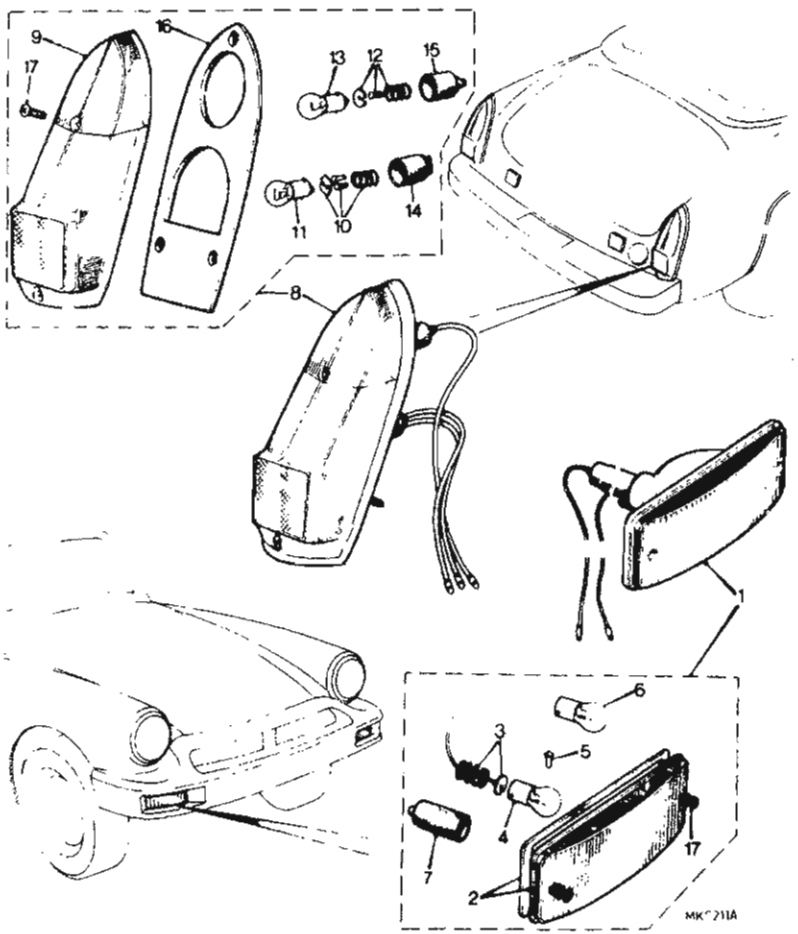

MK0211A


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			LAMP-SIDE AND FLASHER			
1	BHA 5318		LAMP ASSEMBLY-DIRECTION INDICATOR-FRONT-RHD	2		
2	37H 8759		Lens-Amber	2		
17	518868		Screw-lens fixing	4		
3	37H 5452		Interior-bulbholder	2		
4	GLB 382		Bulb-21w	2		
5	27H 6713		Sleeve-terminal	NLA		
1	BHA 5320		LAMP ASSEMBLY-SIDE AND FLASHER-AMBER-LHD	2		
2	37H 8759		Lens-Amber	2		
17	518868		Screw-lens fixing	4		
6	GLB 380		Bulb-6/21w	2		
7	27H 6679		Grommet	2		
5	27H 6713		Sleeve-terminal	NLA		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

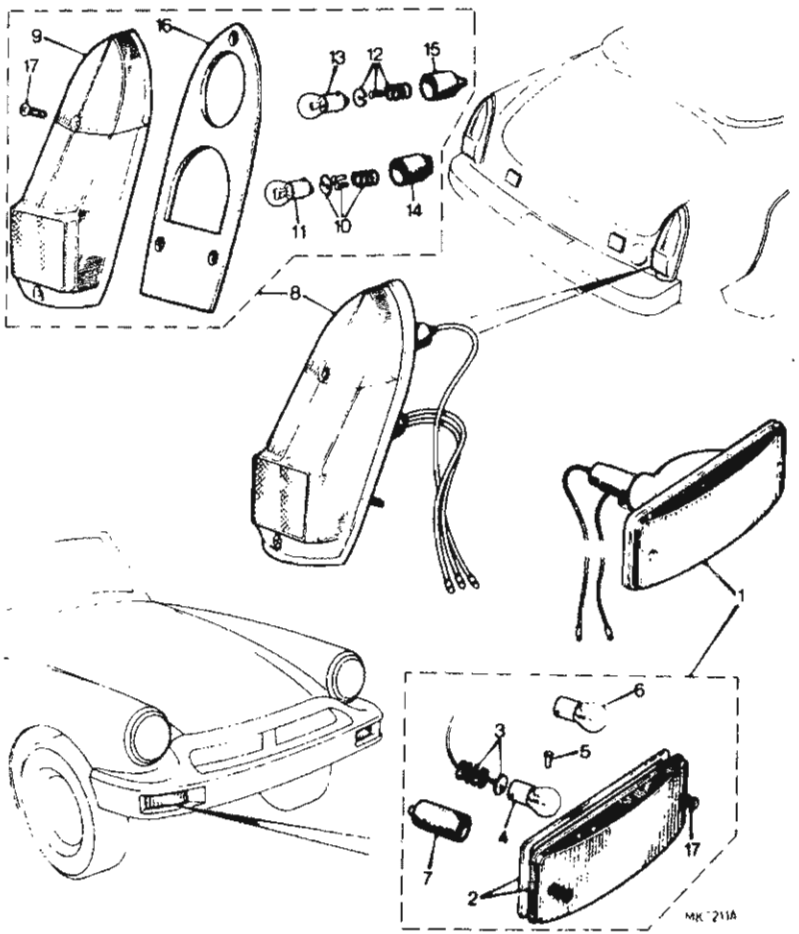

MK0211A


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			STOP/TAIL LAMPS			
8	BHA	4973	LAMP ASSEMBLY-STOP/TAIL FLASHER AND REFLEX AMBER FLASHER-RHD	2		
9	37H	4737	Lens-amber/red	2		
17		518868	Screw-lens fixing	4		
10	37H	5459	Interior-bulb holder	2		
11	GLB	380	Bulb-stop/tail	2		
12	37H	5452	Interior-bulb holder	2		
13	GLB	382	Bulb-flasher	2		
14	37H	2687	Grommet-cable-stop-tail	NLA		
15	37H	2688	Grommet-cable-flasher	NLA		
16	37H	4679	Gasket-lamp seating	2		
8	BHA	5260	LAMP ASSEMBLY-STOP/TAIL-FLASHER AND REFLEX-AMBER FLASHER-LHD	2		
9	37H	7119	Lens-red/amber	2		
17		518868	Screw-lens fixing	4		
10	37H	5459	Interior-bulb holder	2		
11	GLB	380	Bulb-stop/tail	2		
12	37H	5452	Interior-bulb holder	2		
13	GLB	382	Bulb-flasher	2		
14	37H	2687	Grommet-cable	NLA		
15	37H	2688	Grommet	NLA		
16	37H	4679	Gasket-lamp seating	2		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

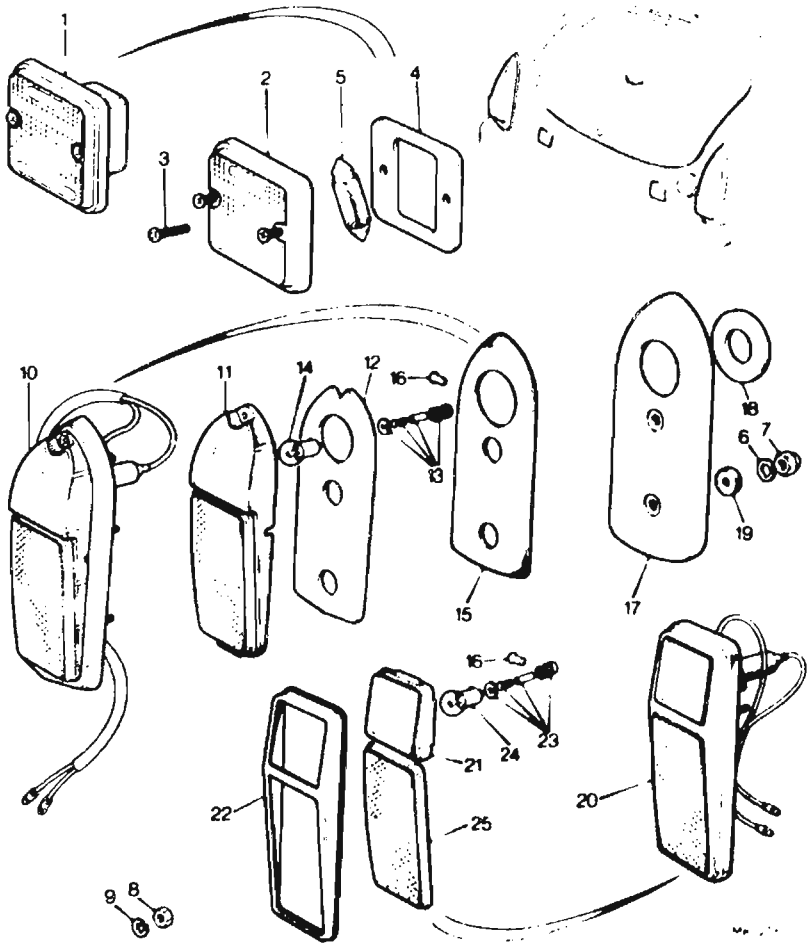

MK0213


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			LAMP-REVERSE.			
1	BHA 5262		LAMP ASSEMBLY-REVERSE S	2		Alternatives
1	AAU 5510		LAMP ASSEMBLY-REVERSE S	2		
2	37H 7512		LENS ASSEMBLY S	2		
3	518868		Screw-lens fixing	4		
5	GLB 270		Bulb-festoon	NLA		Use GLB 273
5	GLB 273		Bulb-festoon	2		
4	37H 1759		Gasket-seating	2		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR/SEAT BELT L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

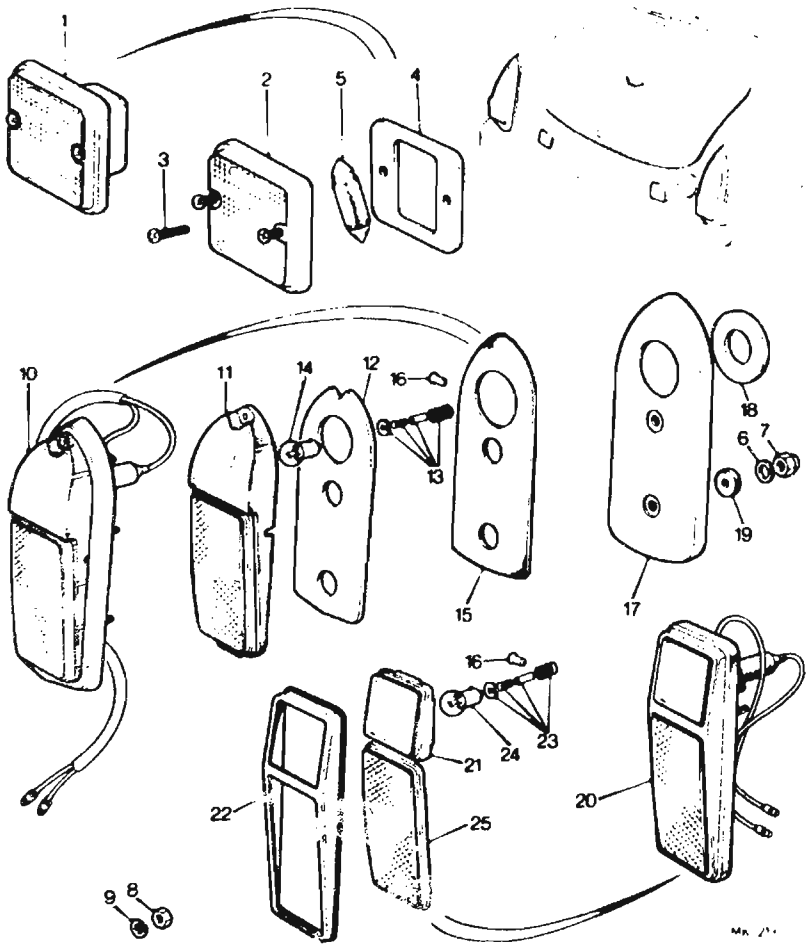

MK0213


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			LAMP-REFLEX			
10	BHA 4968		LAMP ASSEMBLY-REFLEX-SIDE MARKER-FRONT-RH	1		
	BHA 4969		LAMP ASSEMBLY-REFLEX-SIDE MARKER-FRONT-LH	1		
11	11727		Lens-Amber-RH	1		
	11730		Lens-Amber-LH	1		
3	518868		Screw-lens fixing	2		
12	37H 4753		Gasket-lens seating	2		
13	244700		Interior-bulb holder	2		
14	GLB 989		Bulb	2		
15	37H 4752		Gasket-lamp seating	2		
16	27H 6713		Sleeve-terminal	NLA		USA and Canada
17	AHA 9338		Plinth-side marker-RH	1		
	AHA 9339		Plinth-side marker-LH	1		
18	AHA 9485		Seal-plinth	NLA		
19	AHA 9484		Washer-sealing	NLA		
6	PWZ 203		Washer-plain	4		
7	LNZ 203		Lock-nut	4		
20	BHA 4972		LAMP ASSEMBLY-REFLEX SIDE MARKER-REAR	2		
21	608224		Lens-Red	2		
22	519364		Rim	2		
23	244700		Interior-bulb holder	2		
24	GLB 989		Bulb	2		
25	47H 5279		rEFLEX-REFLECTOR	2		
16	27H 6713		Sleeve-terminal	NLA		
8	CNZ 102		Nut	6		
9	WL 700061		Washer-spring	6		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

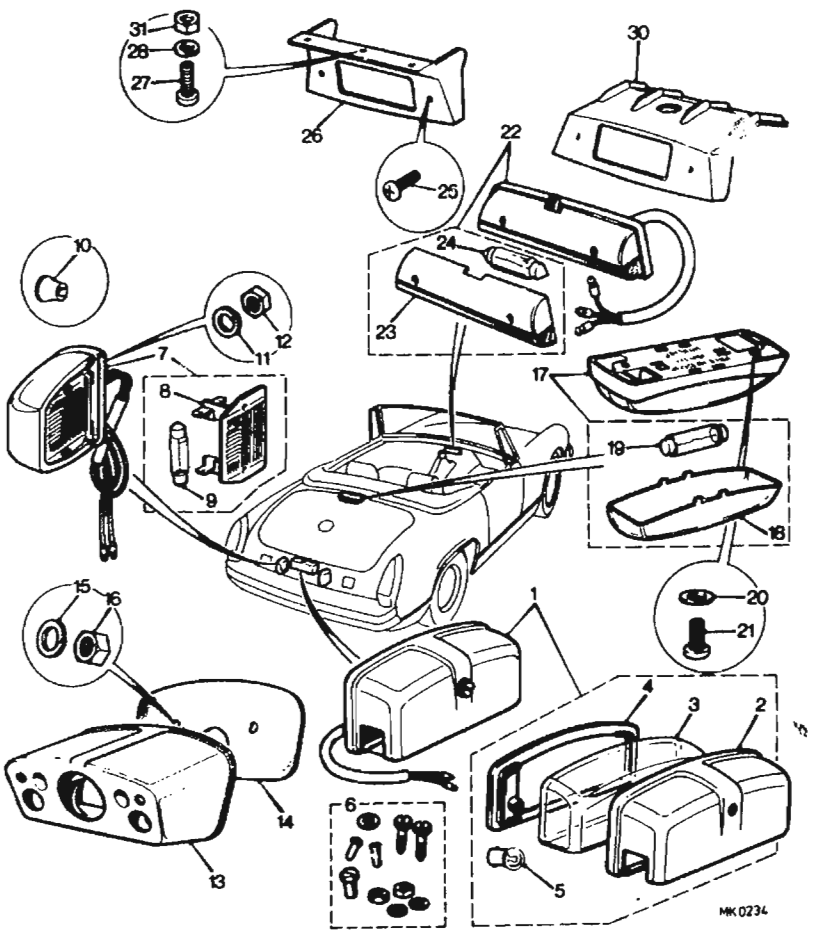

MK0234


Illus	Part Number	123456 Description	Quantity	Change Point	Remarks
		NUMBER PLATE LAMPS			
1	127916	LAMP ASSEMBLY-NUMBER PLATE-RHD	1		UK
2	7H 5185	Body	1		
3	57H 5128	Glass	NLA		Use 601721
3	601721	Glass	1		
4	57H 5368	Gasket-seating	1		
5	GLB 233	Bulb	2		
6	7H 5123	Sundry parts set	1		
7	BHA 5303	LAMP ASSEMBLY-NUMBER PLATE-LHD	2		
8	13H 5991	Lens and bulb support	NLA		Use PRC 1230
8	PRC 1230	Lens and bulb support	2		
9	GLB 254	Bulb	2	(C)G-AN6-14101 TO 179462	N America
10	13H 9016	Grommet-base	2		
11	GHF 306	Washer	4		
12	LNZ 203	Nut-lamp to mounting plate	4		
7	AAU 9412	LAMP ASSEMBLY-NUMBER PLATE-LHD (CHROME FINISH) $	NLA	(C)G-AN6-179463 TO 182000	Use AAU 2143
7	AAU 2143	LAMP ASSEMBLY-NUMBER PLATE-LHD (BLACK FINISH) $	2	(C)G-AN6-182001 ON	N America and Japan
8	AAU 5113	Lens $	2	(C)G-AN6-179463 ON	
9	GLB 254	Bulb	2		
12	NH 105041	Nut	4		
11	WL 105001	Washer-spring	4		
13	AHA 9200	Plinth-number plate lamp	NLA		
14	AHA 9202	Seal-plinth to body	1		
15	GHF 300	Washer-spring	2		
16	GHF 221	Locknut	2		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

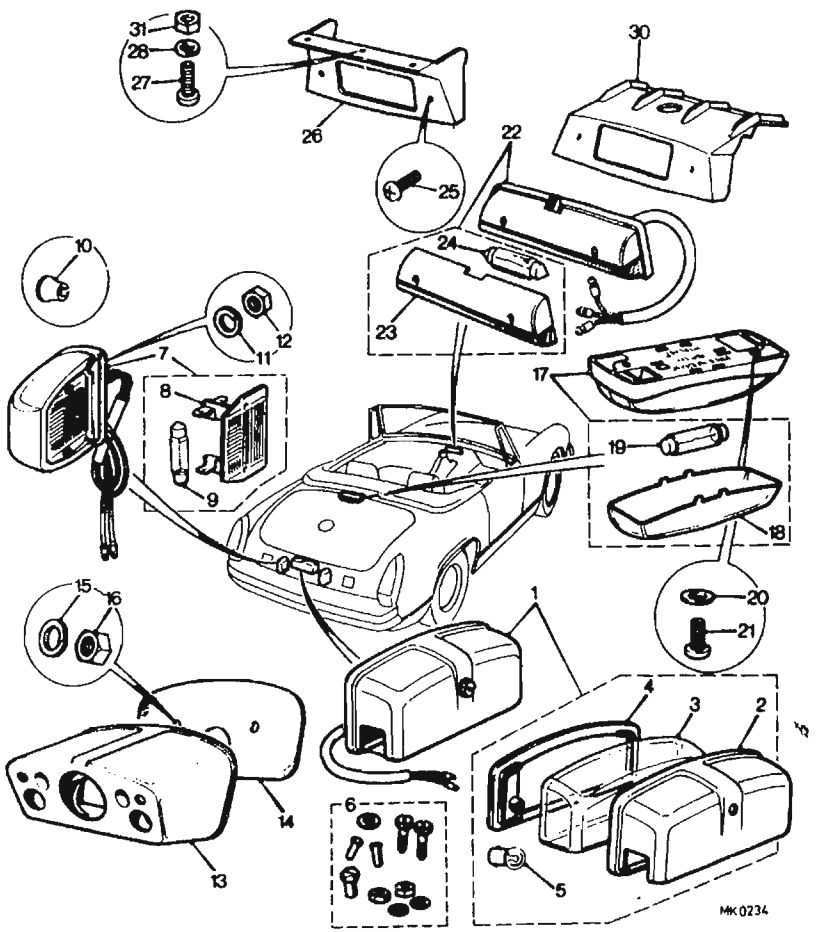

MK0234


Illus	Part Number	1 2 3 4 5 6	Description	Quantity	Change Point	Remarks
			COURTESY LIGHTS			
17	BHA 5040		COURTESY LIGHT ASSEMBLY-BOOT	1		
18	37H 5923		Lens	1		
19	GLB 254		Bulb	1		
20	GHF 422		Screw-courtesy light-trunk	2		
21	PWZ 202		Washer	2		
22	BHA 5138		COURTESY LIGHT ASSEMBLY-INTERIOR	1	(C)G-AN6-154101 TO 200000	
23	27H 3590		Lens	1		
24	GLB 254		Bulb	1		
22	ADU 1003		COURTESY LIGHT ASSEMBLY	1	(C)G-AN6-200001 ON	
23	27H 3590		Lens	1		
24	GLB 254		Bulb	1		
25	PMZ 207		Screw-light to bracket	2		
28	WL 700061		Washer-spring-screw	2		
30	AHA 9767		Bracket-interior light	1	(C)G-AN6-154101 ON	USA only
26	AHA 1769		Bracket-interior light	1	(C)G-AN6-154101 TO 212000	Except USA
27	PMZ 207		Screw-bracket	3		
28	WL 700061		Washer-spring-screw	3		
31	ANZ 103		Nut-screw	3		
30	AHA 9767		Bracket-interior light	1	(C)G-AN6-212001 ON	

MASTER INDEX

INTRODUCTION 1.B
ENGINE 1.C
FLYWHEEL AND CLUTCH 1.D
GEARBOX AND PROPSHAFT 1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1.F
STEERING 1.G
BRAKES AND BRAKE CONTROLS 1.H
FUEL, EXHAUST AND EMISSION SYSTEMS 1.I
COOLING, HEATING AND AIR CONDITIONING 1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2.C
FASCIA, TRIM, SEATS AND FIXINGS 2.E
MISCELLANEOUS 2.F
NUMERICAL INDEX 2.G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

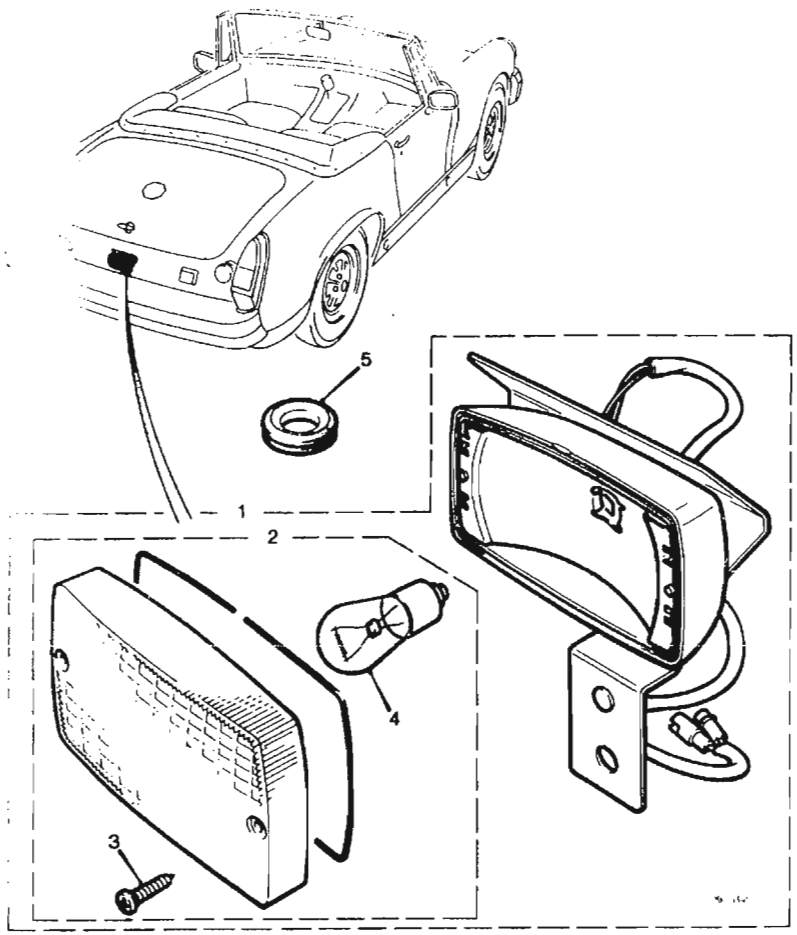

MK0345


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			REAR FOG LAMPS			
1	ADU	3392	LAMP AND BRACKET ASSEMBLY-FOG-REAR (WIPAC)	1		Alternative to ADU 3645
2	GAL	255	LENS ASSEMBLY	1		
3	GHF	422	Screw-lens fixing	2		
4	GLB	382	Bulb-12V-21W	2		
	ADU	3645	LAMP AND BRACKET ASSEMBLY-FOG-REAR (CIBIE)	1		Alternative to ADU 3392
	BAU	1971	LENS ASSEMBLY	1		
3	GHF	422	Screw-lens fixing	2		
4	GLB	382	Bulb-12V-21W	1		
5	5L	62	Grommet-fog lamp wires through boot floor	2		

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

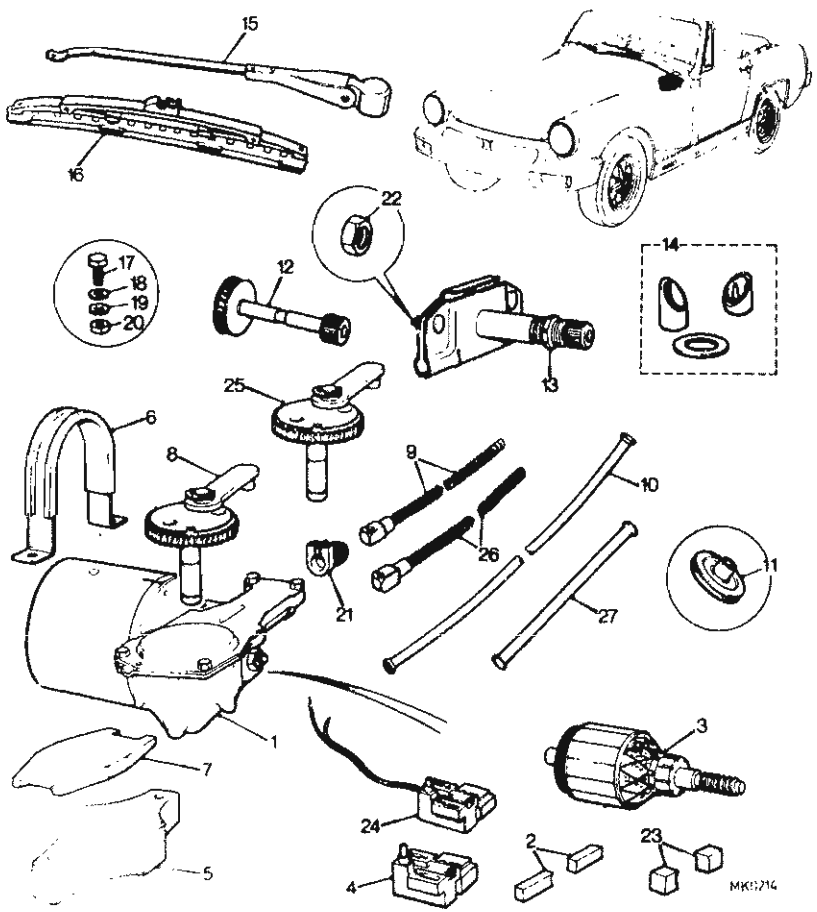

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			WINDSCREEN WIPERS-RHD.			
1	37H 8221		MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR) A/B AND D	NLA		Use GEU 708
1	GEU 708		MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR)	1		
2	517644		Brush A/B	1SET		
3	37H 8222		Armature	1		
4	37H 2734		Switch-parking A/B	NLA		Use 517645
4	517645		Switch-parking A/B	1		
23	RTC 198		Brush D	1		
24	37H 6784		Switch-parking D	NLA		Use 520160
24	520160		Switch-parking	1		
21	37H 3694		Ferrule	1		
5	AHH 8766		Packing-wiper motor	NLA		
6	BHA 4790		Strap-wiper motor	1		
7	150844		Pad	1		
8	608092		Gear-wiper motor	1	ICIG-AN6-154101 TO 212000	
9	37H 5208		Rack-96 85cm(38")long	1		
25	37H 3796		Gear-wiper motor	1	ICIG-AN6-212001 ON	
26	508182		Rack	1		
27	AHA 8696		Casing-outer-wheelbox to wheelbox	1		
10	13H 5412		Casing-outer-wheelbox to extension	1		
11	C 5574		Grommet-casing through dash	2		

NOTE


Reference must be made to the suffix letter of the manufacturers part number stamped on the motor to ensure that the correct component parts are ordered

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

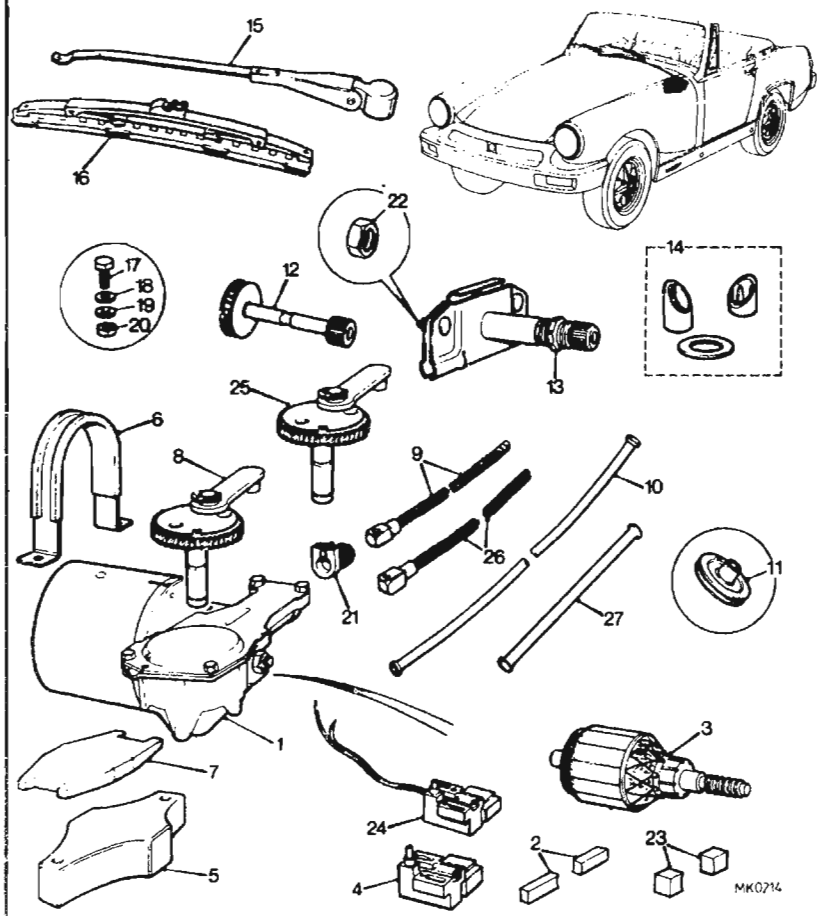

MK0214


Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			WINDSCREEN WIPERS-RHD-continued			
	BHA 4774		WHEELBOX ASSEMBLY $	NLA		Use wheelbox 37H 6314 or 37H 7738 with 1 off bush kit 18G 8851
12	27H 2330		Spindle and gear $	2		
22	GHF 206		Nut-wheelbox	2		
	37H 6314		Wheelbox(less bushes)	NLA		Use 37H 7738
13	37H 7738		Wheelbox(less bushes)	2		
14	18G 8851		Kit-bush	2		
15	BHA 5208		Arm-windscreen wiper $	2		
16	GWB 164		Blade-windscreen wiper $	2		
15	AAU 7991		Arm-windscreen wiper-black	NLA		Use BHA 5208
16	GWB 266		Blade-windscreen wiper-black	2		
17	BH 604111		Screw	2		
18	PW2 204		Washer-plain-screw	2		
19	GHF 331		Washer-spring-screw	2		
20	GHF 200		Nut-screw	2		

MASTER INDEX

INTRODUCTION 1 B
ENGINE 1 C
FLYWHEEL AND CLUTCH 1 D
GEARBOX AND PROPSHAFT 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1 F
STEERING 1 G
BRAKES AND BRAKE CONTROLS 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS 1 I
COOLING, HEATING AND AIR CONDITIONING 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2 C
FASCIA, TRIM, SEATS AND FIXINGS 2 E
MISCELLANEOUS 2 F
NUMERICAL INDEX 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

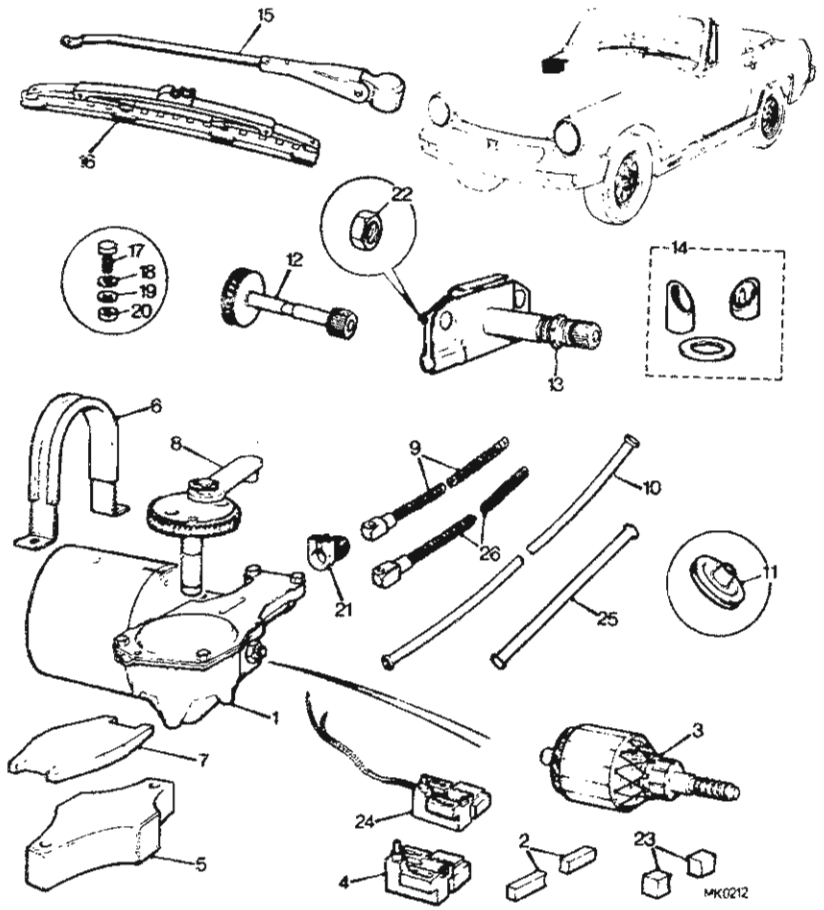

MK0212

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			WINDSCREEN WIPERS-LHD.			
1	37H 2732		MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR) ABRD	NLA		Use GEU 708
1	GEU 708		MOTOR ASSEMBLY-WINDSCREEN WIPER(LESS GEAR)	1		
2	517644		Brush AB	1SET		
3	37H 8222		Armature	1		
4	37H 2734		Switch-parking AB	NLA		Use 517645
4	517645		Switch-parking AB	1		
23	RTC 198		Brush D	1SET		
24	37H 6784		Switch-parking D	NLA		Use 520160
24	520160		Switch-parking	1		
21	37H 3694		Ferrule-casing retaining	1		
5	AHH 8766		Packing-wiper motor	NLA		
6	BHA 4790		Strap-wiper motor	1		
7	150844		Pad	1		
25	AHA 8696		Casing-outer-wheelbox to wheelbox	1		
10	13H 5412		Casing-wheelbox extension	1		
11	C 5574		Grommet-casing through dash	1		
8	37H 3045		Gear-wiper motor	1		
9	RTC 202		Rack-55"(140 73cm)long	1		

NOTE


Reference must be made to the suffix letter of the manufacturers part number stamped on the motor to ensure that the correct component parts are ordered

MASTER INDEX

INTRODUCTION ..... 1 B
ENGINE ..... 1 C
FLYWHEEL AND CLUTCH ..... 1 D
GEARBOX AND PROPSHAFT ..... 1 E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS ..... 1 F
STEERING ..... 1 G
BRAKES AND BRAKE CONTROLS ..... 1 H
FUEL, EXHAUST AND EMISSION SYSTEMS ..... 1 I
COOLING, HEATING AND AIR CONDITIONING ..... 1 K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS ..... 1 L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS ..... 2 C
FASCIA, TRIM, SEATS AND FIXINGS ..... 2 E
MISCELLANEOUS ..... 2 F
NUMERICAL INDEX ..... 2 G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING FASTEN BELTS M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15

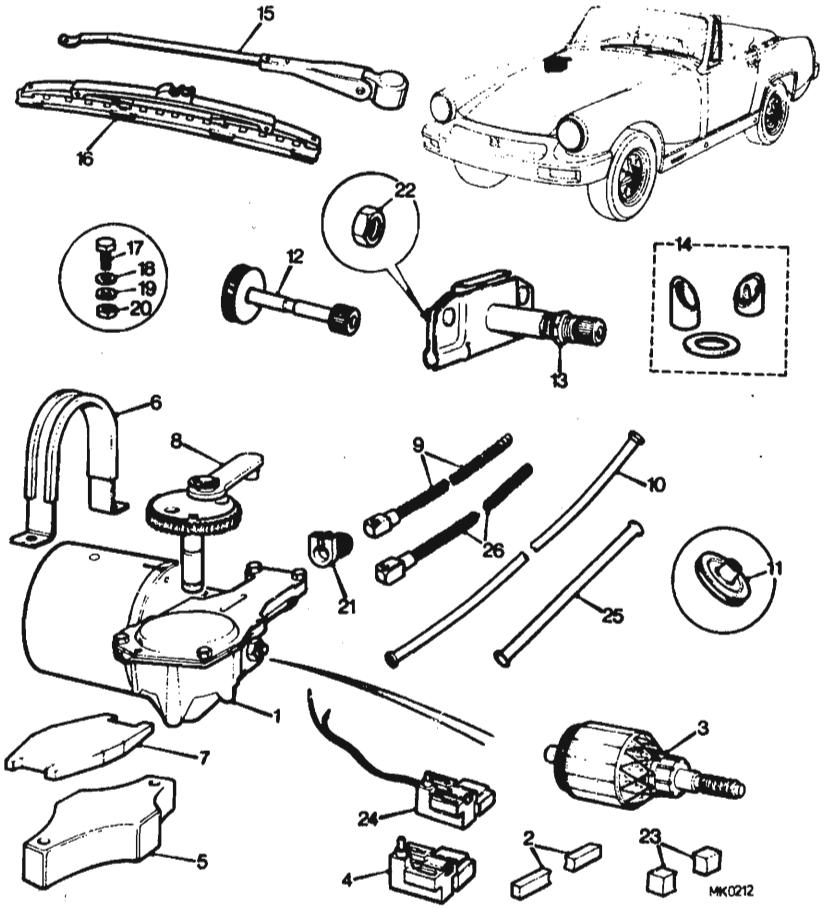

MK0212

Illus	Part Number	123456	Description	Quantity	Change Point	Remarks
			WINDSCREEN WIPERS-LHD-continued			
	BHA 4774		WHEELBOX ASSEMBLY $	NLA		Use wheelbox 37H 6314 or 37H 7738 with 1 off bush kit 18G 8851
12	27H 2330		Spindle and gear $	3		
22	GHF 206		Nut-wheelbox	6		
	37H 6314		Wheelbox(less bushes)	3		Use 37H 7738
13	37H 7738		Wheelbox(less bushes)	3		
14	18G 8851		Kit-bush	3		
15	BHA 5207		Arm-windscreen wiper $	3	(C)G-AN6-154101 TO 188591	
16	GWB 164		Blade-windscreen wiper $	3		
15	AAU 7978		Arm-windscreen wiper-Black $	3	(C)G-AN6-183592 ON	
16	GWB 266		Blade-windscreen wiper-Black	3		
17	BH 604111		Screw	2		
18	PWZ 204		Washer-plain-screw	2		
19	GHF 331		Washer-spring-screw	2		
20	GHF 200		Nut-screw	2		

MASTER INDEX

INTRODUCTION 1.B
ENGINE 1.C
FLYWHEEL AND CLUTCH 1.D
GEARBOX AND PROPSHAFT 1.E
AXLES, SUSPENSION, DRIVE SHAFTS, WHEELS 1.F
STEERING 1.G
BRAKES AND BRAKE CONTROLS 1.H
FUEL, EXHAUST AND EMISSION SYSTEMS 1.I
COOLING, HEATING AND AIR CONDITIONING 1.K
ELECTRICAL, WASHER-WIPERS, INSTRUMENTS 1.L
CHASSIS, SUBFRAMES, BODYSHELL, FITTINGS 2.C
FASCIA, TRIM, SEATS AND FIXINGS 2.E
MISCELLANEOUS 2.F
NUMERICAL INDEX 2.G

GROUP INDEX

ALTERNATOR AND FIXINGS L05
BELT-FAN L05
BATTERY AND FIXINGS N03
COURTESY LIGHTS L13
DISTRIBUTOR-NOT USA L02
DISTRIBUTOR-USA AND CANADA L03
FUSE BOX AND RELAY N02
HEADLAMPS L07
KIT-SCREW-TRIMMER L07
HORN AND CONTROLS M03
INSTRUMENT WARNING LIGHTS M08
INSTRUMENTS M04
LAMP-REFLEX L11
LAMP-REVERSE L10
LAMP-SIDE AND FLASHER L08
NUMBER PLATE LAMPS L12
OIL PRESSURE GAUGE PIPES M09
SWITCH-OIL PRESSURE-ANTI RUN-ON M09
SWITCH-OIL-PRESSURE M09
POWER UNIT ELECTRICS L04
SWITCH-INHIBITOR(SEAT BELT) L04
SWITCH-REVERSE LIGHT L04
RADIO FITTINGS N04
REAR FOG LAMPS L14
STARTER AND FIXINGS L06
STOP/TAIL LAMPS L09
SWITCHES-(USA TYPES) M12
LIGHT-WARNING-BRAKE M14
LIGHT-WARNING'FASTEN BELTS' M14
LIGHTER ASSEMBLY-CIGAR M14
UNIT-FLASHER M13
UNIT-HAZARD WARNING M14
SWITCHES-RHD M10
LIGHT-BRAKE WARNING M11
LIGHTER ASSEMBLY-CIGAR M11
UNIT-FLASHER-HAZARD WARNING M11
WINDSCREEN WASHER M02
WINDSCREEN WIPERS-LHD L17
WINDSCREEN WIPERS-RHD L15
WIRING CABLES AND FITTINGS M15